

AI Printer User Manual



Important Notice

Dear Valued Customer,

Thank you for choosing our premium smart product.

1. Please read this manual carefully before using the product. By using this product, you are deemed to have fully read and understood this user manual.
2. The copyright of this manual belongs to the manufacturer. No part of this manual may be reproduced or translated for commercial purposes without prior written authorization.
3. This manual is compiled based on the latest product specifications. Product features and parameters are subject to change without prior notice. Please refer to the actual product for the most up-to-date information.

Safety Precautions

This section provides guidelines for safe and proper operation of the device to ensure optimal performance. Please read and follow all instructions carefully.

- Avoid operating in temperatures above 35°C or below -5°C.
- Do not subject the main unit to severe impact or drop from height.
- Keep away from chemicals such as benzene and thinners.
- Do not place near strong magnetic or electric fields.

- Keep away from direct sunlight and heat sources.
- Do not disassemble, repair, or modify the device on your own.
- Avoid listening at excessive volume to prevent hearing damage.
- Dispose of packaging materials, batteries, and old electronics properly according to local recycling regulations.

I. Buttons and Function Description

Power Button ←

1. Long press to power on/off the device.
2. Short press to wake up AI.
3. On the printing interface, short press to print images directly




II. Basic Functions




Main Interface:

(1) Voice-Activated Printing: Say "Hey, Alice" to wake up the AI. The AI will generate an image based on your description and print it automatically.

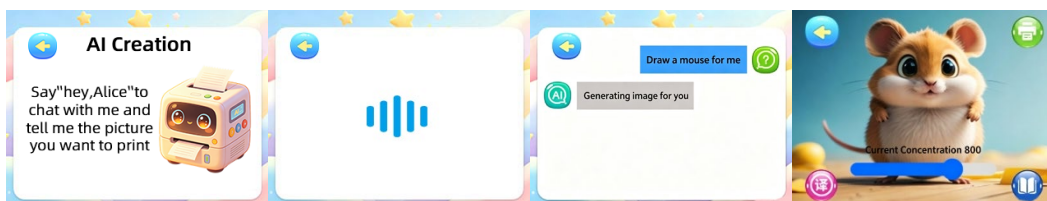


(2) AI Creation: Say "Hey, Alice" to wake up the AI, then say "Please generate..."

followed by your request (e.g., "Please generate a cute kitten"). The AI will create the corresponding image. Tap the Print button to print, the Translate button to auto-translate to English and play audio, or the Story button to hear a story related to the image.

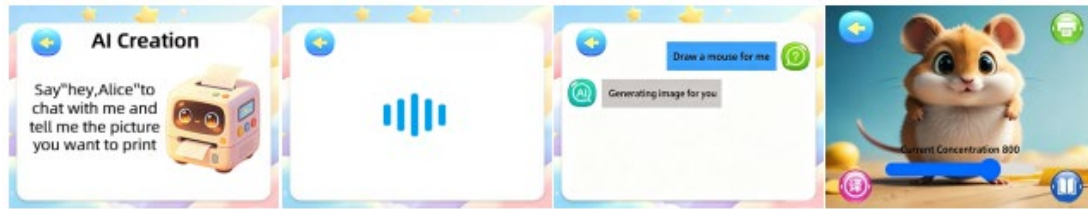


(3) Smart AI Chat: Say "Hey, Alice" to wake up the AI and chat with the large language model. You can have conversations, check the weather, hear jokes, or access general knowledge. Say "Hey, Alice" again to interrupt voice playback.

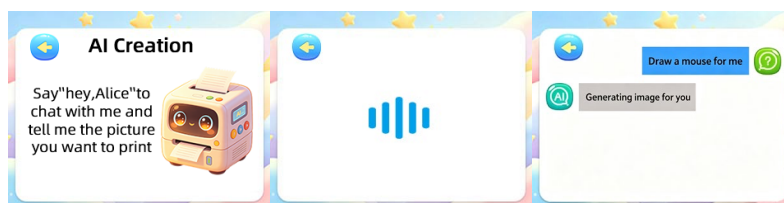

(4) AI Comic Generator: Wake up the AI by saying "hey, Alice". To generate artwork, use the command "Please generate.....", "Please generate the story of Tang Monk's pilgrimage for scriptures". The AI will output a set of six sequential images.

A print button is displayed at the top-right corner. Users may tap the print button to print the full set of six images, or tap any single image to print it individually. Each image is paired with a descriptive caption underneath. Print density adjustment is available for all printing operations.

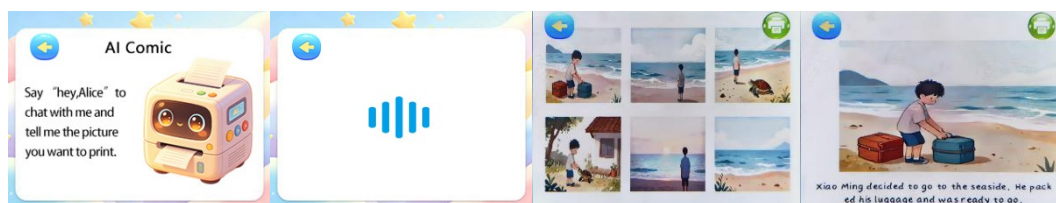


(5) Style Selection: Switch between 33 different art styles for printed images, including: Sketch, Cyberpunk, 3D Rendering, Children's Drawing, Picture Book, CG Animation, Portrait Photography, Anime, Cartoon, Manga, Figure Photography, Landscape, Pencil Sketch, Ink Wash Painting, Chinese Style, Flat Illustration, Retro Anime, Hong Kong Style Anime, Film Photography, Pixel Art, Oil Painting, Printmaking, Classical, Watercolor, Colored Pencil, Ink Printing, Fluorescent Painting, Monet, Matisse, Baroque, Rembrandt, Picasso, and Abstract.

(6) Voice Selection: Choose from 31 different voice tones for all device audio output, including: Girl Next Door, Cute Child, Sunny Boy, Lovely Female, Gentleman, Intellectual Female, Teen Boy, Soft Female, Knowledgeable Uncle, Emotional Shanshan, Happy Xiaodong, Gentle Peach, Warm Sister, Oriental Hero, Fresh Female, Sunny Zhe, Urban Lady, Honest Afeng, Bright Female, Commentator

Xiaoming, Confident Male, News Female, American English Female, London Accent Female, Deep British Male, Storytelling Female, Storytelling Male, and Encyclopedia Narrator Female.

(7) Settings:

6.1 Wi-Fi Setup: Tap the refresh button to display available Wi-Fi networks, enter the password, and connect. A Wi-Fi icon will appear in the top-right corner of the screen when connected.

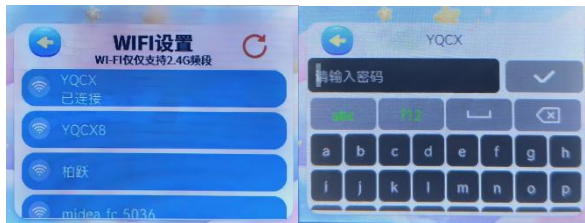

7.2 Screen Brightness: Adjust the display brightness.

7.3 Print Density: Adjust the printing density level for different output effects.

7.4 Language Selection: Supports 17 languages: Chinese, English, Arabic, German, Spanish, French, Italian, Japanese, Korean, Russian, Vietnamese, Portuguese, Hindi, Thai, Persian, Turkish, and Indonesian.

7.5 Volume Control: Adjust the speaker volume level.

7.6 Local Images: Insert an SD card to select and print your own images.

7.7 About Device: Displays device information, firmware version, etc.

7.8 System Update: Supports OTA (Over-the-Air) online firmware updates.

7.9 Factory Reset: Restore all settings to factory defaults and clear user configurations.

Wi-Fi Connection Notes:

- a. The device does not support 5GHz Wi-Fi networks.
- b. Ensure a strong and stable Wi-Fi signal with internet access. Keep the device within 1–15 meters of the router.
- c. Use Wi-Fi network names consisting of letters and numbers only; avoid Chinese characters.

Package Contents

The following accessories are included with the product:

Accessories	Description
Power Cable*1PCS	For device charging
User Manual*1PCS	Operation instructions
Certificate of Conformity*1PCS	Product quality certification

Charging

The charging indicator lights up during charging, and a battery icon appears on the screen. The indicator turns off when the battery is fully charged.

Warranty Information

Dear Valued Customer,

Thank you for purchasing our product. In accordance with the national "Three Guarantees" quality service regulations, we provide a one-year limited warranty for this product.

Warranty Terms and Conditions:

1. Within one (1) year from the date of purchase, if the main unit malfunctions due to defective components or software issues under normal use, our technical team will confirm the fault and provide repair service or replacement parts free of charge. Accessories such as USB cables are not covered under the one-year warranty.

2. The following cases are NOT covered under warranty:

- Products with no functional defects.
- Products beyond the one-year warranty period.
- Damage caused by improper use or user negligence.
- Products without identifiable brand markings or serial numbers.
- Damage caused by inadequate packaging or improper shipping when returning the product to our service center.
- Damage resulting from unauthorized disassembly, self-repair, modification, or repair by non-authorized service providers.
- Cosmetic damage (scratches, abrasions, etc.) — returns and exchanges are not applicable.
- Products without a valid warranty card and proof of purchase, or where the warranty card lacks purchase date and dealer stamp.

Note: The manufacturer reserves the right to determine the cause of product failure and retains the final interpretation of all warranty terms.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Customer Service Record Card

Model: _____

Date of Purchase: _____

Place of Purchase: _____

Dealer Name: _____

Dealer Phone: _____

Dealer Signature/Stamp: _____