

User Manual of Product 1:

TOSHIBA AC25CEW-BS Large 6-Slice Convection Toaster Oven Countertop, 10-In-One with Toast, Pizza and Rotisserie, 1500W, Black Stainless Steel, Includes 6 Accessories

User Manual of Product 2:

TOSHIBA EM131A5C-BS Countertop Microwave Ovens 1.2 Cu Ft, 12.4" Removable Turntable Smart Humidity Sensor 12 Auto Menus Mute Function ECO Mode Easy Clean Interior Black Color 1100W

TOASTER OVEN INSTRUCTION MANUAL AC25CEW-BS



TOSHIBA

CONTENTS

IMPORTANT SAFEGUARDS

BASIC SAFETY PRECAUTIONS..... EN-3

BEFORE FIRST USE..... EN-6

PRODUCT INSTRUCTION

NAMES OF PARTS.....EN-7

OPERATION

HOW TO USE.....EN-8

FUNCTION INSTRUCTION.....EN-9

OVEN FUNCTION.....EN-9

ROTISSERIE FUNCTION.....EN-11

ROTISSERIE FUNCTION USING THE ROTISSERIE FORKS.....EN-11

CARE AND CLEANING.....EN-13

SPECIFICATION.....EN-13

MAINTENANCE

ONE YEAR LIMITED WARRANTY EN-14



BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE

BASIC SAFETY PRECAUTIONS



SAFETY WARNING

When using electrical appliance, basic safety precautions should always be followed, including the following:


1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off" , then remove plug from wall outlet.

BASIC SAFETY PRECAUTIONS



SAFETY WARNING

13. Do not use appliance for other than intended use.
14. Use extreme caution when removing tray or disposing of hot grease.
15. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
16. Oversize foods or metal utensils must not be inserted in a toaster-oven as they may create a fire or risk of electric shock.
17. A fire may occur if the toaster-oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any them on top of the appliance when in operation.
18. Extreme caution should be exercised when using containers constructed of other than metal or glass.
19. Do not store any materials, other than manufacturers recommended accessories, in this oven when not in use.
20. Do not place any of the following materials in the oven: (that is, paper, cardboard, plastic and like).
21. Do not cover crumb tray or any part of the oven with metal foil. This will cause over heating of the oven.

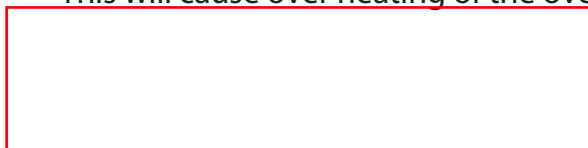

BASIC SAFETY PRECAUTIONS

**SAFETY WARNING**

- 22. Caution-To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.
- 23. Remove plug from outlet when the appliance is not in use, before putting on or taking off parts, and before cleaning. Allow to cool before handling.
- 24. Avoid contacting moving parts.
- 25. For household use only.

CAUTION: Do not insert fingers into any gaps or holes; it may cause injuries.

SAVE THESE INSTRUCTIONS

HOUSEHOLD INDOOR USE ONLY

Short cord instruction (detachable power-supply cord)

- a) A short power-supply cord (or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a longer detachable power-supply cord or extension cord is used:
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.

BEFORE FIRST USE

1. Remove all accessories and shipping materials packed inside the Oven.
 2. Wash the Rack and Pan in warm soapy water. Wipe the inside of the Oven with a damp cloth or sponge. Blot dry with paper towels to be sure the unit is dry before using.
 3. Place Oven on a flat counter or other stable surface **DO NOT OPERATE ON THE SAME CIRCUIT WITH ANOTHER APPLIANCE.**
 4. Make sure the Crumb Tray is properly installed before using.
-



For the first time only, set the Temperature Knob to MAX, the function setting on toast and the timer to 15 minutes. This will burn off any oils still on the Oven.

NOTA


The oven may smoke during this process. This is normal for a new oven and will not last more than 10-15 minutes.

NAMES OF PARTS


When using electrical appliance, basic safety precautions should always be followed, including the following:

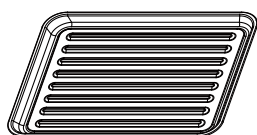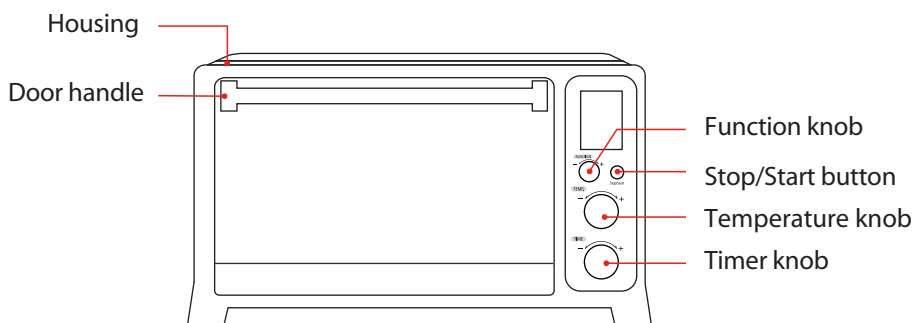


Baking Pan

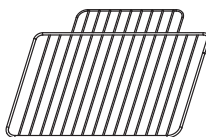


Baking Rack

 

Crumb Tray

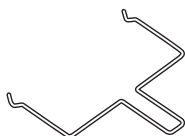

Helper Handle

 

Rack clamp



Rotisserie Kit

HOW TO USE


CAUTION THE OVEN SURFACES ARE HOT DURING AND AFTER USE.

GENERAL INSTRUCTIONS


1. Place the Baking Rack in position that will accommodate the height of the food to be cooked.
2. The food must be put into the baking pan to avoid the fire danger that caused by the accumulation of food chipping on the heating pipes.
Make sure that you always use an ovenproof container in the oven, never use plastic or cardboard containers in the Oven.
3. Clean the heating pipe periodically.
4. Never use glass or ceramic pans or lids.
5. DO NOT let juices run to the bottom of the oven. Use the Crumb Tray when cooking.
6. Set the temperature as suggested by the recipe or as desired.
7. Securely shut the door and set the cooking time to begin operating the oven.

When the oven is electrified, the buzzer will ring once. The default function is TOAST. In the process of cooking , pressing " Stop/Start " can stop cooking.

CONTROL PANEL

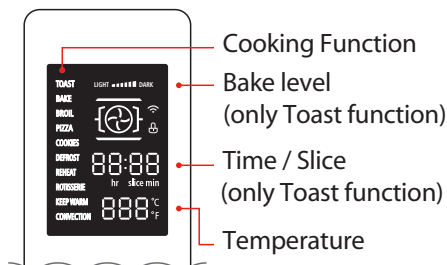

COOKING STEP

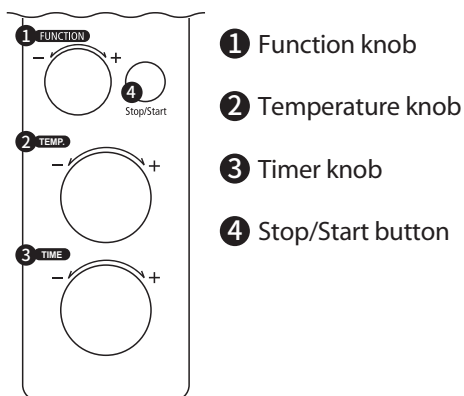

FUNCTION INSTRUCTION

OVEN FUNCTION

COOKING FUNCTION	PRESET TEMP	TEMP RANGE	PRESET TIME	TIME RANGE
Toast		Fixed Temp		Fixed Time
Bake	450 °F	150 °F~450 °F	30min	0.01~2Hour
Broil	350 °F			
Pizza 6 inch	450 °F		7min	1min~30min
Pizza 9 inch			8.5min	
Pizza 12 inch			9min	
Cookie	350 °F		30min	0.01~2Hour
Defrost	180 °F	100 °F~180 °F	1hour30min	
Reheat	350 °F	150 °F~450 °F	30min	
Rotisserie			1hour	
Keep warm	180 °F	100 °F~180 °F	1hour30min	
Convection	450 °F	150 °F~450 °F	30min	



TOAST


Fixed temperature & time
 Preset power level : 4
 Power level range : 1-6 level
 Preset toast quantity : 4
 Toast quantity range : 1-6 slice



BAKE

Preset temperature : 450 °F
 Temp range : 150 °F - 450 °F
 Preset time : 30min
 Time range : 0.01 ~ 2 Hour


FUNCTION INSTRUCTION

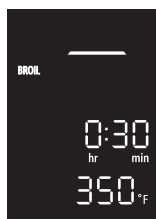

BROIL

Preset temperature : 350 °F
 Temp range : 150 °F- 450 °F
 Preset time : 30min
 Time range : 0.01 ~ 2 Hour

NOTE Do not preheat when using this function

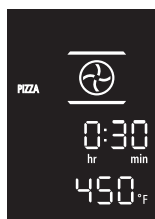

PIZZA

Preset temperature : 450 °F
 Temp range : 150 °F- 450 °F
 Preset time : 30min
 Time range : 0.01 ~ 2 Hour

NOTE Do not preheat when using this function



COOKIES


Preset temperature : 350 °F
 Temp range : 150 °F- 450 °F
 Preset time : 30min
 Time range : 0.01 ~ 2 Hour

NOTE Do not preheat when using this function




ROTISSERIE

Preset temperature : 350 °F
 Temp range : 150 °F- 450 °F
 Preset time : 1 hour
 Time range : 0.01 ~ 2 Hour

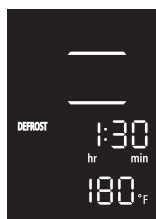

DEFROST

Preset temperature : 180 °F
 Temp range : 100 °F- 180 °F
 Preset time : 1 hour 30min
 Time range : 0.01 ~ 2 Hour

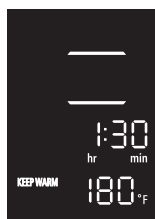

KEEP WARM

Preset temperature : 180 °F
 Temp range : 100 °F- 180 °F
 Preset time : 1 hour 30min
 Time range : 0.01 ~ 2 Hour



REHEAT

Preset temperature : 350 °F
 Temp range : 150 °F- 450 °F
 Preset time : 30min
 Time range : 0.01 ~ 2 Hour



CONVECTION

Preset temperature : 350 °F
 Temp range : 150 °F- 450 °F
 Preset time : 30min
 Time range : 0.01 ~ 2 Hour

FUNCTION INSTRUCTION

ROTISSERIE FUNCTION

1. Remove the Baking Rack from the oven and set aside.
2. Place the Baking Pan in the lowest level of the oven.
This will catch all the drippings from the food that is on the Rotisserie Forks as it cooks.
Do Not attempt to use the Rotisserie Function without placing the Baking Pan in the correct position of the oven.
3. Set the Function knob to "ROTISSERIE".
4. Select the length of time you want to Rotisserie the food.
5. Rotate the Temperature knob clockwise to desired temperature.

ROTISSERIE FUNCTION USING THE ROTISSERIE FORKS

1. Secure the food with weight centered on the forks.
2. Slide the Holding Forks onto each of the forks and press firmly into the food, piercing the food to hold in place on the forks. Insert the Holding Forks at different angles to hold the food more firmly. Tighten the screws, turning clockwise so that the holding forks will stay in place during the Rotisserie cooking session.
3. Insert the pointed end of the Rotisserie forks into the Rotisserie Socket on the inside right side of the oven.
4. Lift the Rotisserie Forks on the left side just a bit to allow the notch to fit into the Rotisserie Bracket on the left side of the oven.
5. Set the Temperature knob and the Time knob to begin operating the oven.
6. Once the cooking time has been complete and you have checked the internal temperature of the food to ensure that it has cooked properly, you can remove the Rotisserie Forks with the Rotisserie Helper Handle.
7. Hold the handle in your right hand and support handle in your left hand.
8. Place the hooks on the Helper Hander underneath the Rotisserie Forks.
9. Lift the left side of the Rotisserie Forks out of the Bracket first and pull slightly toward.

FUNCTION INSTRUCTION

10. Gently remove the right pointed side of the Rotisserie Forks from the Rotisserie Socket and remove the food on the forks out of the oven.
11. Place the food on a heat safe plate or dish when you have removed from the oven. Let it cool slightly before attempting to remove the holding forks and Rotisserie Forks from the food
12. To remove the Holding Forks, turn the screws counterclockwise and pull the Holding.

CAUTION
hot surface



Warning: Hot Surface!
Avertissement: Surface Chaude!

CARE AND CLEANING

1. Before cleaning, unplug the toaster oven and allow it to cool completely.
2. Wash all the attachments with mild, soaped water including the Baking rack and the Baking pan.
3. Do not use abrasive cleansers, scrubbing brushes and chemical cleaner as this will cause damage to the non-stick coating of baking pan.
4. Using a wet cloth to wipe the inner of the oven.
5. To clean the door by using a wet cloth saturated with detergent or soap.
6. Never immerse the unit in water or other liquid.
7. Any other servicing should be performed by an authorized service representative.

SPECIFICATION

MODEL	AC25CEW-BS
CUBAGE	25L
VOLTAGE	120V,1Ph
AC FREQUENCY	60Hz
POWER	1500W
L*W*H	18.9x15.6x10.8 inch
Rated Energy Consumption	1.5KW/H

ONE YEAR LIMITED WARRANTY

This product carries a warranty stating that it will be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep your original sales receipt.

IMPORTANT:

1. This warranty does not cover damages resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. (Read directions carefully.)
2. This warranty is void if this product is ever used for other than private household purposes.
3. This warranty is void if this product is ever used outside of United State.

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials.

If additional assistance is needed, please contact customer assistance at:

customer care@us.toshiba-lifestyle.com

855-204-5313

Midea America Corp

5 Sylvan Way,

Parsippany, NJ 07054

Midea America Corp. expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference

Model Number: _____

Serial Number: _____

SAVE THIS FOR YOUR RECORDS


Made in China

TOSHIBA

MICROWAVE SOLO OVEN INSTRUCTION MANUAL

EM131A5C-BS

Please review this instruction manual before operating.

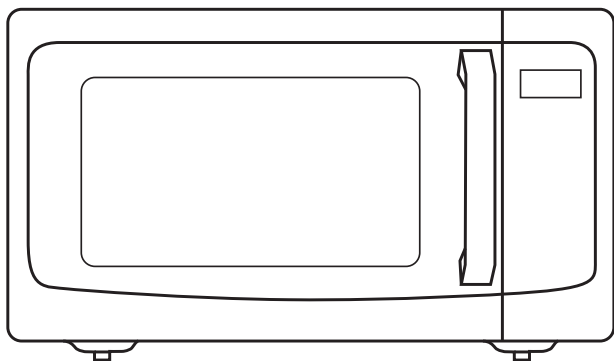

CONTENTS

PRODUCT SAFETY

Precautions to avoid possible exposure to excessive microwave energy	EN-01
Important safety instructions	EN-03
Grounding instructions.....	EN-07
Radio interference	EN-09
Utensils.....	EN-10
Materials you can use in microwave oven	EN-11
Materials can not be used in microwave oven	EN-13

PRODUCT SETTING

Setting up your oven	EN-14
----------------------------	-------

INSTRUCTION FOR USE

Before using for the first time	EN-17
Operation	EN-18
1. Power levels.....	EN-19
2. Clock setting.....	EN-20
3. Kitchen timer.....	EN-20
4. Microwave cook	EN-21
5. One touch start	EN-22
6. Custom defrost function.....	EN-23
7. 1 Lb defrost.....	EN-23
8. Sensor menu	EN-24
9. Popcorn.....	EN-26
10. Custom cook.....	EN-26

11. Soften/melt	EN-27
12. Favorite function	EN-28
13. Multi-stage cooking	EN-29
14. Inquiring function	EN-30
15. Lock function	EN-30
16. Turn on/off the buzzer sound	EN-31
17. Energy saver mode	EN-31
18. Cooking end reminder function	EN-31
19. Other specifications	EN-31
Cleaning	EN-32

MAINTENANCE

Trouble shooting	EN-34
One year limited warranty	EN-36



NOTE

BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE.


PRODUCT SAFETY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a). Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy.

It is important not to defeat or tamper with the safety interlocks.

- (b). Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

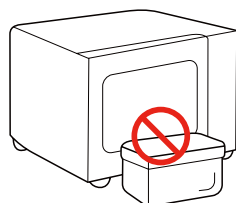

- (c). Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:
- (1). DOOR (bent)
 - (2). HINGES AND LATCHES (broken or loosened)
 - (3). DOOR SEALS AND SEALING SURFACES
- (d). The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

SPECIFICATIONS ---

MODEL	EM131A5C-B5
RATED VOLTAGE	120V~ 60Hz
RATED INPUT POWER (MICROWAVE)	1550W
RATED OUTPUT POWER (MICROWAVE)	1100W
OVEN CAPACITY	1.2 cu.ft.
TURNTABLE DIAMETER	Ø12.4 inch
EXTERNAL DIMENSIONS	20.5x17.1x12.8 inch
NET WEIGHT	Approx. 34.6 Lbs



NOTE

All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the actual product.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic safety precautions, including the following:



Read all instructions before using the appliance.



Read and follow the specific:

"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on page 1.



As with most cooking appliances, close supervision is necessary to reduce the risk of a fire in the oven cavity.



This appliance must be grounded. Connect only to properly grounded outlet. See **"GROUNDING INSTRUCTIONS"** found on page 7.



To reduce the risk of fire in the oven cavity:

1. Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
2. Remove wire twist-ties from paper or plastic bag before placing bag in oven.
3. If material inside of the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
4. Do not use the cavity for storage purposes.

IMPORTANT SAFETY INSTRUCTIONS

Do not leave paper products, cooking utensils, or food in the cavity when not in use.

 Install or locate this oven only in accordance with the installation instructions provided.

 As with any appliance, close supervision is necessary when used by children.

 This microwave should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.

 Keep cord away from heated surfaces.


 Liquids, such as water, coffee, or tea are able to overheat beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present.

THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.


1. Do not overheat the liquid.
2. Stir the liquid both before and halfway through heating it.
3. Do not use straight-sided containers with narrow necks.

IMPORTANT SAFETY INSTRUCTIONS

4. After heating, allow the container to stand in the microwave oven for a short time before removing the container.
5. Use extreme care when inserting a spoon or other utensil into the container.

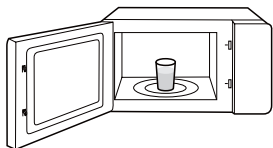


-  When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergent applied with a sponge or soft cloth.

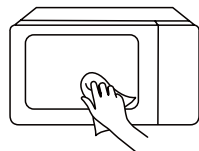

-  This appliance is for private household use only.

-  Please keep the wave guide area clean. Use soft damp cloth to clean it up when there is food splash residue on the wave guide area or the cavity. Failure to clean food residue may cause innocuous sparking or some smoke in the microwave cavity, discoloration of the cavity may also occur.

-  Some products such as whole eggs and sealed containers, for example, closed glass jars are able to explode and should not be heated in this oven.

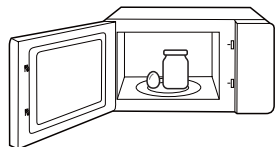

IMPORTANT SAFETY INSTRUCTIONS


 Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.

 Do not cover or block any openings on the oven.

 Do not store or use this appliance outdoors.

 Do not let cord hang over edge of table or counter.

 Do not use this oven near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.

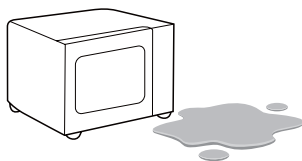

 Do not operate this oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.

 Do not immerse cord or plug in water or any other liquid.



SAVE THESE INSTRUCTIONS

HOUSEHOLD INDOOR USE ONLY

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounded plug, and 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.



Electric Shock Hazard:

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

GROUNDING INSTRUCTIONS



WARNING

Electric Shock Hazard:


Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord or extension cord is used:
 - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2). The extension cord must be a grounding-type 3-wire cord.
 - (3). The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

RADIO INTERFERENCE

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
 - (1).Clean door and sealing surface of the oven.
 - (2).Reorient the receiving antenna of radio or television.
 - (3).Relocate the microwave oven with respect to the receiver.
 - (4).Move the microwave oven away from the receiver.
 - (5).Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

**This device complies
with part 18 of the FCC
Rules.**

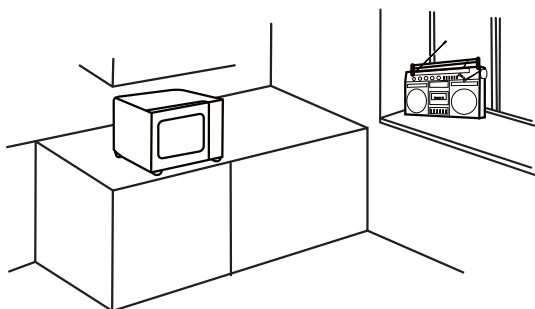

UTENSILS



CAUTION

Personal Injury Hazard:


Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on "**Materials you can use in microwave oven**" or "**Materials can not be used in microwave oven**."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.


Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 min.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 min cooking time.

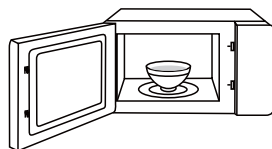

NOTE

KEEP THE CAVITY CLEAN

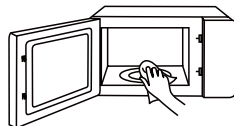



MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS	
 Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.	
 Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.	
 Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.	
 Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.	
 Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.	
 Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.	
 Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.	
 Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.	

MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package. 
 Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food. 
 Thermometers	Microwave-safe only (meat and candy thermometers). 
 Wax paper	Use as a cover to prevent splattering and retain moisture. 

  
MATERIALS CAN NOT BE USED IN MICROWAVE OVEN

UTENSILS	REMARKS	
 Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.	
 Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.	
 Metal or metal trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.	
 Metal twist ties	May cause arcing and could cause a fire in the oven.	
 Paper bags	May cause a fire in the oven.	
 Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.	
 Wood	Wood will dry out when used in the microwave oven and may split or crack.	

SETTING UP YOUR OVEN

NAMES OF OVEN PARTS AND ACCESSORIES

 Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories:




Glass Tray

(Can be used under all functions)



Instruction Manual

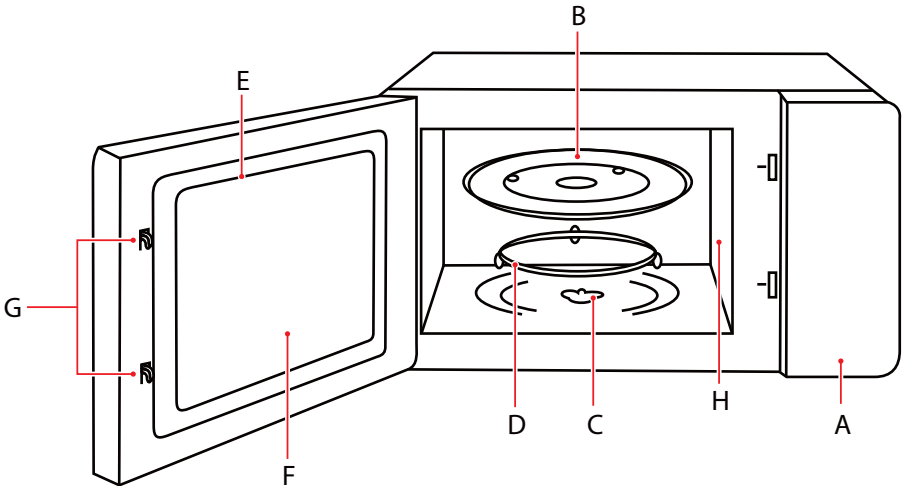

- A. Control panel
- B. Glass tray
- C. Turntable shaft
- D. Turntable ring assembly

- E. Door assembly
- F. Observation window
- G. Safety interlock system
- H. Waveguide cover

SETTING UP YOUR OVEN

TURNTABLE INSTALLATION

Cleaning the cooking compartment and putting the turntable in place.



For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft.

Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories.

How to put the turntable in place:

1. Place the turntable ring assembly ③ into the recess in the cooking compartment.
2. Place the glass tray ① on the turntable ring assemblies ③.

Fit the raised, curved lines in the center of the glass tray bottom between the three spokes of the shaft. Make sure that the glass tray ① engages in the turntable shaft ② in the center of the cooking compartment floor. The rollers on the shaft should fit inside the turntable bottom ridge.

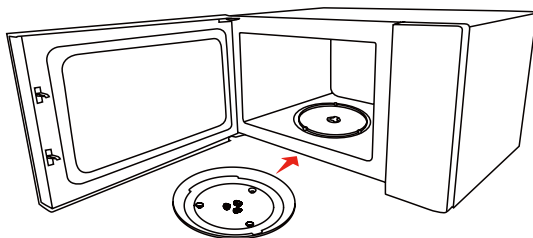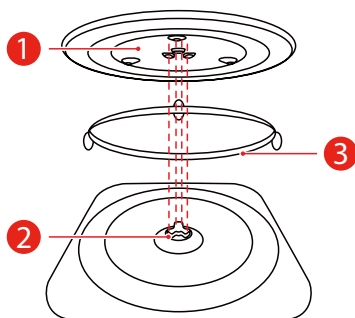

NOTE

- Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- Never restrict the movement of the turntable.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.


COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown waveguide cover that is attached to the oven cavity to protect the magnetron.

INSTALLATION


1. Select a level surface that provide enough open space for the intake and/or outlet vents.
 - a. The minimum installation height is 3.0 ft.
 - b. Leave a minimum clearance of 3.0 inches on each side, 3.0 inches on top and 1.0 inch in the rear.
 - c. Do not remove the legs from the bottom of the oven.
 - d. Blocking the intake and/or outlet openings can damage the oven.
 - e. Operation of microwave oven may cause interference to your radio or TV reception.
Please place the oven as far away from radios and TV as possible.

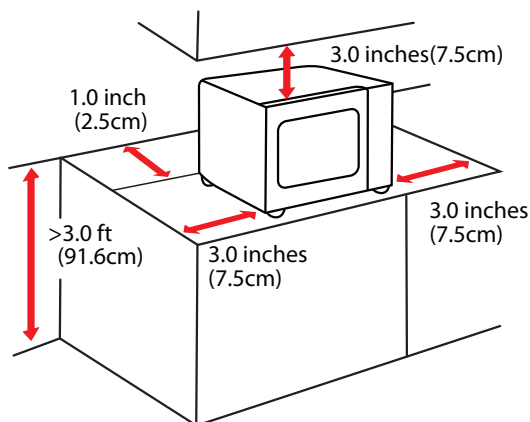

2. Plug microwave oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.



- Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

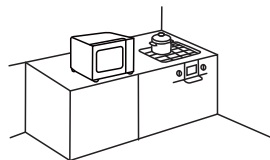

The accessible surface may be hot during operation



INSTRUCTION FOR USE

BEFORE USING FOR THE FIRST TIME

The appliance may produce unpleasant odors when it is used for the first time.

This section tells you what you need to do before using your microwave to prepare food for the first time. Read the section entitled "**IMPORTANT SAFETY INSTRUCTIONS**" beforehand on page 3.

Before you can use your new appliance, you will need to put the turntable in place correctly. You must also clean the cooking compartment and accessories.




NOTE

- Never use the appliance without the turntable.
- Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.

OPERATION

CONTROL PANEL AND FEATURES

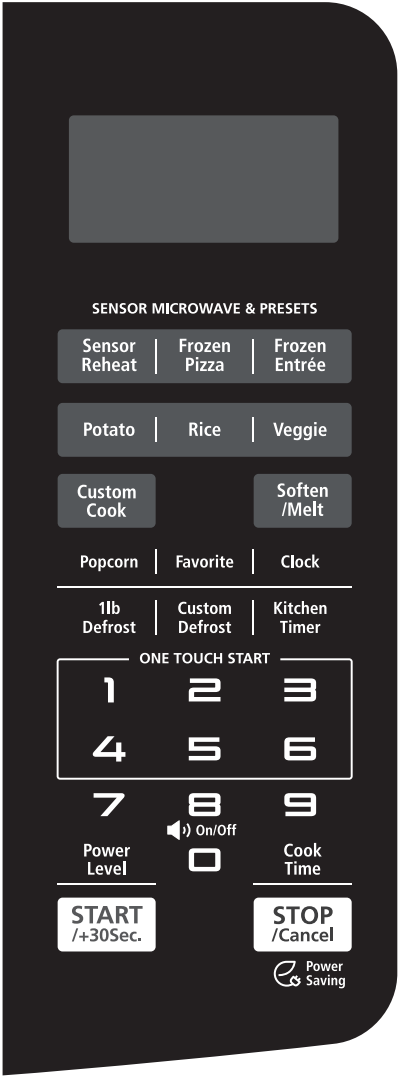

1. POWER LEVELS

Ten power levels are available.

- a

Press "Cook Time", "00:00" will display, then press number pads.

Cook Time

ONE TOUCH START
1 2 3
- b

Press "Power Level" and "PL10" will display. Then press number pads to select a different power level.

Power Level

ONE TOUCH START
1 2 3
- c

In cooking state of microwave, press "Power Level", the current power will be displayed for 3 seconds.

Power Level

Example : To cook the food with 50% microwave power for 15 minutes.

- Press "Cook Time", "00:00" will display.

Cook Time
- Press "1, 5, 0, 0" in order for 15:00 to appear in the display.

ONE TOUCH START
1 2 3
- Press "Power Level", then press "5" to select 50% microwave power.

Power Level

4 5 6

- Press " START/+30Sec. " to start cooking. Buzzer sounds once. The remaining cooking time will display.

START
/+30Sec.

LEVEL	POWER	DISPLAY
10	100%	PL10
9	90%	PL9
8	80%	PL8
7	70%	PL7
6	60%	PL6

LEVEL	POWER	DISPLAY
5	50%	PL5
4	40%	PL4
3	30%	PL3
2	20%	PL2
1	10%	PL1

2. CLOCK SETTING

When the microwave oven is plugged into an outlet, "0:00" will display.

- a Press "Clock" once, "00:00" will appear in the display.



- b Press the number pads to enter the current clock time. For example, if the time is now 10:12, press "1, 0, 1, 2 " in order.



- c Press "Clock" to finish clock setting, " : " will flash and the numbers will appear as a clock time in the display.



NOTE

- If the numbers entered are not within the range between 1:00 to 12:59, the setting will not be accepted until valid numbers are entered.
- In the process of setting clock, if the " STOP/Cancel " pad is pressed or if there is no operation within 1 minute, the display will automatically return to the previous clock setting.

3. KITCHEN TIMER

- a Press "Kitchen Timer" once, "00:00" will appear in the display.



- b Press the number pads to enter the time amount. The maximum amount of time that can be entered is 99 minutes, 99 seconds.



- c Press "START/+30Sec. " to confirm setting, and the timer will start to count down.

START
/+30Sec.

- d When the time amount elapses, timer indicator will disappear.
The oven will beep 5 times.



- The Kitchen Timer setting is different from the Clock setting; it is simply a timer.
- During the Kitchen Timer function, no cooking function can be set into operation.
- Kitchen Timer amount cannot be increased by pressing "START/+30Sec. " .
- Pressing "STOP/Cancel " will cancel the Timer countdown.

4. MICROWAVE COOK

- a Press "Cook Time" , "00:00" will appear in the display.

**Cook
Time**

- b Press number pads to enter the cooking time. The maximum cooking time is 99 minutes, 99 seconds.

ONE TOUCH START
1 2 3

- c Press "Power Level", PL10 will flash. Press number pads 0 through 9 to select a different power level if desired. See the POWER LEVEL table above.

**Power
Level**

ONE TOUCH START
1 2 3

- d Press "START/+30Sec. " to start cooking. The remaining cooking time will display.

START
/+30Sec.

Example : To cook the food with 50% microwave power for 15 minutes.


 
- Press "Cook Time" , "00:00" will display.

**Cook
Time**

- Press "1, 5, 0, 0" in order for 15:00 to appear in the display.



- Press "Power Level", then press "5" to select 50% microwave power.

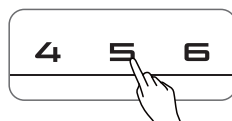

- Press "START/+30Sec." to start cooking. The remaining cooking time will display.



- In the process of setting, if the "STOP/Cancel" pad is pressed or if there is no operation within 1 minute, the oven will automatically return to display the clock.

5. ONE TOUCH START

Instant cooking at 100% power level and 1 to 6 minutes cooking time can be started by pressing number pads 1 to 6.

- a** Press "START/+30Sec." to increase the cooking time by 30 seconds with each press. The maximum cooking time is 99 minutes, 99 seconds.



Instant cooking at 100% power level and 30 seconds cooking time can be started by pressing "START/+30Sec.". Each repeated press will increase cooking time by 30 seconds. The maximum cooking time is 99 minutes, 99 seconds.

- b**



- Time can also be added in 30 second increments by pressing "START/+30Sec." during Microwave Cooking, Time Defrost and Multi-stage Cooking.
- Time cannot be added by pressing "START/+30Sec." during Weight Defrost and Kitchen Timer functions.

6. CUSTOM DEFROST FUNCTION

Press "Custom Defrost", "dEF1" and "DEF." will appear in the display.

Press the same pad repeatedly, "dEF2", "dEF3", "dEF1" will display in order.

a

LED DISPLAY	FOOD
dEF1	Meat
dEF2	Poultry
dEF3	Fish

Custom
Defrost

Press number pads to enter the weight to be defrosted.

- b
- Input the weight range between 0.1 to 6.0 Lbs. If the weight input is not between 0.1 to 6.0 Lbs, the input will be invalid. The unit will not work until valid numbers are entered.

ONE TOUCH START
1 2 3

Press "START/+30Sec." to start defrosting and the cooking time remaining will be displayed. "DEF." indicator will flash.

- c
- START
/+30Sec.



NOTE

- When half of the defrosting time passes, the oven will beep once to remind you to turn over the food. Open the door to pause operation. Turn over food, close door and press "START/+30Sec." to resume defrost cycle. If you do not open door to pause operation, the oven will continue the defrost cycle without interruption.

7. 1 LB DEFROST

- a
- Press "1lb Defrost", "1.0", "DEF." and "Lbs" will appear in the display.

1lb
Defrost

- b
- Press "START/+30Sec." to start defrosting, "Lbs" will disappear. "DEF." will flash, and the remaining defrost time will display.

START
/+30Sec.

8. SENSOR MENU

(Sensor Reheat, Frozen Pizza , Frozen Entrée , Potato,Rice,Veggie)

- a Press the pad for one of the Sensor Menu functions. An "SC-" number, "Auto" and "SENS." will appear in the display.
Example: If "Rice" is pressed, "SC-5" will display.

Rice

- b Press " START/+30Sec. " to start the sensor cooking process.
Once the item has been sensed the remaining cooking time will display. The oven beeps 5 times when cooking is finished.

**START
/+30Sec.**



NOTE

- For best sensor cooking results:
 - a. The room temperature cannot be over 95°F (35°C).
 - b. The weight of food must be more than 4 Oz (110 g).
 - c. The oven cavity, glass tray and utensils must be dry.
- During cooking:
 - a. The food can be covered, but the cover or lid must be vented with a hole to allow steam to escape.
 - b. Wait until the cooking time is displayed and starts to count down. Opening the door or press " STOP/Cancel " before the cooking time is displayed will cause an error in the sensor cooking process.
 - c. Once the cooking time displays and starts counting down, you can open the door to mix or turn over food.

Example: Potato Sensor Pad

- Press "Potato" pad once, "SC-4", "Auto" and "SENS." will appear in the display.

Potato

- Press " START/+30Sec. " to cook.

**START
/+30Sec.**



NOTE

- Puncture the surface of each potato several times with the times of a fork.
- Place up to 4 potatoes on the glass turntable. Keep at least 1 inch of space between each potato.

Example: Sensor Reheat Pad

- After placing food into oven, press "Sensor Reheat" pad and "SC-1" will display.
- Press "START/+30Sec." to cook. Oven beeps 5 times when cooking is finished.

**Sensor
Reheat**

**START
/+30Sec.**



NOTE

- Food to be avoided in sensor reheating.
 - a. Bread and other dry food, such as biscuits or cake.
 - b. Raw or uncooked food.
 - c. Beverages and frozen food.
- The food can be covered, but the cover or lid must be vented with a hole to allow steam to escape.
- The food temperature must be at least 40 °F (5 °C) when placing it into the oven for Sensor Heat to work correctly.
- Preparing foods for Sensor Reheat.
 - Casseroles - Add 2 to 3 tablespoons of liquid, covered with lid or vented plastic wrap.
Stir when time appears in the display window.
 - Canned foods - Empty contents into casserole dish or serving bowl, and cover with vented lid or plastic wrap. After reheating, let food stand for a few minutes.
 - Plate of food - Arrange food on plate; top with butter, gravy, etc. Cover with vented lid or plastic wrap. After reheating, let food stand for a few minutes.

Example: Veggie Sensor Pad

- Press "Veggie" once, "SC-6" will display, to cook fresh vegetable. Press "Veggie" 2 times, "SC-7" will display, to cook frozen vegetable.
- Press "START/+30Sec." to cook. After the cooking time displays, food can be turned over. Oven beeps 5 times when cooking is finished.

Veggie

**START
/+30Sec.**

Sensor menu chart:

MENU BUTTON	FOOD	FOOD CODE	WEIGHT/PORTION
Sensor Reheat	Sensor Reheat	SC-1	8~32 oz
Frozen Pizza	Frozen Pizza	SC-2	6~12 oz
Frozen Entrée	Frozen Entrée	SC-3	8~32 oz
Potato	Potato	SC-4	1~4 potatoes 10 oz each
Rice	Rice	SC-5	8.0 oz~16.0 oz
Veggie	Fresh/Frozen Vegetable	SC-6/SC-7	4~16 oz

9. POPCORN

- a** Press "Popcorn" repeatedly until the number you wish appears in the display, "1.75", "3.0", "3.5" oz will display in order. And "Auto" and "Oz" will appear in the display.



- b** Press "START/+30Sec." to cook. "Oz" disappears." Auto " flashes. Oven beeps 5 times when cooking is finished.



10. CUSTOM COOK

- a** Press "Custom Cook", "CC-1" and "Auto" will appear in the display.



- b** Press "Custom Cook" more times, "CC-2, CC-3, CC-4, CC-5" will display in order.



- c** After selecting CC setting, press a number pad to select the weight or portion of food item.



- d Press "START/+30Sec." to cook, "Auto" flashes in display. Oven beeps 5 times when cooking is finished.

START
/+30Sec.

11. SOFTEN/MELT

- a Press "Soften/Melt", "S-1" will display.

Soften
/Melt

- b Press "Soften/Melt" more times, "S-2, S-3, S-4, S-5, S-6, S-7" will display in order.

Soften
/Melt

- c After selecting SC function, press a number pad to select the weight or portion of food item.



- d Press "START/+30Sec." to cook, "Auto" flashes in display. Oven beeps 5 times when cooking is finished.

START
/+30Sec.

Auto Menu Chart:

MENU BUTTON	FOOD	DISPLAY	WEIGHT/PORTION
Custom Cook	Custom Cook-Bacon	CC-1	2-6 SLICES
	Custom Cook-Frozen roll/ Muffin-reheat	CC-2	1-6 PIECES
	Custom Cook-Beverage	CC-3	1-2 CUPS
	Custom Cook-Chicken Pieces	CC-4	0.5-2.0 Lbs
	Custom Cook- Oatmeal(with milk)	CC-5	20/40 Oz

MENU BUTTON	FOOD	DISPLAY	WEIGHT/PORTION
Soften/Melt	Melt-Butter/Margarine	S-1	1-3 STICKS
	Melt-Chocolate	S-2	4/8 Oz
	Melt-Cheese	S-3	8/16 Oz
	Melt-Marshmallows	S-4	5/10 Oz
	Soften-Butter	S-5	1-3 STICKS
	Soften-Ice cream/Frozen juice	S-6	6/12/16 Oz
	Soften-Cream cheese	S-7	3/ 8 Oz

12. FAVORITE FUNCTION

- a** Press "Favorite" to program and choose up to three cooking procedures. Each procedure will be indicated by 1, 2 or 3 in the display.



- b** Press "Favorite" until your desired procedure number appears in the display. Press "START/+30Sec." to begin it. A maximum of two cooking stages can be set for each procedure.



To program a procedure, follow the steps listed below.

Example: Cook food at 80% Power Level for 3 minutes and 20 seconds; save as memory 2.


- Press "Favorite" twice; screen displays 2.



- Press "Cook Time" once, then press "3""2" and "0" in order.



- Press "Power Level" once, then press "8" for "PL8" to display.

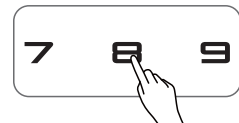

- Press "Favorite" to save the procedure. Oven beeps once. Or press "START/+30Sec." directly to start cooking.



or



- To choose the procedure from the memory list, press "Favorite" twice. Screen will display "2". Press "START/+30Sec." to run procedure.



• The procedure will remain programmed until the oven is unplugged or there is a power failure. If either occurs, the procedure will have to be reprogrammed into the oven.

13. MULTI-STAGE COOKING

At most 2 stages can be set for cooking. If one stage is Defrost, it will automatically set to be the first stage.




• Quick Touch Presets cannot be used in multi-stage cooking.

Example: 80% Power Level for 5 minutes followed by 60% Power Level for 10 minutes; saved as memory 3.



- Press "Favorite" 3 times; screen displays 3.



- Press "Cook Time" once, then press "5", "0" and "0" to set first stage cook time.

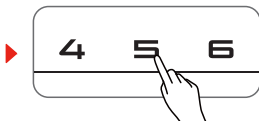

 
- Press "Power Level" once, then press "8" to choose 80% first stage cooking power.

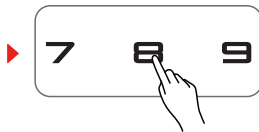

- Press "Cook Time" again, then press "1", "0", "0" and "0" to set second stage cook time.



- Press "Power Level" a gain, then press "6" to choose 60% second stage cooking power.

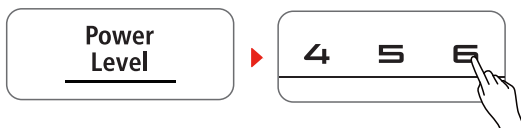

- Press "START/+30Sec." to to immediately start multi-stage cooking.



- To choose the procedure from the memory list, press "Favorite" three times. Screen will display "3"; press "START/+30Sec." to run procedure.



NOTE

 
- If you do not want to save a particular multi-stage program as a procedure, do not press "Favorite" as the first step. Multi-stage cooking will begin the first time.
- Press "START/+30Sec." after programming both stages.

14. INQUIRING FUNCTION

- a** When oven is cooking, press "Clock" for the time of day to appear for three seconds in the display.



- b** When oven is cooking, press "Power Level" pad for cooking power to appear for three seconds in the display.



15. LOCK FUNCTION

To lock the microwave so that it cannot be operated by children or other unintended users, press "STOP/Cancel" pad for 3 seconds. You will hear a long beep.

- a** If the clock has been set, the time of day and "Lock" will appear in the display. Otherwise, only "Lock" will appear.


 


- b** To Unlock, press "STOP/Cancel" for three seconds, you will hear a long beep and "Lock" will disappear.



16. TURN ON/OFF THE BUZZER SOUND

- a It is default that the buzzer sounds is open. In waiting state, long pressing on number 8 for 3 seconds, it sounds a long beep, turns off the sound.
- b When the sounds turn off, long pressing on 8 for 3 seconds, it sounds a long beep and the sound turns on.
- c In the sound off state, all the buttons has no beep when they are pressed, including the ending cooking sounds is turn off too.

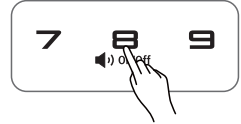

- All models has mute function and energy-saved function. This function can work under lock function too.

17. ENERGY SAVER MODE

- a In standby mode, press the " STOP/Cancel " once (less than 3 seconds to avoid starting the child lock function) to enter the Energy Saver mode.
- b In child-locked mode, press the " STOP/Cancel " once (less than 3 seconds) and release to enter the Energy Saver Mode.
- c Above operation is the only way to start the Energy Saver mode.
- d The Energy Saver mode works only if the door is closed.

STOP
/Cancel

STOP
/Cancel

18. COOKING END REMINDER FUNCTION

The oven will beep five times to alert the user that cooking time has ended. "End" will display. The time of day will display by opening the door or pressing " STOP/Cancel " pad.

19. OTHER SPECIFICATIONS

- a When setting cooking function, the function abbreviation appears in the display.
- b When oven is cooking or paused (door opened) in the midst of cooking time, the remaining cooking time appears in the display.

CLEANING

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. We will explain here how you should correctly care for and clean your appliance.



- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis, and remove any food remnants immediately.
- Do not immerse the appliance in water or clean under a jet of water.

Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information below. Wash new sponge cloths thoroughly before use.

 
Do not use:



Harsh or abrasive cleaning agents



Metal or glass scrapers to clean the door panels



Metal or glass scrapers to clean the door seal



Hard scouring pads or sponges




Cleaning agents with a high alcohol content

APPLIANCE FRONT

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.

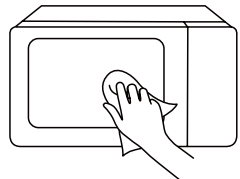

APPLIANCE FRONT PLATE

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

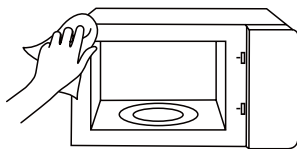

APPLIANCE CAVITY

Hot soapy water or vinegar solution:


Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.

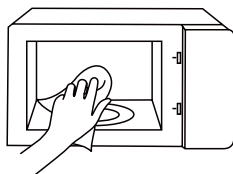

RECESS IN THE COOKING COMPARTMENT

Damp cloth:


Water must not be allowed to run into the appliance through the turntable drive. Dry the turntable drive with a cloth.

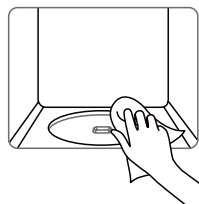

TURNTABLE AND ROLLER RING

Hot soapy water:

When placing the turntable back into its recess, it must engage properly.

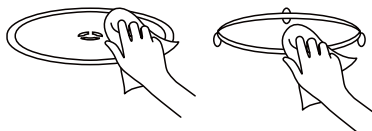

DOOR PANEL

Glass cleaner:

Clean with a dish cloth. Do not use glass scrapers.

TROUBLE SHOOTING

Check your problem by using the chart below and try the solutions for each problem.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Oven will not start	a. Electrical cord for oven is not plugged in. b. Door is open. c. Wrong operation is set.	a. Plug into the outlet. b. Close the door and try again. c. Check instructions
Arcing or sparking	a. Materials to be avoided in microwave oven were used. b. The oven is operated when empty. c. Spilled food remains in the cavity.	a. Use microwave-safe cookware only. b. Do not operate with oven empty. c. Clean cavity with wet towel.
Unevenly cooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Cooking time, power level is not suitable. d. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Use correct cooking time, power level. d. Turn or stir food.
Overcooked foods	Cooking time, power level is not suitable.	Use correct cooking time, power level.
Undercooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Oven ventilation ports are restricted. d. Cooking time, power level is not suitable.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Check to see that oven ventilation ports are not restricted. d. Use correct cooking time, power level
Improper defrosting	a. Materials to be avoided in microwave oven were used. b. Cooking time, power level is not suitable. c. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Use correct cooking time, power level. c. Turn or stir food.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Sensor cooked foods not properly cooked	a. Cover or lid on food not vented. b. Door opened before sensor-detected cooking time appears in display.	a. Cover or lid over food must contain vent hole for escaping steam. b. Do not open door to stir or turn food before sensor-detected cooking time appears in display.

ONE YEAR LIMITED WARRANTY

This product carries a warranty stating that it will be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep your original sales receipt.

IMPORTANT:

1. This warranty does not cover damages resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. (Read directions carefully.)
2. This warranty is void if this product is ever used for other than private household purposes.
3. This warranty is void if this product is ever used outside of United State.

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials.

If additional assistance is needed, please contact customer assistance at:

customer care@us.toshiba-lifestyle.com

855-204-5313

Midea America Corp. expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference

Model Number : _____

Serial Number : _____

Product registration is not mandatory. Failure to complete and return the card or form does not diminish the consumer's warranty rights.

SAVE THIS FOR YOUR RECORDS

Made in China

#DetailsMatter

Customercare@us.toshiba-lifestyle.com
855-204-5313