 
 


INSTRUCTION MANUAL TOWER FAN

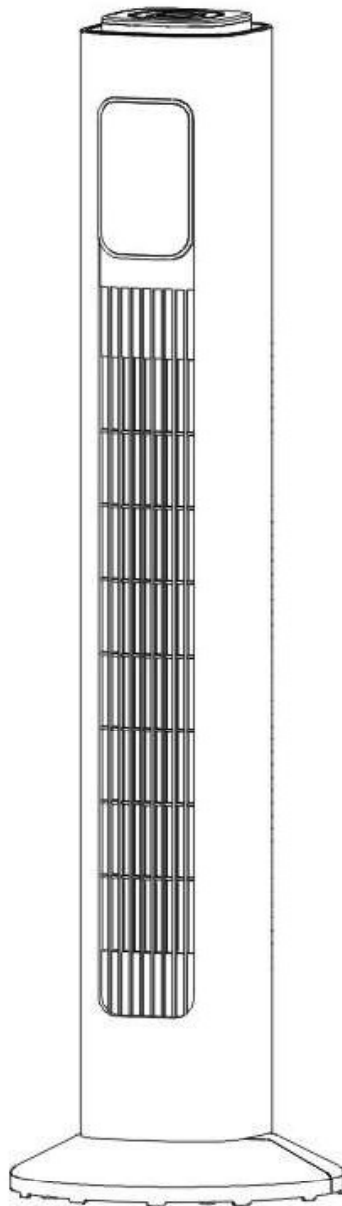

**ITEM NO:6901
MODEL:JTF-01-R
120V,60Hz 60W**

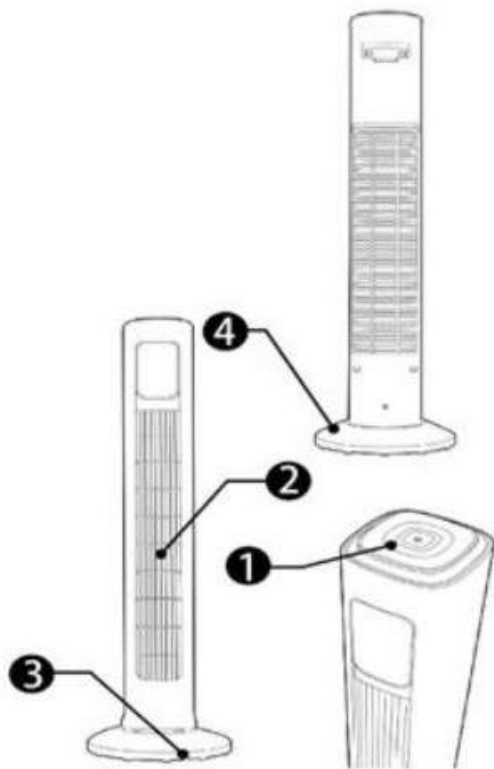

1. Control Panel

2. Air Outlet

3. Power Cord

4. Base

IMPORTANT : Please read this manual carefully before using the appliance as dangers may occur under incorrect operation.

DANGER

- This unit operates with the voltage of 120V, do not open it to avoid a possible electric shock.
- Do not do any repairs yourself .Always consult to the qualified professional.

WARNINGS

1. This product is not suitable for use by children at age of 8 or younger.
2. Before using the tower fan .Please make sure the voltage used fits the rated power supply on the nameplate.
3. Do not use this product if the power cord plug or other components are damaged.
4. When the power cord is damaged, do not replace it yourself in order to avoid danger .It must be repaired by professionals.
5. Please use this fan on the level ground .Do not tilt or tip the fan.
6. Do not put your fingers or other objects into the air inlet net when using the fan.
7. Do not immerse the wires or plugs in water or other liquids to avoid the risk of electric shock.
8. Keep the machine and wires away from heat . Direct sun light , moisture ,sharp edges ,and other environments.

9. When moving the product .Please turn off the power and unplug the power supply .When the fan is stationary ,move it gently to prevent it from being strongly impacted.
10. Do not operate the machine by wet hands.
11. This product is only for household use, and the fan parts are easily blocked by oil ,so avoid using it in places like kitchen which is filled with smoke and oil.
12. If it is not used for a long time , please unplug the power cord to cut off the power of the product ,and put it in the carton , then put the box in a place where it is dry and airy.
13. When going out , be sure to cut off the power of the product or unplug the power cord.
14. Do not immerse the motor body in water or rinse it under the damp.

ASSEMBLY



1. Fasten the front and rear chassis to each other.
2. Unscrew the nut counterclockwise.
3. Thread the power cord through the center hole of the chassis.
4. Align the positioning holes.
5. Tighten the nut clockwise.

ENVIRONMENTAL PROTECTION

Waste electrical products should not be disposed of with household waste . Please recycle them where facilities exist .Check with your local authority or retailer for recycling advice.

TECHNICAL PARAMETERS

MODEL	VOLTAGE	POWER
JTF-01-R	120V	60W

USING THE APPLIANCE



Three main functions are operated through the control panel on the top of the Tower Fan

1. **TIMER:** Repeat this button ,the time unit is 1 hour ,and the timing time is up to 15 hours.
2. **OSCILLATION:** Press this button to rotate the fan .If you want the fan to blow the air at one direction ,you can press this button again to stop its oscillation.
3. **POWER:** Repeatedly press the button to select the output strength.

CARE AND CLEANING

- 1.Shut down and unplug the power cord.
- 2.Clean the shell , gently wipe unit with a cloth .Do not use alcohol ,gasoline , banana water or other solvent cleaning.
- 3.Use a long dry soft brush to clean the dust on the grid and the wind wheel.
- 4.Product storage ,put unit in the carton ,and place the box in the shade.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

WARNING: To reduce the risk of fire, electric shock, or injury to person:

1. This fan is for household use only.
2. Before using for the first time, please check that your voltage is in accordance with the product's nameplate requirements.
3. Please check status of the power cord and plug before use for safety.
4. Always turn the fan OFF and unplug it from the electric outlet when it is not in use.
5. Caution is necessary when the appliance is used near children.
6. Do not run the power cord under carpets and do not cover the cord with throw rugs. Do not put cord under furniture or appliances. Arrange cord away from traffic areas so that people will not be tripped over by it.
7. Do not operate any fan with the damaged cord or plug. Discard the fan or return it to an authorized service facility for examination and repair.
8. If the fan's power supply cord is damaged, it must be replaced by the manufacturer or its service agent to avoid a safety hazard.
9. Use the fan in a well-ventilated area. Place the fan at least 8 inches from any walls to ensure the proper air flow during the usage. The fan cannot be located immediately below or close to the curtain.
10. Do not obstruct the airflow with any objects or place anything inside the fan opening.
11. Do not use the fan in areas where curtains could be sucked in.
12. Only place the fan on a hard, flat, dry floor.
- 13.Do not use under extreme temperatures, humidity, or dusty environments.
- 14.Do not put heavy objects on the fan.
15. Do not place the fan below the power outlet that will suck the cord inside to cause the damage.
- 16.When the fan is oscillating, do not manually touch the fan to avoid damage.
17. Always turn off the power supply before unplugging the power cord from the electric outlet to avoid a short circuit, fire or electric shock.
18. Do not twist or pull the power cord out.

19. In order to avoid the danger of electric shock, do not unplug the fan when your hands are wet.
20. Children under 8 should not operate the fan.
21. This appliance is not intended for use by people (including children) with reduced physical/sensory/mental capabilities, or people who lack of experience and knowledge. Unless those ones mentioned above are under the supervision or guidance from people who are responsible for their safety.
22. Children should be supervised to ensure that they do not play with the appliance.
23. Ensure that the fan is switched off from the power supply before removing the guard.
24. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
25. Please unplug or disconnect the appliance from the power supply before the repair.
26. This product has overload protection (fuse). A blown fuse indicates an overload or short-circuit condition. If the fuse blows, unplug the product from the outlet. Replace the fuse following the user servicing instructions (Choose the appropriate fuse grade according to the product label) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or return to an authorized service facility for examination/repair.

 
WARNING:

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully into the electric receptacle, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to subvert this safety feature alone.

TO CHANGE THE FUSE

The following should ONLY be conducted by a qualified professional person:

1. Grasp plug and remove it from the electric receptacle. Do not unplug by pulling on the cord.
2. Open the fuse cover by sliding the fuse access cover on the top of the plug towards the blades as it is shown in the diagram below.
3. Remove the fuse carefully. Push the fuse from the other side or turn fuse holder upside down to remove fuse.

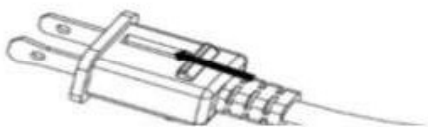

4. Risk of fire. Replace the fuse only with 5 Amp, 125 Volt fuse.
5. Close the fuse cover by sliding the fuse access cover on the top of the plug away from the blades.

6. Risk of fire. Do not replace the polarized plug as it has a safety device that should not be removed.

Discard product if its polarized plug is damaged.

SAVE THESE INSTRUCTIONS

Thank you for purchasing this product! If you have questions about the product such as missing parts, damaged products, product assembling and operation etc., please contact us via **Amazon Message** or customer service phone: **213-4467172**

IMPORTANT

Simply call our customer service department for any consulting:

213-4467172

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

AVIS

Veuillez appeler le service à la clientèle pour toutes questions au:

213-4467172

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio al cliente en caso de tener preguntas o inquietudes:

213-4467172

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

Add: 9733 Topanga Canyon Blvd. APT310, Chatsworth, CA 91311

Phone: 213-4467172