 




1.2 AMP ROTARY TOOL

241-9787

Owner's Manual

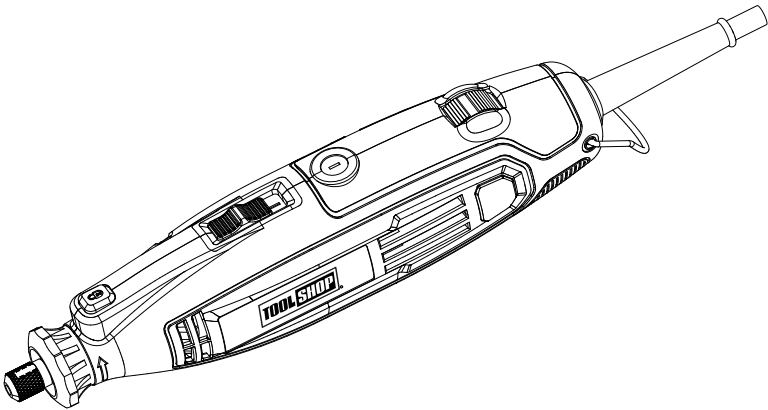

PRODUCT SPECIFICATIONS	
Rating:	120 V, 60 Hz AC
Amperes:	1.2 A
RPM:	10,000–35,000 RPM (no load)
Collets:	1/16", 3/32" & 1/8"
Weight:	1.51 lbs
Need Assistance? • Technical questions • Replacement parts • Parts missing from package Email us at: customerservice@powertoolsplus.ca Call us on our toll-free customer support line: 1-866-349-8665 (9-5pm Monday-Friday EST) Scan here for support 	

Distributed by: Menard, Inc., Eau Claire, WI 54703

TABLE OF CONTENTS

Product specifications	1
Table of contents	2
General safety warnings	3–4
Eye, ear & lung protection	3–4
Electrical safety	4
Power tool safety	5–6
General safety warning	5
Work area safety	5
Electrical safety	5
Personal safety	5
Power tools use and care.....	6
Service	6
Specific safety rules	7
Extension cord safety	8
Symbols	9
Know your rotary tool	10
Accessories	11
Accessory description & use	12
Assembly and operating	13–14
Variable speed control wheel	13
ON/OFF switch	13
Changing the collet	13
Installing accessories	13–14
Selecting proper speeds	14
Maintenance	15
Exploded view	16
Parts list	17
Warranty	18

GENERAL SAFETY WARNINGS



WARNING: Before using this tool or any of its accessories, read this manual and follow all Safety Rules and Operating Instructions. The important precautions, safeguards and instructions appearing in this manual are not meant to cover all possible situations. It must be understood that common sense and caution are factors which cannot be built into the product.

This instruction manual includes the following:

- General Safety Rules
- Specific Safety Rules and Symbols
- Functional Description
- Assembly
- Operation
- Maintenance
- Accessories

EYE, EAR & LUNG PROTECTION



ALWAYS WEAR EYE PROTECTION THAT CONFORMS WITH CSA REQUIREMENTS or ANSI SAFETY STANDARD Z87.1

FLYING DEBRIS can cause permanent eye damage. Prescription eyeglasses ARE NOT a replacement for proper eye protection.



WARNING: Non-compliant eyewear can cause serious injury if broken during the operation of a power tool.



WARNING: Use hearing protection, particularly during extended periods of operation of the tool, or if the operation is noisy.

SAVE THESE INSTRUCTIONS FOR REFERENCE

GENERAL SAFETY WARNINGS



WEAR A DUST MASK THAT IS DESIGNED TO BE USED WHEN OPERATING A POWER TOOL IN A DUSTY ENVIRONMENT.



WARNING: Dust that is created by power sanding, sawing, grinding, drilling, and other construction activities may contain chemicals that are known to cause cancer, birth defects, or other genetic abnormalities. These chemicals include:

Lead from lead-based paints

Crystalline silica from bricks, cement, and other masonry products

Arsenic and chromium from chemically treated lumber

The level of risk from exposure to these chemicals varies, according to how often this type of work is performed. In order to reduce exposure to these chemicals, work in a well-ventilated area, and use approved safety equipment, such as a dust mask that is specifically designed to filter out microscopic particles.

ELECTRICAL SAFETY



WARNING: To avoid electrical hazards, fire hazards or damage to the tool, use proper circuit protection.

This tool is wired at the factory for 120 V AC operation. It must be connected to a 120 V AC, 15 A circuit that is protected by a time-delayed fuse or circuit breaker. To avoid shock or fire, replace power cord immediately if it is worn, cut or damaged in any way.

SAVE THESE INSTRUCTIONS FOR REFERENCE

POWER TOOL SAFETY

⚠ WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

Work area safety

Keep work area clean and well lit. Cluttered or dark areas invite accidents.

Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.

Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electrical safety

Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.

Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.

Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.

Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.

When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

If operating a power tool in a damp location is unavoidable, use a ground fault circuit interrupter (GFCI) protected supply. Use of a ground fault circuit interrupter (GFCI) reduces the risk of electric shock.

Personal safety

Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.

Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.

If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

POWER TOOL SAFETY

Power tool use and care

Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.

Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.

Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

Keep handles and grasping surfaces dry, clean and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

Service

Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

SPECIFIC SAFETY RULES

⚠ WARNING: Know your rotary tool. Do not plug the tool into the power source until you have read and understand this Instruction Manual. Learn the tool's applications and limitations, as well as the specific potential hazards related to this tool. Following this rule will reduce the risk of electric shock, fire, or serious injury.



Always wear eye protection. Any power tool can throw foreign objects into your eyes and cause permanent eye damage.

ALWAYS wear safety goggles (not glasses) that comply with ANSI safety standard Z87.1. Everyday glasses have only impact resistant lenses. They ARE NOT safety glasses.

⚠ WARNING: Glasses or goggles not in compliance with ANSI Z87.1 could cause serious injury when they break.

Hold tool by insulated gripping surfaces when performing an operation where the cutting tool may contact hidden wiring or its own cord. Contact with a "live" wire will make exposed metal parts of the tool "live" and shock the operator.

Always make sure the work surface is free from nails and other foreign objects. Cutting into a nail can cause the bit and the tool to jump and damage the bit.

SPECIFIC SAFETY RULES

Never hold the workpiece in one hand and the tool in the other hand when in use. Never place the hands near or below the cutting surface. Clamping the material and guiding the tool with both hands is much safer.

Do not use accessories which are not specifically designed and recommended by the tool manufacturer. Just because the accessory can be attached to the power tool, it does not assure safe operation.

Position the cord clear of the spinning accessory. If you lose control, the cord may be cut or snagged and your hand or arm may be pulled into the spinning accessory.

Never lay the power tool down until the accessory has come to a complete stop. The spinning accessory may grab the surface and pull the power tool out of your control.

Do not run the power tool while carrying it at your side. Accidental contact with the spinning accessory could snag your clothing, pulling the accessory into your body.

Regularly clean the power tool's air vents. The motor's fan will draw the dust inside the housing and excessive accumulation of powdered metal may cause electrical hazards.

Do not operate the power tool near flammable materials. Sparks could ignite these materials.

Do not use accessories that require liquid coolants. Using water or other liquid coolants may result in electrocution or shock.

Maintain a firm grip on the power tool and position your body and arm to allow you to resist kickback forces. The operator can control torque reactions or kickback forces, if proper precautions are taken.

Use special care when working corners, sharp edges, etc. Avoid bouncing and snagging the accessory. Corners, sharp edges or bouncing have a tendency to snag the rotating accessory and cause loss of control or kickback.

Do not attach a toothed saw blade. Such blades create frequent kickback and loss of control.

Do not touch the bit or collet after use. After use the bit and collet are too hot to be touched by bare hands.

Do not alter or misuse tool. Any alteration or modification is a misuse and may result in serious personal injury.

This product is not intended for use as a dental drill, in human or veterinary medical applications. Serious injury may result.

Never lay workpiece on hard surfaces like concrete, stone, etc. Protruding cutting bit may cause the tool to jump.

Always wear safety goggles and dust mask. Use only in well-ventilated area. Using personal safety devices and working in a safe environment reduces risk of injury.

After changing the bits and accessories or making adjustments, make sure the collet nut and any other adjustment devices are securely tightened. Loose adjustment devices will be violently thrown.

Always use the correct collet size. If the collet size is larger than the accessory shank size it will not grip the shank properly, leading to possible injury to the operator or damage to the tool.

Always check accessory bits, grinding stones, cut-off wheels etc. for damage before each use. Damaged accessories can break during use and cause serious injury.

SAVE THESE INSTRUCTIONS FOR REFERENCE

SPECIFIC SAFETY RULES

Never use dull or damaged bits. Sharp bits must be handled with care. Damaged bits can snap during use. Dull bits require more force to push the tool, possibly causing the bit to break.

Never touch the bit during or immediately after use. After use the bit is too hot to be touched by bare hands.

When using any new accessory for the first time, particularly wire wheels, bristle brushes and grinding stones, run the tool at full speed for one minute to remove any loose wires, bristles or stone particles. **During this initial run-up, always wear a face shield and make sure you are NOT in line with the rotating accessory to avoid injury caused by flying debris.**

GUIDELINES FOR EXTENSION CORDS

Make sure your extension cord is the proper size. When using an extension cord, be sure to use one heavy enough to carry the current the tool will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. The table on the right shows the correct size to use according to cord length and nameplate ampere rating. If in doubt, use the next heavier gauge. The smaller the gauge number the heavier the cord.

Be sure your extension cord is properly wired and in good condition. Always replace a damaged extension cord or have it repaired by a qualified electrician before using it. Protect your extension cord from sharp objects, excessive heat and damp or wet areas.

Use a separate electrical circuit for your power tools. This circuit must not be less than 14 gauge wire and should be protected with either a 15A time delay fuse or circuit breaker. Before connecting the power tool to the power source, make sure the switch is in the OFF position and the power source is the same as indicated on the nameplate. Running at lower voltage will damage the motor.

⚠ WARNING: Repair or replace damaged or worn extension cords immediately.

Select the appropriate extension cord gauge and length using the chart on the right.

When operating a power tool outdoors, use an outdoor extension cord marked “W-A” or “W”. These cords are rated for outdoor use and reduce the risk of electric shock.

⚠ WARNING: Keep the extension cord clear of the working area. Position the cord so it will not get caught on the workpiece, tools or any other obstructions while you are working with the power tool.

MINIMUM GAUGE (AWG) EXTENSION CORDS (120 V use only)

Ampere rating		Total length in feet			
More than	Not more than	7.5 m (25')	15 m (50')	30 m (100')	45 m (150')
0	6	18	16	16	14
6	10	18	16	14	12
10	12	16	16	14	12
12	16	14	12	Not Applicable	

SYMBOLS

⚠ WARNING: Some of the following symbols may appear on the rotary tool. Study these symbols and learn their meaning. Proper interpretation of these symbols will allow for more efficient and safer operation of this tool.

V	Volts
A	Amperes
Hz	Hertz
W	Watts
kW	Kilowatts
μF	Microfarads
L	Liters
kg	Kilograms
H	Hours
N/cm ²	Newtons per square centimeter
Pa	Pascals
OPM	Oscillations per minute
Min	Minutes
S	Seconds
 or a.c.	Alternating current
	Three-phase alternating current
	Three-phase alternating current with neutral

 
	Direct current
n_0	No load speed
	Alternating or direct current
	Class II construction
	Splash-proof construction
	Watertight construction
	Protective grounding at grounding terminal, Class I tools
.../min	Revolutions or reciprocations per minute
∅	Diameter
0	Off position
	Arrow
	Warning symbol
	Wear your safety glasses



 
 
 
 
 
 
 
 
JD3329U

This symbol designates that this tool is listed with U.S. requirements by TÜV Rheinland (Shanghai) Co., Ltd. Conforms to UL Std. 60745-1.

KNOW YOUR ROTARY TOOL

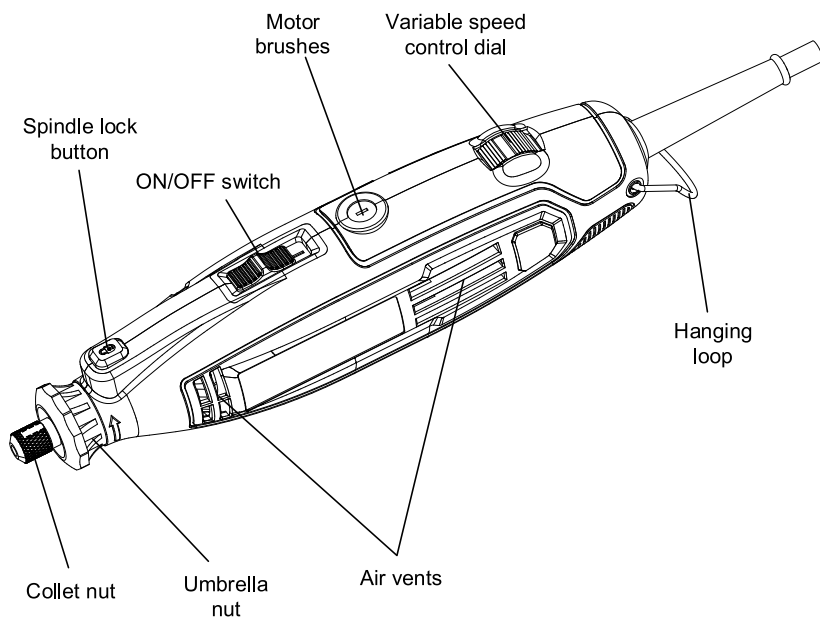

ACCESSORIES

Illustration	Description	Shape	Qty
	Cut-off wheel	Round	3
	Abrasive buff	Radial	1
	Aluminum oxide grinding stone	Radial	1
	Drum sander	With sanding band – small	1
	Drum sander	With sanding band – large	1
	Aluminum oxide grinding stone	Cylinder – small	1
	Aluminum oxide grinding stone	Cylinder – large	1
	Aluminum oxide grinding stone	Spherical	1
	Aluminum oxide grinding stone	Radial	1
	Aluminum oxide grinding stone	Conical	1
	Aluminum oxide grinding stone	Round bottom	1
	Steel brush	Radial	1
	Bristle brush	Radial	1
	Steel brush	Axial	1
	Bristle brush	Axial	1
	Collet	1/16"	1
		3/32"	1
		1/8" (installed in tool)	1
	Screw mandrel	Cylindrical with screw	1
	Diamond wheel point	Spherical	1
	Diamond wheel point	Cylindrical – small	1
	Diamond wheel point	Cylindrical – large	1
	Collet wrench		1

ACCESSORY DESCRIPTION & USE

There are many different types of accessories that can be used with this rotary tool. The following charts identify the most popular accessories and their uses.

NOTE: Please see the accessory listing on Page 11 to identify the accessories that are included with this rotary tool.

Accessory Description	Accessory Use
Cut-off wheel	Ideal for cutting, grooving and trimming all kinds of materials—including metal, wood and ceramics. You can use it to cut screws and rusted bolts, make slots in screw heads, trim castings and more.
Aluminum oxide - Grinding stones - Grinding wheels - Abrasive wheels	Use on metals, castings, welded joints, rivets and rust. Ideal for sharpening, de-burring, rust removal and general-purpose grinding of most materials.
Bristle brush	Use for light de-burring, cleaning and polishing of silverware, jewellery and other precious metals. Can be used with polishing compound.
Sanding band for use with drum sander	For rough shaping and smoothing wood and fibreglass; removing rust from metal surfaces; shaping rubber surfaces. Sanding bands are easily replaceable on drums.
Drum sander	For use with sanding bands
Screw mandrel	Use with sanding discs and polishing, grinding and cut-off wheels.
Collet	For use with accessories.
Collet wrench	For tightening & loosening collet nut, screw of drum sanders
Abrasive buff Emery-impregnated	Ideal for cleaning and polishing coarse surfaces.
Steel brush	Stainless steel brushes do not cause "after-rust" when used on corrosive-resistant materials like pewter, aluminum and stainless steel.
Diamond wheel point	Great for cutting, sawing and carving of hard materials such as marble, concrete, brick, porcelain, ceramics, hard epoxy and soft and hard wood.

NOTE: This TOOL SHOP® Rotary Tool is compatible with most accessories and attachments provided by other leading brands.

ASSEMBLY AND OPERATING

VARIABLE SPEED CONTROL DIAL

Set the rotary tool speed by rotating the variable speed control dial (1) to the appropriate speed (Fig. 1). Position the speed control dial at "1" for slowest speed, "3" for medium speed and at "6" for the highest speed.

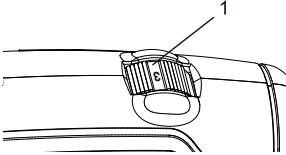 


Fig. 1

ON/OFF SWITCH

To turn the switch (1) ON, slide it forward (Fig. 2). To turn the switch OFF, slide it back toward the rear of the tool.

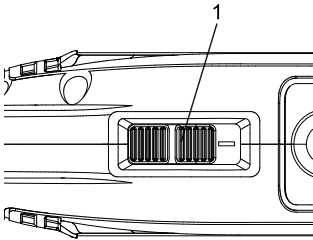 


Fig. 2

CHANGING THE COLLET

Some accessories require the use of different sized collets. Collet sizes can be $\frac{1}{16}$ ", $\frac{3}{32}$ " and $\frac{1}{8}$ ". It is important to ensure that the collet size matches the accessory.

NOTE: This tool includes the most commonly used collets: $\frac{1}{16}$ ", $\frac{3}{32}$ " & $\frac{1}{8}$ ". The $\frac{1}{8}$ " collet is installed in the tool.

⚠ WARNING: Using a collet that is too large for the accessory will result in the accessory possibly being thrown from the tool causing serious injury.

1. Turn the tool switch OFF and remove the plug from the power source.
2. Depress the spindle lock button (1) and slowly turn the collet nut (2) until the spindle lock button locks the spindle (3) (Fig. 3).
3. While holding the spindle lock button down, turn the collet nut counter clockwise until it is removed.
4. Remove the collet (4) by pulling it out of the spindle.
5. Insert the replacement collet into the spindle and replace the collet nut by turning it clockwise while holding the spindle lock button down.

NOTE: Do not tighten the collet nut without an accessory installed in the collet. You will damage the collet.

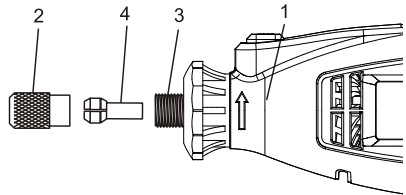 


Fig. 3

INSTALLING ACCESSORIES

1. Turn the switch OFF and disconnect the tool from the power source.
2. Depress the spindle lock button (1) and slowly turn the collet nut (2) until the spindle lock button locks the spindle (Fig. 4).
3. While holding the spindle lock button down, turn the collet nut counter- clockwise until the collet is loose inside the collet nut.
4. Insert the accessory (3) into collet.

ASSEMBLY AND OPERATING

Installing accessories – cont'd

NOTES:

- a) Make sure the correct collet is used for the accessory. If collet is too large, replace the collet with the next smaller size.
 - b) Insert accessory at least $\frac{3}{4}$ " into the collet.
5. Press the spindle lock button and engage it in the spindle. While holding the spindle lock button down, hand-tighten the collet by turning it clockwise.
- NOTE:** Do not use pliers to tighten the collet nut. Use the small wrench (4) supplied. Over tightening will cause damage to the tool.
6. Pull on the accessory to ensure it is securely in place.

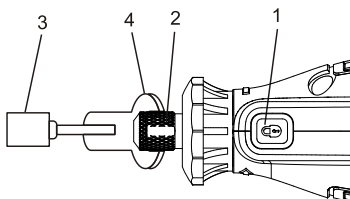 


Fig. 4

⚠ WARNING: When using any new accessory for the first time, particularly wire wheels, bristle brushes and grinding stones, run the tool at full speed for one minute to remove any loose wires, bristles or stone particles. **During this initial run-up, always wear a face shield and make sure you are NOT in line with the rotating accessory to avoid injury caused by flying debris.**

⚠ WARNING

For safety reasons, the operator must read the sections of this Owner's Manual entitled "GENERAL SAFETY WARNINGS", "POWER TOOL SAFETY", "SPECIFIC SAFETY RULES", "EXTENSION CORD SAFETY" and "SYMBOLS" before using this rotary tool.

Verify the following every time the rotary tool is used:

1. Safety glasses, safety goggles, or face shield are being worn.
2. Accessory is in good condition and not damaged in any way.
3. Workpiece is properly secured.

Failure to observe these safety rules will significantly increase the risk of injury.

SELECTING PROPER SPEEDS

Different speeds are required depending upon the type of operation being performed. The following chart outlines those basic speeds:

OPERATION	SPEED
Cutting metal	5–6
Sanding wood	5–6
Cutting hard metal	5–6
Engraving metal	4–5
De-burring	4–5
Drilling holes	4–5
Removing rust	3–4
Sharpening	3–4
Polishing	1–2

MAINTENANCE

GENERAL

⚠ WARNING: When servicing, use only identical replacement parts. Use of any other part may create a hazard or cause product damage.

DO NOT use solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloth to remove dirt, dust, oil, grease etc.

⚠ WARNING: Do not at any time allow brake fluids, gasoline, petroleum-based products, penetrating oils, etc. to come in contact with plastic parts. They contain chemicals that can damage, weaken or destroy plastic.

DO NOT abuse power tools. Abusive practices can damage the tool as well as the workpiece.

⚠ WARNING: DO NOT attempt to modify this rotary tool or create accessories not recommended for use. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious injury. It will also void the warranty.

LUBRICATION

All of the bearings in this rotary tool are lubricated with a sufficient amount of high-grade lubricant for the life of the unit under normal conditions. Therefore, no further lubrication is required.

REPLACING THE CARBON MOTOR BRUSHES

The carbon motor brushes will wear down and require replacing. The time intervals between replacements will vary depending upon the torques being achieved and the hours of use. It is recommended that the brushes be checked after each 10 hours of use. When the length of the carbon brush reaches 1/4" (6.35 mm), the brushes should be replaced.

⚠ WARNING: Unplug the tool from the power source.

1. Use a small slot screwdriver and remove one brush cap (1) (Fig. 5). Turn the brush cap counter clockwise to remove it from the motor housing.
2. Pull the spring & brush assembly (2) from the brush holder (3) in the motor housing (4).
3. Insert the new spring & brush assembly into the motor housing.
4. Compress the spring into the brush holder and thread the brush cap back into the motor housing.

NOTE: Make sure the brush cap threads are not cross-threaded. Do NOT over tighten.

Repeat steps #1 to #4 and replace the second carbon brush located on the opposite side of the motor housing.

 
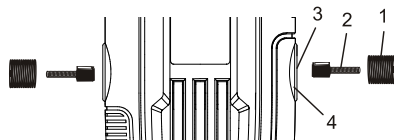 


Fig. 5

EXPLODED VIEW

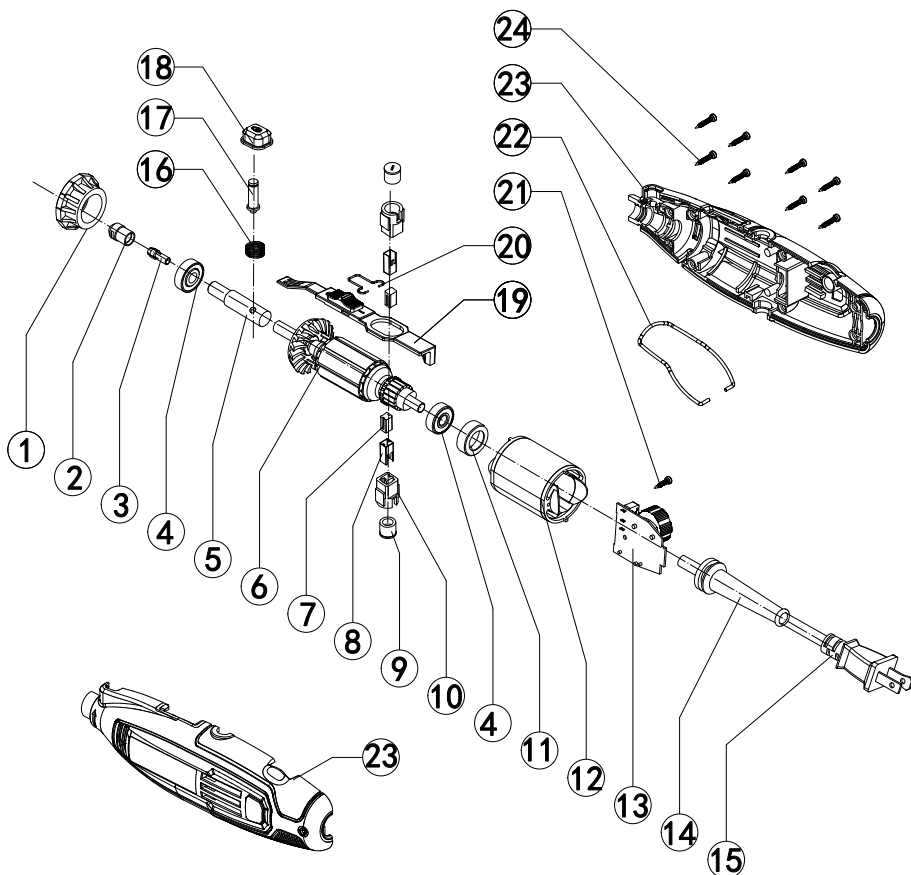

PARTS LIST

⚠ WARNING: When servicing, use only original equipment replacement parts. The use of any other parts may create a safety hazard or cause damage to the rotary tool.

Any attempt to repair or replace electrical parts on this rotary tool may create a safety hazard unless repairs are performed by a qualified technician. For more information, call the Toll-free Helpline, at 1-866-349-8665.

Always order by PART NUMBER, not by key number.

Key #	Part #	Part Name	Quantity
1	3150100012	Accessory collar	1
2	2040190009	Collet nut	1
3	2040280001	1/8" Collet	1
4	4010010031	Bearing 626Z	2
5	2040040041	Output shaft	1
6	1010160003	Armature	1
7	1230010026	Carbon brush	2
8	2030070011	Brush holder	2
9	3150140011	Brush holder nut	2
10	3150060028	Brush holder support	2
11	3140040003	Bearing sleeve	1
12	1020160003	Stator	1
13	1130010317	PCB	1
14	3140010045	Cord clamp	1
15	1190030002	Cord guard	1
16	2050060284	Lock pin spring	1
17	2040160105	Lock pin	1
18	3120020172	Spindle lock button	1
19	3120110085	Switch push-pull rod	1
20	2050080236	Steel wire	1
21	4030010020	Tapping screw ST2.9X6	1
22	2050080122	Hanging loop	1
23	3011160025	Housing	1
24	4030010034	Tapping screw ST2.9X16	8

TOOL SHOP® 1.2 A ROTARY TOOL WARRANTY

1-YEAR LIMITED WARRANTY:

This TOOL SHOP® brand power tool carries a 1-Year Limited Warranty to the original purchaser. If the tool fails within one (1) year from the date of purchase, simply bring this tool with your original sales receipt back to your nearest MENARDS® retail store. At its discretion, TOOL SHOP® agrees to have the tool replaced with the same or similar TOOL SHOP® product free of charge, within the stated warranty period, when returned by the original purchaser with original sales receipt. Notwithstanding the foregoing, this limited warranty does not cover any damage that has resulted from abuse or misuse of the Merchandise. This warranty: (1) excludes expendable parts including but not limited to blades, belts, bits, light bulbs, and/or batteries; (2) shall be void if this tool is used for commercial and/or rental purposes; and (3) does not cover any losses, injuries to persons/property or costs. This warranty does give you specific legal rights and you may have other rights, which vary from state to state. Be careful, tools are dangerous if improperly used or maintained. Seller's employees are not qualified to advise you on the use of this Merchandise. Any oral representation(s) made will not be binding on seller or its employees. The rights under this limited warranty are to the original purchaser of the Merchandise and may not be transferred to any subsequent owner. This limited warranty is in lieu of all warranties, expressed or implied including warranties or merchantability and fitness for a particular purpose. Seller shall not be liable for any special, incidental, or consequential damages. The sole exclusive remedy against the seller will be for the replacement of any defects as provided herein, as long as the seller is willing or able to replace this product or is willing to refund the purchase price as provided above. For insurance purposes, seller is not allowed to demonstrate any of these power tools for you.

For questions / comments, technical assistance, or repair parts –
Please Call Toll Free at: 1-866-349-8665 (M–F 9am – 5pm EST) or email
customerservice@powertoolsplus.ca

SAVE YOUR RECEIPTS. THIS WARRANTY IS VOID WITHOUT THEM.