

XTREME[®] DIGITAL LIFESTYLE ACCESSORIES PRINTER SLUG FOR TECH PACK	
BRAND: XTREME CATEGORY: SOUND PRODUCT NAME: XBS9-1083 LED Light Show Mini Karaoke BT Speaker w/Mic FILE NAME: XBS9-1083_MiniKaraoke_LED_BT_Speaker_wMic ITEM NUMBER: XBS9-1083	ADDITIONAL PRINTING PROCESSES: UV SPOT: GLOSS METALLIC FOIL: DEBOSS: EMBOSS: VARNISHING TECHNIQUE: MATTE LAMINATION
PRESS WORK: PRINT 1/1. TRIM TO SIZE, SCORE, FOLD WHEN SPECIFIED	PRESS SPEC COLOR REFERENCES
SCALE: 100%	DIELINE
ASSEMBLED PACKAGE DIMENSIONS (in Inches) WIDTH: 3” HEIGHT: 4.9” DEPTH:	GLOSS UV SPOT EMBOSSING (RELIEF) DEBOSSING (SUNKEN)
DIELINE OVERALL DIMENSIONS (in Millimeters) WIDTH: 78.065mm HEIGHT: 124.873mm	FOLDING LINE PRODUCT PLACEMENT FOILING GLUE FOLD Ø20mm SECURITY STICKERS PLACEMENT BLISTER OR INNER TRAY PLACEMENT CLOTH LIFT TAG
MANUAL MATERIAL, THICKNESS & SIZE	ADDITIONAL PANTONE COLORS (NOT CMYK)
SUBSTRATE TYPE: MATTE ART PAPER C2S, 100gsm	SOLID COLOR NAME:
WINDOW:	NEON COLOR NAME:
INNER TRAY:	METALLIC COLORS:
BLISTER:	VENDOR’S FOIL NAME/NUMBER:
PLASTIC BAG:	
MAGNET:	
VELCRO:	
SECURITY STICKERS:	
HANG TAB COLOR/ MATERIAL/SIZE:	
FOAM	
CORRUGATED BOARD:	
PAPERBOARD:	
USER MANUAL: PRINT 1/1 IN BLACK ONLY	FILE SAVED AS: .ai = FULLY EDITABLE -OUT.ai = OUTLINED .pdf = Acrobat .jpg = Flat image .png = DIGITAL (transparent background)
PACKAGING TYPES	APPROVAL CHECKLIST:
FOLDING CARTON:	PRIMARY DESIGNER: Rita Manukyan DATE: 09/25/25
FOLDING CARTON WITH DOOR PANEL:	SECONDARY DESIGNER: DATE:
RIGIT GIFT BOX:	PROOF READ: DATE:
CLAMSHELL:	APPROVED BY: DATE:
SLIDING/SLIPCASE:	AUTHORIZATION SIGNATURES:
TRAPPED BLISTER CARD	
BLISTER CARD:	
OTHER:	

Press Ready Artwork.
DO NOT PRINT THIS LAYER:
Printer Slug

PRINTABLE LAYER:
Manual Artwork

FRONT PAGE

SAFETY AND CARE INSTRUCTIONS Read all the instructions before using the product and then store them for future reference. Failure to follow these safety instructions, could lead to fire, electrical shock, personal injury, property damage, or damage to the product. - This product contains a non-replaceable rechargeable lithium-ion battery. When discarding, follow your local / state guidelines. - Do not expose to rain, moisture, or other liquid. Do use near water such as swimming pools, bathtubs, or sinks. If it becomes wet, immediately unplug the product from a power source, Do not handle the unit, USB cord or wall charger with wet hands. - Do not charge, or use, the product if it has been submerged in water, or if water has got inside the product. - Do not expose to heat sources, the sun, or leave in a hot vehicle. Do not dispose of in a fire. - Do not expose the product to extremely high or low temperatures. Use this product in a location with a temperature of 32°F - 95°F. Prolonged exposure to extreme heat or cold reduces battery longevity. Exposure to fire or temperatures above 170°F could cause serious damage and explosion. - Do not dissemble, there are no serviceable parts inside. Do not drop. Do not use if damaged or modified or if you see any bulging, swelling, leakage or other abnormality. Never insert objects other than the specified cables into the product. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury. - Charge using the correct wall charger, and make sure that the charger is inserted all the way into the electrical outlet. Disconnect the charger once the product is fully charged. - This product is not a toy. Keep out of reach of children or those that require supervision. - Do not use abrasive cleaning solvents to clean the unit. Note: Lithium-ion batteries will self-discharge over time, and it is normal for battery performance to decline after several years of usage. To ensure battery life, do not store the product in an uncharged state for a length of time, if left in a discharged state for too long a lithium-ion battery will no longer have the ability to be recharged.	FCC STATEMENT Any changes or modifications not expressly approved by the party responsible for compliance could void this user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures: - Reorient or relocate the receiving antenna - Increase the separation between the equipment and receiver - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected - Consult the dealer or an experienced radio/TV technician for help This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.	ONE YEAR LIMITED WARRANTY Xtreme warrants its products for one year against defects in manufacturing under regular consumer use with original receipt of retail purchase. We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt. *Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied. Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property. For instructions about how to obtain warranty service for your product, please contact Customer Service: customerservice@xtremecables.com FCC ID: 2AHAS-XBS91083MM FCC ID: 2AHAS-XBS91083D	XTREME[™] SOUND LED LIGHT SHOW MINI KARAOKE BLUETOOTH[®] SPEAKER WITH MIC XBS9-1083-CRM-S User Manual V2.0 0925 855.999.8041 WWW.XTREMECABLES.COM Scan to Extend Your Warranty
---	--	---	--

BACK PAGE

INTRODUCTION Thank you for purchasing the LED Light Show Mini Karaoke Bluetooth Speaker with Mic. This device is perfect for karaoke enthusiasts and includes a built-in filter for optimal sound quality. The mic also offers audio filters to enhance your karaoke experience. Please read this manual carefully for proper usage and maintenance. FEATURES - Multiple light show modes - Wireless microphone - Karaoke filters - Full audio control buttons - Recharge via USB-C port, cable included - Bluetooth range 10m SPECIFICATIONS - Bluetooth Version: 5.3 - Bluetooth Range: 33ft - Operating Current: Speaker: 0.4-1.5A Mic: 30mA - Wattage: 10W - Charging Specification: 5V/1A - Battery Capacity: Speaker: 1800mAh Mic: 400mAh - Charging Time: Speaker: 5 hours Mic: 2 hours - Frequency Response: 20Hz-20kHz - Decibel: 20dB - Dimensions: Speaker: 3.54 x 3.54 x 2.68 inches Mic: 5.31 x 1.46 x 1.46 inches Cable Length: 11.8 inches - Net Weight: Speaker: 0.51 lbs Mic: 0.11 lbs WHAT'S INSIDE - Mini Karaoke Bluetooth Speaker Wireless Mic - USB-C Charging Cable User Manual	GETTING TO KNOW YOUR PRODUCT MICROPHONE CONTROLS - Hold to Turn ON/OFF. - Tap to increase microphone volume / Hold for Next Track. - Tap to decrease microphone volume / Hold for Previous Track. - Tap to enter/exit Karaoke mode.	NOTE: Before first use, charge the speaker and mic for at least 3 hours. Charging Connect the USB charging cable to the speaker's and microphone's charging port. Plug the other end of the USB cable into a power source (e.g. USB wall adapter, computer). The charging indicators will light up red. Operation To power on, hold down button for 3 seconds. After the product is started it will automatically be in pairing mode. To power off, hold down button for 3 seconds. Bluetooth Pairing - Ensure the speaker is powered on. - Open the Bluetooth settings on your device and search for new devices. - Select "Xtreme XBS9-1083" from the list of available devices. - Once paired, a confirmation tone will sound. SPEAKER CONTROLS Play/Pause: Tap once. Volume Up: Tap . Volume Down: Tap . Next Track: Hold . Previous Song: Hold . Short press to switch between modes. (Bluetooth/USB/TF). Short press to cycle through different color modes. Short press to enter/exit Karaoke mode.	TROUBLESHOOTING TROUBLESHOOTING If you are unable to connect your speaker to your Bluetooth device, please try the following steps: - Ensure your speaker is turned on and fully charged - Make sure your phone or Bluetooth playback device's Bluetooth setting is on - Please charge the speaker and Bluetooth device - Restart your Bluetooth device Tips - Performance can be affected by the environment or when the speaker become discharged - Interruption can be caused by obstacles between the speaker and the Bluetooth device, by wi-fi or other high frequency signals, or if the speaker is brought out of range of the Bluetooth device (approx. 33 ft)
--	--	--	--