 


KLIPSCH
PROMEDIA LUMINA
COMPUTER SPEAKERS WITH LED LIGHTING
MANUAL

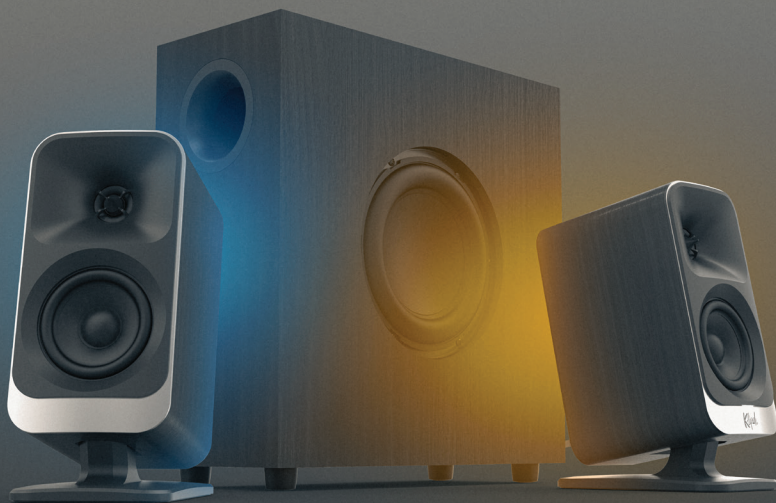

LEGENDARY AMERICAN SOUND



SINCE 1946

TABLE OF CONTENTS

TABLE DES MATIÈRES • TABLA DE CONTENIDO • INHALTSVERZEICHNIS • INDICE • ÍNDICE • 目録 • 目錄 • 目次 • 클립쉬 커넥트 플러스 앱

 
- 1. Klipsch Apps**
- 2. What's in the box**
- 3. Product Overview**
- 4. Setup and Power**
- 5. USB-C Computer Input**
- 6. Bluetooth Input**
- 7. AUX Input**
- 8. USB-C Drive Input**
- 9. Lighting Control**
- 10. Headset Output**
- 11. Charging Output**
- 12. Factory Reset**
- 13. Care and Cleaning**

KLIPSCH APPS


APPLICATIONS KLIPSCH • APLICACIONES KLIPSCH • KLIPSCH APPS • APPS KLIPSCH • APLICATIVOS KLIPSCH • KLIPSCH 应用程序 • KLIPSCH 應用程式
KLIPSCH コネクトプラスアプリ • 클립쉬 커넥트 플러스 앱들

Scan the QR code for enhanced functionality.

Scannez le code QR pour une fonctionnalité améliorée. Escanee el código QR para obtener una funcionalidad mejorada. Scannen Sie den QR-Code für erweiterte Funktionalität. Scansiona il codice QR per funzionalità avanzate. Digitalize o código QR para funcionalidade aprimorada. 扫描二维码以获取增强功能。 掃描二維碼以取得增強功能。 拡張機能についてはQRコードをスキャンしてください。 향상된 기능을 보려면 QR 코드를 스캔하세요.



VIRTUAL REMOTE

 


EQUALIZER



LIGHT SHOW CONTROL



 
SUPPORT



Virtual Remote Télécommande virtuelle Control remoto virtual Virtuelle Fernbedienung Telecomando virtuale Remoto virtual 虚拟遥控器 虛擬遙控器 仮想リモート 가상 원격	Equalizer Égaliseur Igualada Equalizer Equalizzatore Equalizador 均衡器 均衡器 イコライザー 평형 장치	Light Show Control Contrôle du spectacle lumineux Control del espectáculo de luces Lichtshow-Steuerung Controllo dello spettacolo di luci Controle de show de luzes 灯光秀控制 燈光秀控制 ライトショーコントロール 라이트 쇼 컨트롤	Support Soutien Apoyo Unterstützung Supporto Apoiar 支持 幫助 サポート 지원하다
--	--	---	--

WHAT'S IN THE BOX

 
CONTENU • CONTENIDO • INHALT • CONTENUTO • CONTEÚDO • 内 • 含量 • 内容物 • 내용물 내부

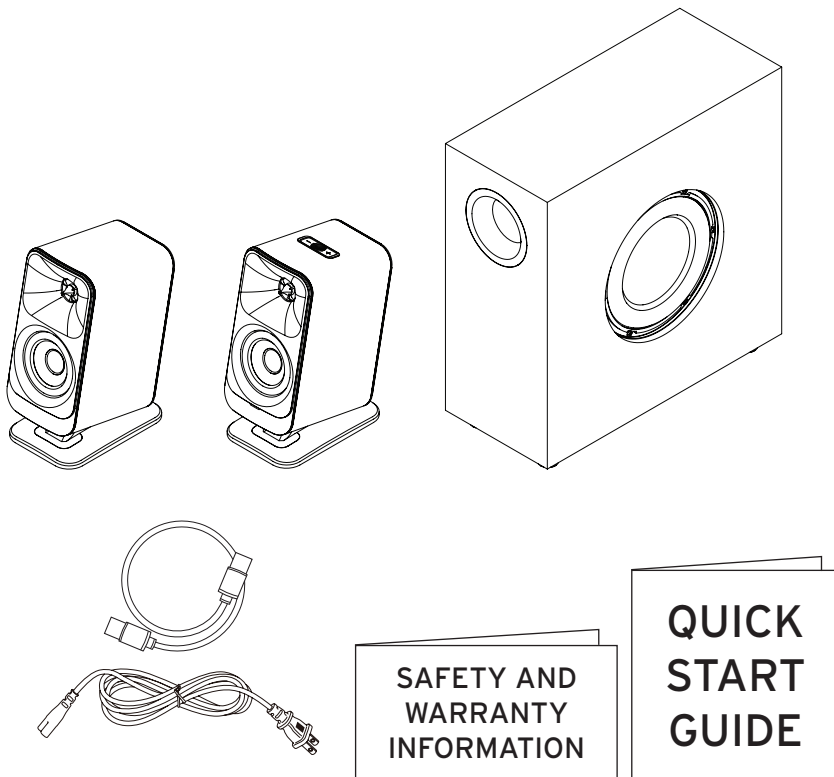


PRODUCT OVERVIEW


PRÉSENTATION DU PRODUIT • DESCRIPCIÓN GENERAL DEL PRODUCTO • PRODUKTÜBERSICHT • PANORAMICA DEL PRODOTTO • VISÃO GERAL DO PRODUTO • 产品介绍

 品概述 • 產品概述 • 製品概要 • 제품 개요

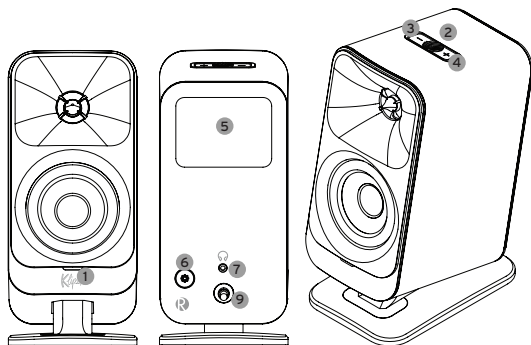

  1. Indicator LED
2. Multifunction Button
3. Vol-
4. Vol+
5. Rear RGB LEDs
6. Utility Button
7. Headset Passthrough
8. Charging Passthrough
9. Speaker Cable

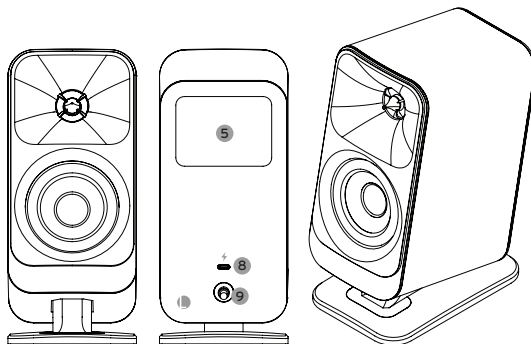

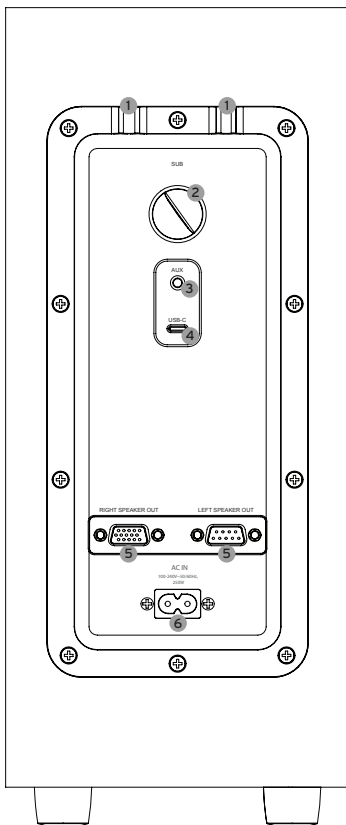


1. Speaker Cable Clips
2. Subwoofer Gain Control
3. AUX Input
4. USB-C Input
5. Right and Left Speaker Inputs
6. Power Cable Input

SPEAKER SETUP

CONFIGURATION DES HAUT-PARLEURS • CONFIGURACIÓN DE LOS ALTAVOCES • LAUTSPRECHER-SETUP • CONFIGURAZIONE DEGLI ALTOPARLANTI •

 
CONFIGURAÇÃO DO ALTO-FALANTE • 扬声器设置 • 揚聲器設定 • スピーカーのセットアップ • 스피커 설정

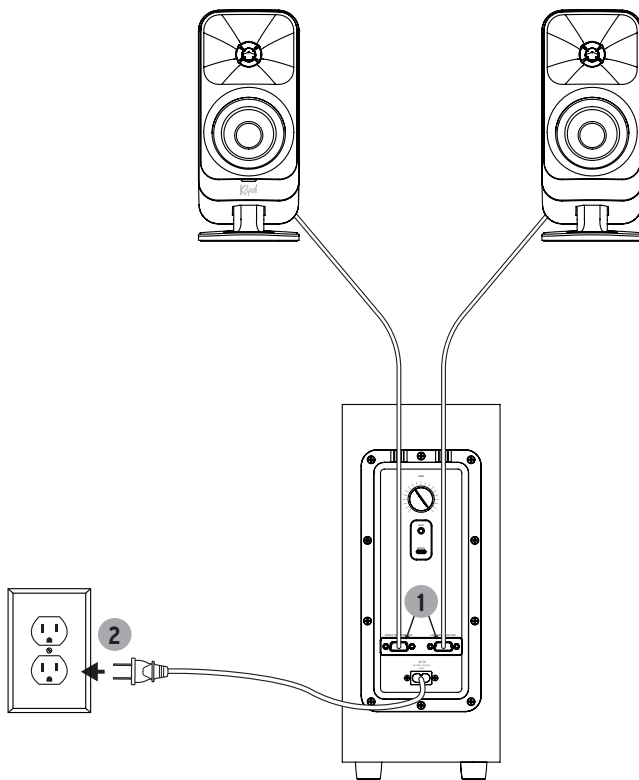

SPEAKER PLACEMENT

EMPLACEMENT DES HAUT-PARLEURS • COLOCACIÓN DE ORADORES • LAUTSPRECHERPLATZIERUNG • POSIZIONAMENTO DEGLI ALTOPARLANTI •

 
POSICIONAMENTO DO ALTO-FALANTE • 扬声器摆放 • 揚聲器擺放 • スピーカーの配置 • 스피커 배치

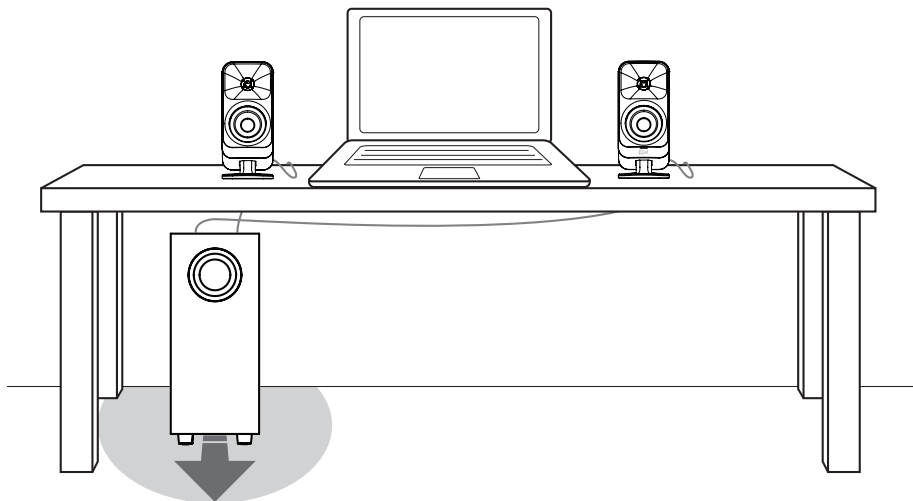

POWER

PUISSANCE • POTENCIA • STROM • ALIMENTAZIONE • POTÊNCIA • 電源和電池 • 電源和電池 • 電源とバッテリー • 전원 및 배터리

 
ON

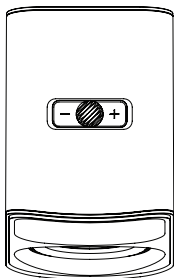

Press Any Button

Appuyer pendant >0.1 secondes
Mantenga oprimido durante >0.1 segundos
>0.1 Sekunden gedrückt halten
Tenere premuto per >0.1 secondi
Manter pressionado por >0.1 segundos
保持 >0.1 秒
維持 >0.1 秒
>0.1秒間押し続ける
>0.1초 동안 유지

 OFF

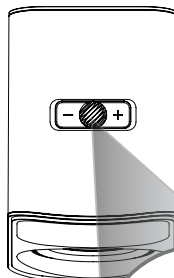

Hold >5 Seconds

 
Appuyer pendant >5 secondes
Mantenga oprimido durante >5 segundos
>5 Sekunden gedrückt halten
Tenere premuto per >5 secondi
Manter pressionado por >5 segundos
保持 >5 秒
維持 >5 秒
>5秒間押し続ける
>5초 동안 유지



Auto-Off after 15 Minutes of inactivity


CONNECTIONS - USB TO COMPUTER

CONNEXIONS - USB VERS ORDINATEUR • CONEXIONES - USB A COMPUTADORA • ANSCHLÜSSE - USB ZUM COMPUTER • CONNESSIONI - USB AL COMPUTER • CONEXÕES - USB PARA COMPUTADOR • 连接 - USB 至计算机 • 连接 - USB 至計算機 • 接続 - USBからコンピュータへ • 연결 - USB-컴퓨터

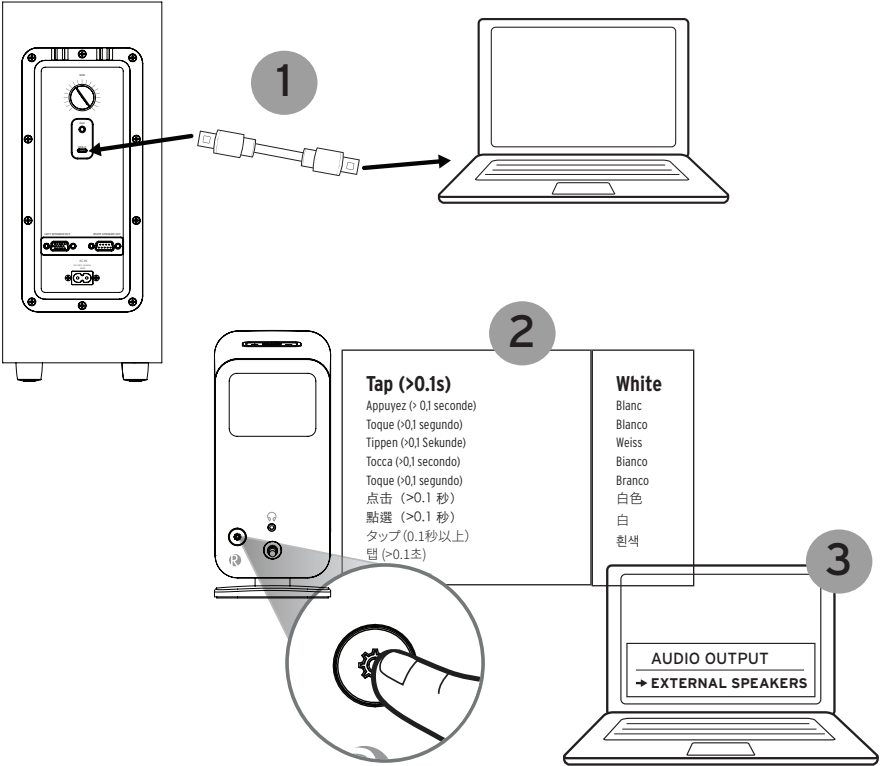

BLUETOOTH® PAIRING MODE

 MODE DE COUPLAGE **BLUETOOTH®** • MODO DE EMPAREJAMIENTO **BLUETOOTH®** • **BLUETOOTH®**-KOPPLUNGSMODUS • MODALITÀ DI ABBINAMENTO **BLUETOOTH®**
 MODO DE EMPARELHAMENTO **BLUETOOTH®** • **BLUETOOTH®** 配对模式 • **BLUETOOTH®** 配对模式 • **BLUETOOTH®** ペ어링モード
BLUETOOTH® 페어링 모드

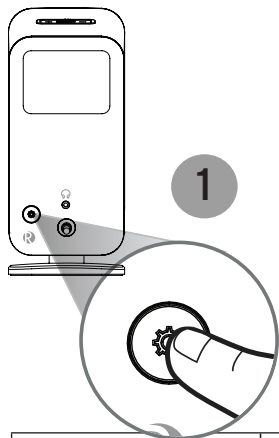


1

Tap (>0.1s)

Appuyez (> 0.1 seconde)
 Toque (>0.1 segundo)
 Tippen (>0.1 Sekunde)
 Tocca (>0.1 secondo)
 Toque (>0.1 segundo)
 点击 (>0.1 秒)
 點選 (>0.1 秒)
 タップ (0.1秒以上)
 탭 (>0.1초)

Blue

 
Bleu
 Azul
 Blau
 Blu
 Azul
 蓝色
 藍色
 青色
 파란색

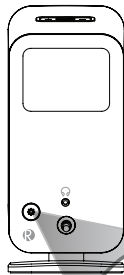

2


Hold >2 Seconds

 Appuyer pendant >2 secondes
 Mantenga oprimido durante >2 segundos
 >2 Sekunden gedrückt halten
 Tenere premuto per >2 secondi
 Manter pressionado por >2 segundos
 保持 >2 秒
 維持 >2 秒
 >2秒間押し続ける
 >2초 동안 유지

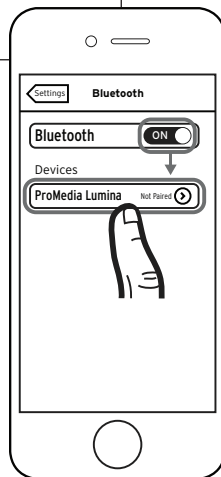


CONNECTIONS - AUXILIARY

 CONNEXIONS - AUXILIAIRE • CONEXIONES - AUXILIAR • ANSCHLÜSSE - AUX • CONNESSIONI - INGRESSO AUSILIARIO • CONEXÕES - AUXILIAR • 连接 - 辅助 • 接続 - AUX • 연결 - 보조

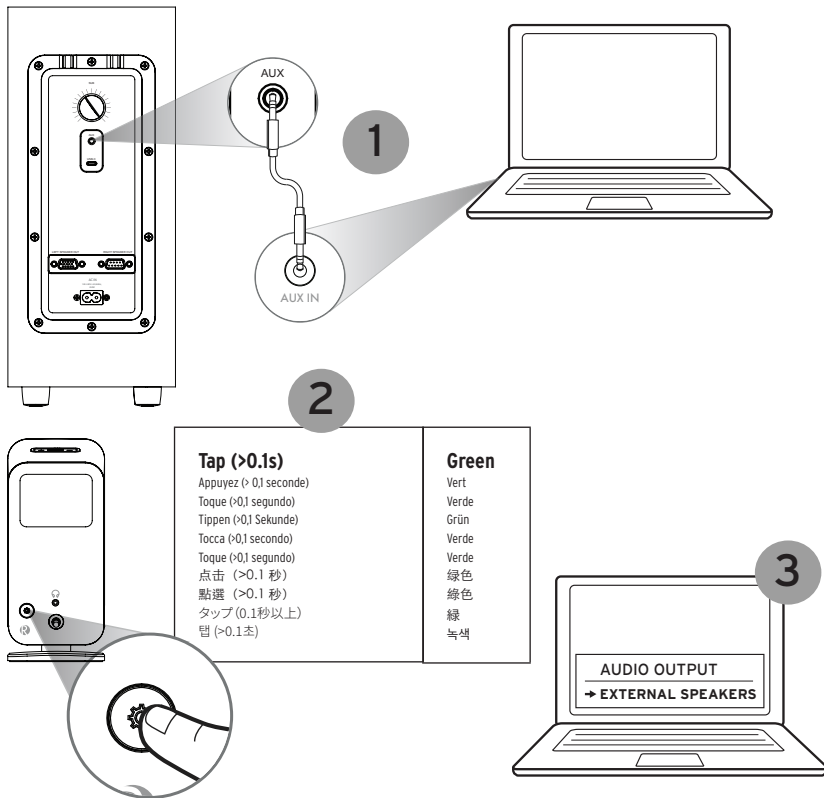



CONNECTIONS - USB DRIVE

 CONNEXIONS - CLÉ USB • CONEXIONES - UNIDAD USB • ANSCHLÜSSE - USB-LAUFWERK • CONNESSIONI - UNITÀ USB • CONEXÕES - UNIDADE USB • 连接 - USB 驱动器 • 連接 - USB 隨身碟 • 接続 - USBドライブ • 연결 - USB 드라이브

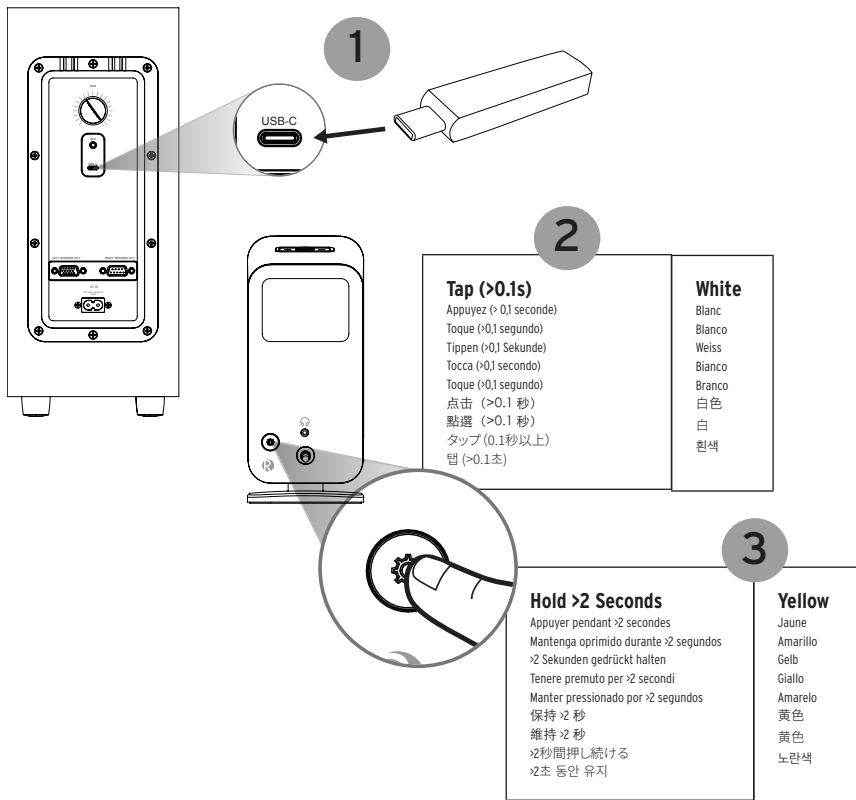

LIGHT MODES

  
MODES D'ÉCLAIRAGE • MODOS DE LUZ • LICHTMODI • MODALITÀ DI LUCE • MODOS DE LUZ • 灯光模式 • 燈光模式 • ライトモード
조명 모드

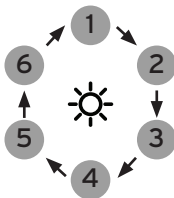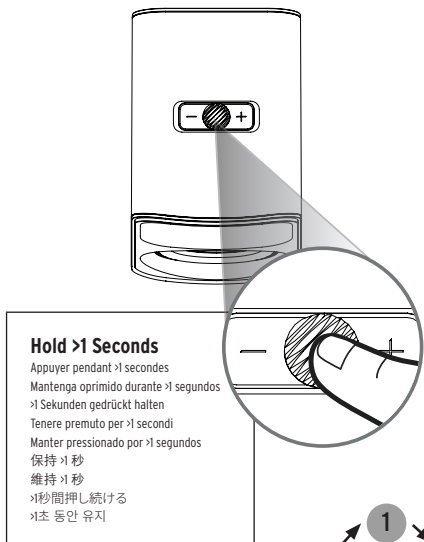

1. Rainbox
2. Breathe
3. Static
4. Aurora
5. Music React
6. Screen React (Desktop App Only)

LED BRIGHTNESS

 
LUMINOSITÉ DES LED • BRILLO DEL LED • LED-HELLIGKEIT • LUMINOSITÀ DEL LED • BRILHO DO LED • LED亮度 • LED亮度 • LEDの明るさ • LED 밝기

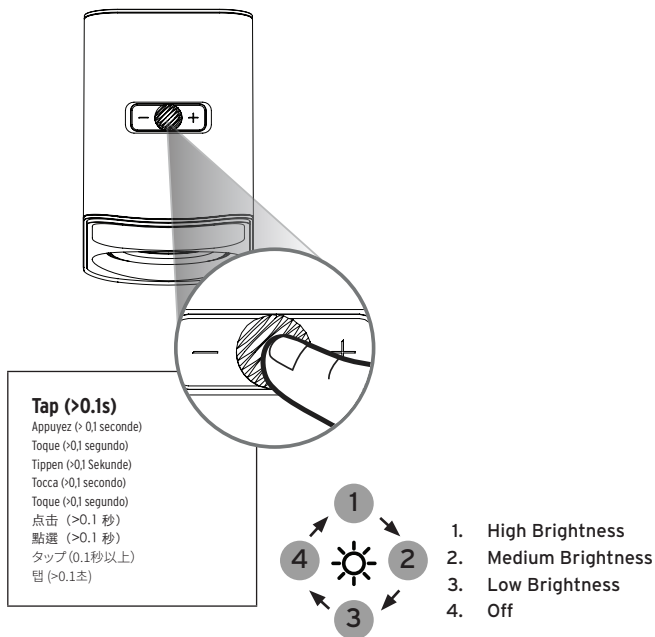

HEADSET PASSTHROUGH


PASSAGE DU CASQUE • PASO DE AURICULARES • HEADSET-PASSTHROUGH • PASSAGGIO CUFFIE • PASSAGEM DE FONE DE OUVIDO • 耳机直通 • 耳機直通 •

 ヘッドセットパススルー・ 헤드셋 패스스루

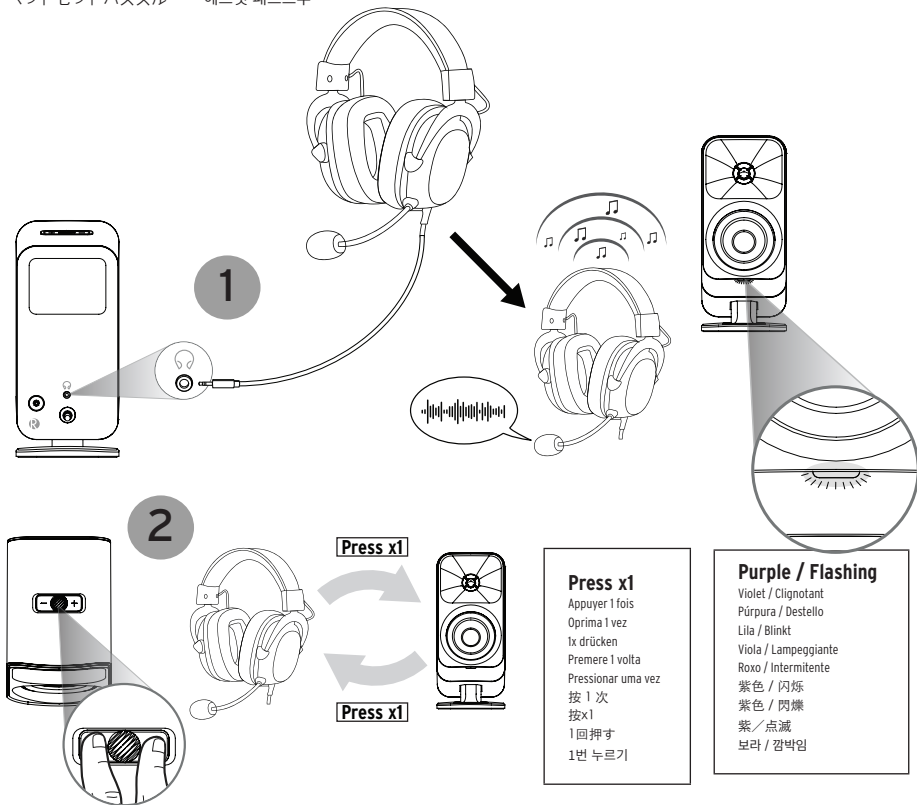


CHARGING OUTPUT

 SORTIE DE CHARGE • SALIDA DE CARGA • LADEAUSGANG • USCITA DI CARICA • SAÍDA DE CARGA • 充电输出 • 充電輸出 • 充電出力 • 충전 출력

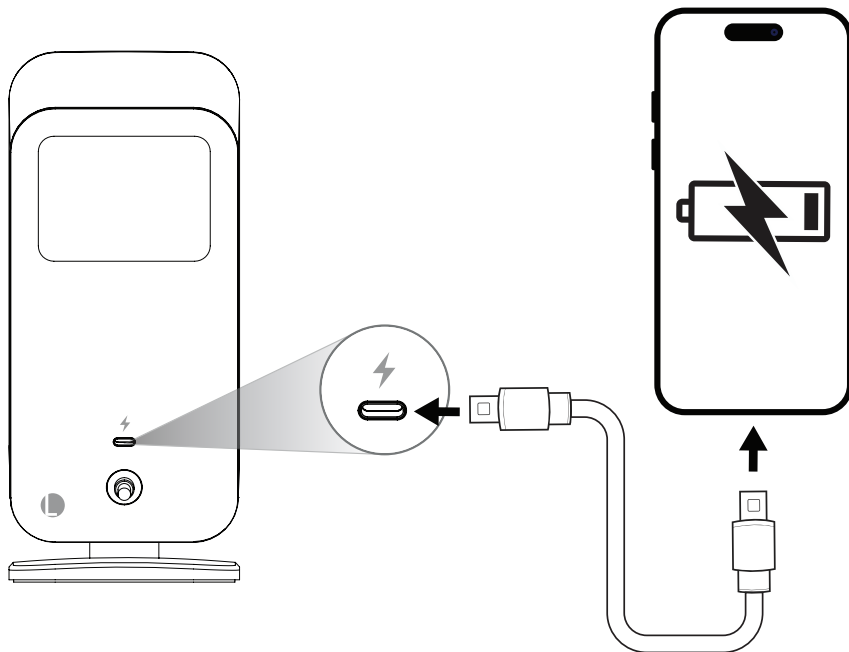


FACTORY RESET

 RÉINITIALISATION • RESTABLECIMIENTO DE FÁBRICA • RÜCKSETZUNG AUF WERKSEINSTELLUNG • RIPRISTINO IMPOSTAZIONI DI FABBRICA
RESTABELECIMENTO DAS CONFIGURAÇÕES DE FÁBRICA • 恢复出厂设置 • 恢復出廠設定 • ファクトリーリセット • 공장 초기화

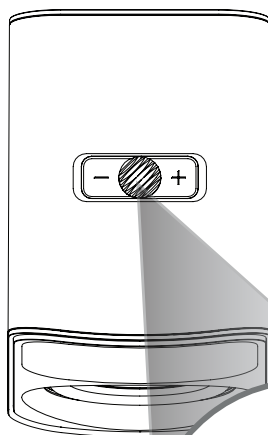


Hold 10 Seconds

 Appuyer pendant 10 secondes
Mantenga oprimido durante 10 segundos
10 Sekunden gedrückt halten
Tenere premuto per 10 secondi
Manter pressionado por 10 segundos
保持 10 秒
維持 10 秒
10秒間押し続ける
10초 동안 유지

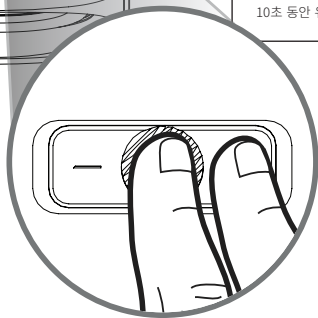



CARE AND CLEANING

 ENTRETIEN ET NETTOYAGE • CUIDADO Y LIMPIEZA • PFLEGE UND REINIGUNG • CURA E PULIZIA • CUIDADOS E LIMPEZA • 保养与清洁 • お手入れ • 護理
和清潔 • 관리 및 청소

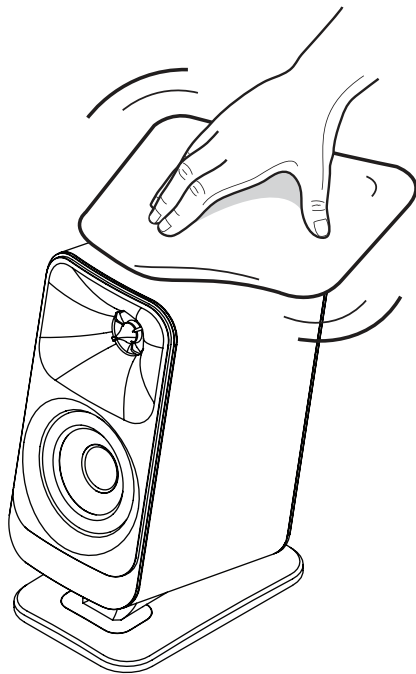


VOLUME

  VOLUME • VOLUMEN • VOLUMEN • VOLUME • VOLUME • 音量 • 音量 • 音量 • 용량

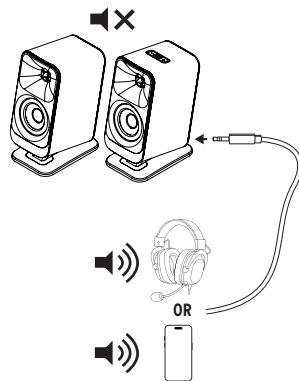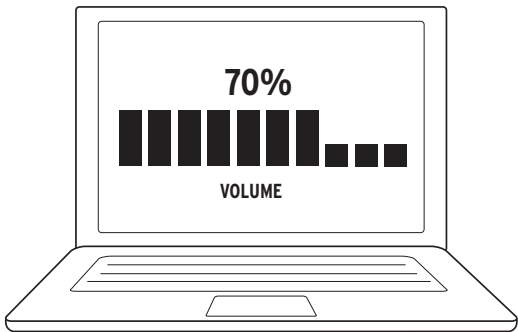


TROUBLESHOOTING

 RÉSOLUTION DES PROBLÈMES • SOLUCIÓN DE PROBLEMAS • PROBLEMLÖSUNG • SOLUZIONE DEI PROBLEMI • SOLUÇÃO DE PROBLEMAS • 故障排除 • 故障排除 • トラブルシューティング • 문제 해결

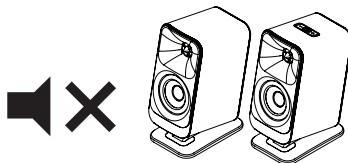


1

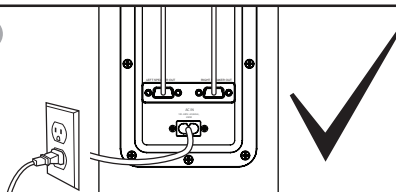 


2



 3

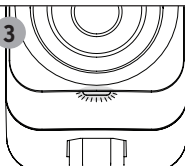

4

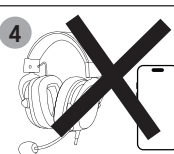 



3502 WOODVIEW TRACE, INDIANAPOLIS, IN, USA

KLIPSCH.COM

©2025 Premium Audio Company, LLC, a wholly owned subsidiary of Gentex Corporation (NASDAQ: GNTX). Klipsch and Keepers of the Sound are trademarks of Klipsch Group, Inc., registered in the United States and other countries. The *Bluetooth®* word mark is a registered trademark owned by Bluetooth SIG, Inc. and any use of such mark by Klipsch Group, Inc. is under license.

V06 - 260225