

Multifunction mixer

Instruction manual

EN



SENCOR®

SHB 4360/SHB 4361BL/SHB 4362GR/SHB 4363OR/SHB 4364RD/
SHB 4365VT/SHB 4366YL/SHB 4367TQ/SHB 4368RS

Before use, please read the instruction manual carefully, even if you already have an experience with using similar equipment. Use mixer only in accordance with the instructions included in this manual. Save manual for future reference.

Save the cardboard box, packaging material, cushioning, prove of purchase receipt and the warranty policy at least for the duration of the warranty period. In case you need to ship the appliance back, use the original packaging.

EN-1

CONTENT


IMPORTANT SAFETY INSTRUCTIONS.....	3
DEVICE DESCRIPTION	4
HOW TO USE THE HAND BLENDER.....	5
HOW TO USE THE CHOPPING ATTACHMENT	6
HOW TO USE THE WHISK ATTACHMENT.....	7
WALL HOLDER.....	7
CLEANING	8
TECHNICAL SPECIFICATIONS	9

Multifunction mixer

SHB 4360/SHB 4361BL/SHB 4362GR/SHB 4363OR/SHB 4364RD/SHB 4365VT/SHB 4366YL/SHB 4367TQ/SHB 4368RS

EN

IMPORTANT SAFETY INSTRUCTIONS

 
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they will not play with the appliance.
- Before connecting the power cord to the wall outlet, make sure that the voltage is compatible with the voltage shown on the label on the device.
- Never use the blender close to water, bathroom, swimming pool or showering room. 
- Never use accessories that are not originally supplied with your product or accessories that are not designed to be used with your product.
- Do not place the device on window ledge.
- Make sure that the power cord or the power cord plug are not in contact with water or are wet before connecting it to the wall outlet.
- Place the device on even and flat surface.
- Do not pour water or any other liquids into the appliance.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Your mixer has been designed for household use only. It is able to handle regular amounts of food.
- Do not use the mixer for commercial purposes or outdoors!
- Do not use any spray bottles around the blender.
- If you are not using the mixer, always disconnect the power cord from the wall outlet. Store away from children.
- Do not place the mixer on hot surfaces such as electric or gas oven. Also do not place it close to heat producing equipment or close to an open fire.
- Do not use damaged mixer or if it is not working properly. Do not use if the power cord or the power cord plug are damaged.
- If you discover damaged power cord or power cord plug, have it repaired by authorized service centre only.
- Never attempt to repair the appliance yourself. There is a risk of electrical shock. Have all repairs and adjustments done by an authorized service centre or repair shop. Any attempt to perform repair or adjustment during the warranty period will void the warranty.
- Do not place the power cord close to or on hot surfaces. Do not place on sharp objects. Do not place heavy objects on the power cord. Place the power cord in such way, so no one will step on it or trip over it. Make sure that the power cord is not hanging down from a table. Make sure it is not touching hot surfaces.
- When disconnecting the power cord from the wall outlet, do not pull it by the cord. You may damage the cable or the wall outlet. Instead, hold the power cord plug and pull it out of the wall outlet.
- Use the mixer only for purposes for which it has been designed.
- Make sure that the appliance is switched off and unplugged before attaching the removable part, chopping or whisk attachments to the motor unit or its removing.
- Do not switch on the appliance unless the removable part or chopping or whisk attachments are properly attached to the motor unit. Do not switch on the appliance empty. Improper use could adversely affect the life of the appliance.
- Do not place your hands inside the mixing container while the device is operating.
- Do not place inside the mixing container items that you do not wish to be mixed.
- Use extreme caution when blending hot foods or hot items. Use only small portions. Hot mix may spill out and cause severe burns. If the items to be blended are very hot, allow them to cool down to a temperature at least 60 °C.
- Never use the mixer for mixing or blending foods that are being cooked on an electric or gas stove.
- The operation time is 1 min. After one minute of use, let it rest for at least two minutes. If you are using the blender for mixing heavy or hard food items, we recommend taking a break every 20 – 30 seconds.



Caution!

The cutting knives are very sharp. Never attempt to touch the spinning knives.

DEVICE DESCRIPTION

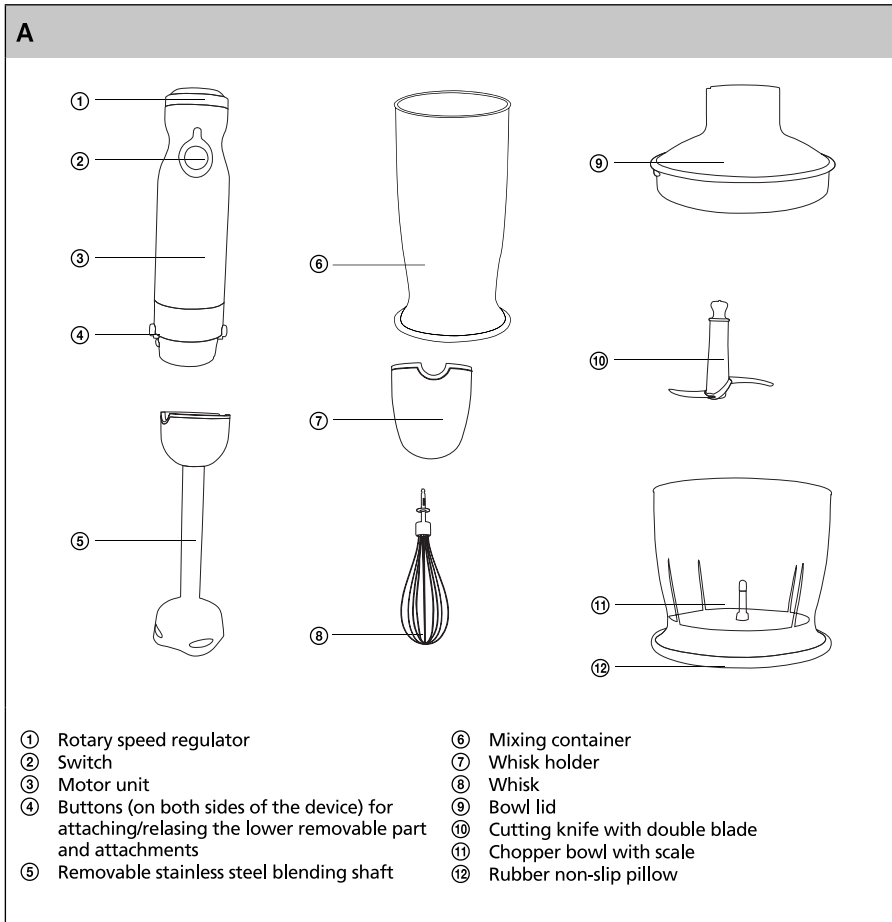

Prior to initial use, it is necessary to thoroughly wash the device and all accessories with hot water, using washing-up liquid, followed by rinsing it with drinking water.

**Tip:**

The rubber non-skid pad can also serve as a cover for the chopping bowl when storing in the refrigerator.

Multifunction mixer

SHB 4360/SHB 4361BL/SHB 4362GR/SHB 4363OR/SHB 4364RD/SHB 4365VT/SHB 4366YL/SHB 4367TQ/SHB 4368RS

 
EN

Rotary speed regulator

The Speed regulator (A1) is used to set the appropriate speed for mixing, chopping or whisking. The Speed can be set according to your preferences. Turning the regulator anticlock wise the speed is decreasing, turning clock wise the speed is increasing. Before pressing the switch, first set the desired speed and then press the switch.

Do not change the speed when operating the device.

HOW TO USE THE HAND BLENDER



This hand blender is suitable for mixing of cooked ingredients (e.g. preparation of mixed baby food), mixing drinks (e.g. preparation of milk cocktails, fruits drinks, sauces etc.) or mixing of soft ingredients (e.g. preparation of bread spreading, mayonnaise etc).

Hand blender assembly:

- 1) Set the removable part to motor unit (A3) until it clicks. The safe locking is indicated by a click.
- 2) Now the hand blender is ready to use. Insert the plug into the power outlet. After inserting into the power outlet the switch (A2) will be highlighted.

Note: Use the device for no longer than 1 minute.

Note: If you want release the lower removable part, press the attaching / releasing buttons and remove the lower part.

Note: When assembling/disassembling the hand blender always make sure the hand blender is switched off and power cord is removed from the power outlet.



Ingredients processing guide

Ingredients	Volume in g	Mixing time
Mixed baby food, sauces	100 – 300	45 s
Mixed drinks	100 – 500	30 s
Fruit and vegetable	100 – 200	45 s
Cheese	50 – 100	30 s

The actual mixing time depends on how fine mix you want to achieve. The shown mixing times are for your reference only.

 
HOW TO USE THE CHOPPING ATTACHMENT

The chopping attachment is suitable for chopping food, such as meat, hard cheese (e.g. Parmesan), vegetable (e.g. onion, garlic, carrots etc.), herbs, nuts (e.g. hazelnuts, walnuts etc.), dried fruit (e.g. prunes) and other type of food.

The chopping attachment has not been designed to cut ice cubes, spices (e.g. nutmeg), coffee beans or similar type of food.

Before inserting food into the bowl it is necessary to cut the food into small pieces.

Chopping attachment assembly:

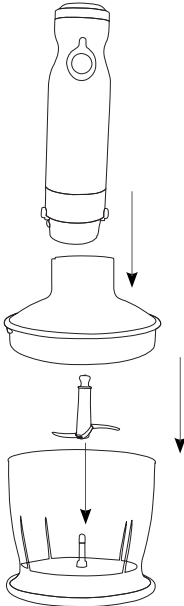

- 1) Place a rubber non-slip pillow (A12) onto the bottom of a chopper bowl. The rubber pillow prevent the attachment from accidental shipping and tipping over and possible hurt.
- 2) Carefully insert a cutting knife (A10) into the chopper bowl (A11). Set the cutting knife onto the central spindle of the bowl. **Always** hold the cutting knife by the plastic part.



Caution: The cutting knife is very sharp!

- 3) Put the food you wish to chop into the bowl. The amount should not exceed the maximum limit (500 ml) that is marked on the bowl.
- 4) Place a lid (A9) on the bowl. The bowl should be put so that the pressing center, located on the underside of the lid, is placed on the cross of the cutting knife as well as the security locks, located on the sides of the lid, fit into the bowl security system. Once the lid is placed correctly, turn the lid clock wise until it will not be securely fixed. The safe locking is indicated by a click.
To release the lid, turn the lid anticlock wise. The lid release is also indicated by a click. When releasing the lid pay higher attention so that it will not tip over or release of cutting knife and possible hurt.
- 5) Place the motor unit (A3) onto the assembled chopping attachment.
- 6) Now the device is ready to use. Insert the plug into the power outlet. After inserting into the power outlet the switch (A2) will be highlighted.

Note: Use the device for no longer than 1 minute.

Note: When assembling/disassembling the chopping attachment always make sure the device is switched off and power cord is removed from the power outlet.

Note: To disassemble, follow the opposite way.

Multifunction mixer

SHB 4360/SHB 4361BL/SHB 4362GR/SHB 4363OR/SHB 4364RD/SHB 4365VT/SHB 4366YL/SHB 4367TQ/SHB 4368RS

EN

Processing guide

Food	Maximum	Operation time	Preparation
Meat	200 g	15 s	1 – 2 cm
Herbs	50 g	6 s	
Shelled nuts, skinless almonds	150 g	15 s	
Cheese	100 g	10 s	1 – 5 cm
Bread	75 g	20 s	2,5 cm
Onion	150 g	10 s	½
Biscuits	50 g	20 s	2,5 cm
Soft fruit	200 g	10 s	2,5 cm
Other vegetable	200 g	20 s	2,5 cm

The actual time depends on how small pieces you want to achieve.

HOW TO USE THE WHISK ATTACHMENT

The whisk attachment is suitable for whipping liquid mixture, whipping cream, beating egg whites and yolks, for mixing sponges, mayonnaise etc. Mix these mixures in smaller doses.

Whisk attachment assembly



- 1) Insert a whisk (A8) into a whisk holder (A7) until it clicks. Make sure the whisk is properly inserted.
- 2) Place the whisk attachment onto the motor unit (A3).
- 3) Now the device is ready to use. Insert the plug into the power outlet. After inserting into the power outlet the switch (A2) will be highlighted.

Note: Use the device for no longer than 1 minute.

Note: When assembling/disassembling the whisk attachment always make sure the device is switched off and power cord is removed from the power outlet.

Note: To disassemble, follow the opposite way.

 
WALL HOLDER

A wall holder is a part of accessories. This can be attached to the wall and the device can be placed on it. The wall holder can be secured to the wall by 2 screws. The screws or wall plug are not included in the accessories. For the size of screw and plugs contact the seller of fasteners.

Multifunction mixer

SHB 4360/SHB 4361BL/SHB 4362GR/SHB 4363OR/SHB 4364RD/SHB 4365VT/SHB 4366YL/SHB 4367TQ/SHB 4368RS

CLEANING

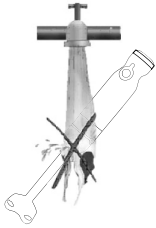

Before cleaning, always disconnect the power cord from the power outlet.

Clean the motor cover (motor part) with a soft and slightly wet cloth. Never submerge this part in water or any other liquid.

The accessories, such as mixing container (A6), bowl lid (A9), can be washed in the dishwasher. When processing foods with color, the plastic parts of the appliance may become discolored, wipe these parts with vegetable oil before placing them in the dishwasher.

You may also clean the knives by submerging them in hot water with soap and by switching the blender on. In this case, you must have the blender connected to the wall outlet.

Do not use abrasive or aggressive cleaning products, such as paint thinners or benzene to clean the device and its accessories.

TECHNICAL SPECIFICATIONS

230 V ~ 50 Hz, 800 W

Mixing container volume: 800 ml

Chopper bowl volume: 500 ml

Noise level: 61 dB(A)

The declared noise emission level for this appliance is 61 dB(A), which represents level A of the acoustic power relative to the reference acoustic power of 1 pW.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

Multifunction mixer

SHB 4360/SHB 4361BL/SHB 4362GR/SHB 4363OR/SHB 4364RD/SHB 4365VT/SHB 4366YL/SHB 4367TQ/SHB 4368RS