

USER GUIDE FOR PORTABLE TWO-WAY RADIOS

PLEASE READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a safe place for future reference.

 CAUTION:

Risk of fire or explosion if the battery is replaced by an incorrect type.

Not to disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery.

 These symbols on the products, packaging, and/or accompanying documents means that used electrical and electronic products and batteries should not be mixed general household waste.

 For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation.

By disposing of these products and batteries correctly, you will help to save valuable resource and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items. If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

- Do not attempt to disassemble the internal parts or modify them in any way.
- Do not place this product and battery near the fire.
- Do not place this product and battery in extremely low air pressure or low temperature.
- Only use batteries provided by the manufacturer
- Do not hold the antenna when the radio is transmitting.
- Do not use any portable radio that has a damaged antenna. If a damaged antenna comes into contact with skin, a minor burn can result.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Compliance with RF Exposure Standards

National and international regulations require manufacturers to comply with the RF energy exposure limits for portable two-way radios before they can be marketed. The two-way radio is designed, manufactured, and tested to comply with all applicable national and international regulations for human exposure to radio frequency electromagnetic energy.

RF Energy Exposure Awareness and Control Information and Operational Instructions for

General Population and Uncontrolled Environment Use

NOTE: This device is intended for use in general population conditions where radio-frequency (RF) exposure meets the requirements in national and international regulations.

Notice to Users (FCC)

This device complies with Part 15 of the FCC Rules.

- For body-worn operation, this radio has been tested and meets the FCC RF exposure guidelines when used with accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.
- Hold the transmitter approximately 25 mm from your face and speak in a normal voice, with the antenna pointed up and away.
- Transmit no more than the rated duty factor of 50% of the time. To transmit (talk), push the Push-To-Talk (PTT) button. To receive calls, release the PTT button. Transmitting 50 % of the time, or less, is important because this radio generates measurable RF energy exposure only when transmitting (in terms of measuring for standards compliance).
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Class B Digital Device

For a Class B digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual:

NOTE: This equipment complies with Class B digital device limits under Part 15 of the FCC Rules, which help protect against harmful interference in residential environments. It may generate, use, and radiate radio frequency energy; improper installation or use could cause interference to radio or TV reception. If interference occurs, try the following:

- Reorient or relocate the receiving antenna.
- Increase the distance between equipment and receiver.
- Connect to an outlet on a different circuit.
- Consult the dealer or an experienced radio/TV technician.

Package Contents

In box	QTY
Radio (VTR-3310)	2
Belt clip	2
Rechargeable Lithium-ion battery pack	2
User manual	1


Features and Specifications

- 22 Channels
- NOAA Weather Radio
- NOAA Weather Alert
- 121 Privacy-Codes (38 CTCSS Codes & 83 DCS codes)
- Up to 20 miles Range*
- iVOX
- 5 Selectable Call Tone
- LCD Display
- USB-C Connector for charging
- Battery Level Meter / Battery Save Indicator
- Channel Monitor
- Keypad Lock
- Auto Squelch Control
- Volume Knob (On/Off)
- LED Flashlight
- Power Source: Lithium-ion battery Pack 1000mAh
- Battery Life: Up to 14 hours (The rated battery life is measured under the industrial standard 5-5-90 duty cycle under lab condition. 5% of the time transmitting, 5% receiving with speaker on, and 90% waiting for incoming call. Risk of explosion if battery is replaced by an incorrect type.)

NOTE: *Range may vary depending on environmental and/or topographical conditions.

Radio Control Buttons and Display

This section describes the buttons and functions available on the Radio

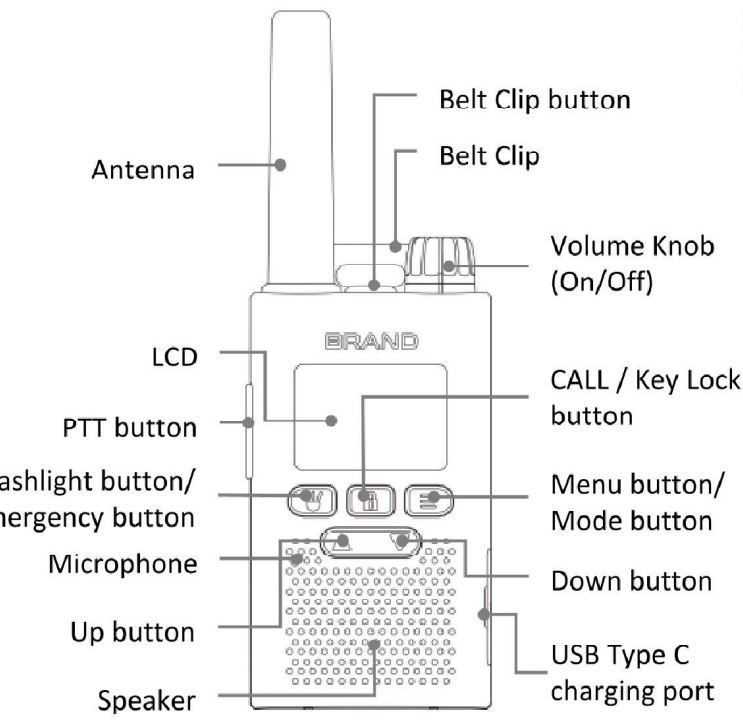

FRS Channels and Frequencies:

Channel	Frequency (MHz)	Power (W)	Channel	Frequency (MHz)	Power (W)
1	462.5625	1	12	467.6625	0.5
2	462.5875	1	13	467.6875	0.5
3	462.6125	1	14	467.7125	0.5
4	462.6375	1	15	462.55	1
5	462.6625	1	16	462.575	1
6	462.6875	1	17	462.6	1
7	462.7125	1	18	462.625	1
8	467.5625	0.5	19	462.65	1
9	467.5875	0.5	20	462.675	1
10	467.6125	0.5	21	462.7	1
11	467.6375	0.5	22	462.725	1

NOTE: The power refers to the maximum allowable power defined by FCC for each channel under FRS rules for USA and is not a reflection of the power specification of the radio.

Weather Channels and Frequencies:

Weather Channel	Frequency (MHz)	Weather Channel	Frequency (MHz)
WX1	162.550	WX6	162.500
WX2	162.400	WX7	162.525
WX3	162.475	WX8	161.650
WX4	162.425	WX9	161.775
WX5	162.450	WX10	163.275


Weather Mode

Your radio has a NOAA WEATHER RADIO function to enable the user to receive weather reports from designated NOAA stations. In this mode, you can listen to weather broadcast from NOAA. , Press and hold the **MENU button** for 3 seconds to enter the **Weather mode** from the **2-Way mode**

- Change the weather channel setting by pressing the ▲ or ▼ button after selection from **MENU button**.
- Adjust the volume setting by Volume Knob.
- To switch to **2-Way mode**, press and hold the **MENU button** for 3 second or press the **PTT button**.

NoAA Weather Alert



Your radio can automatically respond to NOAA emergency messages. When enabled, an alarm sounds and the weather receiver turns on to provide immediate alerts. To toggle this **‘Weather Alert’** feature, turn on by pressing the ▲ or ▼ button in the **Weather Alert** of **Weather mode**.

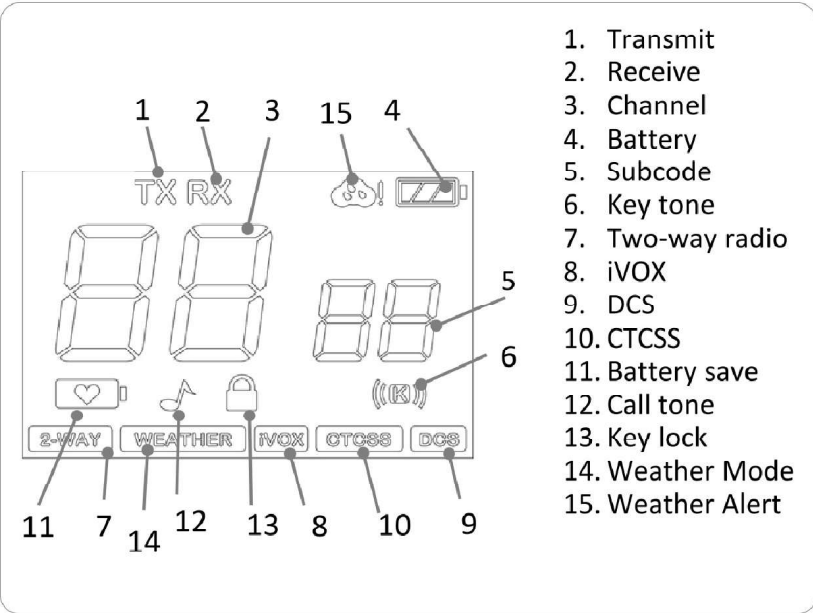


Installing and Charging the Batteries

Each radio uses a Li-ion rechargeable battery pack, and beeps when the batteries are low.

- 1. Make sure your radio is turned off.
- 2. Remove the belt clip, press (direction of red arrow) and hold the button on the top back of belt clip by pulling out the belt clip.
- 3. To remove the battery compartment door, press the tab at the bottom of the compartment door.
- 4. Firmly insert the battery connector (matching the wire colours) into the socket, ensuring it is fully seated.
- 5. Place the Li-ion battery pack into the compartment.
- 6. Close the battery compartment door.
- 7. Charge the battery by using a USB Type C cable (not included).

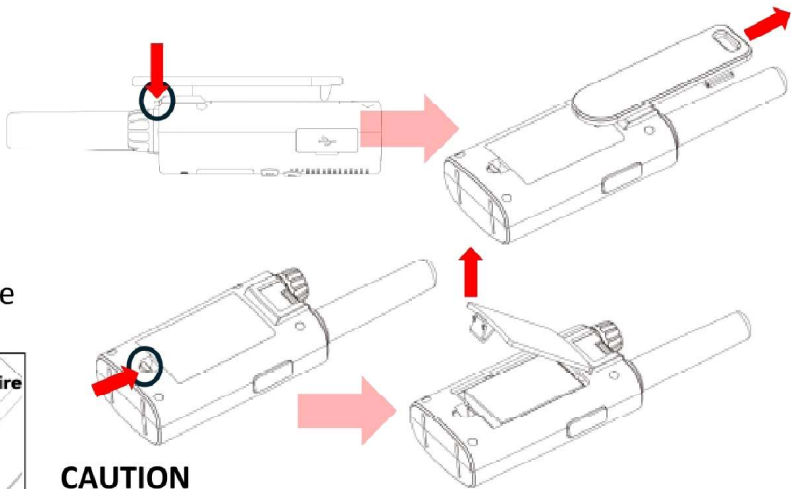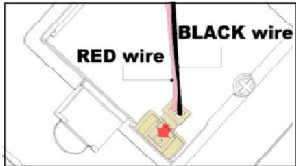

CAUTION
Risk of explosion if the battery is replaced by an incorrect type.

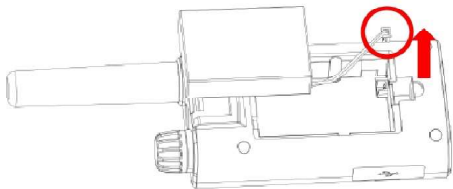

Radio Battery Indicator

The icon of radio battery indicator shows the battery capacity level from full to empty .

Battery maintenance

- 1. Charge the batteries once every three months when not in use.
- 2. Remove the battery from the radio when for storage.
- 3. Store the battery in 15C to 35C with low humidity to avoid the moisture and corrosive materials.

Battery charging

- 1. Plug the USB type C cable to the USB charger.
- 2. Connect the USB charger to wall power outlet.
- 3. Connect the other end of USB type C cable to the radio unit.
- 4. The battery indicator will be flashing when charging.

Turning ON and OFF your radio by the Volume Knob

Turn the **Volume Knob** clockwise to switch ON the radio. Turn it anti-clockwise to switch OFF.

- 1. When powered ON, the LCD screen shows all the feature icons available on the radio.
- 2. The LCD screen then shows the current channel and code and all features that are enabled.
- 3. The Battery Save function automatically activates, and show once the transceiver does not receive a signal for 10 seconds.

Listening or Receiving

The radio will receive signals automatically when set to the same channel and code as the transmitting radio. Check the speaker volume to ensure messages are heard clearly.

Adjusting the Volume

Spin clockwise or anti-clockwise to adjust the speaker volume.


Talk Range

To get the best audio quality and range, avoid interference and ensures clearer communication. keep at least 5 feet of distance between radios when in use.

Remove battery

Remove the battery connector where is in the red circle before remove the battery

Menu Options (Press and Hold the **Menu button** 3 seconds to switch between **2-Way Mode** and **Weather Mode**. Then Press **Menu button** and **▲** or **▼** can proceed for below settings)

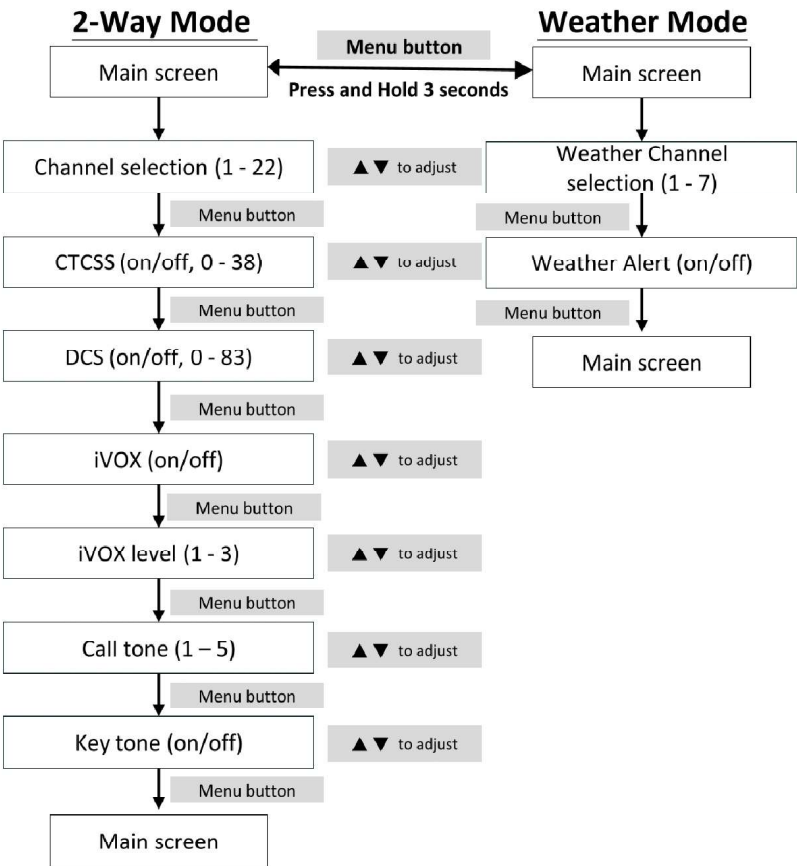

Selecting Channel

Your radio has 22 channels. The channel is the frequency the radio uses to transmit.

1. When the radio is powered ON, press ▲ or ▼ to start to select channels. The channel number shows on the LCD screen.
2. Press Menu button and then ▲ or ▼ to modify the selected channel details (selection of CTCSS/DCS)
3. Press Menu button again for other Menu options or to exit the menu.

Talking and Listening

Make sure that all radios are in your group with the same channel and CTCSS or DCS code when start to communicate.

1. Hold your radio 5-8 cm from your mouth.
2. Press and hold the **PTT button** while speaking. The transmit icon appears on the LCD screen.
3. When releasing the **PTT button**, you can receive incoming calls, the receive icon appears on the LCD.

Push-to-Talk Time-out Timer

The continuous warning tone and stops transmitting if you are pressing the **PTT Button** for 60 seconds, it prevents accidental transmissions and save battery life purposes.

iVOX Sensitivity Levels

When iVOX is turned on, the iVOX is displayed, the microphone detects if you are talking, the radio triggers the transmission automatically and the radio uses the built in microphone to detect your voice.

Level	Description
OFF	Turn off the iVOX settings.
1	Low Sensitivity for noisy environments
2	Balanced sensitivity for general use.
3	High Sensitivity for quiet environments

Setting and Transmitting Call Tones

Your radio has 5 Call tones for selection, you can transmit different call tones to other radios in your group.

Key Tone Setting

5 Key tones for selection for a key or a button is pressed.

CALL/Keypad Lock button

This button supports two functions:

1. Short Press: Sends a **Call tone** to alert other users.
2. Long Press (Hold for 3 seconds): Locks or unlocks the keypad to prevent accidental operation.

NOTE : When the keypad is locked, the **PTT, Call Tone, Flash Light, Emergency, Key Lock** buttons remain functional.

Monitor Button

This feature allows you to monitor a channel for weak signals and check the radio’s volume level when no transmission is being received.

To activate: press and hold both the **MENU button and Flashlight button** for 3 seconds. The volume can be adjusted if needed.

To cancel: Press and hold both the **MENU button and Flashlight button** again for 3 seconds.

Emergency Alert Mode

When you press Emergency Alert on the radio, all radios in your group will automatically play a warbling alert tone for 8 seconds. After that, your voice or any sounds near your radio will be broadcast to the group for 22 seconds hands-free. During this 30-second alert, all radio buttons are locked to make sure the emergency message is heard clearly by everyone.

1. Press and hold Flashlight button for 3 seconds.
2. Release the buttons and the alert tone begin to sound.
There is no need to continue to hold the Emergency Alert buttons or use **PTT Button** for your message to be transmitted.

WARNING: Only use the Emergency Alert feature if there is a real emergency. Manufacturer is not responsible if the receiving party does not respond to an emergency alert.

Warranty Information

1. Where to Claim Warranty

- Take your manufacturer two-way radio (or original accessories) to the **authorized dealer or retailer** where you bought it.
- **Do not** return it directly to manufacturer.

2. Required for Warranty Service

- Provide your **original receipt** or **proof of purchase** (showing the purchase date).
- The radio must **clearly display its serial number**.

3. Warranty Void Conditions

- The warranty **does not apply** if:
 - The serial number has been **removed, altered, or made unreadable**.
 - The product type has been **modified or tampered with**.

Licensing Information

USA (FCC)

According to FCC Part 95, FRS devices do not require a license. Changes or modifications not expressly approved by manufacturer may void the user authority granted by the FCC to operate this radio and should not be made. To comply with FCC requirements, transmitter adjustments should be made only by or under the supervision of a person certified as technically qualified to perform transmitter maintenance and repairs in the private land mobile and fixed services as certified by an organization representative of the user of those services. Replacement of any transmitter component (crystal, semiconductor, etc) not authorized by the FCC equipment authorization for this radio could violate FCC rules.

NOTE: Use of this radio outside the country where it was intended to be distributed is subject to government regulations and may be prohibited

The Warranty does not cover:

• Improper Use

- Using the product in ways not intended or against the user manual instructions.
- Accidental damage, misuse, or neglect.
- Damage from improper testing, maintenance, adjustments, or unauthorized modifications.

• Physical Damage

- Broken or damaged antennas (unless due to manufacturing defects).
- Scratches or wear on plastic/external parts from normal use.
- Liquid damage, moisture, or spills.
- Defects of damage from improper testing, operation, maintenance, adjustment, or any alteration or modification of any kind.
- Breakage or damage to aerials unless caused directly by defects in material or workmanship.

• Unauthorized Repairs

- Products disassembled or repaired in a way that affects performance or prevents proper inspection.

• Other Exclusions

- Range-related issues (e.g., weak signal due to distance).
- Products rented on a temporary basis.
- Normal wear and tear, including routine maintenance or part replacement.
- Periodic maintenance and repair or replacement of parts