



## INSTRUCTION MANUAL

### yeedi Floor 3 Station

PLEASE READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.  
BITTE LESEN SIE ALLE ANWEISUNGEN, BEVOR SIE DIESES GERÄT VERWENDEN.  
LEA TODAS LAS INSTRUCCIONES ANTES DE UTILIZAR ESTE APARATO.  
VEUILLEZ LIRE TOUTES LES INSTRUCTIONS AVANT D'UTILISER CET APPAREIL.

LEGGERE TUTTE LE ISTRUZIONI PRIMA DI UTILIZZARE L'APPARECCHIO.  
ПРЕЖДЕ ЧЕМ ПОЛЬЗОВАТЬСЯ ПРИБОРОМ, ПРОЧИТАЙТЕ ИНСТРУКЦИЮ ПОЛНОСТЬЮ.  
PRZED ROZPOCZĘCIEM UŻYTKOWANIA NINIEJSZEGO URZĄDZENIA NALEŻY ZAPOZNAĆ SIĘ Z INSTRUKCJĄ.  
LEES ALLE INSTRUCTIES VOORDAT U DIT APPARAAT IN GEBRUIK NEEMT.

## IMPORTANT SAFETY INSTRUCTIONS FOR HOUSEHOLD USE ONLY

When using an electrical Appliance, basic precautions should always be followed, including the following:

**WARNING: READ ALL SAFETY WARNINGS AND INSTRUCTIONS. FAILURE TO FOLLOW THE WARNINGS AND INSTRUCTIONS MAY RESULT IN ELECTRIC SHOCK, FIRE OR SERIOUS INJURY.**

**READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE SAVE THESE INSTRUCTIONS**

1. This Appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the Appliance in a safe way and understand the hazards involved. Children shall not play with the Appliance. Cleaning and user maintenance shall not be made by children without supervision.(For European Union countries)
2. Clear the area to be cleaned. Remove power cords and small objects from the floor that could entangle the Appliance.
  3. Tuck rug fringe under the rug base, and lift items such as curtains and tablecloths off the floor.
  3. If there is a drop-off in the cleaning area due to a step or stairs, you should operate the Appliance to ensure that it can detect the step without falling over the edge. It may become necessary to place a physical barrier at the edge to keep the unit from falling. Make sure the physical barrier is not a trip hazard.
  4. Only use as described in this manual. Only use attachments recommended or sold by the manufacturer.
  5. Please make sure your power supply source voltage matches the power voltage marked on the Charging Station.
  6. For INDOOR household use ONLY. Do not use the Appliance in outdoor, commercial or industrial environments.
  7. Use only the original rechargeable battery and Charging Station provided with the Appliance from the manufacturer. Non-rechargeable batteries are prohibited. For battery information, please refer to Specifications section.

8. Do not use without dust bin and/or filters in place.
  9. Do not operate the Appliance in an area where there are lit candles or fragile objects.
  10. Do not use in extremely hot or cold environments (below -5°C/23°F or above 40°C/104°F).
  11. Keep hair, loose clothing, fingers, and all parts of body away from any openings and moving parts.
  12. Do not operate the Appliance in a room where an infant or child is sleeping.
  13. Do not use Appliance on wet surfaces or surfaces with standing water.
  14. Do not allow the Appliance to pick up large objects like stones, large pieces of paper or any item that may clog the Appliance.
  15. Do not use Appliance to pick up flammable or combustible materials such as gasoline, printer or copier toner, or use in areas where they may be present.
  16. Do not use Appliance to pick up anything that is burning or smoking, such as cigarettes, matches, hot ashes, or anything that could cause a fire.
  17. Do not put objects into the suction intake. Do not use if the suction intake is blocked.
- Keep the intake clear of dust, lint, hair, or anything that may reduce air flow.
18. Take care not to damage the power cord. Do not pull on or carry the Appliance or Charging Station by the power cord, use the power cord as a handle, close a door on the power cord, or pull power cord around sharp edges or corners. Do not run Appliance over the power cord. Keep power cord away from hot surfaces.
  19. If the power cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.
  20. Do not use the Charging Station if it is damaged. The power supply is not to be repaired and not to be used any longer if it is damaged or defective.
  21. Do not use with a damaged power cord or receptacle. Do not use the Appliance or Charging Station if it is not working properly, has been dropped, damaged, left outdoors, or come in contact with water. It must be repaired by the manufacturer or its service agent in order to avoid a hazard.
  22. Turn OFF the power switch before cleaning or maintaining the Appliance.

23. The plug must be removed from the receptacle before cleaning or maintaining the Charging Station.
24. Remove the Appliance from the Charging Station, and turn OFF the power switch to the Appliance before removing the battery for disposal of the Appliance.
25. The battery must be removed and discarded according to local laws and regulations before disposal of the Appliance.
26. Please dispose of used batteries according to local laws and regulations.
27. Do not incinerate the Appliance even if it is severely damaged. The batteries can explode in a fire.
28. When not using the Charging Station for a long period of time, please unplug it.
29. The Appliance must be used in accordance with the directions in this Instruction Manual. The manufacturer cannot be held liable or responsible for any damages or injuries caused by improper use.
30. The Robot contains batteries that are only replaceable by skilled persons. To replace the Robot's battery, please contact Customer Service.
31. If the Robot will not be used for a long time, power OFF the Robot for storage and unplug the Charging Station.
32. **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit CH2127 provided with the Appliance.
33. This Appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the Appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the Appliance. (For Non-European Union countries)
34. The lithium battery type suitable for CH2127 is Max. 8 cells, max. nominal voltage DC 14.4V, rated capacity 4,800mAh.
35. Do not charge non-rechargeable batteries.









To satisfy RF exposure requirements, a separation distance of 20 cm or more should be maintained between this device and persons during device operation.

To ensure compliance, operations at closer than this distance is not recommended. The antenna used for this transmitter must not be co-located in conjunction with any other antenna or transmitter.

To disable Wi-Fi module on Robot, power the Robot ON. Place the Robot on the Charging Station making sure the Charging Contacts on Robot and the Charging Station Pins make a connection.

Press and hold the AUTO Button on the Robot for 20 seconds until Robot emits 3 beeps.

To enable Wi-Fi module on Robot, power the Robot OFF and then power ON. The Wi- Fi module is turned on when Robot is restarted.

	Class II
	Short-circuit-proof safety isolating transformer
	Switch mode power supply
	For indoor use only
	Direct current
	Alternating current
	Read all instructions before using (this appliance)
	Time-lag miniature fuse-link

## For EU Countries

For EU Declaration of Conformity information, visit <https://service.yeedi.com/pages/user-manuals>




## Correct Disposal of this Product

This marking indicates that this product should not be disposed of with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To recycle your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can safely recycle this product.


# Contents

1. Package Contents .....	7
2. Mapping and Cleaning.....	11
3. Maintenance .....	19
4. Troubleshooting.....	30
5. Product Specifications .....	35

# 1. Package Contents/1.1 Package Contents

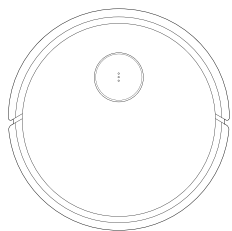


Robot

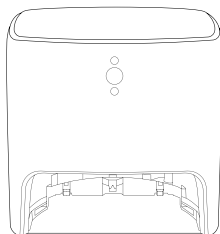


Self-Clean Station



 
Removable Easy-to-clean Base



Power Cord

 


Washable Mopping Pads  
(Pre-installed)

 

Mopping Pad Plates  
(Pre-installed)



 Instruction Manual





Dual Elastic Edge Brushes

## Note:

1. Figures and illustrations are for reference only and may differ from actual product appearance.
2. Product design and specifications are subject to changes without notice.

# 1. Package Contents/1.2 Product Diagram


## Robot Top View

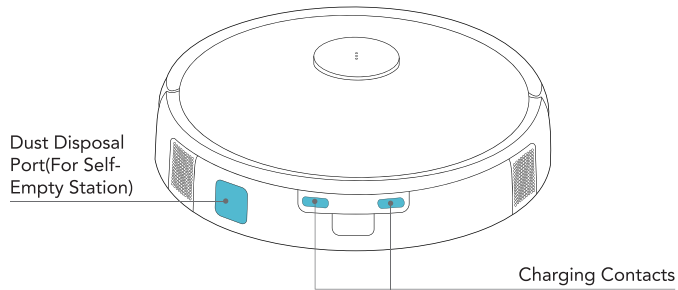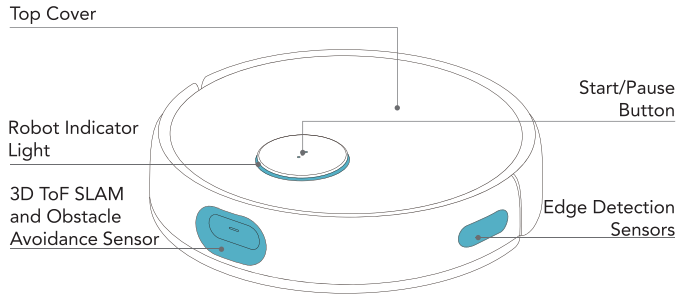


## Inside the Robot (Under the Top Cover)

### RESET Button/Wi-Fi Indicator

**For Network setup:** Press the RESET button. Hearing prompt sound means Robot is pairing.  
**Restore factory settings:** Press and hold the RESET Button for at least 5 seconds to restore factory settings. **Note: Use with caution.**

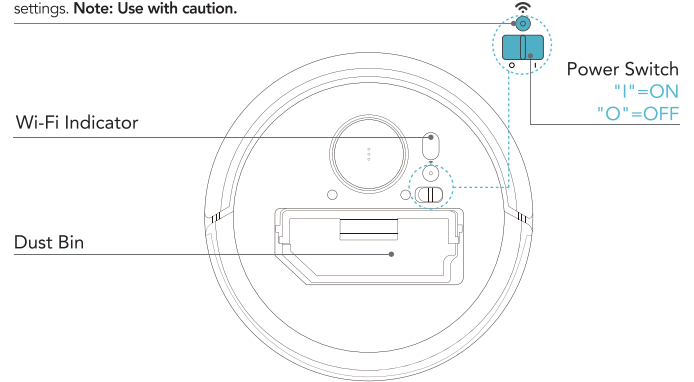

## Dust Bin

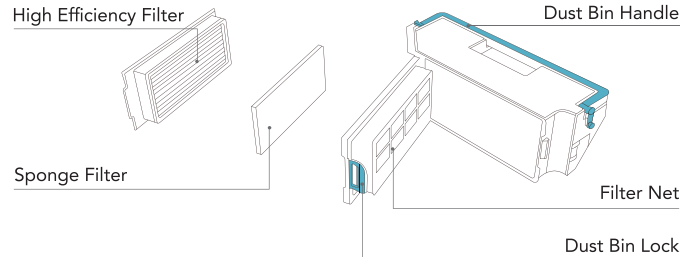

## Robot Bottom View

Universal Wheel

Elastic Edge Brushes


Adaptive Multi-Surface Brush

Adaptive Multi-Surface Brush  
Release Buttons


Driving Wheels

Mopping Pad  
Plate Slots

Water Outlets



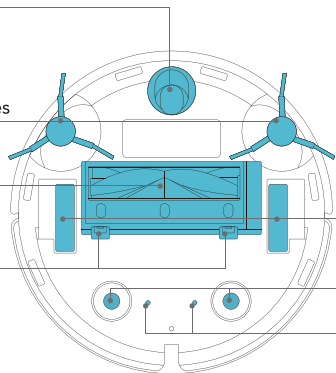


Anti-Drop Sensors

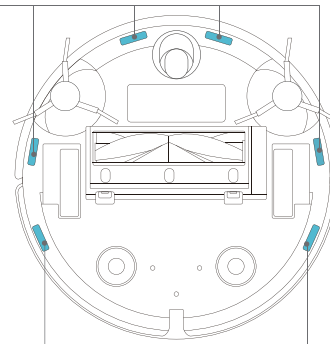


Anti-Drop Sensors

## Reservoir and Mopping Pads Kit

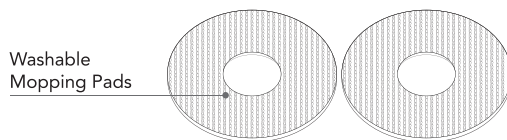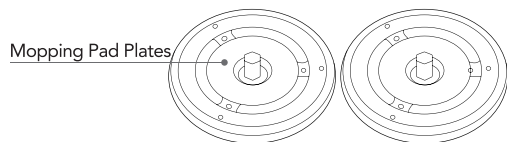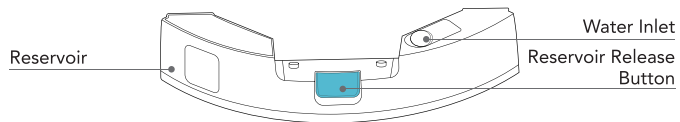

## Self-Clean Station

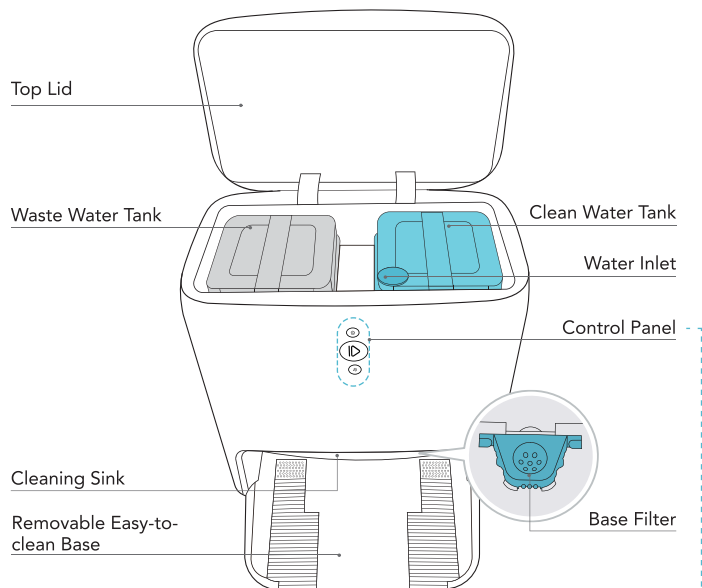

### Control Panel Button




Start/Pause Button




## 2. Mapping and Cleaning/2.1 Notes before Cleaning


Tidy up the area to be cleaned by putting furniture, such as chairs, in their proper place.

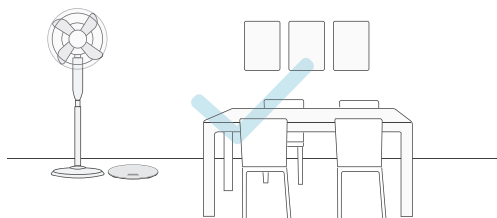

During the first use, make sure each room door is open to help Robot fully explore your house.

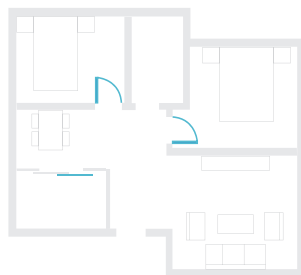

It may be necessary to place a physical barrier at the edge of a drop to stop the Robot from falling over the edge.

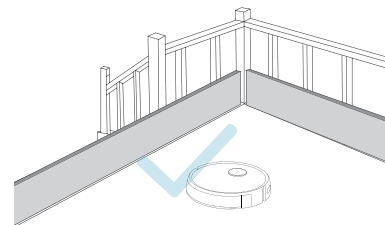

Put away objects including wires, cloths and slippers, etc. on the floor to improve the mapping and cleaning efficiency.



Before using the Robot on a rug with tasseled edges, please fold the rug edges under.



Please do not stand in narrow spaces, such as hallways, and make sure not to block the 3D ToF Sensor.




Please make sure that the Robot has created a home map in yeedi App before starting cleaning.

## 2. Mapping and Cleaning/2.2 Notes before Using

Please remove all protection materials on Robot and Self-Clean Station before use.


### 1 Install Dual Elastic Edge Brushes

Make sure the color of Side Brush is consistent with that of mounting slot.

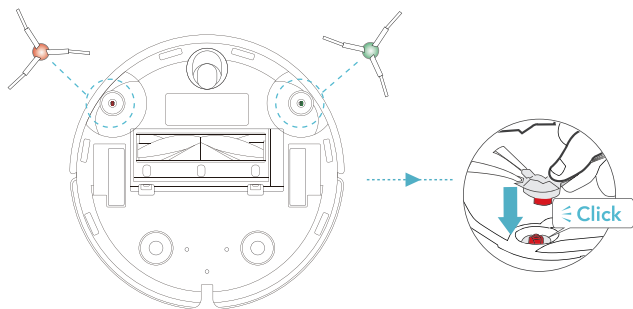


### 2 Connect Self-Clean Station and Base

Push the Base into the Self-Clean Station on a flat surface. The sound of "click" means successful connection.

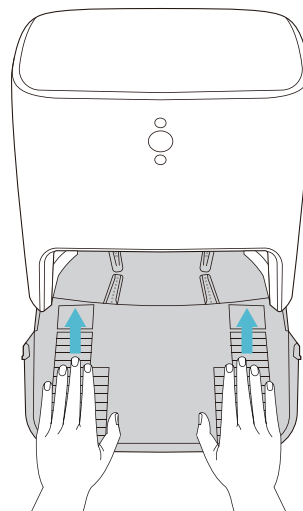


### 3 Assemble Self-Clean Station

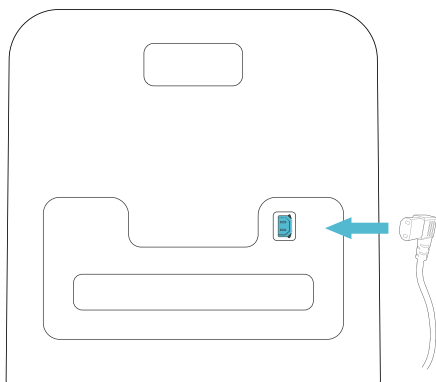

### 4 Self-Clean Station Placement


Place the Self-Clean Station against the wall in a large space, so your Robot will find its way to recharge more efficiently when in a larger or more complex home environment.

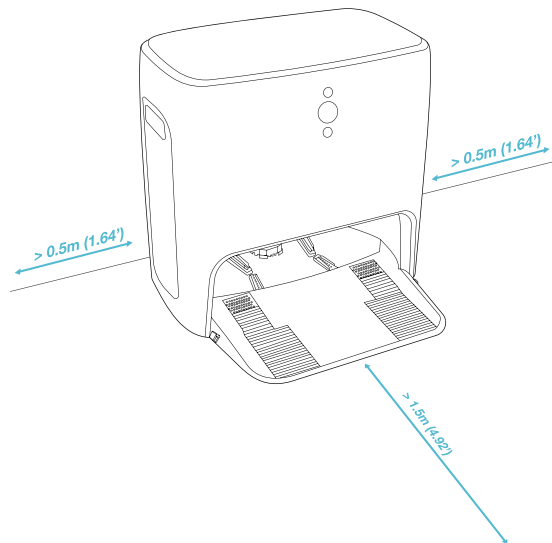

#### Note:


1. Cover the height of 14cm from the bottom of reflective objects such as mirrors.
2. Do not place the Self-Clean Station in direct sunlight.
3. Place the Self-Clean Station on a hard floor for a better experience.

5 Add clean water into the Clean Water Tank

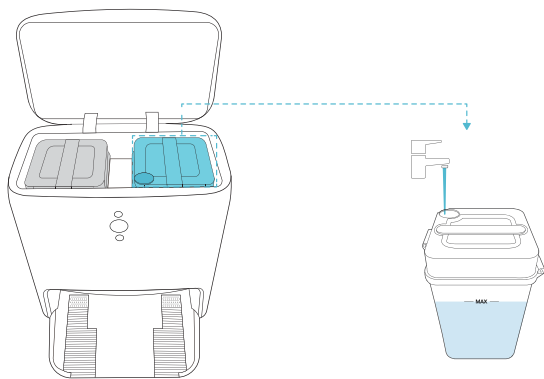

Add clean water to MAX  
water level line

6 Power ON

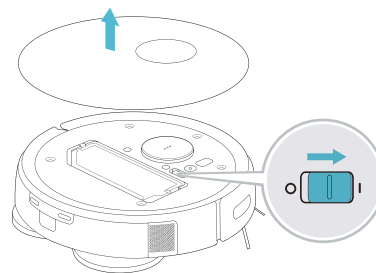


**Note:**

1. "I"=ON, "O"=OFF.
2. Robot cannot be charged when being powered OFF.

## 7 Charge Robot

Robot can be sent back to the Self-Clean Station for charging by tapping .

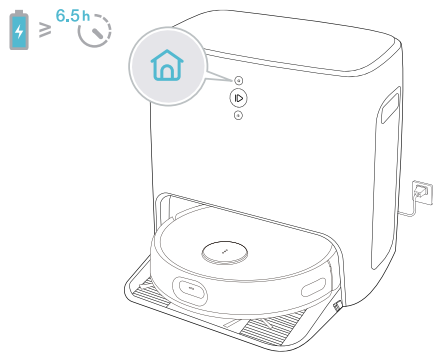

### Note:


1. When Robot completes the cleaning or when the battery gets low, Robot automatically returns to the Self-Clean Station to recharge.
2. Please make sure that Robot starts cleaning from the Station. Do not move the Station while cleaning.

## 2. Mapping and Cleaning/ 2.3 yeedi App


To enjoy all available features, it is recommended to control your Robot via the yeedi App.

Before you start, make sure that:

- Your mobile phone is connected to a Wi-Fi network.
- The 2.4GHz band wireless signal is enabled on your router.
- The Wi-Fi indicator light on Robot is slowly flashing.
- Follow the quick guidance to complete network setup.
- The number of devices connected to your router has not reached the limit.

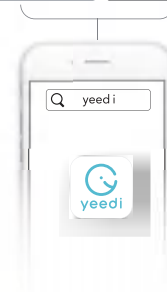

### Wi-Fi Indicator Light

	Slowly flashing	Disconnected to Wi-Fi or waiting for Wi-Fi connection
	Rapidly flashing	Connecting to Wi-Fi
	Solid	Connected to Wi-Fi

### Note:

If you have any problems during the Wi-Fi setup process, refer to the Troubleshooting > Wi-Fi Connection section in this manual.


## 2. Mapping and Cleaning/2.4 Start, Pause, Wake Up, Power OFF

### During the first cleaning:

Please supervise Robot and assist it should there be a problem.

### Start


Please make sure that the Robot has created a home map in yeedi App before starting cleaning.

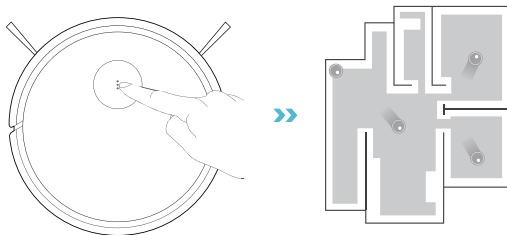

### Note:

For the first cleaning, please ensure that the Robot is fully charged.

### Pause

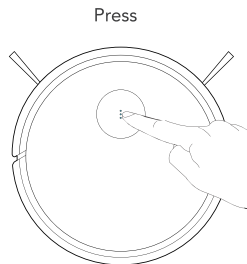


### Note:


When Robot is not working, it is recommended to keep it switched ON and charging.

### Wake Up

Press the AUTO button on Robot to wake it up.

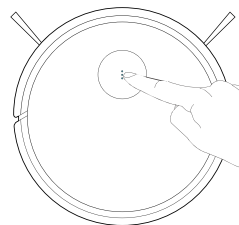

### Power OFF

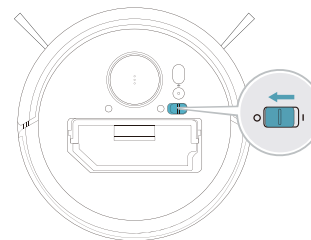


### Note:


The Indicator on the Robot's Control Panel stops glowing after the Robot is paused for 10 minutes.

## 2. Mapping and Cleaning/2.5 Mopping System


### 1 Remove Reservoir

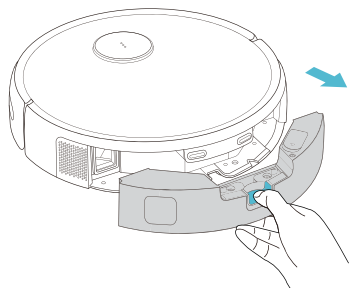


### 3 Get Water Inlet Cover on and Wipe off Water Stains

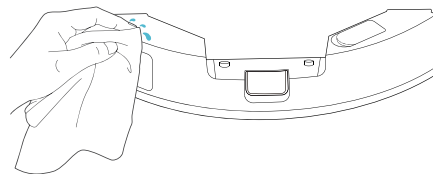

### 2 Add Water

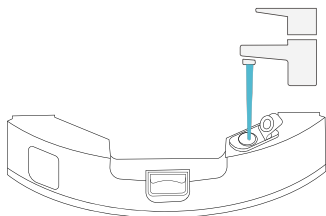

### 4 Hearing Click Means Successful Installation

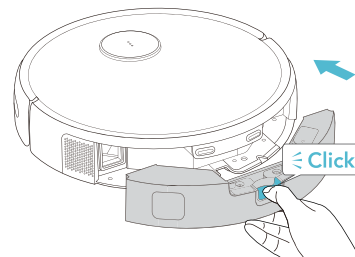


#### Note:


1. To prolong the service life of the reservoir, it is recommended to use purified water or softened water for the mopping system.
2. Wipe off water stains on the charging contacts before Reservoir installation.
3. If you need to clean the carpet, please uninstall the Mopping Pad Plates first.
4. Empty the reservoir after Robot finishes mopping.

## 2. Mapping and Cleaning/2.6 Self-Clean Station


### 1 Start/Pause Robot

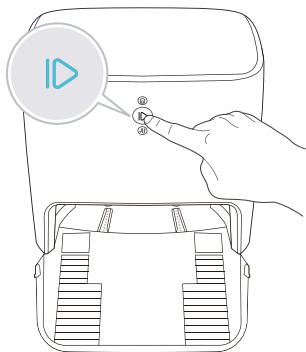

### 2 Recall Robot

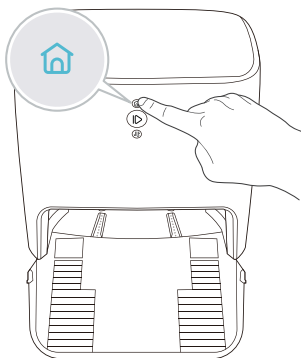


### 3 Start/Pause Hot air for Drying Mopping Pads

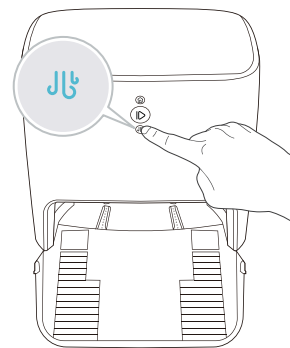

### 4 Child Lock ON/OFF

When Child Lock is enabled, the touch key on Robot and the Station will be locked to ensure safety. Repeat the same step to disable Child Lock.

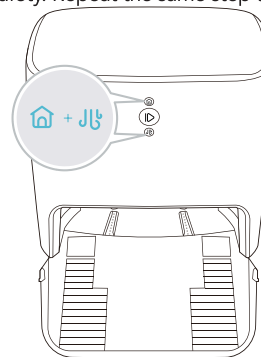

## 3. Maintenance/3.1 Regular Maintenance

To keep Robot cleaning at peak performance, perform maintenance tasks and replace parts with the following frequencies:

Robot Part	Maintenance Frequency	Replacement Frequency
Washable Mopping Pads	After each use	Every 50 washings
Reservoir/Mopping Pad Plates	After each use	/
Dual Elastic Edge Brushes	Once every 2 weeks	Every 3-6 months
Adaptive Multi-Surface Brush	Once per week	Every 6-12 months
Sponge Filter/High Efficiency Filter	Once per week	Every 3-6 months
3D ToF SLAM and Obstacle Avoidance Sensor Universal Wheel Anti-Drop Sensors Bumper Edge Detection Sensors Charging Contacts Charging Station Pins	Once per week	/
Cleaning Sink/Base Filter	Once every 2 weeks	/
Clean Water Tank	Once every 3 months	/
Waste Water Tank	After each mopping	/


### Note:

yeedi manufactures various replacement parts and fittings. Please contact Customer Service for more information on replacement parts.


# 3. Maintenance/3.2 Reservoir

After mopping, please maintain the reservoir to prolong the service life.


1 Remove Reservoir

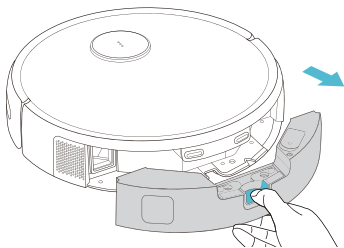


3 Rinse Reservoir

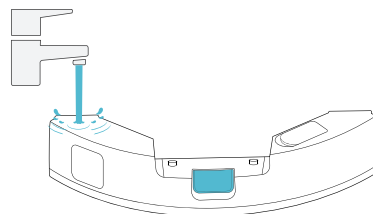

2 Empty Reservoir

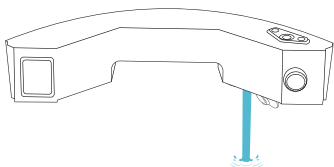


4 Wipe off Water Stains

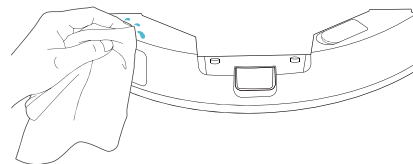


# 3. Maintenance/3.3 Washable Mopping Pad

Please rinse and dry out the Washable Mopping Pad after every mopping.


1 Remove Washable Mopping Pad

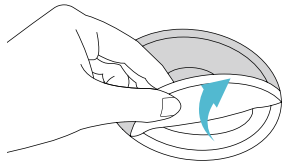

3 Dry out Washable Mopping Pad

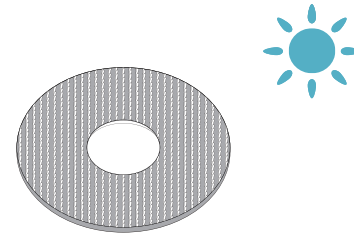


2 Rinse Washable Mopping Pad

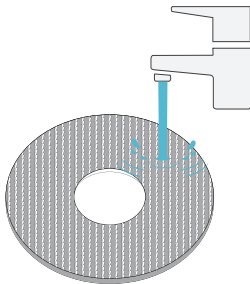


## 3. Maintenance/3.4 Dust Bin and Filters

Clean Dust Bin regularly.

1 Remove Top Cover and Take out Dust Bin

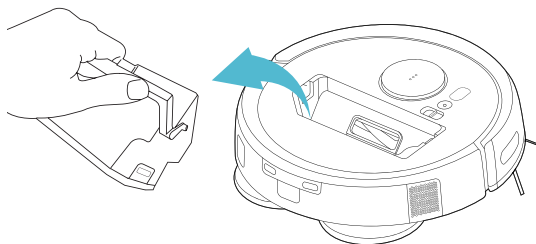


3 Remove High Efficiency Filter and Sponge Filter

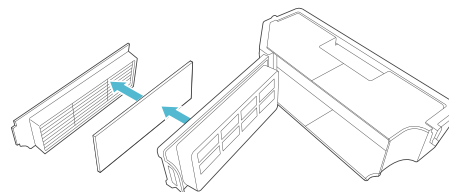


2 Open Dust Bin Cover to Empty it




4 Clean up Dust with Multi-Function Cleaning Tool

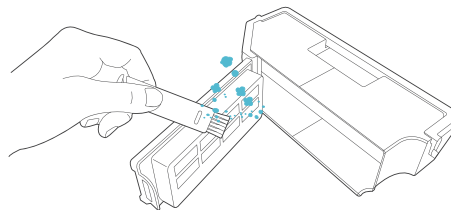

## 5 Rinse Dust Bin and Filters with Running Water

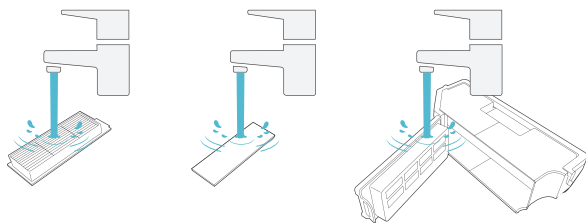

## 6 Dry out Dust Bin and Sponge Filter

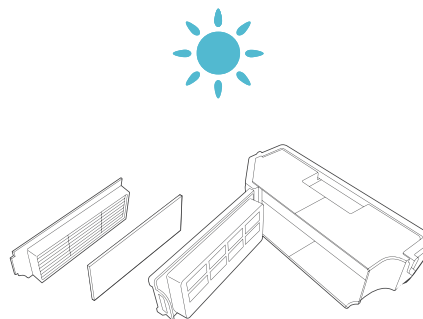


### Note:


1. Please rinse the Filters with water as shown above.
2. Do not use finger or brush to clean the Filters.
3. Be sure to dry out the Filters for at least 24 hours after wash.

### 3. Maintenance/3.5 3D ToF Mapping and Obstacle Avoidance Sensor, Edge Detection Sensors and Charging Contacts


#### 1 Wipe 3D ToF Mapping and Obstacle Avoidance Sensor

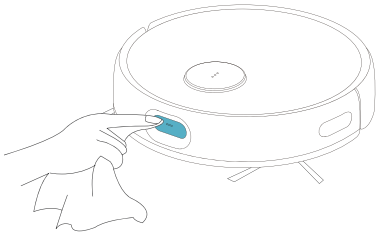

#### 3 Wipe Charging Contacts

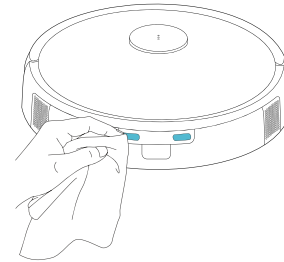

#### 2 Wipe Edge Detection Sensors

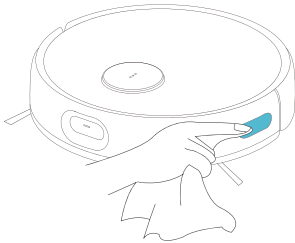


#### Note:

1. Wipe Charging Contacts after installing Reservoir.
2. Repeated charging with wet Charging Contacts may blacken the Contacts, even affect charging function.


### 3. Maintenance/3.6 Adaptive Multi-Surface Brush

#### 1 Clean Adaptive Multi-Surface Brush

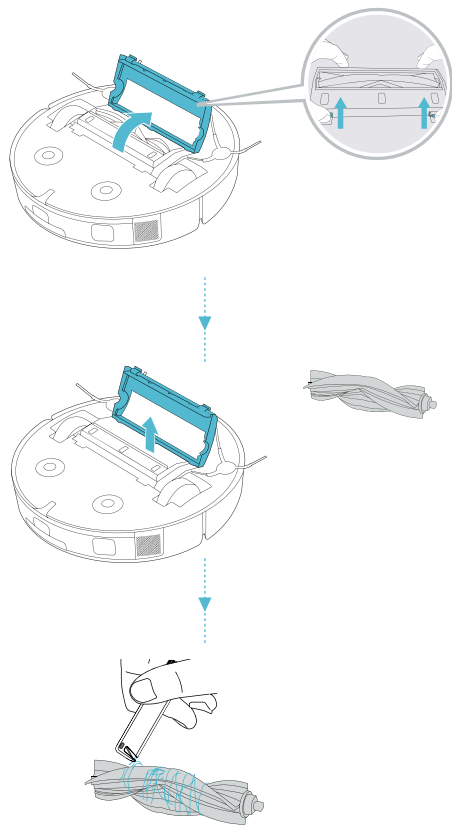


### 3. Maintenance/3.7 Dual Elastic Edge Brushes, Driving Wheels and Universal Wheel


#### 1 Remove Dual Elastic Edge Brushes

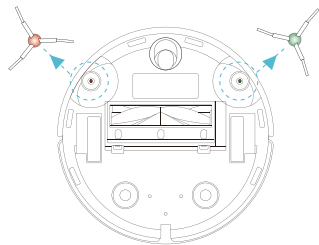


#### 3 Clean Driving Wheels

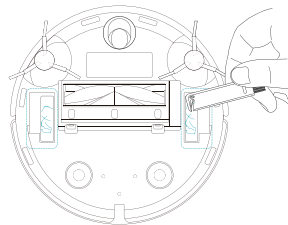

#### 2 Clean Dual Elastic Edge Brushes

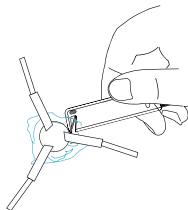

#### 4 Clean Universal Wheel

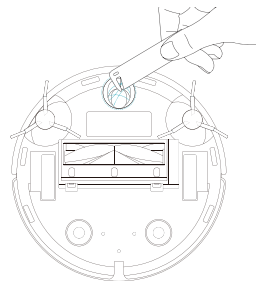


#### Note:


Before cleaning the Robot, turn the Robot OFF and unplug the Self-Clean Station.

### 3. Maintenance/3.8 Anti-Drop Sensors and Charging Contacts Pins

#### 1 Wipe Anti-Drop Sensors

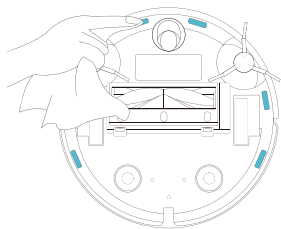


#### 2 Wipe Charging Contacts Pins

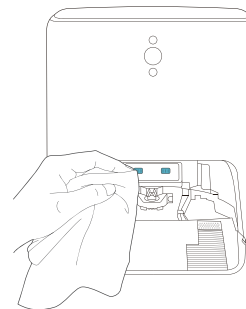


### 3. Maintenance/3.9 Tanks, Base and Base Filter

After rinsing, please dry with a soft cloth or put in a cool place. Do not expose to direct sunlight to avoid deformation of the Base or Base Filter.

#### 1 Empty Waste Water Tank

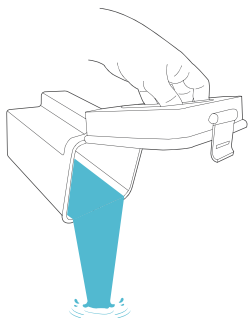


#### 2 Rinse Sponge Filter of Clean Water Tank

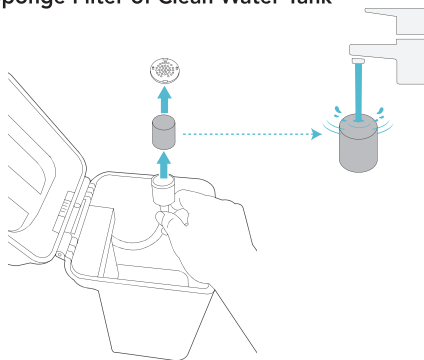


#### 3 Connect Self-Clean Station and Base


Push the Base into the Self-Clean Station on a flat surface. The sound of "click" means successful connection.

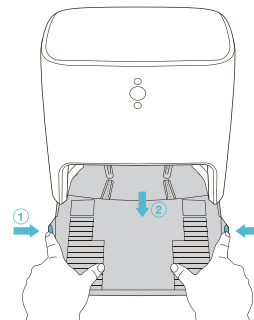


#### 4 Remove Base Filter

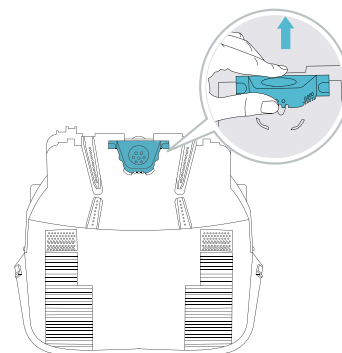

**5 Rinse Base**

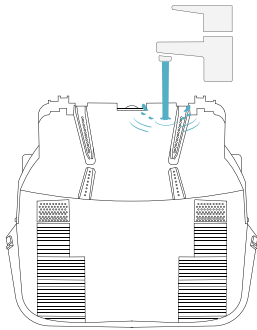


**6 Rinse Base Filter**

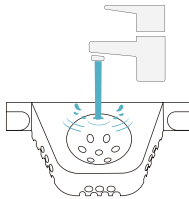


**7 Install Base Filter**

Hearing click means successful installation.

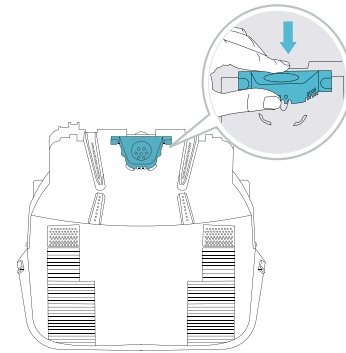

**8 Install Base**

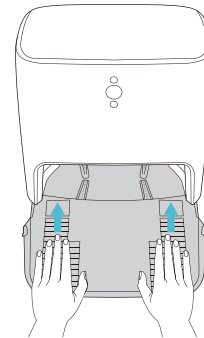

## 4. Troubleshooting/4.1 Troubleshooting

No.	Malfunction	Possible Causes	Solutions
1	Robot is not able to connect to the home Wi-Fi network.	The maximum number of devices connected to the router has been reached.	Delete other devices connected to the router or connect Robot to a new router.
		Incorrect home Wi-Fi username or password entered.	Enter the correct home Wi-Fi username and password.
		Robot is not within range of your home Wi-Fi signal.	Make sure Robot is within range of your home Wi-Fi signal.
		Network setup started before Robot was ready.	Turn ON Power Switch. Press the RESET Button for 3 seconds. Robot is ready for network setup when it plays a musical tune and its Wi-Fi Indicator light flashes slowly.
		No 2.4GHz network.	Enable 2.4GHz network during network connection.
2	Robot is unable to charge.	Robot is not switched ON.	Switch ON Robot.
		Robot has not connected to the Self-Clean Station.	Be sure that the Robot's Charging Contacts have connected to the Charging Contacts Pins.
			Clean the stains on Charging Contacts of Robot and Self-Clean Station by following Maintenance.
		The Self-Clean Station is not connected to the power supply.	Make sure the Self-Clean Station is connected to the power supply.
		The battery is completely discharged.	Re-activate the battery. Switch ON. Place Robot on the Self-Clean Station by hand, remove after charging for 3 minutes, repeat 3 times; then charge normally.

No.	Malfunction	Possible Causes	Solutions
3	Robot cannot return to the Self-Clean Station.	The Self-Clean Station is not correctly placed.	Refer to Notes before Using to correctly place the Self-Clean Station.
		The Self-Clean Station is disconnected or moved.	Please check if the Self-Clean Station is connected to power. Do not move the Self-Clean Station manually.
		The Self-Clean Station is on the carpet.	Place the Self-Clean Station on hard floors.
		Robot did not start Self-Clean from the Self-Clean Station.	Make sure Robot starts cleaning from the Self-Clean Station.
4	Robot returns to the Self-Clean Station before it has finished cleaning.	When the battery gets low, Robot automatically switches to Return to Charger Mode and returns to the Self-Clean Station to recharge itself.	This is normal. No solution necessary.
		Working time varies according to floor surface, room complexity and the Cleaning Mode selected.	This is normal. No solution necessary.
		The cleaning area is not tidy.	Remove small objects from the floor and tidy up the cleaning area before Robot starts cleaning.
5	Robot gets stuck while working and stops.	Robot is tangled with something on the floor (electrical wires, curtains, carpet fringing, etc.).	Robot will try various ways to free itself. If it is unsuccessful, manually remove the obstacles and restart.
6	Robot makes much noise when cleaning.	The brushes are tangled, or the dust bin is stuck.	Clear the debris stuck regularly.
		Robot is on Max Mode.	Change to Normal Mode.
7	The water is not coming out of the Reservoir when Robot is mopping.	The water inlet Filter on the bottom of Reservoir is clogged.	Unscrew the water inlet on the bottom of Reservoir and clean the Filter.
		The Reservoir runs out of water.	Add water into the Reservoir.
		The water outlets on the bottom of Robot are clogged.	Check the water outlets on the bottom and clean.

No.	Malfunction	Possible Causes	Solutions
8	The reservoir drops out of place during cleaning.	The reservoir is not properly installed.	The reservoir is properly installed when it clicks into place.
9	Robot leaks dust or debris while cleaning.	The Dust Disposal Port is stuck by debris.	Uninstall the Dust Bin and clear the debris.
10	Mopping Pad Plate cannot rotate.	The Mopping Pad Plate is blocked by foreign objects.	Clean the foreign objects.
11	No signal found. Unable to return to the Self-Clean Station.	The Self-Clean Station is incorrectly placed.	Please place the Self-Clean Station correctly according to the instructions in the section of Notes before Using.
		The Self-Clean Station is out of power or manually moved.	Check whether the Self-Clean Station is connected to power supply. Do not manually move the Self-Clean Station.
		Robot does not start cleaning from the Self-Clean Station.	It is recommended that Robot starts cleaning from the Station.
		The charging route is blocked. For example, the door of the room with the Self-Clean Station in is closed.	Please enable Continuous Cleaning. For more details, please follow the App instruction.
12	Robot returns to the Self-Clean Station before it has finished cleaning.	The room is so large that Robot needs to return to recharge.	Please enable Continuous Cleaning. For more details, please follow the App instruction.
		Robot is unable to reach certain areas blocked by furniture or barriers.	Tidy up the area to be cleaned by putting furniture and small objects in their proper place.
13	Robot does not respond to the Station instruction.	Robot is too far away from the Station.	If it is beyond the available distance, the yeedi App can also be used to operate Robot.
		Robot and the Self-Clean Station are not paired.	Unplug the Self-Clean Station and wait for 10 seconds to replug. Power off the Robot and then turn it back on. Manually push the Robot up to the Self-Clean Station, and ensure that the charging pins are correctly connected. Then, Robot will start charging, and voice prompt pairing successful.

No.	Malfunction	Possible Causes	Solutions
14	Fail to enable Child Lock.	Communication interruption between the Self-Clean Station and Robot (For example: long distance or many partition walls).	Move Robot near the Self-Clean Station to ensure smooth communication, and then enable Child Lock.
15	Driving wheels are blocked.	Driving wheels are blocked by foreign objects.	Please rotate and press the driving wheels to check whether there is any foreign object wrapped or stuck. If there is any foreign object, please clean it in time. If this problem persists, please contact Customer Service for help.
16	When the water in the Cleaning Sink is full and cannot be drained out, the voice reports that the Cleaning Sink is full.	The Dirty Water Tank is not properly installed.	Tap down on the Dirty Water Tank to ensure it is properly installed.
		The sealing plugs in the Dirty Water Tank is not installed properly.	Make sure to check that the sealing plugs are properly installed.
		The Self-Clean Station cannot drain water normally.	Make sure there is no foreign object in the Cleaning Sink. Remove the Base Filter to clean it.
		The voice prompt still exists after trying the above solutions.	Unplug the Self-Clean Station and plug it again. If this problem persists, please contact Customer Service for help.

# 4. Troubleshooting/4.2 Wi-Fi Connection

Before Wi-Fi setup, make sure Robot, mobile phone, and Wi-Fi network meet the following requirements.

## Robot and Mobile Phone Requirements

- Robot is fully charged and the power switch of Robot is turned ON.
- Wi-Fi status light slowly flashes.
- Turn off mobile phone's cellular data (you can turn it back on after setup).

## Wi-Fi Network Requirements

- You are using a 2.4GHz or 2.4/5 GHz mixed network.
- Your router supports 802.11b/g/n and IPv4 protocol.
- Do not use a VPN (Virtual Private Network) or Proxy Server.
- Do not use a hidden network.
- WPA and WPA2 using TKIP, PSK, AES/CCMP encryption.
- WEP EAP (Enterprise Authentication Protocol) is not supported.
- Use Wi-Fi channels 1-11 in North America and channels 1-13 outside North America (refer to local regulatory agency).
- If you are using a network extender/repeater, the network name (SSID) and password are the same as your primary network.

## 5. Product Specification

Model	YDTX11	
Rated Input	20V === 1A	
Charge Time	About 6.5h	
Self-Clean Station Model	CH2127	
	Rated Input(Charging)	220-240 V~ 50-60 Hz 0.3 A
	Power(Washing Mopping Pads)	35 W
	Power(Drying)	90 W
	Rated Output	20 V=== 2 A

### Note:

1. Output power of the Wi-Fi module is less than 100mW.
2. Technical and design specifications may be changed for continuous product improvement.
3. Explore more accessories at <https://www.yeedi.com>.