

BOOMBLAST MINI

USER MANUAL


Specification

- Model: TAZATA BOOMBLAST MINI
- BT: V5.3
- Waterproof: IPX7
- Battery: 7.4V / 3600mAh
- Charging time: 3.5 hour
- Playtime: 10 hour (50% Volume)
- USB output: 5V / 2A (MAX)
- Input: 5V/3A, 9V/2A, 12V/1.67A
- Output: 60W
- Size: 263 * 115 * 124 mm
- Weight: 1500g

What is in the box



x1 Speaker

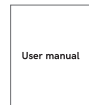

x1 User Manual



x1 USB C to C cable




x1 Shoulder strap

Buttons and functions

- MODE button**
Short press MODE to switch AUX, USB, BT.
Long press and hold for 2 seconds to disconnect or reconnect to the last paired device.
After powered on, the light on **BT** will flash means ready to pair. After paired, the LED will keep lighting on.
- Play and Pause**
Short press music play and pause functions.
Long press and hold for 5 seconds to clear pairing information and restore the default volume with a prompt sound.
It will automatically shut down.
- V-/Prev**
Short press: volume down.
Long press: for the previous song, long press in AUX mode will reduce the volume.
- V+/Next**
Short press: volume up.
Long press: next song, press and hold in AUX mode to increase the volume.
- RGB Light button**
Short press: switch two light effects and light off.
Double press: switch EQ.
- Power button**
Long press and hold for 2 seconds to power on/off.
Short press to turn on/off broadcasting in powered on mode.
Reset: long press and hold for 10 seconds to reset the speaker if it's crashed (It will shut down).
- Charging indicator.

- EQ indicator: always on when BASS is turned on (default on), off when BASS is turned off.
- Bluetooth indicator: flashes quickly when Bluetooth is not connected, always on when Bluetooth is connected, always on when playing music, and always on when pausing music;
- Broadcast indicator: short press the power button to turn on the broadcast, the indicator flash, when turn off the broadcast, the indicator off.
When broadcast connecting successful, the host indicator become solid white color, the secondary speaker indicator keep flashing.
- USB-C charging port.
- USB port.
- AUX port.

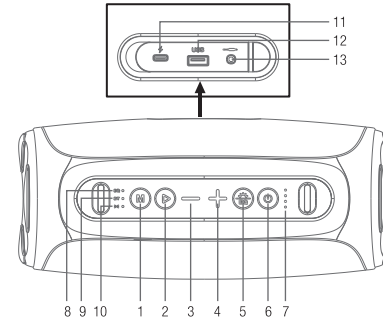

Bluetooth operation

Turn on the speaker, search and choose **TAZATA BOOMBLAST MINI** in your device to connect it.
You will hear a prompt tone after connected successfully.
Long press the MODE button to disconnect pairing.
The speaker will connect your device automatically in next using if your device memorized.
Otherwise, follow above pairing process to connect.

Audio AUX in operation

Power on the speaker.
Use a 3.5mm audio cable to connect the speaker with your device to play music.

USB operation

Connect a USB stick to the speaker to play music.
Work as a power bank to charge other USB devices.

Automatically turn off

The speaker will automatically turn off in 10 minutes when Bluetooth is not connected and no music is playing.

Charging

Connect the supplied charging cable to the charge input and to a USB-C port on your computer or to a USB-C charger.
The charging LED is lit white when charging, and the 4 LED indicator will be solid white when fully charged.
It is recommended to charge 10 minutes before you power on the speaker if you 7 days unused, then you can continue to use while charging.


Power bank

Max 2A output to charge your device.


Broadcast

Support to link wirelessly more than 100pcs TAZATA BOOMBLAST MINI compatible speakers together; and the host speaker (TAZATA BOOMBLAST MINI) can control all other broadcast speakers (including power off).


1) Turn on the speaker, and bluetooth connection TAZATA BOOMBLAST MINI party speaker (The host speaker); short press the power button to turn on the broadcast, the broadcast indicator is on.

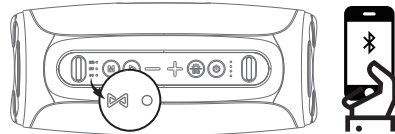

2) When the host speaker BT connection successful, and the broadcasting is turn on, short press the secondary or more TAZATA BOOMBLAST MINI's power button, then the host speaker broadcast indicator become solid white color, and the other speaker broadcast indicator keep flashing.

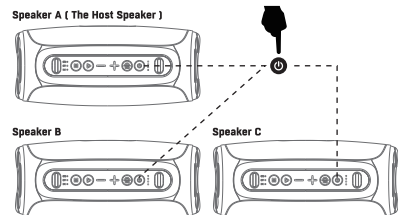

3) When the host speaker short press the power button to turn off the broadcast, all the secondary machine broadcast will be turned off.
When the secondary machine short press the power button to turn off the broadcast, only this speaker broadcast will be turned off, other speakers are not affected.

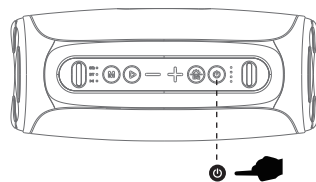

LED light indication

Light Definition:

Bluetooth Indicator	Unconnected white light flash	Connection successful white light on
EQ Indicator	BASS mode white light on	Standard mode white light off
Broadcast Indicator	Secondary speaker white light flash	

TROUBLESHOOTING

The speaker does not turn on ?

Recharge the speaker.

The speaker does not turn off or does not respond ?

Reset your speaker, press and hold Power Button for 10 seconds to shut down and reset.

There is no sound?

Adjust the volume, make sure that your Bluetooth device is within range, ensure there is no obstacles in the way that can block/disturb the signal, check via the device's Bluetooth connection if the speaker is connected with the device.


There is poor sound quality?

Move the device closer to the speaker or try removing obstacles between them.

Cannot connect the device with the speaker?

Disconnect other connected devices and ignore the pairing from your devices and re-pair the speaker.
Or you can long press and hold Power Button for 10 seconds to reset the speaker to re-pair it.
Please make sure the speaker is within the Bluetooth covering range by 10 meters and powered on.

WARNING

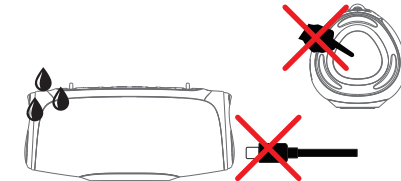

IMPORTANT NOTE:

To ensure the waterproof performance of the Bluetooth speaker, remove all cable connections and close the USB plug; Exposing a Bluetooth speaker to liquid without taking these steps can cause permanent damage to the speaker.

Do not expose your Bluetooth speaker to water while it is charging, as doing so may cause permanent damage to the speaker or power supply.
The IPX7 waterproof rating is defined as the speaker can be submerged for up to 30 minutes at a depth of 1 meter.
If the speaker is not used for a long time, please charge it at least every three months.

Battery life varies depending on usage patterns and environmental conditions.

Customer Service

12-month warranty

For more services, please visit:
Email: support@tazataaudio.com



Safety Precautions

Do not place the speaker in a place where it is easy to fall.

Do not disassemble, repair or modify this product by yourself.

Keep the speaker away from extreme temperatures.

Do not use the speaker in an outdoor thunderstorm environment.

Do not use any corrosive cleaners or other chemical solutions to clean the speaker.