

尺寸:72*120mm
材质:128g双面铜版纸
折叠:风琴折 英文朝上

S11 Plus

分体蓝牙音箱



使用手册

规格参数

产品型号	S11 Plus	输入电源	Type-C 5V/2A
蓝牙版本	V5.3	响应频率	100Hz~18KHz
蓝牙范围	≤18M (无阻隔)	失真度	≤5%
喇叭功率	2*20W	喇叭尺寸	3英寸 (76mm)
电池容量	7.4V/2000mAh*2	充电时长	3-4H

按键功能

音量+/下一曲

音量-/上一曲

【蓝牙模式下同时长按“+”“-”可断开TWS】

Type-C充电口

TF卡插口

USB插口

AUX音频线插孔

开/关机; 切换播放模式; 播放/暂停; 开/关灯光

附赠配件

Type-C线*2

连接播放

●蓝牙连接播放

a.开机灯光闪烁, 音箱进入蓝牙待配对状态;
b.打开手机蓝牙, 搜索蓝牙名“S11 Plus” 点击连接;
c.伴随一声提示音后, 蓝牙连接成功。

●TWS两台连接播放

a.两台新的“S11 Plus”同时开机则直接互联 (有提示音);
b.打开手机搜索蓝牙名“S11 Plus”点击连接; 连接成功后有提示音, 播放音乐即可享受无线立体声音效;
c.TWS仅支持在蓝牙模式下使用;
d.同时长按“+”“-”键可断开TWS。

PS:两台音箱未互联且同时开机时, 则显示两个蓝牙名, 可分别连接两台设备, 作为独立的音箱使用;
如两台互联不成功, 请断开手机蓝牙链接, 并重启两个音箱, 这样就能再次自动互联。

●AUX插线播放

将AUX线连接设备和音箱后即可播放。

●TF卡播放 (最高支持64G)

将TF卡插入音箱后, 伴随一声提示音, 音箱自动读卡播放, 此时蓝灯闪烁 (支持MP3格式播放)。

●U盘播放 (最高支持64G)

将U盘插入音箱后, 伴随一声提示音, 音箱自动读取播放, 此时蓝灯闪烁 (支持MP3格式播放)。

按键

操作

功能说明

短按

音乐播放状态下: 短按播放/暂停

长按

长按3秒开/关机

双击

切换播放模式

三击

开/关灯光

短按

音量加

长按

下一曲

短按

音量减

长按

上一曲

蓝牙模式下同时长按“+”“-”可断开TWS

三包服务

依据《中华人民共和国消费者权益保护法》、《中华人民共和国产品质量法》实行售后三包服务, 服务内容如下:
1.自您签收次日起7日内, 本产品出现《音箱性能故障表》所列性能故障的情况, 经由检测确定, 可免费享受退货或换货服务;
2.自您签收次日起8日-15日内, 本产品出现《音箱性能故障表》所列性能故障的情况, 经由售后服务中心检测确定, 可免费享受换货或者维修服务;
3.自您签收次日起12个月内, 本产品出现《音箱性能故障表》所列性能故障的情况, 经由售后服务中心检测确定, 可免费享受维修服务。
《音箱性能故障表》
1.设备无法充电, 或充电后无法正常开机;
2.设备按键无法正常使用;
3.设备无法正常发出声音;
4.其他硬件故障导致的设备功能无法正常使用。
以下情况不属于三包范围:
1.未经授权的维修、误用、碰撞、疏忽、滥用、进液、事故、改动;
2.不正确的使用非本产品配件, 或损毁、涂改标贴;
3.已超过三包有效期;
4.火灾、水灾、雷击等不可抗力造成的损坏;
5.不符合《音箱性能故障表》所列性能故障的情况;
6.因人力原因导致本产品及其配件产生《音箱性能故障表》所列性能故障。
安全事项
为确保安全, 请先详细阅读及遵守以下安全提示:
1.设备符合 GB 4943.1-2022 执行标准;
2.此产品不能服用, 请放置于儿童不能拿取的地方以防意外;
3.请勿将机器放置在高温环境, 包括太阳直射;
4.请勿将机器放置在靠近火源或其他过热环境;
5.请勿将机器放置于潮湿或湿度太大的地方;
6.除了所提供的充电线以外, 请勿试图用其他的方法为机器充电;
7.请勿将机器拆开, 禁止企图修理、改造机器的任何行为;

保修卡

尊敬的客户, 感谢您购买本公司的产品。为了能更好的为您服务, 在购买产品后, 请您认真阅读并妥善保管此保修卡。
保修说明
1.本保修卡请用户妥善保管, 以做维修凭证
2.本产品自购买日起, 保修一年
3.保修设备在保修期内, 在正常使用和维护的情况下, 机器本身机件材料及工艺出现问题, 发生故障, 经查实属本公司将免费提供维修服务。
4.在保修期间, 如发生以下事项, 本公司有权拒绝服务或酌情收取材料、服务费
(1) 不能提供此保修卡及有效购买凭证
(2) 用户使用不当所造成的产品故障及损坏
(3) 人为的非正常外力损坏
(4) 非我司授权的维修服务者拆修造成的损坏
(5) 自然灾害或其它不可抗力因素造成故障或损坏
(6) 其他人为故意损坏
5.本公司保留对所有内容的修改权及解释权
产品信息

维修记录	故障日期	故障原因及处理情况
产品型号		
购买账号		
购买日期		
联系电话		
收货地址		

S11 Plus

Split Bluetooth Speaker



Manual

PARAMETER

Model	S11 Plus	Input	Type-C 5V/2A
BT version	V5.3	F.R	100Hz-18KHz
BT range	≤18M (Open field)	Distortion	≤5%
Speaker	2*20W	Speaker size	3 inch(76mm)
Battery	7.4V/2000mAh*2	Full charge	3-4H

BUTTON FUNCTION

Volume +/-Next track

Volume +/-Previous track

【In Bluetooth mode, long-press the "+" and "-" buttons simultaneously to Disconnect TWS】

Type-C charging port

TF card slot

USB Port

AUX audio cable jack

Power On/Off;

Switch playback mode;

Play/Pause; Turn light On/Off

ACCESSORIES

Type-C cable*2

CONNECTION AND PLAY

●BT wireless playback

a. The light flashes after power on, and the speaker enters the Bluetooth waiting state;
b. Turn on the Bluetooth of the mobile phone, search for the Bluetooth name "S11 Plus" and click connect;
c. With a beep, and the Bluetooth connection is successful.

●TWS connection and playback

a. Two new "S11 Plus" will be directly connected when they are turned on at the same time (with prompt tone);
b. Open the mobile phone to search for the Bluetooth name "S11 Plus" and click to connect; there is a prompt sound after the connection is successful, and you can enjoy the wireless stereo sound effect by playing music;
c. TWS can only be used in Bluetooth mode;
d. Long-press the "+" and "-" buttons simultaneously to Disconnect TWS.

PS: When the two speakers are not connected and turned on at the same time, two Bluetooth names will be displayed, and two devices can be connected separately and used as independent speakers.
If the interconnection of two speakers fails, please disconnect the Bluetooth connection on your phone and restart both speakers. This will allow them to automatically reconnect.

●AUX cable playback

Connect the AUX cable to the device and the speaker to play.

●Micro SD card playback(up to 64G)

After inserting the SD card into the speaker, with a beep, the speaker will automatically read the card and play, and the blue light flashes. (supports MP3 format playback)

●USB drive playback(up to 64G)

After inserting the USB drive into the speaker, it will automatically read and play, accompanied by a prompt tone, at which time the blue light will flash. (supports MP3 format playback)

Button

Operating

Function Description

短按

When the music is playing: short press the play/pause

长按

Long press for 3 seconds to turn on/off.

Double-click

Switch Playback Mode

Triple-click

Turn Light On/Off

短按

Volume up

长按

Next song

短按

Volume down

长按

Previous song

In Bluetooth mode, long-press the "+" and "-" buttons simultaneously to Disconnect TWS

KIND REMINDER

1. When the machine has not been used for more than 3 months, the machine needs to be charged before use;
2. When not in use for a long time, it is recommended to charge the machine once every 3 months, which can more effectively protect the battery;
3. It is recommended to use the machine after it is fully charged.

GUARANTEES SERVICE

After-sales service content:
1. Within 7 days from the day after you sign for the product, if there is a performance failure listed in the "Speaker Performance Failure Table", the product can be returned or exchanged for free if it is determined by testing;
2. Within 8-15 days from the day after you sign the receipt, if this product has a performance failure as listed in the "Speaker Performance Failure Table", it will be determined by the after-sales service center, and you can enjoy free replacement or repair services;
3. Within 12 months from the day after you sign for the product, if there is a performance failure listed in the 《Speaker Performance Failure Table》, it will be determined by the after-sales service center and you can enjoy free maintenance services.
《Speaker Performance Failure Table》
1. The device cannot be charged, or cannot be turned on normally after charging;
2. Device keys cannot be used normally;
3. The device can't make a sound;
4. The device function cannot be used normally due to other hardware failures.
No Three Guarantees Service:
1. Unauthorized maintenance, misuse, collision, negligence, abuse, liquid ingress, accident, alteration;
2. Improper use of accessories other than this product, or tearing up or altering the label;
3. The validity period of the three guarantees service has expired;
4. Damage caused by force majeure such as fire, flood, lightning strike, etc;
5. Does not meet the performance failures listed in the 《Speaker Performance Failure Table》;
6. Due to human reasons, this product and its accessories have performance failures listed in the 《Speaker Performance Failure Table》.
SAFETY PRECAUTIONS
1. The equipment complies with the standard GB 4943.1-2022.
2. This product cannot be taken, please keep it out of the reach of children to prevent accidents;
3. Do not place the machine in a high temperature environment, including direct sunlight;
4. Do not place the machine near fire sources or other overheated environments;
5. Do not place the machine in a humid or humid place;
6. In addition to the provided charging cable, please do not try to use other methods to charge the machine;
7. Do not disassemble the machine, and prohibit any attempt to repair or modify the machine;
8. Please pay attention to drops, impacts, scratches or other behaviors that affect the function of the machine. If there is any damage, such as hot, high temperature deformation or corrosion, please stop using the product and equipment immediately and contact the merchant;
9. If the machine produces abnormal odors, higher than normal temperature, and abnormal changes in color or shape, please stop using the machine immediately and contact the merchant;
10. If the battery is incorrectly replaced, there is a risk of burning, and only the same type or equivalent type of battery can be used for replacement;
11. Using the machine at high volume for a long time may cause damage to your hearing.

POWER DESCRIPTION

a. Please use the charger that supports 5V/2A and the original Type-C cable for charging;
b. The red light is always on when charging, will turn off when fully charged;
c. When the voltage is too low, there will be a "beep" tone.
FCC WARNING
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Note:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
Note:
The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.
The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter. The device can be used in portable exposure conditions without restriction.

Warranty Card

Dear customer, thank you for purchasing our products. In order to better serve you, after purchasing the product, please read carefully and keep this warranty card carefully
Warranty description
1. Please keep this warranty card properly for maintenance certificate
2. This product is warranted for one year from the date of purchase
3. Warranty equipment during the warranty period, in the state of normal use and maintenance, there are problems and failures in machine materials and processes. Upon verification, we will provide repair services free of charge
4. During the warranty period, if the following events occur, the company has the right to refuse service or collect materials and service fees according to the situation
(1) Cannot provide this warranty card and valid proof of purchase
(2) Product failure and damage caused by improper use by users
(3) Man-made abnormal external force damage
(4) Damage caused by disassembly by maintenance service personnel not authorized by our company
(5) Failure or damage caused by natural disasters or other force majeure factors
(6) Others intentionally damaged
5. Our company reserves the right to modify and explain all content
Product information

Maintenance Records	Date	Fault description
Product Model		
Customer Name		
Customer Phone		
Purchase Date		
Shipping Address		