

Touch-enabled all-in-one device user's guide

Dear Customer,

Thank you for purchasing and using this device. Upon unpacking, please verify that all included accessories are present. Before using the device, please carefully read this user manual. After use, please keep this user manual for future reference.

Chapter 1: Safety Guidelines

Important Notes!

This device operates under high voltage; do not open the casing to avoid electric shock. Any maintenance should be performed by qualified professionals.

Improper operation may lead to electric shock or fire hazards. To ensure your safety and prolong the service life of your LCD computer television, please carefully read the following safety precautions before use.

1. Do not use accessory devices not recommended by the manufacturer; improper use of such devices may lead to unexpected failures.
2. Please use the power cords or power adapters supplied by our company. Our company shall not be held liable for any adverse consequences resulting from the use of power cords or adapters from other manufacturers.
3. Do not use any object to press against or wrap around the power cord, as a damaged power cord can cause electric shock or ignite a fire.
4. Do not attempt to repair this device yourself. Due to the presence of high-voltage components and other fragile parts inside the device, improper handling may pose various hazards to both personnel and the equipment itself. Please always have the device serviced by qualified technical personnel.
5. Do not touch any control components not mentioned in the instruction manual. Improper adjustment of such control components may damage the device and increase the maintenance workload for qualified technical personnel.

6. When replacing parts, please confirm with the service personnel that you are using manufacturer-approved parts or parts with equivalent performance to the original components; do not replace parts without authorization. Improper use of parts may lead to hazards such as fire, electric shock, or machine damage.
7. If you wish to mount this unit to a wall or hang it from the ceiling, please follow the installation instructions provided by the manufacturer.
8. Careful placement of the product: Do not place this device on an unstable cart, stand, tripod, or table.
9. Before cleaning this machine, disconnect the power supply.
10. During handling, please handle the product gently to avoid causing any adverse effects.
11. During thunderstorms or if the device has not been used for an extended period, please unplug the AC power plug.
12. Do not use this machine in environments with high temperature or high humidity.
13. Ensure that no other objects obstruct the ventilation holes on the rear casing of this product, to prevent the machine from overheating and potentially leading to malfunctions.
14. The LCD panel of this device is manufactured from sensitive materials; do not rub or strike the LCD screen with any object. If this device falls from a height or sustains an impact, the LCD panel may crack. In such cases, immediately cease use of the device.
15. Do not place this unit in direct sunlight or near heat sources, such as radiators, heating equipment, stoves, or other heat-emitting objects.
16. Do not insert any metal objects into the housing to prevent personal injury.

Chapter 2: Appendices

When opening the packaging box, please carefully check that all the following items are present; if you have any questions, please contact your sales representative.

- 1、 Bare metal (×1)

- 2、 Power cord (×1)
- 3、 Instruction Manual (×1)
- 4、 warranty card
- 5、 certificate

Chapter 3: Product Usage

1. User Guide

- 1、 Plug the power plug of the all-in-one device into a 220 V AC power socket, then turn on the main power switch at the bottom of the device; the device's indicator light will then turn red.
- 2、 After logging into the operating system, please verify that the touch screen system is functioning correctly by touching any area of the LCD screen with your finger to confirm that the display moves accurately in response to your touch. This touch display utilizes driverless touch technology, meaning no touch driver installation is required.
- 3、 To turn off the device, first shut down the computer, then press the

power button on the remote control to turn off the display screen, and finally unplug the power cord.

Chapter 6: Product Maintenance Guidelines

1. Cleaning and Maintenance of the All-in-One Unit

You may need to regularly wipe away dust and fingerprints from the integrated all-in-one computer's LCD screen and the rear cover base.

1. Before cleaning the LCD screen and the rear cover of the all-in-one unit, first turn off the power and unplug the power cord.

2. Lightly moisten the cloth with water or a non-detergent cleaning solution (do not use a spray solution, or do not soak the cloth), then wipe it.

3. After the LCD screen has been cleaned and completely dried, turn on the power switch.

2. The touch screen does not respond

1. Check that the USB connection cable of the touch screen is properly connected and securely fastened.

2. If you still encounter any issues, please contact our distributor.

3. The monitor screen does not illuminate

Check whether the monitor's indicator light is flashing red. If the indicator light is not lit, check whether the power switch at the bottom of the monitor is turned off.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.