


SAVANT


Programming Manual

1, 5 & 15 Channel Remote


Remote Overview

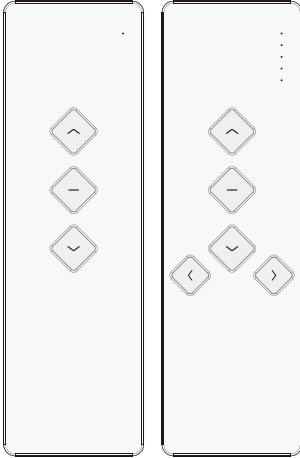

Front
(Remote with LED)

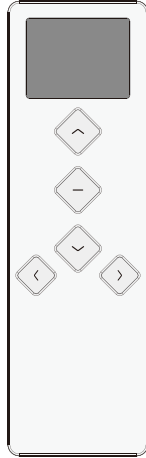


Front
(Remote with LCD)

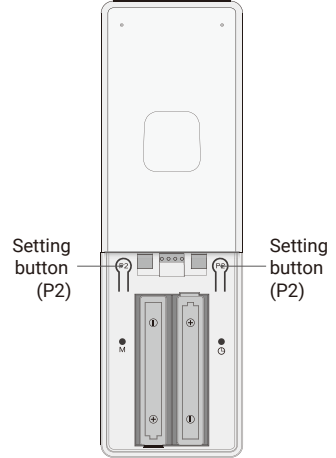


Back



1 Channel Remote

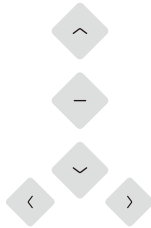

5 Channel Remote

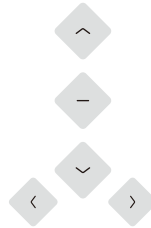

15 Channel Remote

Key Symbol



UP



STOP



DOWN



CH-



CH+

P2

P2

Safety Instructions

WARNING: Important safety instructions to be read before installation.

Incorrect installation can lead to serious injury and will void manufacturer's liability and warranty.

It is important for the safety of people to follow the enclosed instructions. Save these instructions for future reference.

- Do not expose to water, moisture, humid and damp environments or extreme temperatures.
- Persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, should not be allowed to use this product.
- Use or modification outside the scope of this instruction manual will void warranty.
- Installation and programming to be performed by a suitably qualified installer.
- Follow installation instructions.
- For use with motorized shading devices.
- Frequently inspect for improper operation.
- Do not use if repair or adjustment is necessary.
- Keep clear of the blind when in operation.
- Replace battery with correctly specified type.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate.
Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.

Compliance Statement

This device complies with Part 15 of the FCC Rules / Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Do not dispose of in general waste.
Please recycle batteries and damaged electrical products appropriately.



Technical specification

Battery: 3VDC (AAA battery×2)	Battery life: >2 years
Radio frequency: 433.92MHz	Working temperature: -10°C~50°C
Transmitting power: 10 mW	Radio range: Outdoor > 150 meters, Indoor > 40 meters

Warning


1. Remote couldn't expose to moisture or be struck heavily, or else the Remote life will be affected.
2. During use, if you notice a significant decrease in the remote control distance, reduced sensitivity, or the low battery icon illuminating on the screen, please check whether the battery needs to be replaced.
3. When the voltage of DD3002H(HF) are lower than 2.65V, the battery icon will display, indicating low voltage.
4. In uni-directional mode, if you press any button more than 20S, or in bi-directional mode, you press any button for 5S, the Remote will stop sending radio signals.
5. It's forbidden to use different type battery to avoid any dangerous risk.
6. Please dispose of used batteries properly according to the instructions.

The Following Operations 1 and 2 are Applicable to Remotes with LED

1. Switch Between Uni-directional and Bi-directional Mode

Note:


1. Either P2 button on back of Remote can be used.
2. The factory default mode is Bi-directional mode, repeat the same operation to switch the mode circularly.

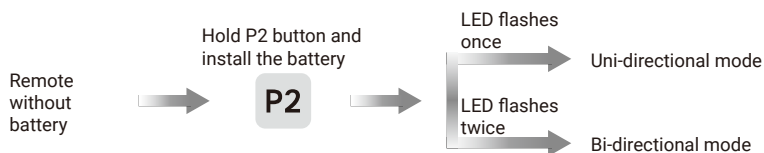

2. Lock / Unlock Combo-key Operation

Note:

1. Either P2 button on back of Remote can be used.
2. The system will exit the settings and return to normal operation after 10 seconds of no activity.
3. Combo-Key is in unlocking status by factory default. Repeat same operations to switch unlock/lock status.
4. In locked status, the combo-keys don't work; In unlocked status, the combo-key will work normally.
5. If combo-key is locked, the only influence is that the Remote cannot send signals.

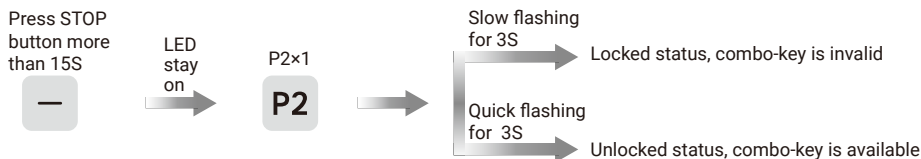



The Following Operations 3, 4, and 5 are Applicable to Remote with LCD

3. Set Number of Channels


Note:

1. In the setting status, press UP or DOWN button to exit quickly.
2. Repeat the same process if you want to adjust the number of channels.

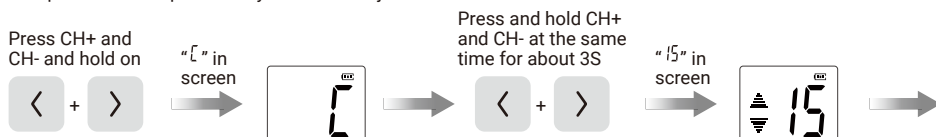

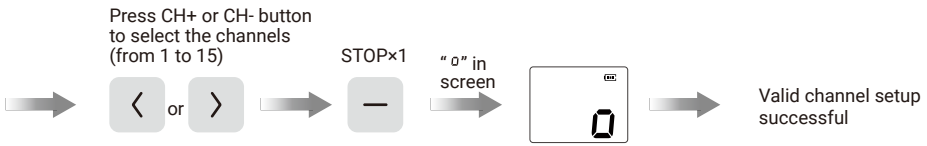

4. Switch Between Uni-directional and Bi-directional Mode

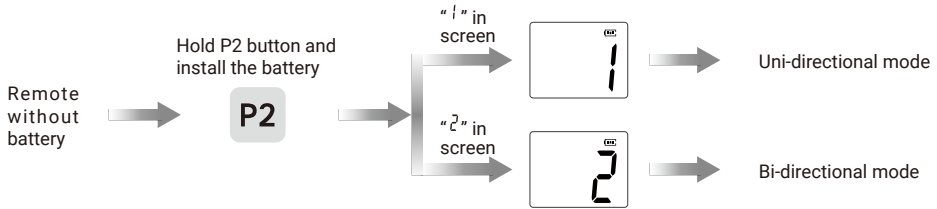

- Note:**
1. Either P2 button on back of Remote can be used.
 2. The factory default mode is Bi-directional mode, repeat the same operation to switch the mode circulary.

5. Lock / Unlock Combo-key Operation

- Note:**
1. Either P2 button on back of Remote can be used.
 2. The system will exit the settings and return to normal operation after 10 seconds of no activity.
 3. Combo-Key is in unlocking status by factory default. Repeat same operations to switch unlock/lock status.
 4. In locked status, the combo-keys don't work; In unlocked status, the combo-key will work normally.
 5. If combo-key is locked, the only influence is that the Remote cannot send signals.

