 
 


 


Product Overview



Charging Indicator: ******* Full** Charging ******* Brown** Fully-Charged
Reset Button Tactile: ******* Press** and hold for Reset Button for 30 seconds

Accessories List



User Manual

Product Information

Product Name: Ogneer Magic Box
Model Number: SC-AI19
FCC ID: 2ABWY-SC-AI19
Resolution: 300dpi
Power: 5V=1A
Port: Type-C
Battery Capacity: 1500mAh
Weight: 0.84 pound
Dimensions: 3.9*3.5*3.1inch
Network Support: 2.4 GHz Wi-Fi

Downloading the App

Method 1

Search for the app **Ogneo** on the App Store or Google Play to download and install.



Method 2

Scan the QR code using your phone's camera, your browser's built-in QR scanner, or a dedicated QR scanning app.



Installing the Paper Roll

STEP1— Slide the release button backward to unlock the paper compartment cover.

 


Note: Do not lift upward with excessive force.

STEP2— Hold the small protrusions on both sides of the paper compartment with two fingers and pull firmly upwards to open the cover.



STEPS— Place the sticker roll into the compartment with the sticker side facing forward, pull out a small portion of the paper, close the cover, and ensure both sides are securely latched. This completes the installation of the sticker roll.



Notes: Make sure the white thermal printing side faces up when loading the paper (the blue side is the backing layer and should face down). If the paper is loaded incorrectly, the printed will be blank.

Instructions for Use

Power On: Press and hold the Power Button for 3 seconds to turn on. The screen will light up, indicating it is on.



Using the App

STEP1— Enter your email address and create a password to set up your account.



STEP2— Enter the verification code to verify your account.



STEPS—Return to the home screen, enter your email address and password, then tap Log In.



STEP4— Tap "Add Device" and make sure Bluetooth is enabled on your phone.



STEPS— Tap "Connect Device" and allow Ognée to access your Wi-Fi name, password, and location. Enter your Wi-Fi name and password, then tap Next.



Tip: If you are using the Magic Box in a place without Wi-Fi, such as outdoors, you will need two phones: one to turn on a hotspot and another to connect to that hotspot. If the connection fails, go to **"Settings" > "Personal Hotspot"** and turn on **"Maximize Compatibility"**. This helps the device connect to the required 2.4 GHz band instead of the 5 GHz band.)

