


7. 6.35mm jack MIC/GUITA volume 1.
8. 6.35mm jack MIC/GUITA volume 2.
9. ECHO controls knob.
10. AUX input.
11. MIC/GUITA input.
12. Audio main out.
13. Audio RCA input.
14. Balanced XLR MIC/GUITA input.
15. POWER ON/OFF.
16. DC POWER input.

REMOTE CONTROL

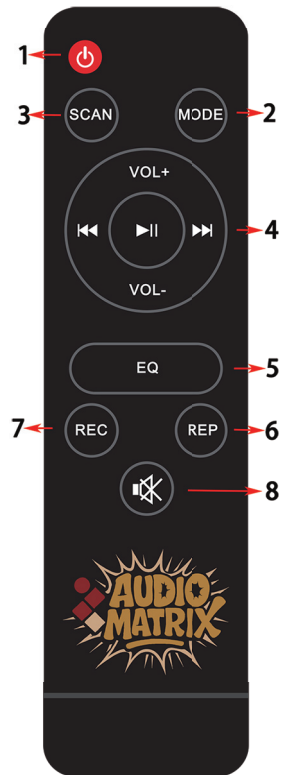

1. MP3 module standby
2. MODE: short press to select LINE (Aux-in)/ FM/BLUETOOTH.
3. SCAN: short press to scan for available frequencies
4. VOL-: Short press for volume down, VOL+: Short press to increase volume
: In USB/SD/WIRELESS mode short press to Play & Pause the music.
: Short press for previous song. Under FM mode, short press to move backward FM channel.
: Short press to skip to next song, Under FM mode, short press to move forward FM channel.
5. EQ: short press to select POP, ROCK ,JAZZ ,CLASSICAL ,VOCAL.
6. REP: short press to repeat songs in the playlist all/random/one.
7. REC: long press to start record to USB or SD card, short press to play recording, short press again to stop playing.
8. MUTE: short press to mute the sound

BASIC OPERATION

TURNING THE UNIT ON/OFF

Press the power ON/OFF button on the back of the speaker to switch on/off the speaker. If the power button is off, power button on the remote control will not be functional.

FRONT PANEL LIGHT

To turn on the Light short press LED switch on the rear panel. There are 7 lighting modes to choose from:

- Mode 1: Multi color automatically when on
- Mode 2: Single color circle
- Mode 3: Multi color Circle
- Mode 4: Multi color Convergence
- Mode 5: Multicolor Circle and Convergence
- Mode 6: Multi color Circle, Convergence and Intermittent
- Mode 7: Led light off