

SereneLife



SLCFN1STGR - SLCFN1STBK - SLCFN1STOR

camping fan

user manual

visit our website



SCAN ME

serenelifehome.com

PLEASE KEEP THIS MANUAL CAREFULLY FOR FUTURE REFERENCE. FOR HOUSEHOLD USE ONLY.

Table of Contents

FEATURES AND TECHNICAL SPECS	03
PRODUCT DESCRIPTION	04
IMPORTANT SAFETY INSTRUCTIONS	04
PRODUCT OVERVIEW	05
PRODUCT OPERATION	05
KEY OPERATION METHOD	06
USING THE REMOTE CONTROL	07
BATTERY REPLACEMENT INSTRUCTIONS	07
CLEANING AND MAINTENANCE	09
BATTERY DISPOSAL	09
REGISTER PRODUCT	09

Please note:

The images of the product, accessories, and user interface in this manual are for reference only. The actual product may differ slightly.

CALIFORNIA PROP 65 WARNING

WARNING:

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Unique Elements:

- Used on Desk or Hung Using Hook Type for Flexible Placement
- Long Battery Life
- LED Light: Built-in LED with 3 Brightness Levels and SOS Flashing Mode
- Power Bank Function to Charge Small Devices

Features:

- 10,000 mAh Battery for Up to 24 Hours at Low Speed
- Adjustable Height for Customizable Airflow Direction
- Four-speed Settings for Cooling Customization
- Convenient Remote Control Operation
- Quiet operation (≤ 40 dB at Lowest Speed) for Minimal Noise
- Portable Design with Built-in Handle for Transport
- USB-C Rechargeable for Fast Charging
- Built-in LED Light for Nighttime Use
- Space-saving design for convenient storage and transport
- Sturdy Base Ensures Stability on Flat Surfaces
- Durable Design for Outdoor Conditions
- Perfect for Camping, Hiking, Picnics, and Emergencies
- USB Output Port

What's in the Box:

- Host Computer (Fan Unit)
- Type-C Power Cord
- Instruction Manual
- Remote Control
- 1x CR2025 Battery for the Remote Control

Technical Specs:

- Body: ABS Plastic
- Fan Blades: PP (Polypropylene)
- Base: Anti-slip Silicone
- Battery Capacity: 10,000 mAh
- Charging Time: Approx. 4 hours via USB-C
- Operating time: Up to 24 Hours (at Low Speed)
- Fan Speed: 4 Settings (F1–F4)
- Remote Control: Operated by 1 x CR2025 Batteries (Included)
- Output Voltage: DC 5V / 2A
- Item Weight: 2.43 lbs
- Noise level: ≤ 40 dB at Lowest Speed
- Adjustable Height: 11.4–22.2 Inches
- Product Dimensions (L x W x H): 10.2 x 4.3 x 22.2 Inches (Extended)

**READ ALL INSTRUCTIONS CAREFULLY BEFORE USING OR MAINTAINING
THIS FAN KEEP THIS MANUAL FOR FUTURE REFERENCE**

PRODUCT DESCRIPTION

The outdoor camping fan is a portable device that can be hung or placed on a stand and is equipped with a telescopic pole. It features a built-in rechargeable battery that provides extended operating time.

It also includes a USB power output port, allowing you to charge electronic devices when needed.

The telescopic pole can be freely adjusted to change the height of the fan, making it suitable for various usage scenarios. The bottom hook design allows the unit to be hung, saving space and enabling flexible placement.

 


IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed:

1. When connecting to an external power source, use a 5 V / 2 A or higher-rated adapter that meets safety standards.
2. Ensure the adapter complies with local safety requirements to avoid malfunction or hazards.
3. Use the product in an environment with temperatures ranging from 32°F to 104°F (0°C to 40°C).
4. Avoid exposure to high temperatures, direct sunlight, or humid environments.
5. If the device is not used for an extended period, recharge it periodically to maintain battery performance.
6. Do not use or store the product near flammable materials.
7. If abnormal noise, odor, or malfunction occurs, stop using the product immediately.
8. Do not disassemble the product. Contact qualified service personnel for repairs.

PRODUCT OVERVIEW

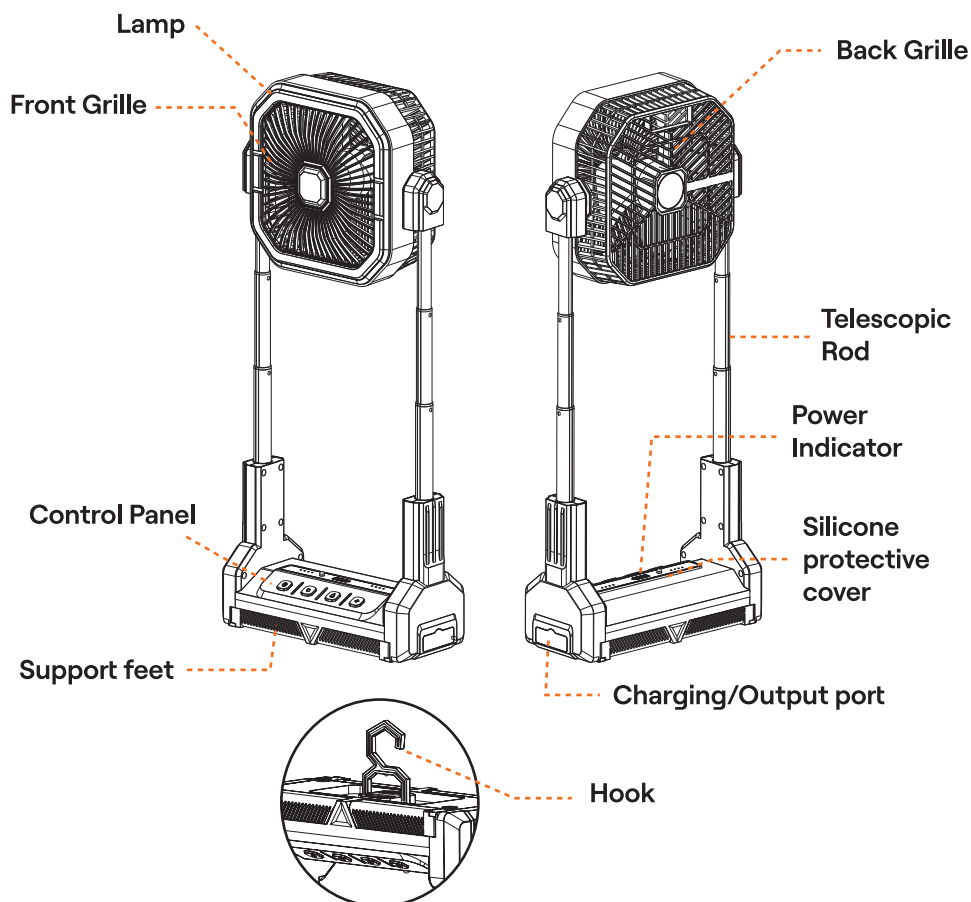


PRODUCT OPERATION

Charging the Fan

1. Before first use, connect the fan to an external power supply.
2. Use a 5 V / 2 A adapter and connect via the Type-C port.
3. During charging, the battery level indicator will flash.
4. When fully charged, the indicator light will remain steady.
5. The USB port can be used to charge external devices.

(Note: Using the USB output while charging the fan may increase charging time.)

 KEY OPERATION METHOD

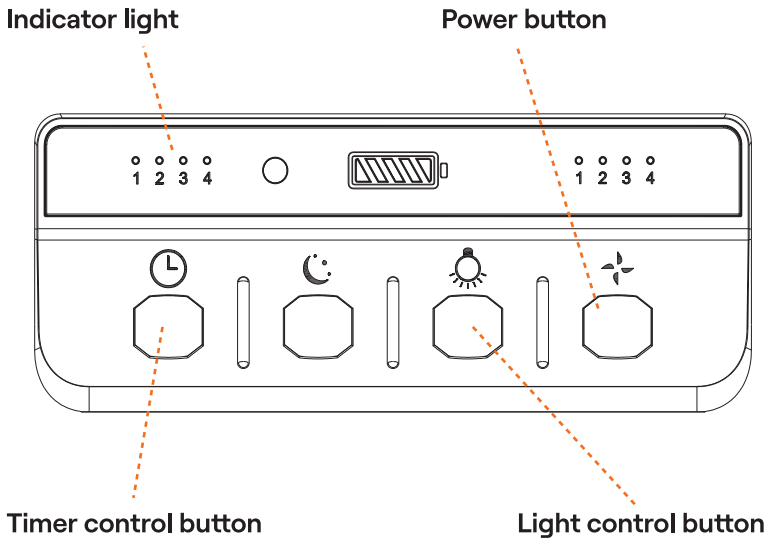

Power On and Speed Adjustment

- Press the power button to turn the fan on.
- Press the button again to switch between wind speed levels.
- Continue pressing to cycle through all speed settings.

Mode Adjustment

When the device is powered on, press and hold the mode button to switch between sleep mode, natural wind mode, and normal mode.

Timer Adjustment

- Press the timer button to set the timer function.
- Each press increases the timer duration (e.g., 1 hour, 2 hours, etc.).

Light Adjustment

 
- Press the light button to turn the LED light on or off.
- Press and hold to adjust brightness, if applicable.

USING THE REMOTE CONTROL

Before using the remote control, remove the insulation film from the battery compartment.


Button Functions:

- Power On/Off
- Sleep Setting
- Speed Adjustment
- Led Setting
- Timer Setting

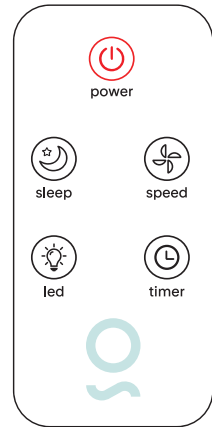

BATTERY REPLACEMENT INSTRUCTIONS

 
1. Open the battery compartment.
2. Insert the battery with the correct polarity.
3. Close the compartment securely.

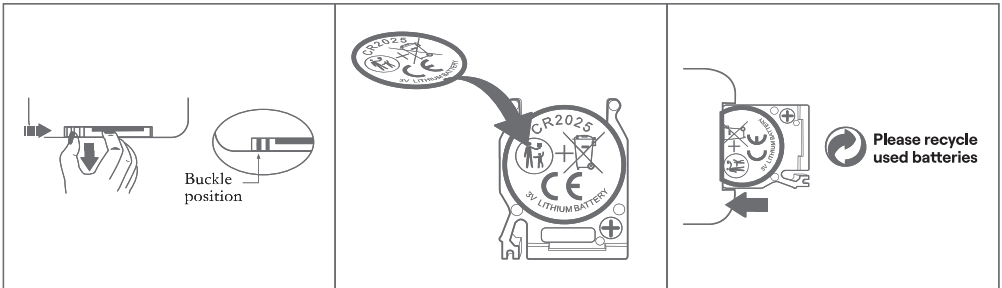

Precautions for the Remote Control:


1. Do not charge this battery.
2. Keep out of reach of children. Consult a doctor immediately if swallowed.
3. Always point the remote control at the heater's display when operating the heater using the remote control.
4. Keep the remote control away from other electrical appliances to prevent misoperation due to frequency overlap.
5. Using the button on the appliance or the remote control to turn off the product does not completely disconnect it from power. Unplug the product from the wall outlet if it will not be used for an extended period.
6. Remove the batteries from the remote control if the product will not be used for an extended period.

 Head Adjustment

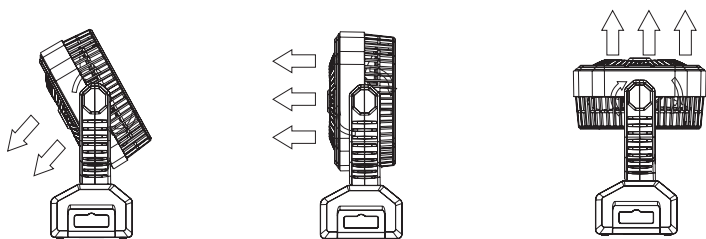


- The fan head can be adjusted vertically to direct airflow.
- Rotate or tilt the fan head to the desired angle.

 Usage Scenario

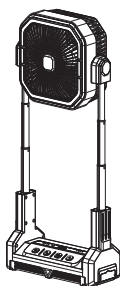


Retractable upright fan mode

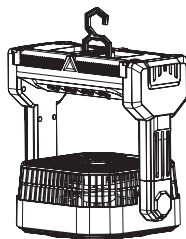 

Ceiling fan mode


Telescopic Upright Fan Mode

 - Adjust the telescopic pole to the desired height.
- Ensure the device is stable before use.
- Adjust the angle of the fan head as needed.

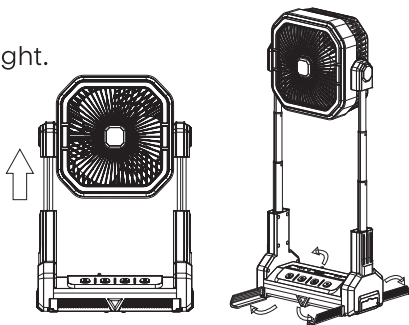

Ceiling Fan Mode

 - Unfold the product's hook and rotate it as needed.
- The unit can be hung horizontally from a hook or support structure for overhead airflow.

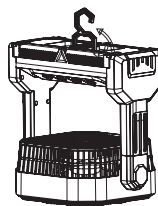

CLEANING AND MAINTENANCE

- Turn off the power and unplug the device before cleaning.
- Wipe the surface with a soft, dry cloth.
- Do not use water or harsh cleaning agents.
- Ensure the device is completely dry before reuse.

BATTERY DISPOSAL

- Remove the battery before disposal.
- Disconnect the power supply before removing the battery.
- Dispose of the battery according to local environmental regulations.
- Do not dispose of batteries in fire or regular household waste.



SLCFN1STGR



SLCFN1STBK



SLCFN1STOR

Register Product

Thank you for choosing SereneLife. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your SereneLife purchase in perfect condition.

Start Here



Serenelifehome.com/pages/register



questions? comments?

We are here to help!

Phone: 1.718.535.1800

[serenelifehome.com/contact us](https://serenelifehome.com/contact-us)