

APPLICATION NOTICE

- To ensure the service life of the lithium battery, it is recommended to recharge after use. Frequent charging will accelerate the aging of the battery chip. If it is not used for a long time, it should be charged every two months;
- Due to the strong magnetism of the host, it is not allowed to put the machine and bank card and other magnetic things together to avoid unnecessary trouble caused by magnetic Loss;
- All parts of this product are designed according to the working requirements of this machine. If you need to replace parts, try to use our original parts to achieve the best working condition;
- This product may become slightly hot during charging and normal use, which is a dry normal phenomenon;
- Please use an anti-static soft cloth to clean this product. Please turn off the power switch and disconnect all external connections before cleaning this product. Do not wipe with chemical substances (such as alcohol, benzene and other chemical lotions or abrasive cleaning agents);
- Do not drop, throw or step on this product. Do not disassemble this product without authorization, or you will not enjoy our free warranty service.

Self resolution of common problems:

1. When the switch is turned on, there is no sound from the speaker
 - A. The screen light is not on, the power supply is dead, and the charging problem is solved.
 - B. Check whether the microphone is inserted in the wrong position.
 2. The speaker has obvious howling
 - A. Correctly wear the microphone, align the mark of the wheat head to the corner of the mouth, and keep the microphone 60-70cm away from the host;
 - B. When the space becomes small, the volume should be properly turned down to avoid howling.
- If you still have the above problems, please contact WinBridge after-sales customer service.

SHENZHEN WINWIN TECHNOLOGY

329, WISDOM INNOVATION CENTER, SHENZHEN, CHINA

E-mail: info@wwinbridge.com www.winbridgestore.com CMIIT ID: 2022DP12458 © RoHS 1

WinBridge


YOUR VOICE, WE CARE

SAFETY CAUTION


- Do not put the product and accessories near the fire source or any overheated environment
- Do not touch the product and accessories with water and moisture, do not use the equipment near water, and do not immerse the product in any liquid to prevent the product and accessories from being subjected to water drops or splashes.
- Do not open or disassemble or repair the battery module by yourself. If the battery is replaced improperly, there will be an explosion hazard. Do not put the battery into water, fire or any overheated environment.
- This product is used after being charged by an external power adapter (5V~2A). After charging, it can be conveniently disconnected from the power grid by unplugging the power adapter plug.
- When the user does not use this product temporarily, please turn the power switch of the product to the off state to turn off the power (see the product control diagram) to avoid the Loss of battery power.
- When the use of wireless devices is prohibited or the use of devices will cause interference and security risks to electronic devices, please turn off this product.
- In flammable and explosive areas, please close this product and follow the relevant instructions to avoid bow explosion or fire. Flammable and explosive areas include, but are not [imited to, gas stations, transportation and storage facilities for flammable or chemical products, areas with explosion hazard signs, and areas with the sign "Turn off two-way radio equipment".
- Please abide by the relevant regulations and rules of the airline when taking the plane, and close this product before the plane takes off to avoid potential safety hazards.
- It is only suitable for safe use in non tropical climate conditions and in areas below 2000 meters above sea level.

PRODUCT INTRODUCTION

TF Card	Next/Volume
AUX input.....	USB Slot
PreviousA/olume.....	Power
PLay/Pause.....	Type-C Slot
Mode	Handle

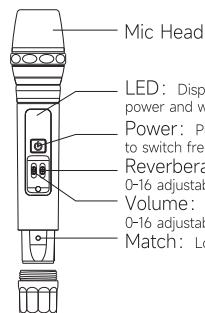

- LED: Display the working frequency, power and working status
- Power: Press short to turn on and long to switch frequency point
- Reverberation: Reverberation volume 0-16 adjustable
- Volume: Microphone volume 0-16 adjustable
- Match: Long press to enter pairing mode

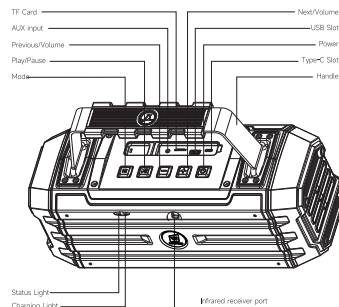

Pairing Mode:

- When the host is powered on, short press the M key to switch to the UHF mode, and long press the M key for 3 seconds to hear the tone of "UHF waiting for pairing"
- Turn on the microphone, briefly press the power button to switch the frequency point, and then long press the pairing button to enter the pairing state. When you hear the tone of "wireless pairing", the pairing is successful.

INSTRUCTIONS

- Power on:** Press the power button for 3-4 seconds.
- Power off:** Press the power button for 3-4 seconds.
- Bluetooth match:** The device automatically enters Bluetooth pairing mode upon startup. Press M to switch to other modes. Long press the Play button to disconnect Bluetooth pairing.
- Mode switch:** Press M to switch between BT/USB/TF/AUX.
- Wireless mode:** Press M to switch.
- Wireless pairing:** Press M to switch to wireless mode and long press M for pairing.
- AUX mode:** Insert AUX cable to switch automatically, and press M key to switch other modes.
- TF mode:** Insert TF card and switch automatically. Press M to switch other modes.
- U disk mode:** Insert U disk and switch automatically. Press M to switch other modes.
- Play/pause:** Press the play/Pause button.
- Previous:** Short press the key.
- Next:** Short press the key.
- Volume+:** Long press the + button.
- Volume-:** Long press the - button.
- Pause/play/mute:** Short press Pause button (AUX mode is mute function).
- In charge:** Plug in Type-C Charging Cable (5V 2A).
- Charge completion:** Full charge red LED light off.

SPECIFICATIONS

Output Power	60W	Frequency Range	60HZ-20KHZ
Battery Model	7.4V/4000mAh	Waterproof	Ipx4
Charging Voltage	DC5V-2A	Bluetooth	Bluetooth 5.3
Charging Time	5hours	Play Time	«3.5hours

APPLICATION NOTICE

- In order to achieve the best effect of microphone sound reinforcement, please place the microphone 1-2cm in front of the mouth and aim at the microphone to pronounce. If there is a howl, you can appropriately reduce the volume or slightly extend the distance between the machine and the microphone to prevent mutual interference;
- Try to avoid plugging and unplugging the microphone socket frequently to avoid Loose socket and poor contact. Do not plug the microphone and sound source incorrectly;