 


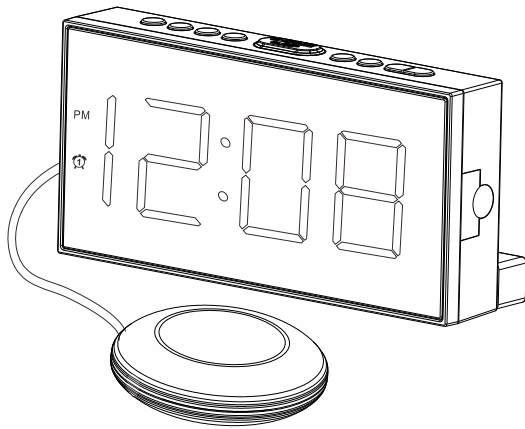

Speak with our Experts

+1 (240) 514-4451

Mon-Fri: 9:00am ~01:00pm PST
8:00am ~12:00pm PST

support@yelow.net

CR1001eM

Alarm Clock with Vibrator

CREATE YOUR PERFECT SLEEP ENVIRONMENT


[Http://www.yelow.net](http://www.yelow.net)



Made in PRC

Version 1.0

Chapter 1 LOCATION OF CONTROLS

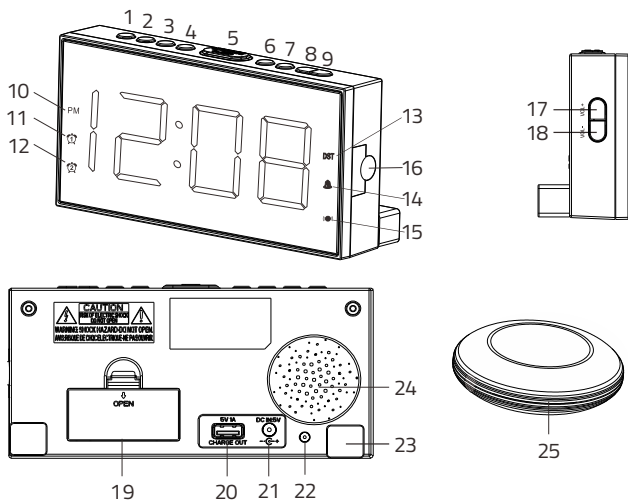

- | | |
|-----------------------------|-----------------------------------|
| 1. Set Time & 12/24H Button | 2. Hour Button |
| 3. Minute Button | 4. Dimmer & DST Button |
| 5. OK & SNOOZE Button | 6. Alarm Pause Button |
| 7. Alarm OFF Button | 8. Alarm 1 Button |
| 9. Alarm 2 Button | 10. PM Indicator |
| 11. Alarm 1 Indicator | 12. Alarm 2 Indicator |
| 13. DST Indicator | 14. Bell Indicator |
| 15. Vibrator Indicator | 16. Bell & Vibrator Toggle Button |
| 17. Volume + Button | 18. Volume - Button |
| 19. Battery Compartment | 20. USB Port |
| 21. DC Jack | 22. Vibrator Insert Port |
| 23. Holder (x 2pcs) | 24. Speaker |
| 25. Vibrator | |

Note: Battery is not included

Chapter 2 POWER RESOURCES

Insert the two included holders into the back of the clock to avoid it being knocked over.

1. Install 2pcs 1.5V "AAA" size batteries to the proper terminals in the battery compartment to memorize the time setting in case of power outage.

NOTE: Batteries(not included) don't support time display but can back up time & alarm setting and trigger an alarm in case of AC power failure.

2. Connect the adapter line to DC jack, then plug into a 100~240V AC wall power outlet.

Chapter 3 TIME SETTING

1. Press **SET TIME 12/24H** button once, display **12:00** starts flashing.
2. Press **HOUR** button to set the hour. press **MIN** button to set the minute.
3. Press **SET TIME 12/24H** button or **OK SNOOZE** button to save time or wait for another 5 seconds to confirm automatically.

To change 12H/24H time format

Hold press **SET TIME 12/24H** button to switch 24H time format.

Hold press **SET TIME 12/24H** button again to switch 12H time format.

Chapter 4 ALARM SETTING

1. Press  button, the alarm indicator  will light up, the display  starts flickering.
2. Press  button to set the hour, press  button to set the minute.
3. Press  button or  button to save alarm time or just wait for another 5 seconds to confirm automatically.
4. Push  or  button to adjust alarm volume.

Setting ALARM 2 is the same as ALARM 1.

- 03 -

Chapter 5 DIMMER

Repeat  button to adjust the brightness of display for your preference.

There is 5 levels, The sequence is as follows:

3-4-5-4-3-2-1-2-3.....

Chapter 6 DST

Hold press  button to switch DST function.

DST indicator will turn on.

Hold press  button again to turn off DST function.


DST indicator will turn off.

Chapter 7 USB CHARGING

Plug charging cable into device such as phone or tablet.

Device can charge both your phone or tablet at the same time.

The maximum charge current is 1 Ampere.

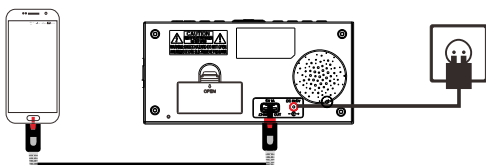

- 05 -

Turn off Alarm

When alarm goes off:

1. Press  button to temporarily turn off alarm for 9 minutes. Alarm will ring every next 9 minutes.
2. Press  button to turn off alarm for 24 hours. The alarm indicator  or  is still on, which means alarm is still activated and will ring after 24 hours.


3. Cancel Alarm

- Press  button to turn off alarm 2 permanently, corresponding indicator  will turn off. Press  button again to turn off alarm 1 permanently, corresponding indicator  will turn off.
- If alarm 1 goes off, then press  button, just turn off alarm 1 permanently.  indicator will turn off.
- If alarm 2 goes off, then press  button, just turn off alarm 2 permanently.  indicator will turn off.

- 04 -

Chapter 8 Vibrator

1. Insert the vibrator plug into the vibrator jack of the machine, the bell indicator and the vibrator indicator will light up, indicating that the bell and the vibrator will be effective at the same time.

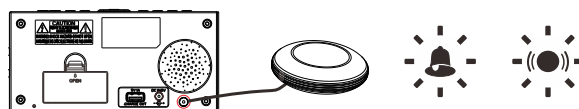

2. Press  button, the ring indicator  goes off, and the vibrator indicator  stays on, which means that when the alarm goes off, the vibrator will take effect, but the bell will not sound.
3. Press  button again, the ring indicator  goes on, and the vibrator indicator  goes off, which means that when the alarm goes off, the bell will sound, but the vibrator will not shake.
4. Press  button again, the ring indicator  and the vibrator indicator  goes on, which means that when the alarm goes off, the bell and the vibrator will be effective at the same time.

2-3-4 will continue to loop.

- 06 -