

USER MANUAL ►

V02

Fit for: 1 Transmitter with 1 Plug-in receiver
1 Transmitter with 2 Plug-in receivers


Thank you for purchasing this product. To ensure proper use and trouble-free operation, please read this manual carefully and store it in a safe place for future reference.

IMPORTANT SAFETY INSTRUCTIONS AND GUIDELINES



- To ensure sufficient signal range, do not install the transmitter close to metals.
- The signal range varies depending on obstacles in the line of sight between receiver and transmitter.
- Never attempt to repair any parts of the device.

PRODUCT OVERVIEW

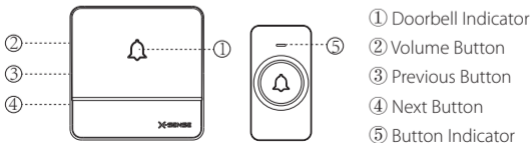

PACKAGE CONTENTS

1 × Transmitter (battery included)

1 or 2 × Plug-in receiver (**depending on the quantity purchased**)

1 × Adhesive patch

1 × Key

2 × Screw

2 × Anchor

1 × User Manual

TECHNICAL SPECIFICATIONS

Receiver input voltage	AC 110-260 V
Chime loudness	≤115 dB
Receiver AC power	<0.25 W (standby mode)
Transmission frequency	433.92 MHz
Transmitter battery type	CR2032 3 V Button Lithium Battery
Operating temperature	-20 to 60 °C
Battery lifetime	Up to 3 years

OPERATING INSTRUCTIONS

Pairing

1. Plug the receiver(s) into the power socket.
2. Press and hold the volume button on the receiver for 3 seconds and the indicator will blink (press any button on the receiver or wait for 60 seconds to exit pairing).
3. Press the transmitter and the receiver will chime "ding" indicates a successful pairing.

Pair Resetting

Hold the previous and next buttons for 5 seconds to clear the pairing between the receiver and all the pre-paired push buttons (transmitters). "Ding" sounds on the receiver to signal that set pairs have been cleared.

Chime Selection

There are 56 chimes to choose from with this doorbell kit. Simply press the previous or next button repeatedly to select one you prefer.

Volume Adjustment

There are five volume levels in total with the minimum volume level being silent. Press the volume button repeatedly to cycle through the volume levels and set one to suit your needs.

INSTALLATION

Transmitter Battery Unsealing

Before first use, gently pry open the rear cover of the transmitter and peel off the seal on the button cell. Ensure correct polarity of the battery and close the battery compartment cover.

Transmitter Installation

To ensure sufficient wireless range, do not install the transmitter close to metals.

• Adhesive Tape (recommended for water resistance)

1. Clean all surfaces to be used for adhesion with rubbing alcohol.
2. Apply the double-sided adhesive patch to the back of the transmitter.
3. Remove the outer side of the patch, attach the transmitter to the desired location and press it firmly for 30 seconds.

• Anchored Screws

1. Gently pry open the rear cover of the transmitter and drill out the marked screw holes.
2. Drill holes for the screws at the desired location and insert the anchors.
3. Attach the rear cover to the wall by tightening it with the screws.
4. To ensure resistance against water, seal the screw holes with silicone.
5. Attach the transmitter onto the screwed-on back cover.

TROUBLESHOOTING

Problem	Possible Cause	Solution
The indicator on the transmitter does not light up.	The seal on the button cell.	Peel off the seal.
	The battery power is low.	Replace with the new battery.
	The battery is not properly installed.	Take out the battery and install again. Make sure the contacts are good.
The receiver does not respond to the transmitter.	Pairing failed.	Pair the transmitter and receiver again.
	The transmitter is placed too far from the receiver or there are obstacles between them.	Place the transmitter in areas closer to the receiver or where there are fewer obstacles.
	The transmitter is close to metals and signal interference has occurred.	Place the transmitter in areas away from metals.

FEATURES

1. Extremely low power consumption and a 3-year super long battery life (10-15 times uses a day).
2. 56 optional melodies that can be easily chosen using the previous and next buttons. The built-in 40 mm stereo speaker delivers rich and crisp sound.
3. 600 m wireless range (depending on the operating environment).
4. **The transmitter is IP55 dustproof and water-resistant, fit for various outdoor environments.**
5. The previously set melody and volume level will be remembered every time when you power on the device.

X-SENSE



Email: support@x-sense.com

2018 Shenzhen Xiaojun Technology Co., Ltd. All Rights Reserved.
X-SENSE® is a registered trademark of Shenzhen Xiaojun Technology Co., L