



morphy richards

3 Year
Guarantee*

*Upon registering your product
at morphyrichards.co.uk

HYDROTOUCH 1.8 Litre Electric Hot Water Dispenser



Model No.

130002

User Manual

Please read and keep these instructions for future use



HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the mains cable is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified person in order to avoid a hazard.



HEALTH AND SAFETY

- **WARNING:** Misuse of appliance could cause personal injury.
- **WARNING:** Avoid spillage on the connector.
- This appliance has an element which may be subject to residual heat after use.
- Keep the appliance and its cord out of reach of children.
- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.
- This appliance is not intended to be to be operated on an extension cable or by means of an external timer or separate remote control system.



HEALTH AND SAFETY

LOCATION

- Always locate your appliance away from the edge of the worktop.
- Ensure that the appliance is used on a firm, flat surface.
- Do not use the appliance outdoors or near water.
- **WARNING:** Do not place the appliance onto a metal tray or metal surface whilst in use.

MAINS CABLE

- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the mains cable run across an open space e.g. between a low socket and a table.
- Do not let the mains cable run across a cooker or other hot area which might damage the cable.
- The mains cable should reach from the socket to the base unit without straining the connections.

PERSONAL SAFETY

- Do not move the Hot Water Dispenser while switched on.

OTHER SAFETY CONSIDERATIONS



- The use of attachments or tools not recommended or sold by Morphy Richards, may cause fire, electric shock or injury.
- Do not use the appliance for any use other than to boil water.
- Unplug from the outlet when not in use.
- **WARNING:** The appliance must not be immersed for cleaning.



ELECTRICAL DETAILS

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).
- Should the fuse in the mains plug require changing, replace it with a fuse of the same rating as originally fitted.
- The power consumption in off mode into which the equipment is switched automatically is less than 0.5W. When the appliance is not working, it enters the off mode in 3 mins.
- **WARNING:** This appliance must be earthed.

PRODUCT OVERVIEW

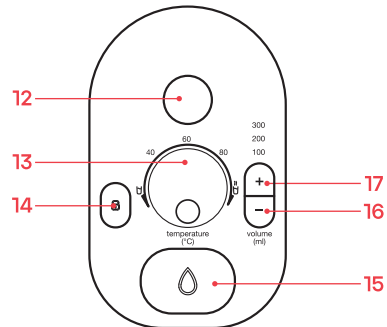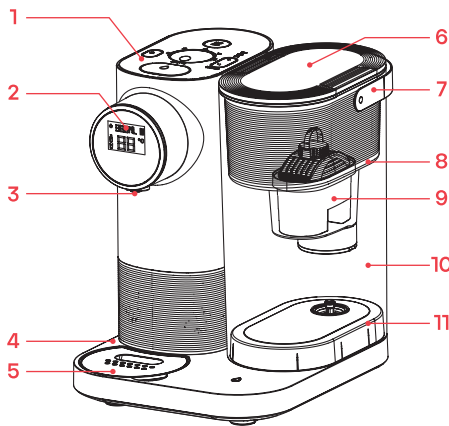

- | | |
|----------------------------------|--|
| 1. Control Panel | 11. Atmosphere Light |
| 2. Display Screen | 12. Water filter cartridge replacement indicator |
| 3. Water Dispensing Nozzle | 13. Temperature select dial |
| 4. Drip Tray Grid | 14. Power On/Off button / Child Lock |
| 5. Drip Tray | 15. Water dispense button |
| 6. Water Tank Lid | 16. Volume dispense decrease button |
| 7. Water Tank Handle | 17. Volume dispense increase button |
| 8. Water Filter Cartridge Hopper | |
| 9. Water Filter Cartridge | |
| 10. Water Tank | |



BEFORE FIRST USE

- Wash the water tank, water tank lid, water filter cartridge hopper, drip tray and drip tray grid in warm soapy water and dry thoroughly before re-assembling.
- Remove the water filter cartridge (supplied) from the packaging, place it in a jug of water for 15 minutes to activate it.
- Place the Hot Water Dispenser on a firm, flat, level surface.
- Ensure the Water Tank and Water Filter Cartridge Hopper are assembled correctly on the Hot Water Dispenser.
- Fit the cartridge into the water filter cartridge hopper. A little pressure may be needed to locate it securely.

Note: Black particles of activated carbon may be found in the jug after soaking. This is normal.

Note: Before making your first beverage, dispense 2 x 300ml of water at 99°C to clean the internal pipes (please see Using Your Hot Water Dispenser section).

WATER FILTRATION

Filtering water improves the taste and appearance of beverages by reducing limescale, lead, chlorine and other impurities.

USING YOUR HOT WATER DISPENSER

- Fill the Water Filter Cartridge Hopper with water and allow to filter to the Minimum water level marked on the Water Tank before dispensing water.

Note: The maximum capacity of the water tank is 1.8L. Do Not overfill.

- Press and hold the Power On/Off button for approximately 3 seconds, to turn on the appliance.



USING YOUR HOT WATER DISPENSER

- Using the Volume Dispense Increase or Decrease button, select the desired quantity of water to be dispensed 100ml, 200ml or 300ml until the number illuminates on the Control Panel and on the Display Screen.
- Turn the Temperature Select Dial until your desired water temperature 40°C, 60°C, 80°C or 99°C illuminates around the dial and in the Display Screen.
- If you wish to stop dispensing water at any time during the cycle, press the Power On/Off button / Child Lock button, the button indicator light will flash and go out when the water stops.

Note: If the appliance hasn't been used for more than 2 days, dispense 300ml of water at 99°C to clean the internal pipes.

Note: It is recommended to filter water according to the daily demand to ensure that the water quality is fresh.

ATMOSPHERE LIGHT

- The Atmosphere light illuminates when the appliance is first powered on and goes out when the selected water quantity has been dispensed for the first time.
- It will then illuminate each time water is dispensing.



REPLACING THE WATER FILTER CARTRIDGE

For maximum filter performance and for optimum taste, it is important to change the Water Filter Cartridge regularly. Always follow the manufacturer's recommendations and instructions.

COMPATIBLE FILTER CARTRIDGES

The following filter cartridges are compatible with the HydroTouch 3L Electric Water Dispenser and can be widely purchased from online retailers.

- BRITA – Maxtra PRO Cartridge
- LAICA – Bi Flux

CARE AND CLEANING

WARNING: Always disconnect the plug from the mains and allow the appliance to cool before cleaning.

- Wipe the outside of the main unit with a damp cloth.
- Wash the water tank, water tank lid, water filter cartridge hopper, drip tray and drip tray grid in warm soapy water and dry thoroughly before re-assembling.

IMPORTANT: Do not use abrasive cleaners on the main unit or removeable parts they may scratch or damage the surface.

IMPORTANT: Do not immerse the main unit in water or other liquids.



TROUBLESHOOTING

Problem	Solution
No power.	Check the fuse and try a new fuse with the same rating.
	Try the appliance in a different socket.
	Try a different appliance in the socket as it may be the socket that is at fault.
Water isn't dispensing.	Wait a few seconds for the heating process to complete before the water dispenses.
Err 01 is shown and the dispense button indicator light and temperature indicators flash alternately.	The water tank is empty. Fill the water tank to resume normal operation.
Err 02 is shown and temperature indicators flash. All buttons are invalid.	Contact Customer Service.
Err 03 is shown and temperature indicators flash.	The appliance has entered dry boil mode. Unplug the appliance and wait approximately 30 minutes for it to cool. Ensure there is sufficient water in the tank before plugging back in and operating.
Tripping Electrics.	Try using a different socket.
	Ensure there are no other appliances being used on the same set of sockets as the coffee maker.



SPARES

Part Number	Description	Qty per Product	Key Number
02160	Water Tank	1	10
02161	Water Filter Cartridge Hopper	1	8
02162	Water Tank Lid	1	6
02163	Drip Tray	1	6
02164	Drip Tray Grid	1	4

CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www.morphyrichards.co.uk



PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.





NOTES



NOTES

[illegible]



REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



**To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk**

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year



REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



KT130002MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

morphyrichards.co.uk

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

