

SENCOR®

SCG 400BK



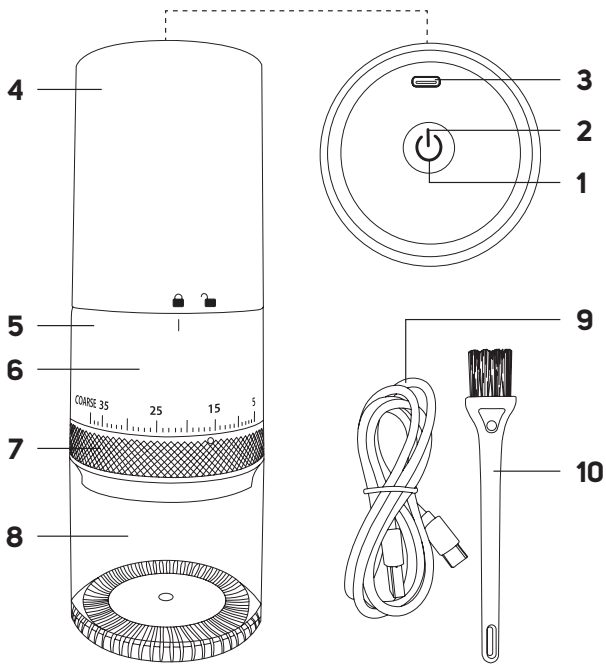
CORDLESS COFFEE GRINDER
Translation of the original manual

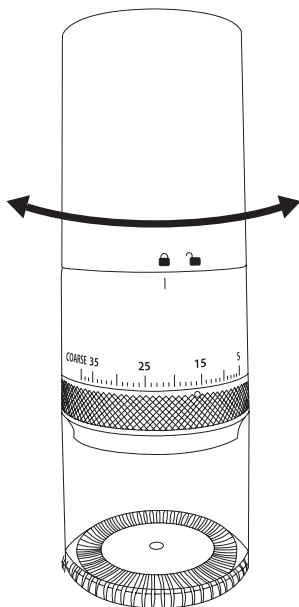


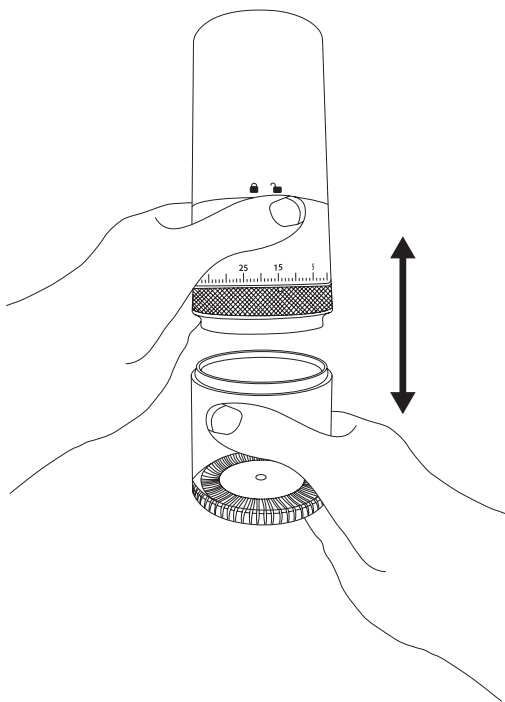
SENCOR®

SCG 400BK



A

B

C

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance is not to be used by children. Keep this appliance and its power cable out of the reach of children.
- Appliances may be used by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge, provided they are supervised or have been instructed in the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- If the charging cable is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the charging cable damaged.

**Caution:**

Incorrect use may lead to injury.

- Take extra care when handling and cleaning the grinding burrs. The grinding burrs are sharp and can cause serious injury.
- Wipe the coffee bean hopper with a slightly dampened sponge. Follow the cleaning instructions in this manual.
- Always switch off the appliance when left unattended and before assembly, disassembly or cleaning.
- Always make sure the appliance is switched off and not charging before emptying the hopper.
- This appliance is designed for household use only. It is also suitable for personal non-commercial use in spaces such as:
 - staff kitchens in stores, offices and other workplaces;
 - hotel or motel rooms and other living areas;
 - agricultural farms;
 - bed and breakfast establishments.
- Keep packaging material (plastic bags, polystyrene mouldings, etc.) out of the reach of children.
- The appliance is used for grinding coffee beans. Do not use it for other purposes.
- Do not use the appliance for commercial purposes, in an industrial environment or outdoors. Do not place it on an electric or gas cooker, table edge, window sills, sink draining board or unstable surfaces. Place it only on a flat, dry and stable surface.
- Before connecting the appliance to a charging source, make sure that the nominal voltage listed on the type plate matches the electrical voltage of the power supply.
- Do not overfill the coffee bean hopper, nor should you fill it with ground coffee, instant coffee, caramelised or otherwise specially treated coffee beans, cocoa beans, or any other materials or objects. This could damage the appliance.
- Do not use this appliance to crush ice, nuts or other ingredients.

- Make sure that the appliance is correctly assembled before putting it into operation.
- Before filling the hopper with coffee beans, ensure that there are no foreign objects in the grinder.
- Do not handle or shake the appliance while it is in operation.
- Do not overfill the coffee bean hopper.
- Do not operate the appliance continuously for more than 3 minutes. Let it cool for at least 10 minutes before using it again. Otherwise, there is a risk of overheating and subsequent damage.
- The appliance is equipped with an overheating protection. Should the motor overheat, the appliance will stop running. If this happens, allow the appliance to cool down.
- Do not touch the appliance with wet hands.
- Keep the appliance clean. When cleaning, follow the instructions in the chapter "Cleaning and maintenance".
- Keep the appliance away from flammable, explosive or chemical substances. Do not use it in humid environments.
- Do not place any items on the top part of the appliance.
- To avoid the risk of electric shock, do not immerse the motor unit or charging cable in water or other liquids.
- Do not place heavy objects on the charging cable. Make sure that it does not hang over the edge of the table or touch a hot surface and that its connector does not come into contact with water or moisture.
- Do not use the appliance if it is not working properly or shows signs of damage.
- To prevent dangerous situations, do not repair or modify the appliance yourself. All repairs should be carried out by an authorised service centre. Tampering with the appliance may result in the loss of your legal rights regarding faulty performance or warranty for quality.

Safety instructions when charging the appliance

- Use the supplied charging cable to charge the appliance. You may also use another suitable cable with a USB-C connector for charging.
- Before connecting the charging cable to the charging source (USB charging adapter, not included), make sure that the input rated voltage stated on the appliance's rating label matches the voltage on the adapter's rating label.
- Make sure that the charging cable does not hang over the edge of the table or touch hot surfaces or sharp objects.
- Disconnect the charging cable from the appliance by pulling the connector. Do not pull the charging cable.
- Only handle the charging adapter with dry and clean hands.
- Do not cover the appliance or the charging cable during charging.
- The appliance, charging cable or adapter may heat up while charging. This is normal. Make sure to leave a clear space around the appliance to allow proper dissipation of excess heat. Do not charge the appliance if it is located in an enclosed area.
- After charging the appliance, disconnect the charging cable from the appliance connector and the charging source. Let it cool before storing. Always store in a dry and well-ventilated place.
- If you will not be using the appliance for an extended period of time (longer than 3 months), we recommend recharging it regularly anyway to extend the life of the built-in battery.

Special Safety Instructions for the Li-ion Battery

- The Li-ion battery is built into the appliance and is an integral part of it, which the user is not allowed to remove.
- Follow all the instructions provided in this user's manual.
- Avoid using or storing the appliance in environments where flammable, volatile, or explosive substances are used and/or stored.
- In the event of a battery fluid (electrolyte) leak, do not touch the battery with your bare hands. Use protective aids (gloves, a protective mask, goggles, etc.). The liquid inside the battery is toxic and may cause health problems even with slight contact of the bare skin with it.
- We recommend opening windows or doors to ensure adequate ventilation of the space.
- Contact a specialist hazardous waste disposal company or use a hazardous waste collection facility. Do not dispose of the damaged battery or accumulator in ordinary household waste.
- In case of skin or eye splashes, rinse with plenty of water and seek medical attention. If ingestion occurs, seek immediate professional medical help.

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



The product meets all the basic requirements of the applicable EU directives.



This symbol on products or accompanying documents means that used electric or electronic products must not be added to ordinary municipal waste.




This symbol on the accumulator or battery means that the used battery must not be added to normal municipal waste.

EN Cordless coffee grinder

User Manual

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have removed all its components. It is recommended that you keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right to file a defect claim or the quality warranty. When transporting the appliance, we recommend repackaging it in the original box provided by the manufacturer.

GRINDER DESCRIPTION

- | | |
|---|---|
| A1  button to switch the grinder on/off | A5 Coffee bean hopper |
| A2 Grinder/charging operation indicator | A6 Grinder |
| A3 Socket to connect the USB-C connector of the charging cable | A7 Grinding coarseness regulator |
| A4 Motor unit | A8 Ground coffee hopper |
| | A9 Charging cable |
| | A10 Cleaning brush |

INTENDED USE

- The Sencor SCG 4000BK cordless coffee grinder is used to grind roasted coffee beans just before making coffee. Grinding

just before use maximises flavour and aroma as ground coffee quickly loses its characteristics. Thanks to the battery, the grinder is easily portable and cordless, suitable not only for home but also for travel.

BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and discard all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.
- Remove the ground coffee container and rinse it with clean water. Wipe dry with a clean cloth.
- Wipe the outer surface of the grinder with a clean dry cloth.

CHARGING

- The grinder is equipped with a battery and it is necessary to charge the grinder before first use.
- Insert the USB-A connector of the charging cable into the connector of your computer, power bank or power adapter (not included). Plug the adapter plug into a properly grounded power outlet.
- Insert the USB-C connector into the socket at the top of the grinder. The grinder starts charging. The **A2** indicator will flash during charging. When it turns white, the grinder is fully charged.
- Disconnect the charging cable from the grinder and from the charging source. Remove the adapter from the power socket if you have used it for charging.
- Charging time is approximately 2.5–3 hours. Nevertheless, the charging time varies depending on the current charge level of the grinder.

- When the charge level is low, the **A2** indicator will flash. In such a case, let the grinder charge.




**Note:**

Do not leave the grinder connected to a charging source for longer than it takes to fully charge it.

**Note:**

The grinder can be used while it is charging.

FILLING THE HOPPER WITH COFFEE BEANS (Fig. B)

- Check that the grinder is turned off before filling the coffee bean hopper.
- Grasp the motor unit with one hand and the grinder with the other.
- Turn the motor unit clockwise so that the I symbol on the hopper points to .
- Remove the motor unit upwards from the hopper.
- Pour freshly roasted coffee beans into the hopper.
- Put the motor unit on the hopper so that the I symbol on the hopper points to .
- Turn the motor unit counterclockwise until you feel resistance and the symbol I points to .

**Caution:**

Do not fill with ground or instant coffee, caramelized or otherwise specially treated coffee beans, cocoa beans or other raw materials or items. Do not use this appliance to crush ice, grind nuts, spices or other ingredients.

**Note:**

Do not overfill the hopper. We recommend filling it with about 80%.

 


**Note:**

The hopper is not designed for storing coffee beans. If the grinder is to be left unused, empty the hopper and clean it.

ADJUSTING THE GRIND FINENESS

- Turn the grinding coarseness regulator to the left or right to set the desired degree of coarseness of the ground coffee. Turn the regulator towards **FINE** to select a finer level of ground coffee, turn towards **COARSE** to select a coarser level of ground coffee.
- Adjust the grinding coarse before starting the grinder.

GRINDING

- Make sure the grinder is charged, the coffee bean hopper is filled, and the coffee ground hopper is empty.
- Press the  button briefly and the grinder will start. The **A2** indicator lights up.
- The grinder will grind until the coffee bean hopper is empty, then automatically stops and switches off.
- Fill the coffee bean hopper and continue grinding.
- Hold down the  button for 3 seconds and the grinder will run for 4 minutes continuously. After 4 minutes, the grinder automatically stops and switches off. Then leave the grinder to cool for about 10 minutes.
- If you need to stop the grinding earlier, press the  button briefly.

**Note:**

If the grinder detects empty grinding, it will automatically switch off after 6 seconds. The **A2** indicator will flash several times and then turn off. This is a safety feature of saving energy. Do not turn the grinder on empty.

EMPTYING THE GROUND COFFEE HOPPER (Fig. C)

- Grasp the grinder with one hand and the hopper with the other.
- Carefully remove the grinder from the hopper.

- Place the ground coffee in the filter and prepare your favourite coffee or pour the ground coffee into an airtight container.



Note:

Freshly ground coffee quickly loses its aroma and taste, so we recommend consuming it as soon as possible.

.....

CLEANING AND MAINTENANCE

- Make sure the grinder is switched off before cleaning.



Caution:

To avoid the risk of electric shock, do not immerse the motor unit, grinder tray or charging cable in water or other liquid.



Caution:

Do not use abrasive cleaning agents, solvents, etc. to clean any parts of the appliance, as these could damage the surface. None of the components of this appliance are dishwasher safe.

.....

GROUND COFFEE HOPPER

Remove the ground coffee hopper, empty it and rinse with clean water. Wipe dry with a clean cloth.


.....




OUTER SURFACE OF THE GRINDER

Wipe the outer surface of the grinder with a clean dry cloth.

.....


EMPTYING THE HOPPER

- Grasp the motor unit with one hand and the grinder with the other.
- Turn the motor unit clockwise so that the I symbol on the hopper points to .
- Remove the motor unit upwards from the hopper.

- Pour the coffee beans into an airtight container.
- Put the motor unit on the hopper so that the I symbol on the hopper points to .
- Turn the motor unit counterclockwise until you feel resistance and the symbol I points to .
- Repeatedly start the grinder with the  button until the hopper is empty.

.....

CLEANING OF GRINDING BURRS

- Grasp the motor unit with one hand and the grinder with the other.
- Turn the motor unit clockwise so that the I symbol on the hopper points to .
- Remove the motor unit upwards from the hopper.
- Remove the ground coffee hopper.
- Use the cleaning brush to remove coffee bean residue from the grinding chamber.
- After cleaning, reassemble the grinder.



Caution:

Never spray the appliance with water or in any other liquid.

.....

STORAGE

- If you will not be using the grinder for an extended period of time, turn it off, empty the coffee bean hopper and the ground coffee hopper. Clean it according to the instructions in the “**CLEANING AND MAINTENANCE**” section.
- Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.
- If you don't use the grinder for a long time, charge it at least once every 3 to 6 months.

TROUBLESHOOTING

Problem	Solution
The grinder does not charge itself.	Check that the charging cable is properly connected to the grinder and the charging source.
The grinder does not start.	Let the grinder charge.
	Check that the output of the ground coffee is not blocked.
	Check that the grinder is assembled correctly.
The grinder will start, but only for a very short time.	Let the grinder charge.

TECHNICAL SPECIFICATIONS

Battery	Li-Ion, 3.7 V, 2000 mAh
Charging time	2.5–3 hours
Noise level	<75 dB
Coffee bean hopper capacity	25 g
Ground coffee hopper capacity	110 ml
Dimensions of the grinder	20.2 × 7.1 × 7.1 cm
Weight	435 g

Values provided according to Commission Regulation EU 2023/826

Off mode	
Power consumption in off mode	0.1 W
Time needed for the equipment to automatically reach off mode	0 min
Standby Mode	
Power consumption in standby mode	–
Time needed for the equipment to automatically reach standby mode	–

Networked standby mode (Wi-Fi)

Power consumption in networked standby	–
Time needed for the equipment to automatically reach networked standby mode	–

Disposal of the Battery

The battery is intended for take-back and environmentally friendly disposal. Take the product with the battery to the designated collection point. Here, it will provide for its ecological disposal. The battery contains environmentally harmful substances.

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the designated municipal waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

Used electrical and electronic products must not be disposed of in ordinary municipal waste. To enable the proper disposal, renewal and recycling of these products, deliver them to the designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By disposing of this product correctly, you help to conserve valuable natural resources and prevent any potential adverse impact on the environment and human health that could result from improper waste disposal. For more details, contact your local authority or nearest collection point. Fines may be imposed for the improper disposal of this type of waste as per national regulations.

For business entities in European Union States

If you wish to dispose of electrical and electronic equipment, please request the necessary information from your retailer or supplier.

Disposal in other countries outside the European Union

To dispose of this product elsewhere, request the necessary information on the correct disposal method from local authorities or your retailer.

.....

Changes to text and technical parameters are reserved.

FAST ČR, a.s.
U Sanitasu 1621
CZ-251 01 Říčany
www.sencor.com
info@sencor.cz