


Operating Manual

取扱説明書


Manual Usuario

Инструкция по установке


安装说明书

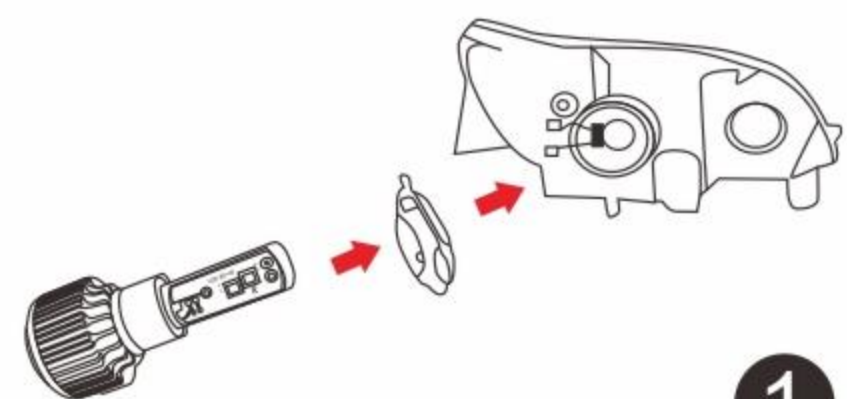


1

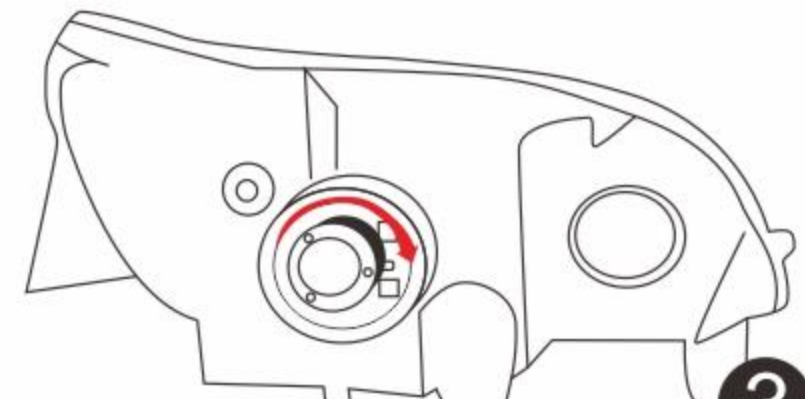

3

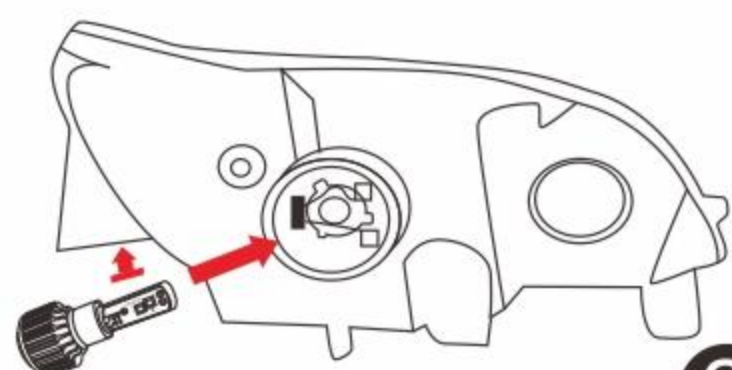

2

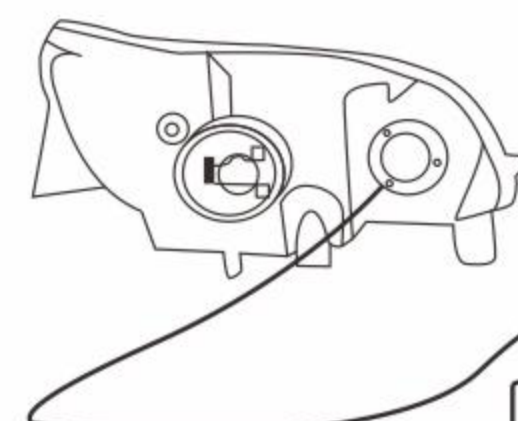

4

1.H4

1. Separate LED headlight clamping holder from LED headlamp.
2. Fix headlight clamping holder on headlight clamping parts.
3. Rotate headlight and lock it.
4. Connect to circuit and turn on power.

- 1、LEDバルブフランジとLEDバルブ本体を半時計回りに回して分解
- 2、LEDバルブフランジをライトユニットに固定し、防水カバーを取り付ける。
- 3、LEDバルブを時計回りに回転させLEDバルブをロック。車両個体差により、防水カバーの加工が必要になる場合もあります。
- 4、LEDバルブとデジタルコントローラー連続、車体側の三極配線とLEDの三極配線を連続し、各配線とデジタルコントローラーを車体に固定。

- 1° Quita el socket de la bombilla.
- 2° Fija el socket en la base de la carcasa original.
- 3° Retuerce la bombilla en el socket para cerrarla.
- 4° Conecta a la fuente.

1. Снимите адаптер цоколя от лампы;
2. установите адаптер цоколя в фаре;
3. вставьте и поверните лампу для фиксации;
4. Подключите разъем питания.

- 1、将LED头灯上的卡座和LED头灯分开
- 2、将卡座固定在大灯灯卡处
- 3、扭转头灯上锁
- 4、连接电路，开电源

Note:


1. Installation shall be completed by professional personnel.
2. Disconnect the negative pole of battery before installation.
3. Check if the wire box works well after installation. Check the parts tautness and if there are any parts missing.
4. Conduct a test over product function; feel free to contact us if you have any problems.

注意事项:


1. 产品必须专业安装人员进行安装。
2. 安装前请先断开车辆电瓶负极。
3. 安装后请检查接线和安装是否异常，确认部件紧固度及是否遗漏。
4. 安装后请检测产品功能是否正常，如有疑问请及时联系。

1


2.H11/9005/9006/880/H13/9004/9007

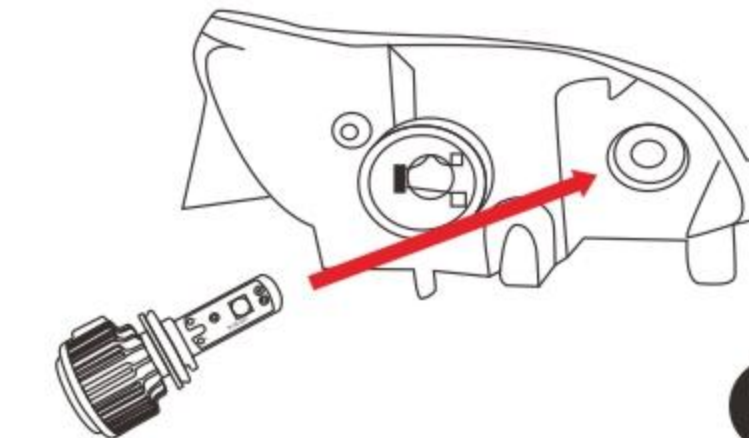

1

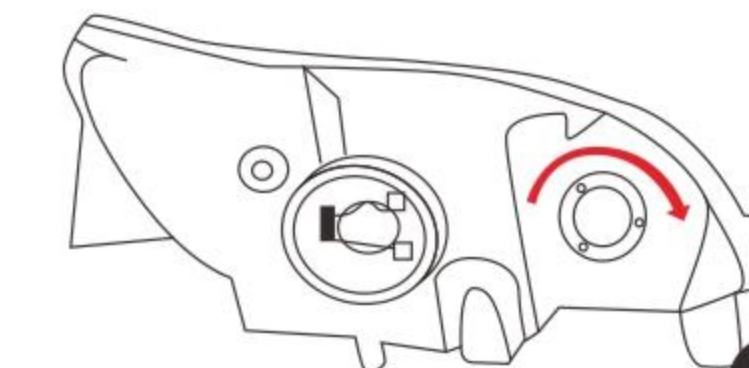

2

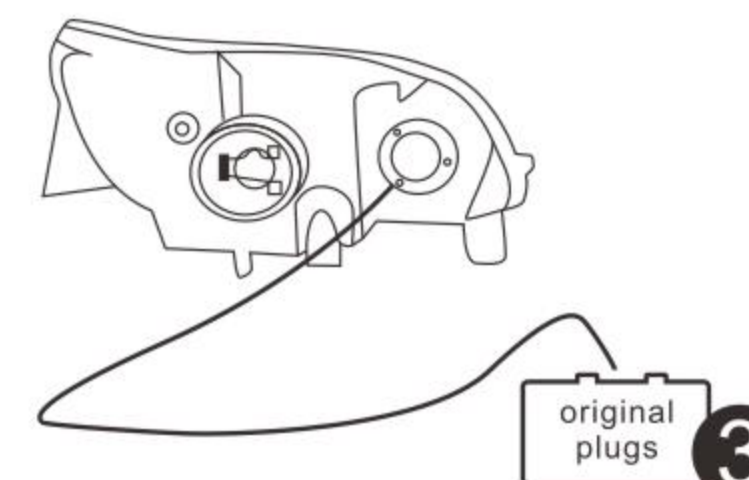

3

1. Match LED headlight clamping holder with headlight clamping slot.
2. Rotate headlight and lock it.
3. Connect to circuit and turn on power.





- 1、LEDバルブフランジとピッタリして嵌める。
- 2、LEDバルブを時計回りに回転させLEDバルブをロック。車両個体差により、防水カバーの加工が必要になる場合もあります。
- 3、LEDバルブとデジタルコントローラー連続、車体側の三極配線とLEDの三極配線を連続し、各配線とデジタルコントローラーを車体に固定。

- 1° Corresponde el socket de bombilla a la base de la carcasa original.
- 2° Retuerce la bombilla en el socket para cerrarla.
- 3° Conecta a la fuente.

1. Установите лампу в фару;
2. Поверните лампу для фиксации;
3. Подключите разъем питания.

- 1、将LED头灯卡座和大灯卡槽配对
- 2、扭转头灯上锁
- 3、连接电路，开电源

2

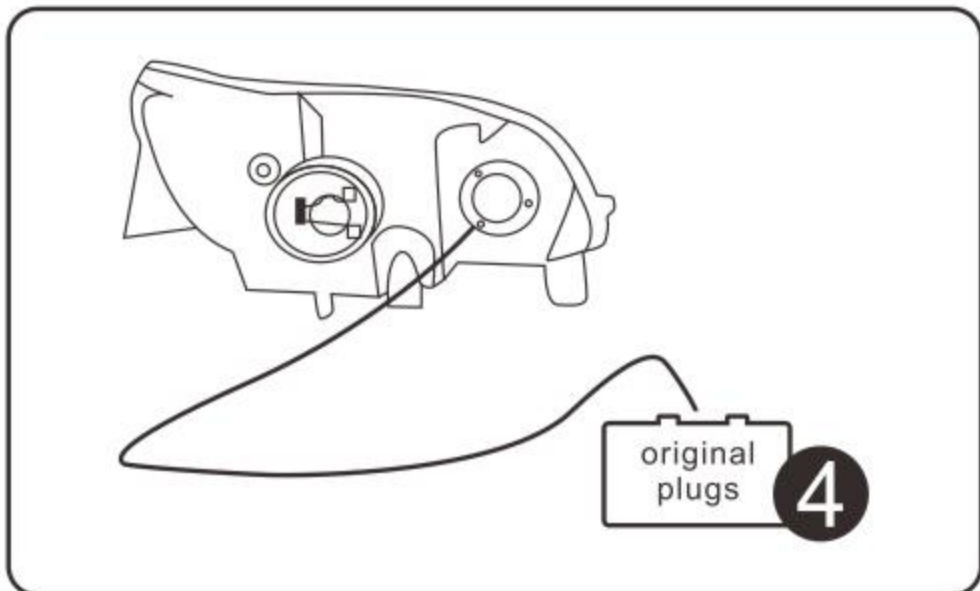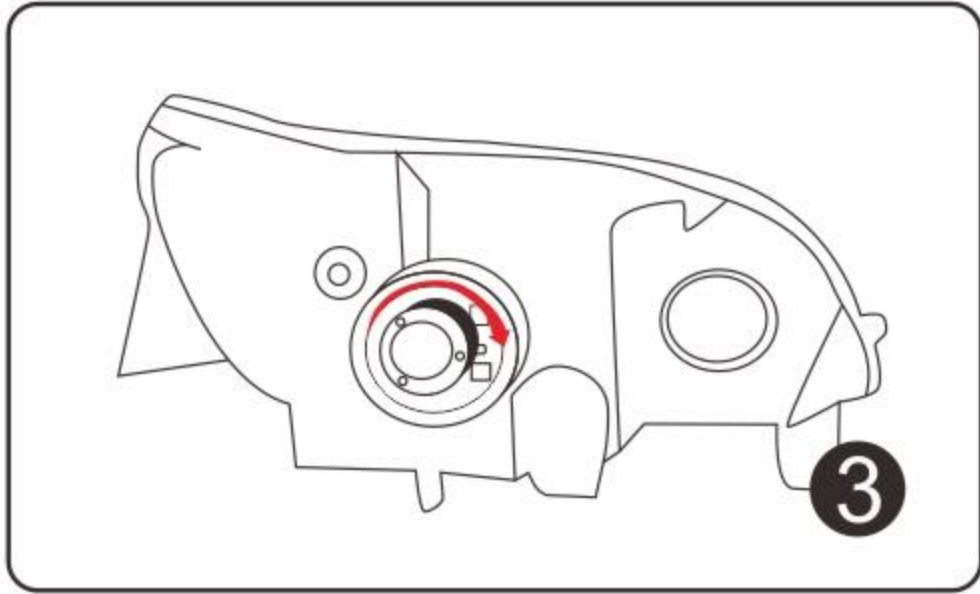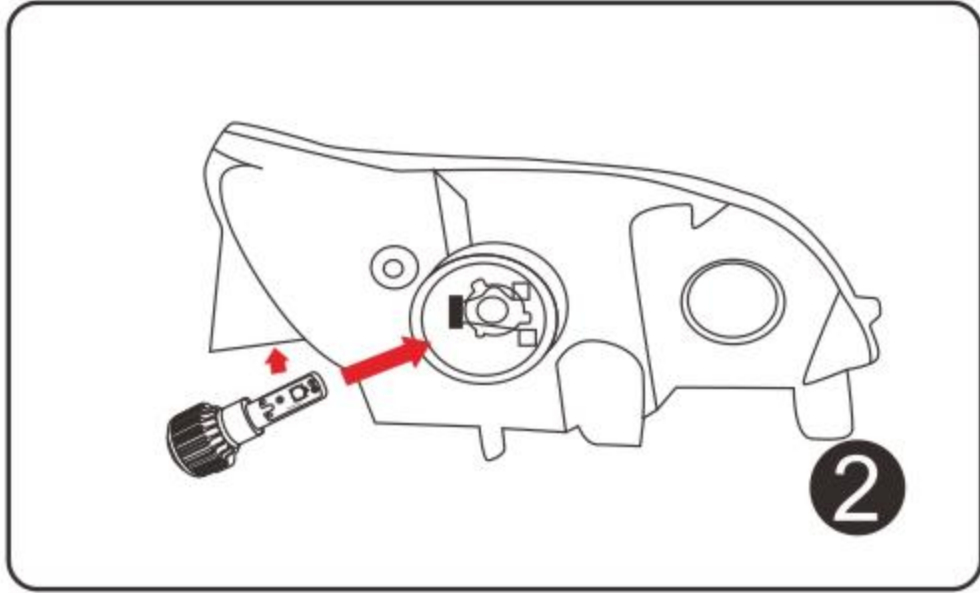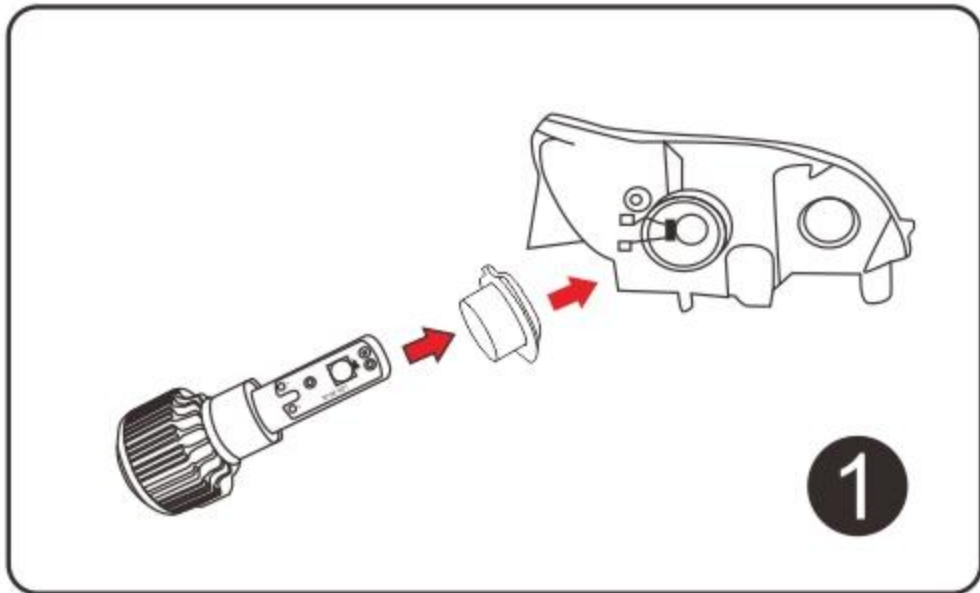

1. Separate LED headlight clamping holder from LED headlamp.
2. Fix headlight clamping holder on
3. headlight clamping parts
Rotate headlight and lock it.
4. Connect to circuit and turn on power.

- 1、LEDバルブフランジとLEDバルブ本体を半時計回りに回して分解
- 2、LEDバルブフランジをライトユニットに固定し、防水カバーを取り付ける。
- 3、LEDバルブを時計回りに回転させLEDバルブをロック。車両個体差により、防水カバーの加工が必要になる場合もあります。
- 4、LEDバルブとデジタルコントローラー接続、車体側の三極配線とLEDの三極配線を連続し、各配線とデジタルコントローラーを車体に固定。

- 1° Quita el socket de la bombilla.
- 2° Fija el socket en la base de la carcasa original.
- 3° Retuerce la bombilla en el socket para cerrarla.
- 4° Conecta a la fuente.

1. Снимите адаптер цоколя от лампы;
2. установите адаптер цоколя в фаре;
3. вставьте и поверните лампу для фиксации;
4. Подключите разъем питания.

- 1、将LED头灯上的卡座和LED头灯分开
- 2、将卡座固定在大灯灯卡处
- 3、扭转头灯上锁
- 4、连接电路，开电源

PackageContent
2xLEDbulbassy. withdrivers
1xInstruction
Attention: This instruction works for universal application, may not fit some models

- Step 1
Take the original bulb off
- A. Open up the engine cover
 - B. Find the headlamp and take it off. If you fail to take headlamp off, please seek professional help.
 - C. Take off the plastic or rubber cover to find headlamp bulb
 - D. Bulbs are fixed by latches or spring snaps. Release the latches and rotate bulb to take bulb off
 - E. Disconnect bulb with power socket

- Step 2
Install and test
- It is strongly recommended that users shall test the 2 LEDs before installation
- Connect LED power line with automobile lamp plug. To prevent LED scratching, please do not install LED on headlight; do not touch other parts out of headlight, or you may get scalded.
- Connect LED with power socket, possible results:
- A: If LED works, please follow step 3.
 - B: If LED fails to work (H1 / H3 / H7 / H8 / H9 / H11 / 9005/9006/880/881), please disconnect it and adjust the positive/negative pole of plug.
 - C: If the LED fails (other models) to work.
 - I. Disconnect LED bulb with power socket on the car
 - II. Contact us for free replacement if you receive the wrong model
 - III. Contact us if you receive the wrong plug; once you receive the new product, please reconnect it to the socket for a test.
 - IV. If the bulb works, please follow step 3.

- D: If LED keeps flickering, then you may have to install an extra decoding capacitor on your car, please follow the procedures as below:
- I. Install decoding capacitor between driver and power plug.
 - II. Complete step 3.

- Step 3
Complete Installation
- After testing the bulbs, please install them to lamp assy head and tighten the spring snap.
- For the spring snaps on the case of H4 and H7, extra procedures may need to be done for fixing hbulbs:.
1. Release the base ring on bulb
 2. Put bulb base ring on the right place of headlamp
 3. Fix the bulb base ring with snap or spring
 4. Get LED bulb through the base ring and installed in the right place.
- To prevent overheat, headlamp cover is not recommended.
- If you want to install a new cover, it is strongly recommended that users shall cut a hole on the cover for better ventilation.
- Take out all tools from the engine compartment, and close the engine cover.