

KENSINGTON - USER MANUAL

FRONT PAGE

INTERNAL PAGE 1

INTERNAL PAGE 2

INTERNAL PAGE 3

INTERNAL PAGE 4

WARNINGS


AU COMPLIANCE

SIDE 1



SETUP WITH APPLE FIND MY APP


1. Update your iPhone to the latest version of iOS. Activate Bluetooth.
2. Press your LOC8 CARD Wallet button once (see arrow pointing to button in drawing below). The beeping that follows indicates your device is ready for pairing.
3. Open the Apple Find My app.

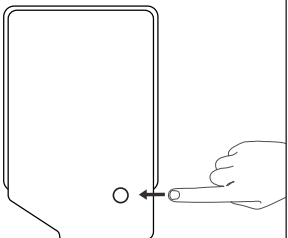


4. Tap "+"; select "Add Other Item" to bring up LOC8 CARD Wallet on your screen for pairing.

FIND YOUR LOC8 CARD WALLET UNIVERSAL

1. In "Find My" app, tap "Items".

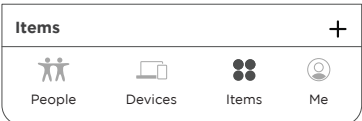


2. Check your wallet's last known time and place.
3. Click and select the wallet from the list.
4. To find a nearby item, tap "Play Sound" and listen for a chime.
5. For distant items, click "Directions". Open Maps to navigate to the last-known location.

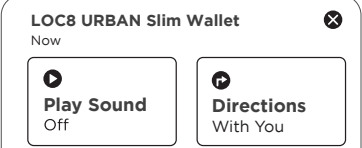

SETUP WITH GOOGLE FIND HUB APP


1. Update your Android device to the latest operating system. Activate Bluetooth.
2. Download Find Hub app.

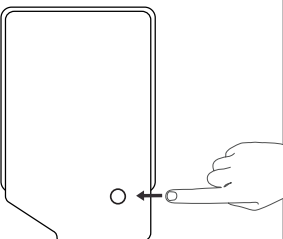



3. Power on the new device and put it into pairing mode.
4. Unlock your phone and turn on the screen.
5. You will receive a notification on your phone prompting you to set up the new device.
6. Tap the notification and follow the on-screen instructions to complete the setup.

FIND YOUR LOC8 CARD WALLET UNIVERSAL

1. In "Find Hub" app, tap "Items".

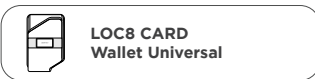

2. Check your wallet's last known time and place.

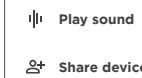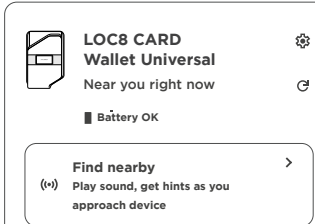

WARNINGS

Avoid exposing it to extreme conditions that may affect its functionality.
Keep JOURNEY LOC8 FINDER products away from all heat and fire sources, including heating equipment, heaters, ovens, open flames, and direct sunlight.

Do not attempt to repair or disassemble the JOURNEY LOC8 FINDER products equipment by yourself. Any unauthorized modification may result in damage or malfunction.

Avoid using or storing JOURNEY LOC8 FINDER products in environments with high humidity or temperatures exceeding 60°C (140°F) to prevent potential failures.

Responsibly dispose of JOURNEY LOC8 FINDER products following the local government's regulations on waste disposal to minimize environmental impact.

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Watch, iPad, iPods, iPad Touch, Mac, and macOS are trademarks of Apple Inc., registered in U.S. and other countries. iOS is a trademark or registered trademark of Cisco in U.S. and other countries and is used under license.

Find Hub network requires location services and Bluetooth to be turned on. Requires cell service or internet connection. Works on Android 8+ on select devices (tablets, phones, and laptops) and in certain countries for age-eligible users.

Google, Android, and Google Play are trademarks of Google LLC.

AUSTRALIAN WARRANTY

Warranty Period
12 Months

Warranty Terms

ALOGIC Corporation Pty Ltd warrants this product to be free from defects in materials and workmanship for the warranty period stated above from the date of purchase, provided the product is used in accordance with the accompanying recommendations and instructions.

Exclusions

This warranty no longer applies where any defect results from alteration, accident, misuse, abuse or neglect of the product.

How to Make a Claim

Please retain your receipt as proof of purchase and return the product with the receipt to your place of purchase to make a warranty claim.

This warranty is in addition to your rights under the Australian Consumer Law.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights under New Zealand legislation.

ALOGIC Corporation Pty Ltd
Level 14, 140 William St Melbourne VIC Australia 3000

INTERNAL PAGE 5

INTERNAL PAGE 6

INTERNAL PAGE 7

INTERNAL PAGE 8

LAST PAGE

COMPLIANCE STATEMENTS

SIDE 2

CHARGING YOUR LOC8 CARD WALLET UNIVERSAL

To charge your LOC8 device, connect it to a power source using a standard USB-C cable and a charger with a minimum output of 5V.

Rechargeable battery lasts up to 5 months on a full charge.

Tips: Suggest to recharge LOC8 device every 4 months in case battery drain completely.

LED Status	Device Behaviour
Orange	Charging
Green	Fully charged

CHECKING BATTERY LEVEL

When LOC8 device battery level is low, you will receive a reminder notification on your phone, via the Google's Find Hub or Apple Find My app. You can also check the battery level of the LOC8 device in the relevant app.

USE LOST MODE (FOR APPLE)

1. If you can't find your wallet, open the Find My app on your iPhone.
2. Click the 'Items' icon at the bottom of your screen.
3. Tap on your LOC8 CARD Wallet Universal icon displayed on your screen.
4. Scroll down to "Enable Lost Mode".
5. Tap "Continue".
6. Enter your required contact details to finalise "Lost Mode".

Your LOC8 URBAN Slim Wallet will stay linked to your Apple ID, unless you unpair it. If someone finds your item while it is in Lost Mode, they can use their iPhone or any NFC-capable device to reach you.

TROUBLESHOOTING (FOR APPLE)

This device can be reset if you have trouble pairing the wallet with your iPhone, or if you want to unpair it and give it to someone else.

To Reset (from power-on state):

1. Press and hold the button for 10 seconds. Release after hearing the second prompt sound (the first sound occurs at 3 seconds). A series of beeps will confirm the reset.
2. You can repeat this step in "SETUP WITHAPPLE'S FIND MY APP" to pair the wallet with your iPhone.

TROUBLESHOOTING (FOR GOOGLE)

Power On: Click the tracker button on the LOC8 device 2 times, the device will "beep" on the second click, indicating it is now powered on.

Identification Mode: When you find an unknown LOC8 device, hold it to your phone and quickly press the device's tracker button once and listen for a "beep". The LOC8 device's identification information will display on your phone.


Reset (from power-on state): Press and hold the button for 10 seconds. Release after hearing the second prompt sound (the first sound occurs at 3 seconds). A series of beeps will confirm the reset. You can repeat this step in "SETUP WITHAPPLE'S FIND MY APP" to pair the wallet with your iPhone.

Power Off: Press and hold the LOC8 device's tracker button for 3 seconds and release. The device will play the power off ringtone indicating the device is now off.

Re-Pairing Mode: Please unpair first, power off the LOC8 device, then power it on to re-pair if you want to switch to another device.

LOC8 CARD WALLET UNIVERSAL

The best of both worlds – your phone and wallet, together.

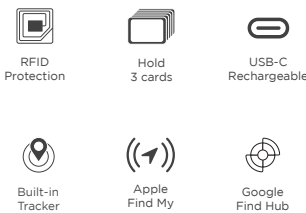

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

FCC RF exposure statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Responsible Party - U.S. Contact Information
ALOGIC USA LLC
37524 Horton Dr.
Newark, CA 94560, USA

EU Declaration of Conformity

This device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. All essential radio test suites have been carried out. This restriction will be applied to all Member States of European Union.
The device complies with RF specifications when the device used at 20cm from your body.
Hereby, ALOGIC Corporation declares that this product is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address by clicking on the Compliance Documentation link:
<https://journeyofficial.com/>

IC Caution:

Radio Standards Specification RSS-GS, Issue 5

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
This device may not cause interference.
This device must accept any interference, including interference that may cause undesired operation of the device.

RF exposure statement:
The equipment complies with ICSED. Radiation exposure limit set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Avvertenze:
Cet appareil ne doit pas causer d'interférences. Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.
Déclaration d'exposition RF:
L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.

