

TOWER®

over 100 YEARS of quality

NANO COATED
CeraGlide™
TURBOCARE™

2700W STEAM GENERATOR IRON

T22006/T22006GLD



ULTRA FAST IRONING

Iron 30% faster with 2700W power and advanced CeraGlide™ technology.



DEEP STEAM PENETRATION

Powerful high pressure continuous steam tackles even ironing with ease.



V GLIDING TECHNOLOGY

CeraGlide™ steamplate effortlessly glides along any surface for professional results.

3 | YEAR
GUARANTEE



GREAT BRITISH
DESIGN SINCE 1912

SAFETY AND INSTRUCTION MANUAL
PLEASE READ CAREFULLY

*Subject to registering your Extended Guarantee online at www.towerhousewares.co.uk.



Towerbrand

GREAT BRITISH DESIGN, INNOVATION
AND EXCELLENCE SINCE 1912

Since the turn of the 20th century, Tower has been designing, developing and manufacturing housewares and small appliances used by millions of households throughout the UK and beyond. During the 1960s, the rise in popularity of pressure cooking saw Tower become the UK's largest producer of pressure cookers, right through into the late 1980s. In recent years the Tower brand has been reborn with an exciting and varied range of housewares and electrical appliances that have quickly reinstated the brand's richly deserved status as a household name.

TOWER

Visit

www.towerhousewares.co.uk

for more fantastic products.

Contents:

Thank you for purchasing this appliance from the Tower range.

Please read this manual carefully **BEFORE** using the appliance for your own safety.

It has been designed to provide many years of trouble-free use.

There are many benefits to using a Tower Steam Iron:

- Powerful 2700W Steam Iron
- Easy to use temperature control and variable steam settings
- Base Unit Carry Handle for portability
- Anti-drop and Anti-calc functions

1. **Specifications**
Components and structure
2. **Technical Data**
3. **Important Safety Information**
4. **Before First Use**
5. **Using your Appliance**
6. **Troubleshooting**
7. **Recycling**
8. **Cleaning & Care**
9. **Wiring Safety**
10. **Warranty Information**
11. **Your Receipt**

See back page for Customer Service Information.

Call us first, we can help.

With advice, spares and returns.

Visit our website: towerhousewares.co.uk **Call: +44 (0)333 220 6066**
(8.30am to 6.00pm Monday-Friday)

1 - Specifications:

This box contains:
Instruction Manual
Steam Iron
Base



Structure of your appliance:

- | | |
|------------------------|---------------------------|
| 1. Iron | 5. Base unit |
| 2. Steam button | 6. Detachable water tank |
| 3. Temperature control | 7. Base unit carry handle |
| 4. Iron ready light | |

2 - Technical Data:

Description:	Ceraglide Steam Generator Iron
Model:	T22006/T22006GLD
Rated Voltage:	230-240v
Frequency:	50-60Hz
Power Consumption:	2250-2700W

Documentation

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2014/30/EU	Electromagnetic Compatibility Directive.
2014/35/EU	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.

RK Wholesale LTD Quality Assurance, United Kingdom.

Should you encounter problems or require a replacement part, contact the Tower Customer Support Team: **+44 (0) 333 220 6066.**

Some spare parts may be ordered from the Tower website.
Your warranty becomes void should you decide to use non Tower spare parts.
Spare parts can be purchased from **www.towerhousewares.co.uk**

Guarantee for spare parts:

The spares and accessories are guaranteed for 1 year from date of purchase.
The main body and housing are guaranteed for the extended free warranty subject to registration.

If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase within 12 months from the date of purchase.
Refund or replacement is at the discretion of the retailer.

3 - Important Safety Information:

Please read these notes carefully BEFORE using your Tower appliance

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- DO NOT leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.

- The use of accessory attachments is not recommended by the appliance manufacturer apart from those supplied with this product. DO NOT use extension cords with the appliance.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- DO NOT use this product for anything other than its intended use.
- This appliance is for household use only.
- DO NOT carry the appliance by the power cord.
- DO NOT use the appliance outdoors.
- The iron should always be turned to "min" before plugging or unplugging from the mains outlet. Never pull the cord to disconnect from the mains: instead, hold the plug and pull to disconnect.
- Always disconnect the iron from the electrical outlet when filling with water or emptying and when not in use.
- DO NOT leave the iron unattended when connected to the mains or on an ironing board.
- Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down- there may be hot water in the reservoir.
- Your iron is designed to rest on the soleplate. DO NOT place the iron on an unprotected surface.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team: **+44 (0) 333 220 6066**

4 - Before First Use

1. Remove any stickers, protective foil or storage cover from the soleplate.
2. Before filling ensure that the anti-calc filter has been taken out of the tank and the plug is removed from the wall socket.
3. When cool, remove the water tank from the base and empty any water that is been left inside, then place the funnel in the opening to the tank.
4. Measure 0.5 litres (500ml) of water into an appropriate container, then pour into the tank and replace it onto the unit base.
5. Once the tank is full, lift the iron from its base and hold it in your hand. Be careful to hold the iron at a lower height than the base, as this will help make the next few steps easier and more effective.
6. With the iron held low, press and hold the steam trigger for up to 30 seconds. The pump will vibrate and there will be a rumbling sound as it fills up with water.
7. When this sound becomes less pronounced and steam starts coming out of the iron, let go of the steam trigger.
8. Your iron is now ready for normal use.

NOTE: On first use, we recommend cleaning the soleplate with a soft piece of scrap cloth to ensure any residue from the manufacturing process is removed from it.

9. After filling the steam station, ensure it is placed on a flat, level and stable surface.
10. Plug the power cord into an unobstructed wall socket then switch it on at the wall.
11. Set the temperature dial on the iron to the correct temperature for the fabric that is to be ironed (as shown in the temperature guide) then switch on the steam generator and the iron via the switches on the base.
12. When the correct temperature is reached for the fabric, the light on the iron may cycle on and off. This is normal and shows that the thermostat is operating normally
13. Ensure all switches are in the 'off' position when you are finished using the appliance.
14. Dispose of the packaging in a responsible manner.

5 - Using Your Appliance

Moving and Carrying the Unit:

1. This unit is equipped with a carry handle on the base unit, which allows for easy movement and transportation.
2. This base will come packed flat against the main body of the steam base. To release it and position it upright, press the Unlock button on the side of the base unit while firmly pulling the handle into a vertical position.
3. Once the handle is fully upright, release the Unlock button. The handle will automatically lock into position, for safe transportation.
4. To restore the handle to its original horizontal position, press the Unlock button again to release it, then push it gently downwards until it is flat against the base unit. When the handle is in position, release the Unlock button to secure it into place.

Filling the tank with water:

Caution! Before filling the tank with water make sure the appliance is unplugged

1. The steam ironing base must rest on a flat surface.
2. Empty the tank of any remaining water. Only pour in water when the tank is empty.
3. Put a funnel in the filling hole.
4. Pour an adequate amount of water (max 1.4L) into the tank and then remove the funnel.
5. Once the tank has been filled, slot it back into place within the unit's base.

Connecting to the base unit:

- Connect the machine only if the mains voltage corresponds to the rated voltage reported on the rating plate.
- The power cord and the steam tube between the tank and the iron must not be damaged.
- The water tank must be filled with a sufficient water quantity when the boiler is empty (max 1.4L)
- The steam ejection outlet must not be obstructed.
- After filling the tank switch the Power Switch to on. The switch will light up (this operation is not necessary if you want to use the steam ironing system as a dry iron).
- Refer to the fabric setting guide below and set the thermostat dial accordingly.
- The indicator light next to the thermostat will go out when the iron's soleplate temperature has been reached. It will cycle on and off during use. This is normal.
- When the steam is ready, the power light will be illuminated.
- If you need to refill the tank during ironing, unplug the iron from the mains supply and allow it to cool for at least 5 minutes before carefully removing the water tank.
- Always check first whether a label with ironing instructions is attached to the article.
- The iron heats up quicker than it cools down, therefore, you should start ironing the articles requiring the lowest temperature such as those made of synthetic fibres.

Textile Chart:

On Label means: This Article cannot be ironed (e.g. chlorofibre, elastodiene)			
Label	Kind of Textile	Fibre Material	Temperature Dial Position
●	Synthetic	Acrylic Modacryl Polypopylene Polyurethane	
●●	Synthetic	Acetate Triacetate	
●●	Synthetic Silk	Metalized Cupro Polyamide (Nylon) Polyester Modal Viscose (Rayon) Silk	
●●	Wool	Wools	
●●●	Cotton Linen	Cotton Linen	

Ironing tips:

- When ironing a garment that consists of multiple fibre types it is recommended to use the lowest heat setting.
- Velvet and other textures that rapidly become shiny should be ironed in one direction with light pressure applied.
- Always keep the iron moving at any given moment to prevent overheating of the fabrics
- Pure woollen fabrics (100% wool) may be ironed with the iron set to a steam position. Preferably, set the steam button to the maximum position and use a dry cloth as a mat.
- To prevent staining, do not spray water straight on silk or other delicate fabrics.

6 - Troubleshooting

Questions	Answers
The appliance does not produce any steam.	Fill the water tank beyond the MIN fill line. Press and hold the steam trigger until steam comes out. It may take up to 30 seconds until steam comes out. Press the steam trigger and keep it pressed when you iron.
The iron leaves a shine or an imprint on the garment.	The surface to be ironed was uneven, for instance because you were ironing over a seam or a fold in the garment.
The ironing board cover becomes wet or water droplets come out of the soleplate.	Steam has condensed on the ironing board cover after a long ironing session.
There is too much steam coming out of the iron.	The default setting of the iron is the Optimal Temp setting. In this setting the iron provides a high steam output.

7 - Recycling

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



8 - Cleaning & Care

Limescale:

Due to the high amount of steam this steam generator produces, limescale tends to form inside the water tank with repeated uses. Since high amounts of limescale can affect the high-precision components inside the iron, it is important that limescale build-up be kept to a minimum.

This unit is equipped with an anti-calc filter inside the water tank, which automatically cleans the tank and prevents limescale build-up from affecting the pump and other components inside the iron.

This anti-calc filter should be replaced periodically. How often this filter should be replaced will depend on how often the iron is used and how hard the water is in the area. For information on water hardness in your area, consult your local water provider.

If large amounts of limescale are still building up inside the water tank even after filtering, this indicates the filter has stopped working. Should this occur, please replace the anti-calc filter.

NOTE: Replacement water tanks and anti-calc filters for this unit are available from our website, under the following product codes:

Water tank: T22006002

Filter: T22006001

WARNING: Never pour vinegar or other liquid cleaners for eliminating calcium into the water tank.

After ironing:

Disconnect the power supply and allow the iron to cool completely.

Empty any water left in the water tank.

Reconnect the iron to the power supply, then disconnect it again after the indicator light goes out. This dries the soleplate.

Let the iron completely cool down, then wipe flakes and any other deposits on the soleplate with a damp cloth or a non-abrasive (liquid) cleaner.

Clean the upper part of the iron and the base with a damp cloth.

Always store the emptied iron and base horizontally, on a stable surface, with a cloth protecting the soleplate.


To store the power cord, wrap it around the cord storage area on the side of the base.

WARNING:

Do not immerse any electrical part of the appliance in water such as motor units or plugs.

Please see cleaning section for further instructions.


9 - Wiring Safety for UK Use Only

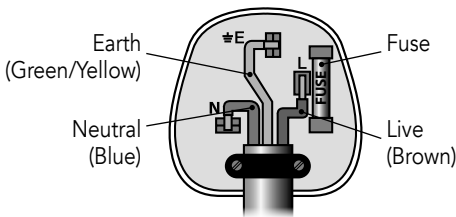

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are labelled in accordance with the following code:

Blue neutral [N] Brown live [L]
Green/Yellow [EARTH] 

Plug Fitting Details (Where Applicable).

The wire labelled blue is the neutral and must be connected to the terminal marked [N].

The wire labelled brown is the live wire and must be connected to the terminal marked [L].

The wire labelled green/yellow must be connected to the terminal marked with the letter [E].

On no account must either the brown or the blue wire be connected to the [EARTH] terminal.

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:
This appliance **MUST** be earthed!

10 - Warranty

3* | YEAR
GUARANTEE



GREAT BRITISH
DESIGN SINCE 1912

As a thank you for purchasing one of our fantastic products, we are offering you an extra 2 years peace of mind in addition to your 1 year guarantee.

To receive your extra 2 year guarantee, register your appliance online within 28 days of purchase by visiting www.towerhousewares.co.uk



This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The Following Conditions Apply:

- The product must be returned to the retailer with proof of purchase or a receipt.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit www.towerhousewares.co.uk and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.

Extended warranty is only valid with proof of purchase or receipt.

11 - Your Receipt

Affix your store receipt to this page for safe keeping.

TOWER®

over **100 YEARS** of quality

thank you!

We hope you enjoy your appliance for many years. As a thank you for purchasing one of our fantastic products, we are offering you an extra 2 years peace of mind.

*To receive your extra 2 years guarantee, register your appliance online within 28 days of purchase by visiting:

www.towerhousewares.co.uk

Should you have a problem with your appliance, or need any spare parts, please call our Customer Support Team:

+44 (0) 333 220 6066

Your warranty becomes void should you decide to use non Tower spare parts. Spare parts can be purchased from **www.towerhousewares.co.uk**

