

SENCOR®

SMW 5119WH



MICROWAVE OVEN

Translation of the original manual




SENCOR®


SMW 5119WH




A

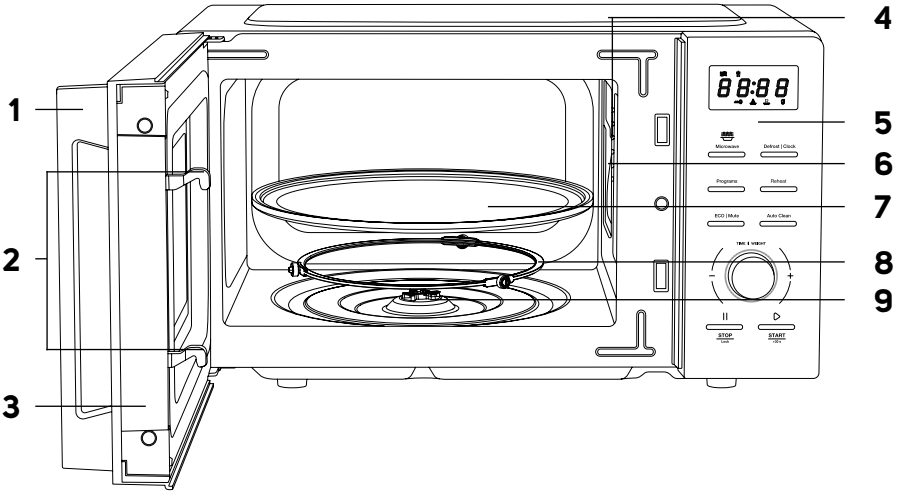

B

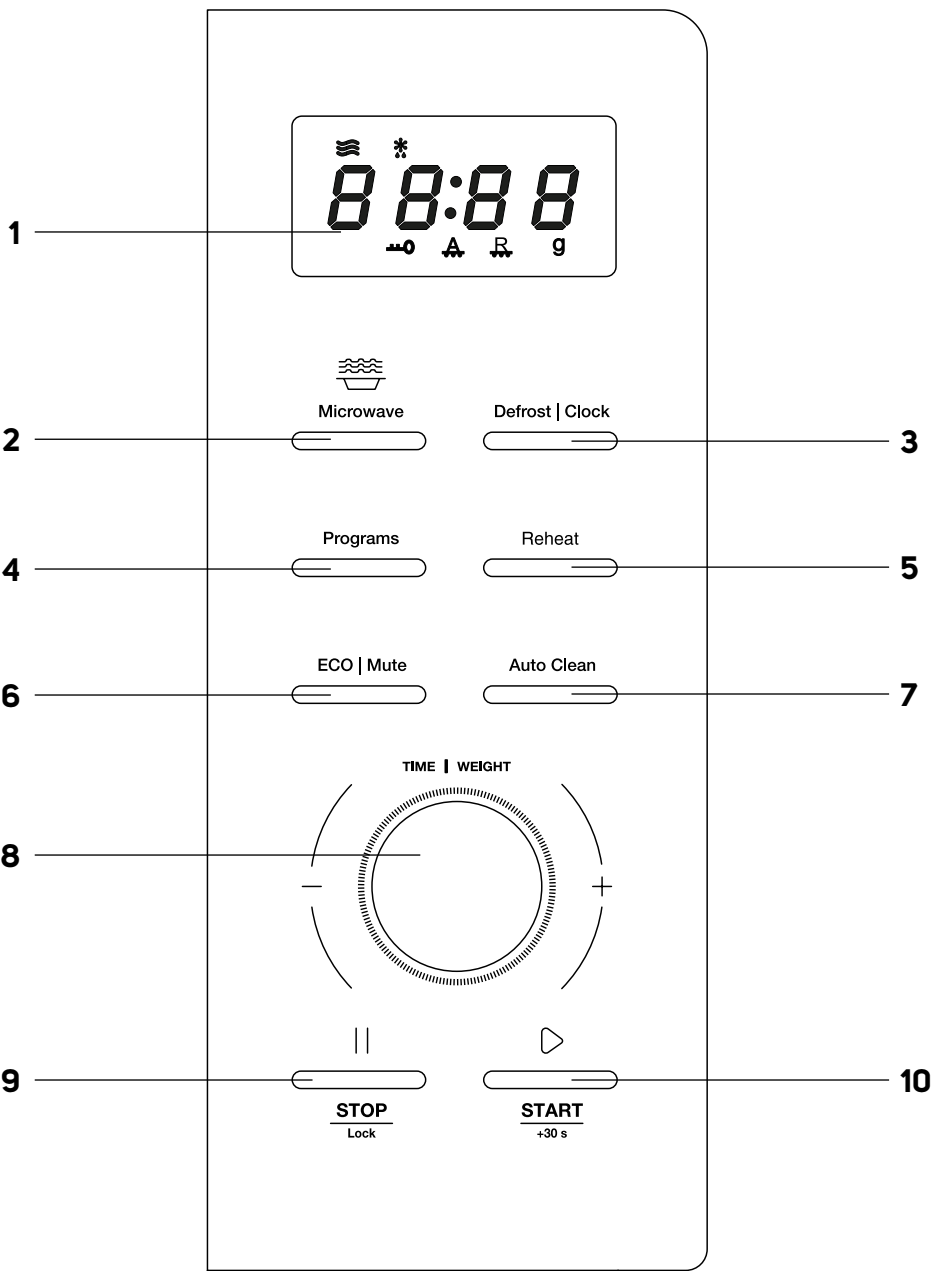

C

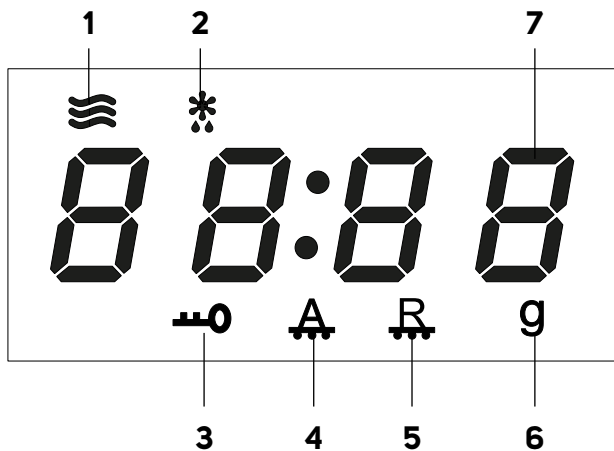

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be only used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and maintenance must not be performed by unsupervised children.
- If the power cord is damaged, have it replaced in a professional service centre to prevent the risk of injury. Never use the appliance if the power cord is damaged.
- This appliance is not designed to be controlled using an external timer switch or a remote control.



WARNING:

If the door or door seals are damaged, the oven must not be operated until it has been repaired by a qualified person.

**WARNING:**

It is dangerous for anybody other than a qualified person to carry out any repairs or maintenance whatsoever that leads to the removal of any cover providing protection from microwave energy radiation.

**WARNING:**

Liquids and other foods must not be heated in sealed containers as they are liable to explode.

- This appliance is intended for household use. It is also suitable for personal non-commercial use in spaces such as:
 - kitchenettes in shops, offices and other work environments;
 - spaces in agriculture;
 - hotels, motels and other residential facilities;
 - bed and breakfast establishments.
- To ensure adequate air circulation, there must be free space around the microwave oven. Leave at least 20 cm of free space above the upper surface of the oven and 10 cm behind its rear part and sides. Do not block any openings of the oven.
- The recommended distance from the floor is at least 85 cm.
- Do not remove the feet of the oven.
- Use only cookware suitable for use in microwave ovens.
- Metal containers for food and beverages are not allowed for microwave cooking. This does not apply if

- the manufacturer specifies the size and shape of metal containers suitable for microwave or combination cooking.
- When heating food in plastic or paper containers, check the oven occasionally to prevent ignition.
 - The microwave oven is designed for heating food and beverages. Drying food or clothing and heating of warming pads, slippers, sponges, damp textiles and similar items may lead to risk of injury, ignition or fire.
 - If you observe smoke, turn off the appliance or unplug it and keep the door closed to prevent spreading of possible fire.
 - Heating liquids in a microwave may result in a delayed boil, which one needs to keep in mind when holding the container. Always be careful when handling the beaker.
 - The contents of feeding bottles and baby food must be stirred or shaken and the temperature must be checked before consumption to prevent burns.
 - Eggs in shells and whole hard-boiled eggs should not be heated in microwave ovens as they may explode even after the microwave heating has ended.
 - Regularly clean the door and window of the oven on both sides, door seals and adjacent parts from dirt and any food residues. For cleaning, we recommend using a mild solution of neutral kitchen detergent. Remove solution residue with a cloth slightly dampened in clean water. Wipe the cleaned surface dry with a cloth.
 - Ensure that no cleaning agent residue remains on the inner side of the door. Follow the instructions in the “Cleaning and Maintenance” chapter.

- Keep the microwave oven clean. Clean it regularly according to the instructions in the “Cleaning and Maintenance” chapter and remove any food residues.
- Clean the rotating plate that may come into contact with food according to the instructions in the “Cleaning and Maintenance” section.
- Failure to keep the oven clean could lead to surface damage, which could adversely affect the lifetime of the appliance and could lead to a dangerous situation.
- Use only accessories supplied with the microwave oven or recommended by the manufacturer.
- This microwave oven is designed as free-standing and must be placed on a clean, level and stable work surface that can support the weight of the microwave oven. It must not be attached or used as a built-in appliance. The microwave oven must not be placed in a cabinet.
- The microwave oven must not be cleaned with a steam cleaner.



CAUTION: Hot surface.

Accessible surfaces can become hot during use.
Do not touch hot surface.

Additional important safety instructions for use of the appliance

- Before connecting the appliance to a power socket, make sure the voltage stated on the label matches the electrical voltage in the socket. Connect the microwave oven only to a properly grounded power socket. Do not use extension cords, multi-socket adapters or power strips.
- Before using the appliance, fully unwind the power cord.
- Do not touch the power cord or plug with wet or damp hands.
- Route the power cord so that it does not touch sharp objects, hot surfaces, open flames, does not hang over the edge of a table or work surface, etc.
- The microwave oven is intended for use only inside a building. Do not use it outdoors or expose it to outdoor environmental influences.
- Do not place the microwave oven on window sills, kitchen sink draining board or unstable surfaces. Always place it on a stable, flat and dry surface.
- This microwave oven is intended for heating and preparation of food. Use it only for purposes described in this manual.
- The microwave oven must be supervised during operation.
- Never use the microwave oven in the immediate vicinity of a bath, shower or swimming pool.
- Do not use the microwave oven for industrial or laboratory purposes.
- Do not attempt to use the microwave oven with the door open. You could expose yourself to harmful microwave radiation.
- Do not run the microwave oven when it is empty. Otherwise, overloading and damage to the microwave oven could occur.
- After heating, containers, plates, and food may be very hot. Use caution when removing items from the oven and use kitchen mitts.
- Exercise increased caution when handling heated beverages and food, as hot steam may be released.
- Do not fry food in the microwave oven. Hot oil can damage parts of the oven, cookware, or even cause skin burns.
- Before cooking, pierce foods with thick skins, such as potatoes, squash, apples. Do not prepare shellfish or crustaceans in the microwave oven.
- Before moving the oven, always make sure that there are no containers with food in the interior cavity.
- Do not use the microwave oven without a properly inserted rotating plate and travel.
- Food should never be heated by placing it directly on the rotating glass plate.
- If you are not using the oven do not leave paper materials, kitchen dishes or food inside.
- If you will not be using the microwave oven for an extended period, need to move it, store or clean it, first disconnect the power cord plug from the power socket.
- Disconnect the power cord by pulling on the plug, not the power cord. Otherwise, damage to the power cord, microwave oven or power socket could occur.
- Do not use the microwave oven if it is not working properly, if it is damaged or if it has been dropped. Any repair of the microwave oven or replacement of a damaged power cord may only be carried out by an authorised service centre to prevent a hazardous situation.
- The microwave oven does not contain any parts that the user could repair themselves.
- Do not use the microwave oven with a damaged or worn glass plate or travel. Damaged parts must be immediately replaced with new original spare parts.

Cleaning the microwave oven

- Keep the inside of the oven clean. If the oven walls are spattered with food juices, wipe them with a damp cloth. If the oven is heavily soiled, you may use a mild solution of neutral kitchen detergent.
 - Insufficient cleaning and maintenance can cause damage to the surface finish of the interior walls, which can lead to a shortened lifespan of the microwave oven. Dried food or liquids can cause unpleasant odours and the formation of unwanted microorganisms, which can have a negative impact on human health.
-

SUITABLE AND INAPPROPRIATE DISHES

- Kitchen cookware can be hot, so we recommend using kitchen mitts.
 - Use only cookware expressly marked as suitable for use in a microwave. Follow the manufacturer's instructions for that type of cookware.
 - Cookware unsuitable for microwave mode:
 - metal containers and cutlery;
 - cookware with metal decor or metal handles;
 - metal clamps (e.g. for sealing plastic bags);
 - common kitchen thermometers (unless specifically designed for microwaves);
 - melamine cookware (not heat resistant and may release harmful substances);
 - cracked, worn out or damaged cookware.
-

Sparking

- If sparking occurs inside the microwave oven, immediately stop the operation of the microwave oven and wait a moment before opening the door. Remove the dish from the microwave oven. The dish may be hot, so put on oven mitts.

Delayed boiling

- During heating of liquids, delayed boiling may occur. This is a physical phenomenon where the liquid reaches a higher temperature than its boiling point, which is usually accompanied by the formation of bubbles inside the liquid. The liquid heats up faster than bubbles form, and therefore accumulated heat stays inside the liquid. Upon the slightest movement, the liquid may suddenly boil over or splatter, which can cause serious scalding. Take extra care not to burn yourself.
- You can prevent delayed boiling by not using containers with straight sides and narrow necks; stir the liquid before placing it in the microwave oven; after completion of heating, let the liquid stand for a while and carefully stir it before removing.

The microwave oven is a Group 2 Class B device.

- Group 2 includes all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and EDM (Electrical Discharge Machining) and arc welding equipment.
- Class B equipment is equipment suitable for use in households and in establishments directly connected to a low-voltage power supply network which supplies buildings used for domestic purposes.

Prevention of household accidents

- Heated foods, hot or boiling liquids present a high risk for children, and even slight burns can be serious. Follow the basic rules for accident prevention in the household and take extra care if children are near such foods or liquids, or explain to them the risks associated with heated foods or liquids.
- If a burn or scald occurs, start rinsing the affected area with a stream of cold water and seek medical help if necessary.

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



The product meets all the basic requirements of the applicable EU directives.



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste.



This symbol warns of a hot surface.

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have removed all components of the appliance. It is recommended that you keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right to file a defect claim or the quality warranty. When transporting the appliance, we recommend repackaging it in the original box provided by the manufacturer.




 
 
 

DESCRIPTION OF THE MICROWAVE OVEN

A1 Handle	A6 Waveguide cover
A2 Safety door lock	A7 Turntable \varnothing 25.5 cm
A3 Door with viewing window	A8 Turntable roller ring
A4 LED oven light	A9 Turntable coupler
A5 Control panel	

DESCRIPTION OF THE CONTROL PANEL

B1 LED display	B7 Auto Clean button
B2 Microwave button	B8 Rotary control to set the time or weight of food
B3 Defrost Clock button	B9 STOP Lock button
B4 Programs button	B10 START +30s button
B5 Reheat button	
B6 ECO Mute button	

DESCRIPTION OF THE DISPLAY

C1 Microwave cooking symbol 	C5 Symbol for weight-based reheating 
C2 Defrost symbol 	C6 Weight symbol in grams 
C3 Child lock symbol 	C7 Clock, heating time and other information data 
C4 Automatic cooking symbol 	

INTENDED USE

- The Sencor SMW 5119WH microwave oven is designed for heating food and beverages. In addition to microwave heating and cooking, it offers 8 automatic programmes for food heating. The ECO button allows you to turn off the display and reduce power consumption to a minimum. With the Mute function, the microwave oven can be used without sound signals.

UNPACKING

- Remove the microwave oven from the packaging and remove all packaging material, fillers, protective foils, etc. Before disposing of the packaging material, make sure that you have removed all accessories.



Warning:

Check that the oven is not damaged in any way, e.g. that the oven door is not poorly fitted or dented, that the door seal is not damaged or that the hinges or door locks are not loose. If you find any damage, do not use the oven and contact a qualified service technician.

PLACEMENT

- The microwave oven must be placed on an even, stable surface that can bear its weight even with food inside.
- Do not place the oven near heat sources, in places with high humidity, or near flammable materials.
- The microwave oven is designed for use in an open space, not as a built-in. Therefore, ensure sufficient adequate clearance around the oven. Leave at least 20 cm of free space above the upper surface of the oven and 10 cm behind its rear part and sides. Do not block any openings of the oven.
- The recommended distance from the floor is at least 85 cm.
- Make sure that the power cord is not placed under the bottom part of the oven or in contact with hot or sharp surfaces.
- The power socket must be easily accessible to quickly disconnect the power cable if necessary.
- Do not use the microwave oven outdoors.



Note:

If you turn on the microwave for the first time, you may notice a slight odour and smoke. This is a normal occurrence which disappears with use. When first turning on, we recommend placing a sufficiently large glass container with 200 ml of water in the microwave oven and running it for 2–3 minutes at maximum power. Repeat if necessary. This will eliminate the odour.

EARTHING INSTRUCTIONS

- This microwave oven must be earthed. The microwave oven is equipped with a power cord, which has a ground wire with a grounding power plug. The power plug must be connected to a properly installed and earthed power socket. Earthing reduces the risk of electrical shock. In the case of a short circuit the electric current is conducted through the earthing wire. It is recommended that the oven be connected to a separate electrical circuit.



Warning:

Improperly earthed power socket may cause the risk of electric shock.



Note:

If you have any questions regarding earthing or electrical instructions, consult everything with a qualified electrician or repair technician. Neither the manufacturer nor the seller take any responsibility for any damage to the oven or injuries caused by improper electrical connections.

RADIO INTERFERENCE

- Operation of the microwave oven may cause interference with radios, televisions or similar receivers. If interference is detected, take the following measures to reduce or eliminate it.

- Clean the door and door seals.
- Move the affected receiver further away from the microwave oven.
- Move the microwave oven further away from the receiver.
- Plug the power cable of the microwave oven into a different socket so that the oven and the receiver are in a separate electrical circuit.

USING THE CORRECT COOKWARE

Cookware for microwave heating

- This general list will help you select the correct cookware.

COOKWARE	SAFE TO USE	NOTE
Low-edged baking dishes for microwave ovens	✓	Do not use them longer than 8 minutes.
Porcelain an pottery ware	✓	Porcelain and ceramic cookware including glazed cookware and bone china are suitable if they do not have any metal decor.
Disposable polyester plates	✓	Used for the packaging of some frozen foods.
Packaged ready-made meals		
• Polystyrene cups	✓	Can be used to heat foods. Overheating may cause the polystyrene to melt.
• Paper bags or newspapers	×	May ignite in the oven.
• Recycled paper or metal edging	×	May cause sparking in the oven.
Glass		
• Glassware	✓	Can be used if not decorated with metal.
• Fine glass	✓	Can be used to heat foods and beverages. Fine glass may break if suddenly heated to a high temperature.
• Preserving jars	✓	Remove the lid. Use only for heating.
Metal cookware		
• Plates	×	Can cause sparking or ignition of food in the oven.
• Metal bag clips	×	
Paperware		
• Trays, cups, napkins and kitchen paper	✓	Suitable for a short heating and cooking times, also for absorbing excess moisture.
• Recycled paper	×	May cause sparks in the oven.
Plastic ware	✓	Use only heat-resistant plastics; other plastics may lose shape or colour due to high temperatures. Do not use melamine products.
Cling film	✓	Use to maintain moisture; it should not come into contact with food. When removing, be careful of the escaping steam.

Aluminium foil	▲	Can be used in small amounts to protect parts of food from overcooking. Foil must not be crumpled or bent. If too much foil is used or if the foil is too close to the inner wall of the oven, sparking may occur.
Bags for frozen food	▲	Only if intended for cooking or resistant to high temperatures. Must not be airtight. If necessary, puncture with a fork.
Waxed paper	✓	Can be used to retain moisture in foods and prevent splattering of grease and juices.

- ✓ recommended use; ▲ limited use; × not recommended



Warning:

Use only cookware suitable for microwave heating. Follow the manufacturer's instructions for that type of cookware. Unsuitable cookware could crack. If you are unsure about its use in the microwave oven, do not use it. If the cookware shows signs of wear or is cracked, do not use it in the microwave oven under any circumstances.



Warning:

Metal cookware or cookware with metal trim can cause sparking during heating in the microwave oven. This can damage the microwave oven. Never use metal containers when microwave heating.

TIPS FOR PREPARING FOOD IN THE MICROWAVE OVEN

Microwave heating

- Place the food on a plate or in a suitable container. The size of the plate or container should correspond to the amount of food you will be heating.
- We recommend placing thicker pieces of food around the edge of the container. Conversely, place smaller or thinner pieces in the centre.
- Cover the food with a lid, or you can use cling film (suitable for use in a microwave oven). Pierce it several times to allow excess steam to escape. Covering food will retain steam, which helps the food to heat up faster. Do not heat food in closed containers.
- Do not cover food with a crust or crispy pastry. Steam could cause them to soften and lose crispness.
- Do not cover beverages.
- Set the correct cooking time. We recommend setting a shorter time and extending it if necessary. When preparing food at high temperature (power), smoke or ignition may occur.
- Regularly check the heating status and stir or turn food as needed.
- After heating is complete, thoroughly stir the food, or let it rest for a while before consumption.
- Always check the temperature of heated food before serving it to children or the elderly.

Defrosting in microwave mode

- Remove foods to be defrosted from packaging, place them on a plate or in a shallow-edged container. If frozen foods are in a container suitable for a microwave oven, remove the lid.
- Larger pieces of food take longer to defrost than smaller ones. Therefore, regularly check the defrosting status, turn individual pieces and separate them if possible.
- We recommend allowing meat, poultry or fish to completely defrost at room temperature.

- If necessary, cover smaller foods with a piece of aluminium foil. The foil must not touch the oven walls.
- If parts of the defrosted food start to cook, remove them and let them defrost at room temperature, or separate such pieces of food.
- Gradually separate minced meat into smaller pieces, which will speed up defrosting.
- We recommend placing paper kitchen towel under defrosting pastries, which will absorb excess moisture.
- After defrosting is complete, we recommend letting the food "rest" on the kitchen counter for 5 to 25 minutes. The defrosting process continues even after removal from the oven.

Cooking in microwave mode

- For cooking food, always use only cookware suitable for microwave ovens. We recommend using low and wide rather than high and narrow cookware.
- Cut food into equally sized pieces. This ensures that they cook evenly.
- Distribute food evenly in the container. Make sure that pieces do not overlap. Smaller or thinner pieces should be directed towards the centre of the container, thicker pieces towards the edge of the container.
- Regularly check how well they are done and stir or turn the food as needed.
- Foods with higher fat content, or bones, conduct heat faster. Cover these foods (at the beginning or halfway through preparation) to prevent overcooking.
- Place bacon on lean slices of meat, making the meat juicier.
- Sprinkle vegetables with a small amount of water. This will help them to cook faster.
- Season food after it is cooked.
- You can brown the surface of the food by coating it with melted butter, marinade or sprinkling it with paprika.
- After it is cooked, let the food rest for a while before consumption. The cooking process may continue even after turning off the oven.

BEFORE FIRST USE

- Wipe the inner and outer surfaces of the microwave oven with a soft sponge or cloth that you have moistened in warm water with a little neutral cleaning agent and squeezed out. Remove any cleaning solution residue with a cloth slightly dampened in clean water. Wipe dry with a clean cloth.

GETTING STARTED WITH THE MICROWAVE

- When the power plug is connected to a power socket, all the data on the display will briefly light up and a beep will sound. The time 1:00 will then light up on the display.
- We now recommend setting the clock. Follow the instructions in the "SETTING THE CLOCK" section below. The microwave oven can also be used without the clock set.
- To start the oven, press **START | +30s** button. The microwave oven is also equipped with other controls, the functions of which are described in detail in the following sections of this manual.
- The microwave oven is equipped with a safety lock and can only be started with the door closed.
- If you need to check the condition of the food as it cooks, press the **STOP | Lock button**. The operation of the microwave oven will pause. Open the door. Check the food and close the door. Press the **START | +30s** button briefly to resume cooking. To stop cooking before the set time has elapsed, press the **STOP | Lock** button twice.
- In the setting mode, press the **STOP | Lock** button to cancel settings entered incorrectly.
- If, after changing the settings, you do not close the door and press the **START | +30s** button to start the microwave, the oven will automatically switch to Standby mode within two minutes.
- The interior light of the microwave oven is lit when the microwave oven is running or when the door is opened. If the door remains open, the light will turn off automatically after 10 minutes.

- Each button press is accompanied by a beep sound.

STANDBY MODE

- Standby mode is the state in which the microwave oven is connected to the power supply, not in operation, and ready for use. In standby mode, the microwave indicates its status or displays information and allows switching to active mode.

Standby mode with end-of-operation indication

- This mode occurs after the operation ends. The display shows "End" and an acoustic signal sounds every 3 minutes to alert the user of the operation end. This mode lasts a maximum of 15 minutes or until the door is opened or the **STOP | Lock** button is pressed.

Standby mode with clock display

- The clock is permanently displayed unless Eco mode is active. In this mode, all settings can be made.

SETTING THE CLOCK

- You can set the clock after plugging the power cable into the power socket or later, as needed. The clock is set in 24-hour mode.
1. In Standby mode press and hold the **Defrost | Clock** button for at least 3 seconds. The numerical value of the clock will flash on the display.
 2. Use the turn dial to set the clock. Rotate left and right to decrease and increase time.
 3. Press the **START | +30s** button briefly to confirm. The numerical value of minutes will flash on the display.
 4. Use the turn dial to set the minutes. Rotate left and right to decrease and increase time.
 5. Press the **START | +30s** button briefly to confirm and end the clock setting mode. The set time will appear on the display.




Note:

If the power supply is interrupted, the clock will reset and you will need to set it again.

START | +30S BUTTON AND QUICK START FUNCTION

- The **START | +30s** button is used primarily to start the microwave oven.
- The quick start function is used to rapidly start microwave heating at the oven's maximum power.
- In the Standby mode with the door closed, press the **START | +30s** button to quickly start the oven for 30 seconds in microwave mode at maximum power. Every time the button is pressed again, the time is extended by another 30 seconds.
- When the microwave oven is running, press the **START | +30s** button to extend the cooking time by 30 seconds. This function is not available in the automatic cooking and weight-based reheating or weight-based defrosting modes.

MICROWAVE COOKING

- The microwave cooking function is suitable for cooking or heating food.
1. In Standby mode, press the **Microwave** button. "100P" and the microwave cooking symbol will appear on the display .
 2. Press the **Microwave Microwave** button repeatedly to set the microwave power. The set power will appear on the display.
 3. Use the rotary control to set the cooking time in the range of 10 seconds to 60 minutes. Turn left and right to decrease and increase the cooking time.
 4. Press the **START | +30s** button to start the microwave.
- If you need to check the condition of the food, briefly press the **STOP | Lock** button. Open the door and check or stir the food or place it on a plate. To continue cooking, close the door and press the **START | +30s** button; to stop cooking before the set time expires, press the **STOP | Lock** button twice.

Information on the display	Power of the microwave oven	Purpose of use
100P	100%	Suitable for rapid cooking/heating
80P	80%	Suitable for medium-speed cooking/heating
50P	50%	Suitable for slow cooking/heating
30P	30%	Suitable for defrosting food
10P	10%	Suitable for keeping food warm

- Use the rotary control to adjust the defrost time from 10 seconds to 60 minutes. Turn left and right to decrease and increase the set defrosting time.
- Press the **START | +30s** button to start the microwave.



Warning:

Some defrosted foods need to be further cooked. Do not refreeze defrosted food. This may result in food poisoning or other health complications.

WEIGHT-BASED DEFROSTING MODE

- This mode allows food to be defrosted according to the set weight. The power of the microwave and the defrosting time are automatically preset depending on the selected weight of the food. Neither the power nor the defrosting time can be changed in this mode.
- In Standby mode, press the **Defrost | Clock** button once. "dEF1", the defrost symbol and the unit "g" will appear on the display.
 - Use the rotary control to set the weight of the food to be defrosted in the range from 100 to 1500 g. Turn left and right to reduce and increase the set weight.
 - Press the **START | +30s** button to start the microwave.

Overview of weight-based defrosting mode preset times

Information on the display	Food type	Weight	Microwave power and its duration	Total defrosting time
dEF1	Frozen food	100 g	80% of power and 10% of total time	03:00
		200 g		06:00
		300 g		09:00
		400 g	30% of power and 20% of total time	12:00
		500 g		15:00
		600 g		18:00
		700 g	20% of power and 20% of total time	21:00
		800 g		24:00
		900 g		27:00
		1000 g	10% of power and 30% of total time	30:00
		1100 g		33:00
		1200 g		36:00
		1300 g	20% of power and 20% of total time	39:00
		1400 g		42:00
		1500 g		45:00



Note:

In the middle of the preset defrosting time, a beep will sound alerting you to check the food. After closing the door, press the **START | +30s** button to restart the microwave oven.

TIME-BASED DEFROSTING MODE

- This mode allows you to defrost food according to the set time. The power of the microwave oven is preset to 30% of the microwave power and cannot be changed in this mode.
- In Standby mode, press the **Defrost | Clock** button twice. "dEF2" and the defrost symbol will appear on the display.

AUTOMATIC COOKING FUNCTION

- In automatic cooking programmes, there is no need to set the cooking time or power level. You only need to select the type of food, its weight, or the number of servings.
- While the microwave is in Standby mode, press the **Programs** button to enter the automatic cooking program selection. **A.1** and the automatic cooking symbol will appear on the display.
 - Press the **Programs** button repeatedly to select one of the automatic cooking programs (**A.1** to **A.8**). The selected automatic cooking programme will appear on the display.
 - Use the rotary control to adjust the food weight or number of cups. Turn left and right to decrease and increase the food weight or number of cups. The microwave power and cooking time are pre-set depending on the program selected and the weight of food or number of cups. Neither the power of the microwave oven nor the cooking time can be changed in this mode.
 - Press the **START | +30s** button to start the microwave.

Overview of automatic cooking programs

Programme	Food type	Weight / number of cups	Preset microwave power	Preset cooking time
A.1	Potatoes	250 g	100%	07:30
		500 g		11:00
		750 g		15:00
		50 g		09:00
A.2	Pasta	100 g		14:00
		150 g		17:00
A.3	Pizza	200 g		03:00
		400 g		05:00
A.4	Popcorn	100 g		02:50
A.5	Vegetables	200 g		06:00
		400 g		09:00
		600 g		14:00
A.6	Beverages	1 cup (approx. 250 ml)		01:30
		2 cups (approx. 250 ml each)		02:10
		3 cups (approx. 250 ml each)		03:40
A.7	Meat	200 g	08:30	
		400 g	10:30	
		600 g	12:30	
A.8	Fish	200 g	07:30	
		400 g	09:30	
		600 g	11:30	



Note:

The temperature, weight and shape of the food can significantly affect the cooking time. If the result is unsatisfactory, stop the cooking process earlier or, after the automatic program ends, continue cooking after manually setting the cooking power and cooking time.

WEIGHT-BASED REHEATING FUNCTION

- This function serves to quickly and evenly heat up already cooked food. This programme is designed to ensure that the food being heated does not overheat or dry out. Set the weight of the food. The power of the microwave oven and the reheating time are preset and cannot be changed in this mode.
- In standby mode, press the **Reheat** button to enter the weight setting. 200 g and the symbol will appear on the display.
 - Use the turn dial to set the food weight.
 - Press the **START | +30s** button to start the microwave.

Overview of preset reheating function times for weight-based settings

Information on the display	Food type	Weight	Microwave power output	Preset reheating time
	Food suitable for reheating	200 g	100%	02:40
		400 g		04:20
		600 g		06:00
		800 g		08:00
		1000 g		09:00

ENDING OPERATION

- After the set time elapses, the microwave automatically ends operation and switches to standby mode with end-of-operation indication. The display flashes "End" and an acoustic signal sounds every 3 minutes. This state lasts a maximum of 15 minutes or until the door is opened or the **STOP | Lock** button is pressed. The microwave then automatically switches to standby mode with clock display, unless Eco mode is active, where it remains ready for further use.
- Press the **STOP | Lock** button once to pause the microwave oven. Pressing the **STOP | Lock** button again will stop the microwave oven before the set operating time has elapsed. Afterwards, the microwave oven will automatically switch to standby mode.

CHILD SAFETY LOCK FUNCTION

- The child safety lock function allows you to deactivate the buttons so that the oven cannot be used.
- Activating the child safety lock:** In Standby mode, press and hold the **STOP | Lock** button for at least 3 seconds. A beep will sound and the child safety lock symbol will appear on the display. All the buttons will be disabled.
- Cancelling the child safety lock:** To cancel the child safety lock, press and hold the child safety lock **STOP | Lock** button for at least 3 seconds. A beep will sound and the child safety lock symbol will go out. All the buttons will be enabled again.

ECO MODE

- In the Standby mode, briefly press the **Eco | Mute** button. The microwave will switch to the Eco mode and the display will turn off. The power consumption is reduced to a minimum.
- To deactivate the Eco mode, press any button on the control panel.

DISABLE THE SOUND SIGNAL

- The microwave oven is equipped with a sound signal. Audio signals accompany each button press, indicate successful or unsuccessful setting completion and announce the end of operation or the elapse of half the set time in weight-based defrosting mode.
- To turn off the sound signal, press and hold the **Eco | Mute** button for at least 3 seconds. The display will show U-OFF. Sound signal is turned off.
- To reactivate the sound signal, press and hold the **Eco | Mute** button for at least 3 seconds. The display will show U-ON. The sound signal is on.



Warning:

If you wish to be notified of the end of operation, the elapse of half the set time in weight-based defrosting mode, do not forget to reactivate the audio signal.

CLEANING AND MAINTENANCE

- Before cleaning, disconnect the power plug from the mains socket and allow the appliance to cool down.
- Keep the microwave oven clean. Clean it regularly according to the instructions below. Insufficient cleaning and maintenance can cause damage to the surface finish of the inner walls, which can lead to a shortened lifespan of the microwave oven. Dried food or liquids can cause unpleasant odours and the formation of unwanted microorganisms, which can have a negative impact on human health.
- Do not use abrasive cleaners, solvents, etc. to clean any parts of the microwave oven that may damage the surface. No part of this microwave oven, except the rotating plate, is dishwasher safe.



Warning:

To prevent the risk of electric shock, do not immerse the appliance, power cord or plug in water or any other liquid.

- To prevent damaging the operating parts of the oven, make sure that water does not enter the ventilation openings located on the sides of the microwave oven.



Warning:

Do not use steam cleaners to clean the microwave oven.

Cleaning the interior

- If the interior of the microwave oven becomes dirty, wipe the interior walls with a soft sponge lightly dampened with warm water. Wipe with a dry cloth. If the interior is heavily soiled, moisten the sponge in warm water with a little kitchen dish detergent. Remove any cleaning solution residue with a cloth slightly dampened in clean water. Wipe dry with a clean cloth. Do not use any sprays or abrasive cleaning agents. They may scratch the surface or leave stains or marks.
- To remove unpleasant odours from the interior of the microwave oven, mix in a deeper container one cup of water with the juice and peel of one lemon. Set the cooking time to 4–5 minutes. Then wipe the interior with a clean, dry cloth.

Cleaning the exterior and door

- Wipe the exterior and door including the seal with a soft sponge slightly dampened in warm water. Wipe dry with a clean cloth.
- If the door fogs up from the inside, wipe it with a clean and dry cloth. This is normal, especially when preparing food with a high water content.

Cleaning the control panel

- You can wipe the control panel with a slightly damp or properly wrung cloth. Wipe the cleaned surface dry.

Cleaning the rotating plate

- Remove the rotating plate and the rotating plate travel from the microwave and wash them in warm water with a little dishwashing liquid using a soft sponge. Rinse in clean water and wipe dry with a clean cloth.
- Wipe the area under the rotating plate with a soft, slightly dampened sponge. Wipe with a dry cloth.
- The rotating plate is dishwasher safe.

Cleaning after a long period of non-use

- If you have not used the microwave oven for an extended period, an unpleasant odour may have formed inside. To remove it, you can:
 - pour water into a larger glass container and add several slices of lemon. Run the oven at maximum power for 4–5 minutes.

AUTOMATIC CLEANING FUNCTION "AUTO CLEAN"

- The microwave oven is equipped with an automatic cleaning function.
- Allow the microwave oven to cool down.
 - Insert a container with approximately 250 ml of clean water into the microwave oven. You can add a few drops of lemon juice.
 - Close the door. Press the **Auto Clean** button. The display shows the message 5:00. To start the **Auto Clean** mode, press the **START | +30s** button.
 - The microwave oven starts operating in microwave mode for a duration of 5 minutes. Allow the microwave oven to complete the cleaning mode.
 - Leave the container to stand for several minutes. Carefully remove the container. Wipe the interior with a clean and dry cloth.

STORAGE

- If you are not going to use the appliance for an extended period of time, unplug it from the power socket, allow it to cool down and clean it according to the instructions in the "**CLEANING AND MAINTENANCE**" section.
- Before storing, make sure that the appliance and all accessories are clean and dry.
- Store the appliance in a dry, clean and well-ventilated place, where it will not be exposed to extreme temperatures and where it will be out of reach of children and animals.

TROUBLESHOOTING

- Before contacting an authorised service centre, check the recommendations below.

Problem	Possible cause	Solution
Microwave operation interferes with TV reception.	TV and radio reception may be disrupted during microwave operation. This is similar interference to that caused by other small appliances such as a blender, vacuum cleaner, or hairdryer.	This is normal.
Water accumulates and condensates on the door and hot air comes out of the ventilation openings.	Steam may escape from the food during cooking. Most of it exits through the ventilation openings, but some may accumulate on the door and condense.	This is normal.

Problem	Possible cause	Solution
Microwave oven cannot be started.	The power cable plug is incorrectly inserted in the power socket.	Disconnect and reconnect the plug into the socket.
	Problem with the power socket.	Check that the socket works by connecting another electrical appliance.
	Tripped circuit breaker.	Return the tripped circuit breaker to its original position.
The oven does not generate microwave energy.	The door is not properly closed.	Close the door properly.



Warning:

If the problem persists, stop using the microwave oven, unplug the power cable from the socket and contact an authorised service centre. Under no circumstances should you repair the microwave oven yourself. There are no user serviceable parts inside.

TECHNICAL SPECIFICATIONS

Rated voltage.....	230 V~
Rated frequency.....	50 Hz
Rated input power.....	1100W
Microwave output.....	700 W
Microwave frequency.....	2,450 MHz
Noise level.....	54 dB(A)
Volume.....	20 l
Diameter of the rotating plate.....	25.5 cm
External dimensions (w x d x h).....	45.6 x 35.8 x 26.3 cm
Weight.....	10.5 kg

Values provided according to Commission Regulation EU 2023/826

Off mode	
Power consumption in off mode	–
Time needed for the equipment to automatically reach off mode	–
Standby Mode	
Power consumption in stand-by mode	0.7 W (with display clock) 0.5 W (without display clock)
Time needed for the equipment to automatically reach standby mode	0 min
Networked standby mode (Wi-Fi)	
Power consumption in networked standby	–
Time needed for the equipment to automatically reach networked standby mode	–

.....

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose used packaging material at the designated municipal waste disposal site.

.....

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

Used electrical and electronic products must not be disposed of in ordinary municipal waste. To enable the proper disposal and recycling of these products, deliver them to the designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By properly disposing this product, you help preserve valuable natural resources and help to prevent potential damage to the environment and human health resulting from improper waste disposal. For more details, contact your local authority or nearest collection point. Fines may be imposed for improper disposal of this type of waste as per national regulations.

For business entities in European Union States

To dispose of electric or electronic equipment, request the necessary information from your retailer or supplier.

Disposal in other countries outside the European Union

To dispose of this product elsewhere, request the necessary information on the correct disposal method from local authorities or your retailer.

.....

Changes to text and technical parameters are reserved.

FAST ČR, a.s.
U Sanitasu 1621
CZ-251 01 Říčany
www.sencor.com
info@sencor.cz