

Safety Warnings

Boombox

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- This unit is designed for indoor, domestic use only

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/ electric fires.
- Avoid exposure to direct sunlight and other sources of heat.
- Attention should be drawn to the use of apparatus in moderate climates.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit. Do not operate the unit with wet hands, near water or other liquid.

- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Safety

- Always disconnect the unit from the mains supply before connecting/ disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket before a lightning storm.

Mains Adapter Cable

- Make sure the unit or unit stand is not resting on top of the mains adapter cable, as the weight of the unit may damage the cable and create a safety hazard.



The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

Mains Adapter

- The mains adapter will continue to draw electricity from the mains supply when plugged in the mains socket. In the interests of safety and to avoid unnecessary energy consumption, never leave the adaptor plugged in the mains socket while unattended for long periods of time. Disconnect the adapter from the power supply.



Use only power supplies listed in the user instructions.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Batteries

- Please dispose of batteries correctly by following the guidance in this manual.
- Do not expose the battery to direct sunlight or sources of excessive heat.
- Attention should be drawn to the environmental aspects of battery disposal.

Earphones

- Listening to loud sounds for prolonged periods of time may permanently damage your hearing.
- Before putting on earphones, turn the volume down then put the earphones on and slowly increase the volume until you reach a comfortable listening level.



Supervision

- Children should be supervised to ensure that they do not play with the unit.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

Class 1 Laser Product

This unit utilises a laser. Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.



- Before moving the unit, ensure the disc tray is empty.
- Always remove the disc when the unit is not in use.
- Failure to do so will risk severely damaging the disc and the unit.
- Do not stack devices, heat from other devices may affect the performance of the unit.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure the unit is fully unplugged from the power supply before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

~ AC voltage: This symbol indicates that the rated voltage marked with the symbol is AC voltage.

≡ DC voltage: This symbol indicates that the rated voltage marked with the symbol is DC voltage.

Useful Information and Licences

Currys.co.uk

All the support you need.

Whether it's a tech emergency or you need plain good advice, we're always on hand to help.
UK: 0344 561 1234
IRE: 1890818 575

Partmaster
CO.UK

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0344 800 3456 (UK customers only) Calls charged at National Rate.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

The *Bluetooth*® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by DSG Retail Limited is under license. Other trademarks and trade names are those of their respective owners.

In the unlikely event of a problem developing, please contact the store where you purchased your equipment. We continually strive to improve our products; specifications may change without prior notice.

For advice on where to purchase accessories, please contact the store where you purchased your equipment.

All trademarks are the property of their respective owners and all rights are acknowledged.

DSG Retail Ltd. (co. no. 504877)
1 Portal Way, London, W3 6RS, UK

EU Representative

DSG Retail Ireland Ltd (259460)
3rd Floor Office Suite
Omni Park SC, Santry, Dublin 9, Republic of Ireland

(Safety-JVC Boombox-200915V1)

JVC

Instruction Manual

Boombox with DAB and Cassette

RC-D327B



DAB
Digital Audio Broadcasting

 **Bluetooth®**

Contents

Unpacking	4
Product Overview	5
Front View	5
Rear View	5
Top View	6
Power Source	7
Battery Power	7
Mains Power	8
Connections	9
Using the AUX Connection.....	9
Using Headphones.....	9
Playing MP3s from a USB Device.....	10
General Operation	10
Powering ON/OFF.....	10
Selecting Modes.....	10
Adjusting the Volume.....	10
Auto Setting of the Clock.....	10
Manual Setting of the Clock.....	11
Setting the Alarm Timer	11
To Deactivate the Alarm Timer.....	11
DAB Operation	12
Full Scan	12
Manual Scan	12
Secondary Services	12
Presetting Stations	13
Recalling a Preset Station.....	13
DRC (Dynamic Range Compression)	13
Prune	13
DAB Display Modes	14
FM Operation	15
Auto Scan.....	15
Manual Scan	15
For Better Reception.....	15
Presetting Stations	15
Recalling a Preset Station.....	15
FM Display Modes	16
CD/MP3 Operation	17
Playback	17
To Pause Playback.....	17
To Stop Playback	17
Skipping to Another Track.....	17
Fast Forward and Fast Reverse	17

Selecting an Album (MP3)	17
Repeat Playback	18
Programme Setting	18
Programme Cancel	18
Cassette Playback	19
Fast Forwarding/Rewinding	19
Bluetooth® Operation	20
AUX Operation	20
Maintenance	21
Cleaning the Unit / Cassette Compartment	21
Handling Discs	21
Cleaning Discs	21
Storing Discs	21
Hints and Tips	22
Product Fiche and Specifications	23

Thank you for purchasing your new product.

 
We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.


Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.


The following items are included:

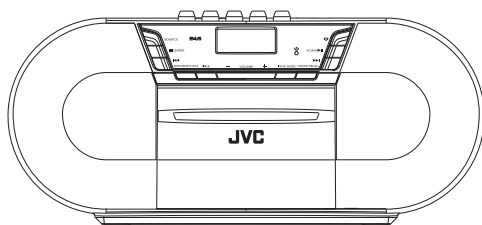

Main Unit

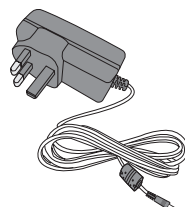 

Mains Adapter

 


Instruction Manual




- If items are missing, or damaged please contact Partmaster (UK only). Tel: 0344 800 3456 for assistance.
- If you require additional assistance:
For UK, please call our UK Call Centre on **0344 561 1234**.
For Ireland, please call our Ireland Call Center on **1 890 818 575**.

Product Overview

 Front View

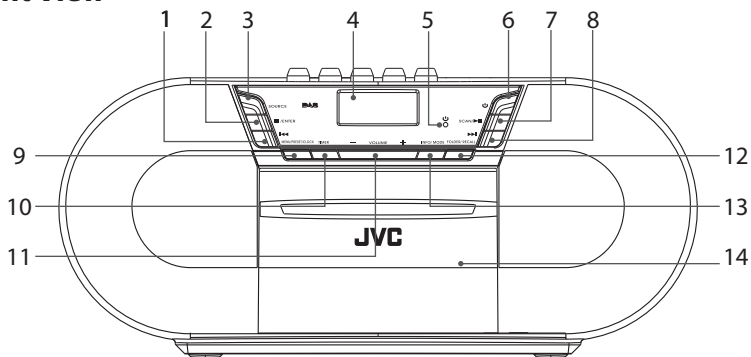


Rear View

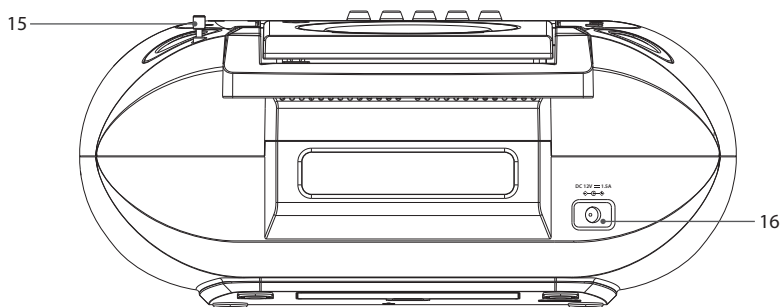 

- | | |
|--------------------------|---|
| 1. ⏮ Button | 9. MENU/PRESET/CLOCK Button |
| 2. ■/ENTER Button | 10. TIMER Button |
| 3. SOURCE Button | 11. Volume +/- Button |
| 4. Display | 12. FOLDER/RECALL Button |
| 5. ϕ Indicator | 13. INFO/MODE Button |
| 6. ϕ Button | 14. Cassette Door |
| 7. SCAN/II Button | 15. Aerial |
| 8. ⏭ Button | 16. DC 12V 1.5A  Socket |

 Top View

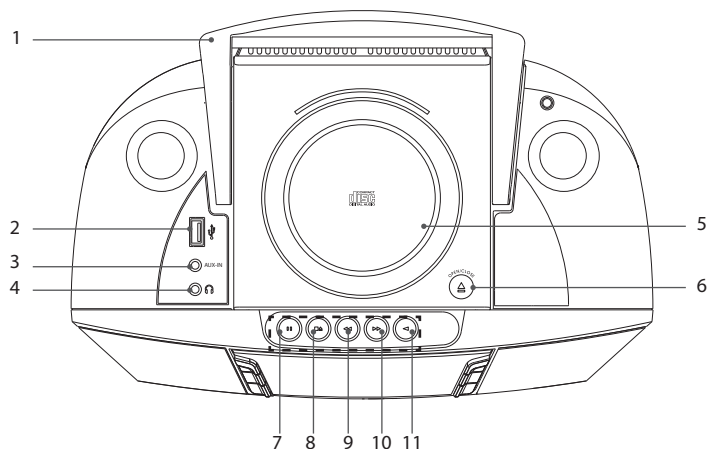

1. Handle
2. **USB** Socket
3. **AUX IN** Jack
4. **HEADPHONES** Jack
5. **CD** Tray
6. **OPEN/CLOSE** ▲ Button

Cassette Buttons

7. || Button
8. ■/▲ Button
9. ◀◀ Button
10. ▶▶ Button
11. ◀ Button



 
- Visible and invisible laser radiation. If the cover is open, do not look at the beam.
- High voltage! Do not open. You run the risk of getting an electric shock.
- The machine does not contain any user-serviceable parts.
- Modification of the product could result in hazardous radiation of EMC or other unsafe operation.

Power Source

Whenever convenient, use the mains adapter if you want to conserve battery life. Make sure you remove the plug from the unit and mains socket before inserting batteries.

Battery Power

1. Open the battery door and insert 8 batteries, type UM-2 or C-cells (not included) with the correct polarity as indicated by the "+" and "-" symbols inside the compartment.
2. Replace the battery door making sure the batteries are firmly and correctly in place. The unit is now ready to operate.

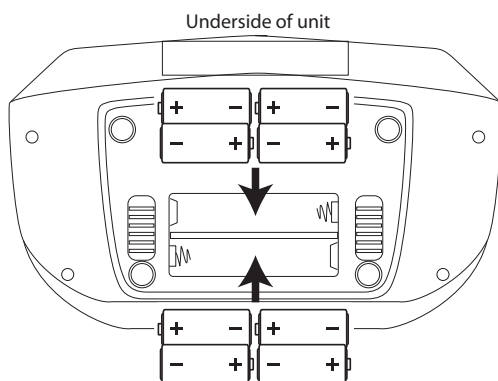

Handling the Batteries

- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause personal injury or damage to property.
- Install the batteries correctly by following the polarity (+ and -) indications in the battery compartment.
- Use only the types of the batteries which are indicated in this manual.
- Do not install new batteries with used ones and do not mix different types of batteries.
- Do not dispose of the used batteries as domestic waste. Dispose of them in accordance with local regulations.
- If you are not going to use the unit for a long time, remove the batteries to avoid damage from battery leakage and corrosion.



 
Always switch the unit off after use to conserve the battery life.

Mains Power



Always check you have completely switched off the unit, before you change or disconnect the power supply.

1. Check that the power voltage shown on the rating label located on the bottom of the unit, corresponds to your local power supply. If it does not, consult your dealer or service centre.
2. Connect the mains adapter to the **DC12V**  **1.5A**  socket and the mains socket. The unit is now connected and ready for use.
3. To switch the unit off completely, withdraw the mains adapter from the mains socket.
4. Install the unit near a mains socket where the mains plug can be easily reached.

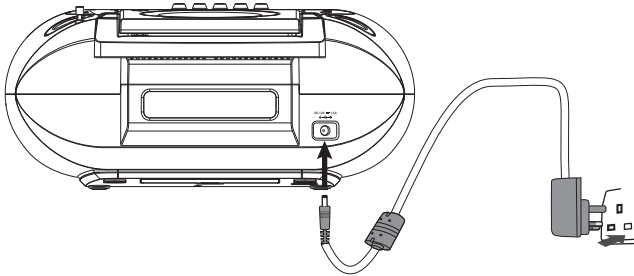


Disconnect the mains adapter from the mains socket to protect your unit during heavy thunderstorms. Children could seriously injure themselves as the free end of the adapter may still be live if only the connector is removed from the mains socket at the back of the unit.

Connections


Using the AUX Connection

 Use a 3.5mm to RCA stereo audio cable to connect the audio device's audio output sockets to the unit's **AUX IN** socket.

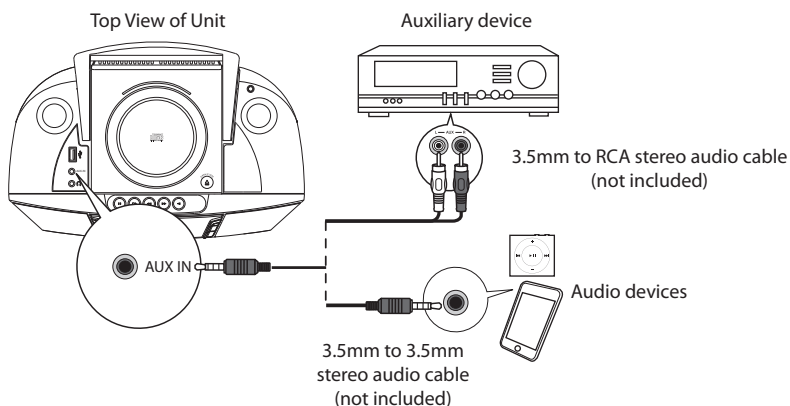

Using Headphones

 Turn down the volume before connecting the headphones. Slowly raise the volume with the headphones on until you reach your desired volume. When headphones are connected, the speakers automatically mute.

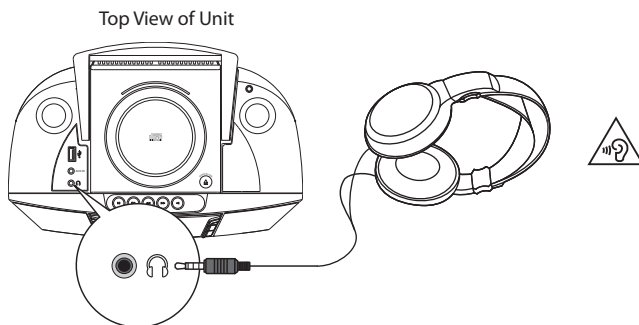


Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods.

Playing MP3s from a USB Device

When a USB device is connected to the unit, press **SOURCE** button repeatedly on the unit to select **USB** mode.

 Top View of Unit

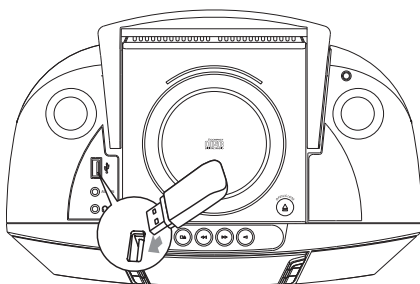

To safely remove the USB switch to another mode or turn off the power, then remove the USB.

General Operation

Powering ON/OFF

When you first connect the unit to the mains socket, the unit will be in **STANDBY** mode and the Φ indicator will light up red.

- Press the Standby Φ button on the unit to switch the unit on.
- Press the Standby Φ button on the unit to switch the unit back to **STANDBY** mode. The Φ indicator will light up red.
- Disconnect the mains plug from the mains socket if you want to switch the unit off completely.



When the unit volume is close to mute or is idle for approximately 15 minutes, it will automatically switch to Standby.

Selecting Modes

Press the **SOURCE** button repeatedly on the unit to switch between **DAB**, **FM**, **BLUETOOTH/AUX**, **TAPE**, **CD** and **USB** mode. The selected mode will show on the display.

Adjusting the Volume

- Press the **VOLUME** +/- button on the unit.

Auto Setting of the Clock

The clock can be updated automatically if you can receive a DAB signal in your location. In order to synchronise to the current local time you must leave it on the DAB station for a short period of time.

Manual Setting of the Clock

1. During **Standby** mode, press and hold **MENU/PRESET/CLOCK** button on the unit. '24HR' will flash on the display.
2. Press **◀▶▶▶** to select '24Hour' or '12Hour', then press **MENU/PRESET/CLOCK** button.
3. Press **◀▶▶▶** to set the hours, then press **MENU/PRESET/CLOCK** button.
4. Press **◀▶▶▶** to set the minutes, then press **MENU/PRESET/CLOCK** button.
5. The time is now set.



- If no buttons are pressed for 5 seconds the unit will exit clock setting mode.
- If your unit is disconnected from the mains supply the clock setting will be lost.



If you cannot receive any DAB signal, you can manually set the time. Once DAB signal is received, the time will be automatically updated.

Setting the Alarm Timer

1. Make sure that the unit is in **STANDBY** mode.
1. Press and hold **TIMER** until the display shows 'Timer On', and the hour digits flash.
2. Press **◀◀▶▶** to set the hours, then press **TIMER**.
3. Press **◀◀▶▶** to set the minutes, then press **TIMER**.
4. When On Timer Clock is set, the display will show '**Timer Off**' and the hour digits will flash.
5. Press **◀◀▶▶** to set the hours, then press **TIMER**.
6. Press **◀◀▶▶** to set the minutes, then press **TIMER**.
7. Finally press **◀◀▶▶** to select **DAB, FM, TAPE, CD** or **USB** mode, then press **TIMER**.
8. Press **◀◀▶▶** to adjust the Timer volume, and then press **TIMER** to confirm.
9. "**⏰**" icon will show on the display to indicator the timer is on.
10. The Timer setting is now complete.



- If you select **FM/DAB** mode make sure you have selected the radio station you want to be woken up to first.
- If you have selected **TAPE** mode, make sure that you have a cassette tape in the unit.
- If you have selected **CD** mode make sure you have a CD inserted into the CD tray, if you forget to insert a CD, the radio will switch on instead.
- If you have selected **USB** mode, make sure that you have connected your USB device with the unit.

To Deactivate the Alarm Timer

Press **TIMER** on the unit repeatedly to select Timer Off mode. The “🕒” indicator will disappear from the display.

DAB Operation

Press **SOURCE** repeatedly to select DAB mode.

If the unit is connected to the mains power and then switched on to **DAB** mode for the first time, the unit will automatically start scanning. The display will show '**Scanning...**'.

All the stations that have been found will be stored automatically. To explore the found stations, press the **◀◀▶▶** buttons and then press the **■/ENTER** button to confirm.

Full Scan

Press and hold the **SCAN/▶▶** button, the unit will start a full scan to search all available Band III channels. Or, press **MENU/PRESET/CLOCK** button, and then press **◀◀▶▶** to select **<Full scan>**, and then press **■/ENTER** to confirm.



Full auto scan will not replace the DAB stations in the memory. If you want to remove all the previously scanned stations, a system reset is required.

Manual Scan

As well as the auto tune function, you can manually tune the receiver. This can help you when aligning your aerial or when adding stations that were missed while auto tuning.

1. Press **MENU/PRESET/CLOCK** to display the menu.
2. Press **◀◀▶▶** to select **<Manual tune>**, and then press **■/ENTER** to select.
3. Press **◀◀▶▶** to cycle through the DAB channels, which are numbered from 5A to 13F.
4. After your desired channel number is selected, press **■/ENTER** to confirm. The display will show the multiplex.
5. The unit will start to scan.

Secondary Services

You may see a ">" symbol after the name of the station, this indicates that there are secondary services available to that station. These secondary services contain extra services that are related to the primary station. e.g. a sports station may want to add extra commentaries. The secondary services are inserted directly after the primary station in the station list.

To select the secondary station, press **■/ENTER** when the ">" appears in the display before the station name. When the secondary service ends, the unit will automatically switch back to the primary station.

DAB Display Modes

Press **INFO/MODE** to switch through the following display modes.
The information of each display mode is displayed on the lower segment of the display.

Signal Strength

This shows a slide bar to indicate the signal strength, the stronger the signal, the longer the bar will be from left to right.

Programme Type

This describes the “style” or “genre” of the programme that is being broadcast.

Ensemble Name

This displays the name of the multiplex that contains the station you are listening to. A multiplex is a collection of radio stations that are bundled and transmitted on one frequency. There are national and local multiplexes. Local ones contain stations that are specific to that area.



DAB – unlike normal radio, groups together several radio stations and transmits them on one frequency.

Frequency

This shows the frequency of the current station.

Signal Error

This displays a number showing the error rate. If the number is 0, it means the signal received is error free and the signal strength is strong. If the error rate is high, it is recommended to re-orient the aerial or re-position the unit.

Audio Bit Rate

The display will show the digital audio bit rate being received.

Time

 
This displays the current time provided automatically by the broadcaster.

Date

This displays the date provided automatically by the broadcaster.

DLS (Dynamic Label Segment)

Dynamic label segment is a scrolling message that the broadcaster may include with their transmissions. The message usually includes information, such as programme details etc.

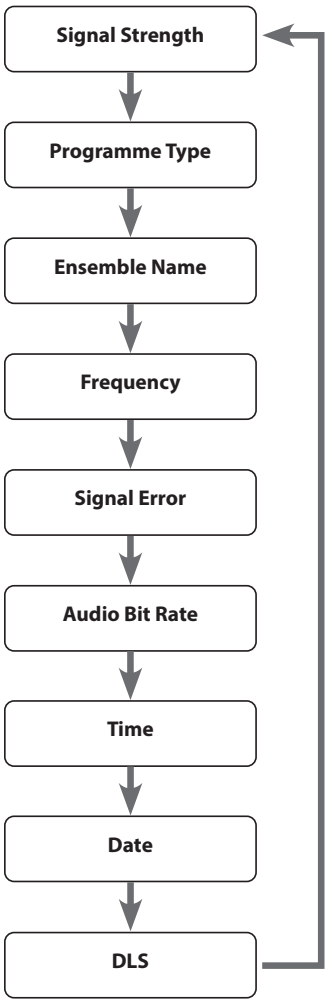

FM Operation

Press **SOURCE** repeatedly to select FM mode.

Auto Scan

Press and hold the **SCAN/II** button until the tuner starts searching for a station. Once a station has been found, the scanning will stop automatically.



The search may not stop at a station with a very weak signal.

Manual Scan

Press **II<<>>II** repeatedly until your desired frequency is reached.



With FM radio it may be necessary to fine tune each station by pressing the **II<<>>II** buttons repeatedly. Each press will adjust the frequency by 0.05MHz. If reception is still poor adjust the position of the aerial or try moving the radio to another location.

 
For Better Reception

Fully unwind the aerial. Extend the aerial and place it in the position that offers the best sound reception.

Presetting Stations

You can store up to 10 of your favourite FM stations to the memory. This will enable you to access your favourite stations quickly and easily.

1. To store a preset, you must first be listening to the station that you would like to save, press and hold **MENU/PRESET/CLOCK**. The display will show '**Preset Store <1: Empty>**'.
2. Press **II<<>>II** to select your desired preset station number and then press **■/ENTER** to confirm.
3. The station will be stored and the screen will then show '**Preset # Stored**'.

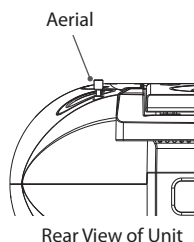

Recalling a Preset Station

1. Once you have saved a station to one of the preset buttons, you can recall it by pressing **FOLDER/RECALL**.
2. Press **II<<>>II** to select your desired preset station number.
3. Press **■/ENTER** to confirm the selection.

 


The stored stations will be saved into the memory and power off will not erase it. Storing a new station into a preset location will erase the previously stored station in that location.

FM Display Modes

Press **INFO/MODE** to switch through the following display modes.
The information of each display mode is displayed on the lower segment of the display.

- Radio Text**
This displays a station description.
- Programme Type**
This describes the “style” or “genre” of the programme that is being broadcast.
- Station Name**
When an RDS station is received, the name of that station will be displayed.
- Audio Type**
This displays if the station being received is in mono or stereo.
- Time**
This displays the current time provided automatically by the broadcaster.
- Time / Date**
This displays the date provided automatically by the broadcaster.

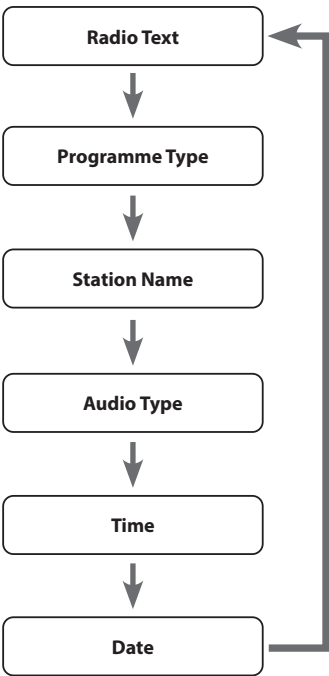

CD/MP3 Operation



- CD-ROM, CD-I, CDV, VCD, DVD or computer CDs are not possible for playback.
- CDs encoded with copyright protection technologies by some record companies may be unplayable by this unit.

Press the **SOURCE** button repeatedly to select **CD** mode.

Playback

1. Press the **OPEN/CLOSE** button at the top of the unit and the disc tray will open automatically.
2. Place the CD/MP3 disc with the label side up into the CD compartment, and then press **OPEN/CLOSE** to close the door.
3. If there is no disc or the disc can't be read, '**No Disc**' will show on the display.
4. The total number of tracks will display on the display, then press **SCAN/▶||** to play the first track of the CD/MP3 disc automatically.

To Pause Playback

1. Press **SCAN/▶||** to pause the playback. '**PAUSE**' will show on the display.
2. To resume playback, press **▶||** again.

To Stop Playback

Press **■/ENTER** to stop playback.

Skipping to Another Track

- Press **◀◀** to skip to beginning of the current track or the previous track.
- Press **▶▶** to skip forward to the next track.

Fast Forward and Fast Reverse

- Press the **◀▶▶** buttons to fast backward or forward on the current track.
- To resume playback, release the **◀▶▶** buttons.

Selecting an Album (MP3)

Press **FOLDER/RECALL** to select an album when playing an MP3 CD.

Repeat Playback

For CD Mode

1. Press **INFO/MODE** once, '**Rep1**' will show on the display. The CD will play the current track repeatedly.
2. Press **INFO/MODE** twice, '**RepA**' will show on the display. The CD will play all tracks repeatedly.
3. Press **INFO/MODE** three times, '**Rand**' will show in the display. The CD will play all tracks randomly.
4. Press **INFO/MODE** once more and the repeat function will turn off.

For MP3 Mode

1. Press **INFO/MODE** once, '**Rep1**' will show on the display. It will play the current file repeatedly.
2. Press **INFO/MODE** twice, '**RepF**' will show on the display. It will play all files in the current folder repeatedly.
3. Press **INFO/MODE** three times, '**RepA**' will show on the display. It will play all files repeatedly.
4. Press **INFO/MODE** four times, '**Rand**' will show in the display. It will play all files randomly.
5. Press **INFO/MODE** once more and the repeat function will turn off.

Programme Setting

The user can program up to 20 tracks in CD mode or in MP3 mode in any desired order.

1. Make sure the disc is not playing.
2. Press **MENU/PRESET/CLOCK** to enter programme mode.
3. Press the **◀◀▶▶** buttons to select the track that you want to preset.
4. Press **MENU/PRESET/CLOCK** to confirm the track.
5. Repeat steps 2-4 to program more tracks. Once it is completed, press the **SCAN▶▶** button to start playback of the programmed tracks.

Programme Cancel

Press **■/ENTER** twice, or open the CD tray door and close it again to erase the memory.

Cassette Playback

1. Press **SOURCE** button repeatedly to select **TAPE** mode.
2. Press the **■/▲** button to open the cassette door. Insert a cassette and close the cassette door.
3. Press the **◀** button to start playback.
4. To pause playback, press the **||** button. To resume playback, press the **▶** button again.
5. To stop the tape, press the **■/▲** button.

Fast Forwarding/Rewinding

1. Press the **◀◀/▶▶** buttons until you reach your desired passage.
2. Press the **■/▲** button to stop fast forwarding/rewinding.



- The keys are automatically released at the end of a tape and the unit is switched off (unless the **PAUSE** mode has been activated).
- During fast forwarding/rewinding, the key will not be released at the end of a tape. To switch off the set, make sure the cassette keys are also released.

Bluetooth® Operation

Pairing the unit with a Bluetooth® device to listen to music:

1. Press the **SOURCE** button repeatedly to select **Bluetooth** mode. "**BLUETOOTH**" will show on display.
2. The unit will enter pairing mode, and then "**Pairing**" will flashing on the display. After hearing a beep tone, you may start pairing.
3. Activate your Bluetooth® device and select the search mode.
4. Select **RC-D327B** and enter "**0000**" for the password if necessary. "**Connected**" will show on display.
5. To disconnect the Bluetooth® function,
 - Switch to another function on the unit or disable the function from your Bluetooth® device. The unit will make a beep sound.
 - Press and hold **SCAN/II** button.

If your Bluetooth® device supports A2DP, play music via your device.

- To pause/resume playback, press **SCAN/II**.
- To skip to a track, press **II<>>II**.
- Press **Volume +/-** button to increase or decrease the volume.



- The operational range between the unit and the device is approximately 8 metres.
- If the signal strength is weak, your Bluetooth® receiver may disconnect, but it will re-enter pairing mode automatically.
- Compatibility with all Bluetooth® devices is not guaranteed.
- Make sure no cable is inserted in the **AUX IN** socket before or when using the **BLUETOOTH** mode.
 - If a cable is inserted in the **AUX IN** socket, you cannot select **BLUETOOTH** mode.
 - If a cable is inserted in the **AUX IN** socket while using the **BLUETOOTH** mode, the **BLUETOOTH** mode will be disconnected and changed to **AUX** mode.

AUX Operation

There is **AUX IN** socket located at the top of the unit. Analogue audio sound signals from other sources can be connected to the unit through the socket.

1. Connect to another audio device using the **AUX IN** socket via a 3.5 mm stereo audio cable.
2. While in the **ON** mode, press the **SOURCE** button repeatedly to select **AUX** mode.
3. Press **Volume +/-** button to adjust the volume to your desired level.
4. In **AUX** mode, operate your audio device directly for playback features.

Maintenance

Cleaning the Unit / Cassette Compartment

 


Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray an aerosol at or near the unit.
- Use a soft brush to brush off any dust or dirt from the cassette compartment heads.

Handling Discs

- Do not touch the playback side of the disc.
- Do not attach paper or tape to the disc.

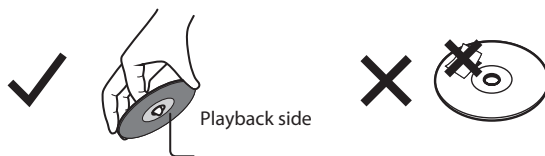

Cleaning Discs

- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.



- If you cannot wipe off the dust with a cloth, wipe the disc lightly with a slightly moistened cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray. They may damage the disc.

Storing Discs

- Do not store discs in places subjected to direct sunlight or near heat sources.
- Do not store discs in places subjected to moisture and dust such as a bathroom or near a humidifier.
- Storing discs vertically in a case, stacking discs or placing objects on discs outside of their cases may cause warping.

Hints and Tips

Problem	Description
Cassette	
Poor cassette sound quality	• Dust or dirt on the heads, etc. Clean cassette compartment parts, see Maintenance. • Use of incompatible cassette types (METAL or CHROME). Only use NORMAL (IECI) for recording.
CD	
The disc does not play	• There is no disc inside the unit ("NO DISC" appears on the display). • Insert the disc correctly with the label side facing up. • Clean the disc. • PAUSE mode may be activated, deactivate it. • A non-valid disc has been inserted. • Condensation may have formed inside the unit due to a sudden change in temperature. Wait about an hour for it to clear and try again.
Disc skips	• Make sure the unit is on a secure spot. Vibrations or jarring can cause the disc to skip.
File from Media storage device does not play	• Check the file format. • This product only supports MP3 File formats.
Radio	
Desired station not found	• Weak signal. Use the Manual Tune function.
Bluetooth®	
I cannot find "RC-D327B" on my Bluetooth® device	• Ensure the Bluetooth® function is activated on your Bluetooth® device.



If any functional abnormality is encountered, unplug the unit from the mains socket and reconnect it again.

Product Fiche and Specifications

Brand		JVC
Model		RC-D327B
Bluetooth®	Bluetooth® Version	5.0
	Maximum transmitted power	4 dBm
	Frequency band	2402 - 2480 MHz
Output Speaker Power		2 W RMS × 2
Standby Power		< 1W
Frequency Response		50 Hz - 16 kHz
Speakers Total Impedance		4 Ω
Disc Format		CD, CD-R, CD-RW, MP3
Frequency Range		FM: 87.5 – 108 MHz DAB: 174.928-239.2 MHz
Net Weight		1.86 kg
Dimensions		340 mm (W) × 227 mm (D) × 155 mm (H)

Mains Adapter

Manufacturer's name and address	Shenzhen Guijin Technology Co., Ltd. 301, No. 72, Songxin Industrial, Hongxing Community, Songgang Street, Baoan, Shenzhen, 518105, P.R. China
Model Number	AK18WG-1200150B
Input Voltage and Frequency	100-240 ~50/60 Hz 0.5A
Output Voltage	DC 12.0 V
Output Current	1.5 A
Output Power	18.0 W
Average Active Efficiency	85.1%
Efficiency at Low Load (10%)	76.5%
No-Load Power Consumption	0.09 W

Features and specifications are subject to change without prior notice.

Declaration of Conformity



Hereby, DSG Retail Ltd., declares that this product is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: **<https://www.teamknowhow.com>**

Click on SEARCH and enter the model number.

For Help and Support Call

UK: 0344 561 1234

Ireland: 1890 818 575

The product is distributed and warranted exclusive by DSG Retail Ltd.

"JVC" is the trademark of JVC KENWOOD Corporation,
used by DSG Retail Ltd. under license.

IB-RC-D327B-201006V5