

材料：105g双铜纸-彩色印刷

80.00 mm

100.00 mm

T&G

WIRELESS

T461N

使用说明书




基本参数

●无线规格：V5.3
●支持无线协议：支持L2CAP/A2DP/AVRCP，用来接收立体声音频信号，通过协议可以控制音频发射端的上下曲操作；支持HSP/HFP(Handsfree profile)，具有免提功能，可以进行语音通讯。
●无线传输范围：10M
●音频性噪比：≥90db
●电池容量：约3600mAh
●内置电压：3.7V
●正常音量播放：3H
●喇叭规格：Ø52mm *2
●喇叭功率：4Ω/10W*2
●频率响应：120Hz-20KHz
●尺寸：200x101x100mm
●单机重量：约770g
●充电电压：DC 5V/2A
●充电时长：3H

功能特点

1、采用先进的无线音频解码芯片，支持无线设备连接；
2、支持FM收音，可直接搜索收听区域的电台；
3、音色柔和清晰有动感，各层次分明；
4、直读TF卡和U盘；
5、无线接收距离远可长达10米；
6、支持LINE IN音频输入，为你提供电脑音箱功能；可直接连接手机/平板电脑/及电视无线配对播放音乐。
7、无线模式无连接，10分钟转时钟模式；
8、支持TWS；
9、支持时钟、闹钟；

功能指示

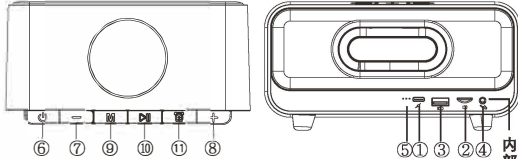

1. Type-c充电接口。
2. TF卡输入接口：TF卡插入时可解码MP3/WMA/WAV/FLAC/APE格式的音频播放。
3. U盘输入接口：U盘插入时可解码MP3/WMA/WAV/FLAC/APE格式的音频播放。
4. 3.5LINE IN 音频输入口。
5. 指示灯：电池充电指示红色（充电常亮，充满灯灭）。
6. 电源键：长按开关机，双击断开或回连蓝牙。
7.在音乐的模式下，短按为“上一曲”，长按为“音量减”；FM模式下短按为上一电台，长按为“音量减”；
8.在音乐的模式下，短按为“下一曲”，长按为“音量加”；FM模式下短按为下一电台，长按为“音量加”；
9.音乐模式下（TF卡、U盘、无线、FM、时钟、Line in），短按为功能模式切换。
TWS: 两台音箱同时在开机无线状态且都没有连接手机，长按其中一台音箱的M键2-3S听到提示音且其中一台按键灯没有闪烁即连TWS成功，再连接手机即可。

时钟亮度设置: 双击M键可设置时钟亮度（2级-3级-0级-1级-2级循环，调至0级时开机默认2级），亮度越低待机时间越长。
10.音乐的模式下（TF卡、U盘、无线、Line in），短按为播放/暂停”；
在FM模式下短按为自动搜索电台、在搜台过程中短按一下为取消往后自动搜索电台；
在无线模式并配对手机情况下，有电话接入时短按一下为免提接听，再短按一下为挂断电话， 双击为重拨电话；
11. 闹钟/时钟设置按键



双击

闹钟音量1-5级循环设置
(默认音量为1级)

短按

SET1/SET2/SET1和SET2循环设置

长按

设置时钟(通过+ -键调整时间)/
完成闹钟设置/退出响铃设置

设置时钟时间：在点亮闹钟图标S1和S2或没有闹钟图标点亮时，长按闹钟键，再通过+ -键调整时钟时间，短按闹钟键切换时间的时钟和分钟。在点亮闹钟图标S1或S2.长按闹钟键，再通过+ -键调整闹钟时间，短按闹钟键切换闹钟时间的时钟和分钟。设置成功后等待10秒会自动保存设置数据，或长按此键保存设置数据。
短按任意退出响铃，时钟时间同步需手机支持同步功能。

备注：

-FM模式插入音频线收音效果更好。
-音频输入口后面的按键是复位键。
-U盘(32Gmax)和TF(32Gmax)卡用(FAT32方式格式化)。

M

T&G

WIRELESS

TG461

USER MANUAL




Product specifications:

●Wireless：V5.3
Support: L2CAP/A2DP/AVRCP, can receive AUDIO signal and control the AUDIO device.
Support HSP/HFP(Handsfree profile), with HANDS-FREE functions.
●Wireless transmission range: 10M
●SNR: ≥90db
●Battery: 3.7V/3600mAh
●Normal volume playing time: 3H
●Speaker driver: Ø52mm * 2
●Speaker Power: 4Ω/10W * 2
●Frequency response: 120Hz-20KHz
●Unit size: 200*101*100mm
●Unit weight: about 770g for engineering machines
●Charging: DC 5V/2A
●Charging time:about 3H

Product Feature:

1.International advanced wireless chip and circuit design techniques, support wireless devices.
2.With FM function, can search radio station broadcast automatically.
3.With Hi-Fi speaker, to make sure the clear and bright sound.
4.Support Micro SD card and USB card, play MP3 format audio.
5.The wireless working distance is 10 meters.
6.With AUX line in, can directly connect the outside devices, for example, tablet PC/TV/cell phones.
7.Wireless mode without connection, 10 minutes to clock mode;
8.Support TWS.
9.Support clock and alarm clock.

Function indication

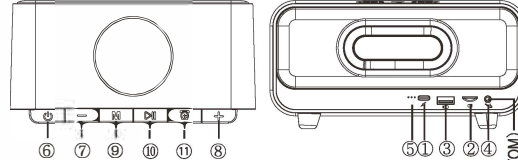

1.Type-C charging interface.
2.TF slot: It can decode and play MP3/WMA/WAV/FLAC/APE format audio when put TF card into the slot.
3.USB slot: It can decode and play MP3/WMA/WAV/FLAC/APE format audio when put the USB card into the slot.
4.AUX line in slot: Use the Mini 3.5 head input through outside devices.
5. Indicator lights: The battery charging indicator is red (constantly on during charging and off when fully charged).
6. Power key: Press long for power on /power off, double click to disconnect or reconnect Wireless.
7. When play music, Press short for last song, long press to turn down the volume; In FM mode, Press short for the previous station, long press to turn down the volume;
8. When play music, Press short for last song, long press to turn down the volume; In FM mode, Press short for the last station, long press to turn down the volume;
9. When play music, short press to switch mode(TF card, U disk, wireless, FM, clock, Line in),
TWS: Two speakers are wireless at the same time and are not connected prompt sound and one of the button lights does not flash, then connectthe TWS, and then connect the phone. Clock brightness setting: Double-click M to set the brightness of the clock (level 2-3-0-1-2 cycle,

and default level 2 when adjusted to level 0). The lower the brightness, the longer the standby time.
10. When play music,(USB card/TF card/Wireless/line in), short press for "play/pause".
In FM mode, press short to search station automatically, press again to stop searching.
Under wireless mode with mobile paired, when call coming, press short to answer a call hands-free, press again to hand up, press twice to ring up a call
11. Alarm clock / clock setting button



DOUBLE CLICK

set the alarm volume 1-5 cycle, default level 1.

SHORT PRESS

SET1/SET2/SET1 AND SET2 Switching

LONG PRESS

Set the clock (adjust the time by +-)
Complete the alarm Settings/exit the ring Settings /

Setting clock time: When the alarm icon S1 and S2 is lit, or when no alarm icon is lit, long press the alarm button, then adjust the clock time using the + and - buttons. Short press the alarm button to switch between the clock and minute of the time. When the alarm icon S1 or S2 is lit, long press the alarm button, then adjust the alarm time using the + and - buttons. Short press the alarm button to switch between the clock and minute of the alarm time. After setting the clock or alarm, it will be saved automatically after 10 s, or you can long-press it again to save the setting.
The alarm clock can be short press any key to exit the ring; Automatically synchronize the time of the phone after connecting the phone (the phone needs to support time synchronization).

Remarks:

-FM mode inserted audio line radio effect is better;
-The key behind the audio input port is the reset key.
-U disk (32Gmax) and TF (32Gmax) cards with (formatting in FAT 32 mode).

FCC warning statements:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.