

**MODEL**  
**GGSBFCH56W**

**V 1.1 | 0626**



# **User Manual**

**Hot & Cool Bladeless  
Circulation Fan**

**SÔLT**

## Welcome

Congratulations on purchasing your new Bladeless Circulation Fan! The Sôlt brand is proudly distributed within Australia by Residentia Group Pty Ltd.

### Residentia Group

—  
Head Office.  
165 Barkly Ave  
Burnley  
Victoria 3121  
Australia  
—  
ACN.  
600 546 656  
—  
Online.  
[residentia.group](http://residentia.group)

Please refer to the warranty card at the rear of this manual for information regarding your product's parts and labour warranty, or visit us online at [www.residentia.group](http://www.residentia.group)

At Residentia Group, we are customer obsessed and our Support Team are there to ensure you get the most out of your appliance. Should you want to learn more about your Fan features, and importantly taking care of your appliance when cleaning, our Support Team are here to help.

You can use our online Support Centre at anytime by visiting <http://support.residentiagroup.com.au>, or you can contact us via calling us on 1300 11 HELP (4357).

### Sôlt

—  
Online.  
[www.solt.house](http://www.solt.house)  
—  
Instagram.  
[/solt.house](https://www.instagram.com/solt.house)  
—  
Facebook.  
[/solt.appliances](https://www.facebook.com/solt.appliances)

It is important that you read through the following use and care manual thoroughly to familiarise yourself with the installation and operation requirements of your appliance to ensure optimum performance.

Again, thank you for choosing an Sôlt appliance and we look forward to being of service to you.

Kind Regards,  
The Residentia Team

|                 |           |                                          |
|-----------------|-----------|------------------------------------------|
| <b>Contents</b> | <b>2</b>  | <b>Welcome</b>                           |
|                 | <b>4</b>  | <b>Important Safety Warnings</b>         |
|                 | <b>6</b>  | <b>Operating Instructions</b>            |
|                 | <b>8</b>  | <b>Battery Installation &amp; Advice</b> |
|                 | <b>9</b>  | <b>Troubleshooting</b>                   |
|                 | <b>10</b> | <b>Maintenance and Cleaning</b>          |
|                 | <b>11</b> | <b>Technical Specifications</b>          |
|                 | <b>12</b> | <b>Purchase Details</b>                  |
|                 | <b>14</b> | <b>Warranty Information</b>              |

## Customer Care

---

Sôlt recommends the use of original spare parts. When contacting our customer service team, please ensure that you have the following information at hand (which can be found on your appliances' rating plate).

- Model Number
- Serial Number

# Important Safety Warnings

## SAFETY INSTRUCTIONS

- Before using the appliance, carefully read the instructions in this manual.
- The manufacturer is not responsible if an incorrect installation and use causes injuries and damages.
- Always keep the instructions with your appliance for future reference.
- To avoid the risk of fire, electric shock, and personal injury, you must strictly follow these safety requirements and any relevant Australian electrical regulations.

**WARNING:** To prevent any damages to your and others' life or property, you have to follow the safety notes.

## GENERAL USE & ENVIRONMENT

- Indoor Use Only: This product is only suitable for dry, indoor environments and must not be used outdoors.
- This appliance is intended to be used in household and other residential type of environments only.
- Do not use the appliance unless fully assembled with the base securely attached.
- Do not place the fan on uneven surfaces, carpet edges, bedding or unstable flooring where the appliance may tip over.
- Water Hazards: Do not use this heater in the immediate surroundings of a bath, a shower, or a swimming pool. Never immerse the machine in water.
- Safe Placement: Always use this heater on a horizontal and stable surface. It is prohibited to use it in places where hanging objects are likely to fall, or on unstable surfaces where it can easily be knocked over.
- Clearances: Keep the heater more than 1.5 metres away from any fire source or ignition source, and avoid direct sunlight.
- **WARNING: Fire Risk:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 metre from the air outlet.
- Hazardous Areas: Do not use the fan near inflammable, explosive, heated, easily deformed, discoloured, or deteriorated objects. It is also prohibited to use it in places with severe dust.
- Animals & Plants: It is strictly forbidden to use this machine as a heating or incubation device for animals and plants.

## CHILDREN & VULNERABLE PEOPLE SAFETY

**WARNING:** Risk of suffocation, injury or permanent disability.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children.
- The remote control contains batteries. Keep batteries away from children. Swallowing batteries may result in serious injury or death.

## INSTRUCTIONS FOR SAFE OPERATION

- Do Not Cover: For heaters marked "Do not cover", you must never cover the heater to avoid overheating and fire hazards.
- **WARNING: Small Rooms:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- Burn Risk: To avoid burning, do not let exposed skin directly touch the surface of the air outlet while the heater is running.
- Foreign Objects: It is strictly prohibited to insert fine wire or any other foreign matter into any pore of the machine to avoid electric shock.
- Timers & Programmers: This product must not be used with an external program, timer, or any other device that connects the power automatically, as this creates a fire hazard if the machine is covered or improperly placed.
- Removing Guards: Ensure that the fan is switched off from the supply mains before removing any guards.
- This appliance must be used in accordance with Australian household electrical safety expectations.
- Never insert fingers, pencils, or any other foreign object through the grille when fan is running.
- Disconnect fan when moving from one location to another.
- Be sure fan is on a stable surface when operating to avoid overturning.
- Do not use outdoors, in bathrooms, near open windows during rain, or in damp environments.
- Never insert objects into air outlets.
- Disconnect before cleaning, moving or storage.
- Do not operate with a damaged cord or plug.
- Place on a stable, level surface.
- Do not use with external speed controllers or timers unless supplied with the product.

## INSTALLATION

- Remove all the packaging.
- Do not assemble or use a damaged appliance.
- Keep packaging away from children and dispose of electrical products through local e-waste collection facilities.

## ELECTRICAL CONNECTION

**WARNING:** Caution, risk of fire and electrical shock!

- DO NOT use the fan near a window, rain may create electrical hazard.
- Operate from a 220V~, 50Hz power supply.
- If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- To ensure your safety, power plug must be inserted into an earthed three-pole socket. Check carefully and make sure that your socket is properly and reliably earthed.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- Before plugging the unit in, ensure the rated voltage marked on the product matches your home's power supply.
- The heater must not be located immediately below or pressed against a power socket. It must be equipped with a certified fixed socket that matches the rated working current of the plug. Using mobile multi-purpose sockets (power boards) is strictly prohibited, as is sharing the socket with other high-power electrical appliances.
- Cord Management: Do not pull directly on the power cord to move the unit. When in use, the power cord should be placed behind the body; placing it in front will cause it to overheat, damage the cord, and cause safety accidents.
- Turning On/Off: Do not plug or unplug the power cord to turn the machine on and off; always use the power switch.
- Loose Plugs: If the plug comes loose from the socket or becomes too hot, consult a qualified electrician to replace the wall socket.

## MAINTENANCE & CLEANING

**WARNING:** Risk of injury or damage to the unit.

- Prior cleaning unplug the fan.
- Do not disassemble or open the rotor guard to clean the rotor blades.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- Clean the appliance with a moist soft cloth.  
Only use mild soaps and thoroughly remove soap film with a dry cloth.
- Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- Do not use gasoline, thinner or similar products as a cleaner.
- Do not allow water or any other liquid into the motor housing or interior parts.

**WARNING:** Only authorised technicians can carry out repairs.

**Note:** Your appliance requires little maintenance. If you are experiencing issues, do not try to resolve the issue or fault by yourself. If you appliance requires maintenance:

- Power off the appliance using the Power button.
- Switch off the appliance at the power outlet and remove the plug.
- Contact our customer service team.

## PRODUCT DISPOSAL

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Dispose of used batteries at a safe disposal drop off.

 
# Operating Instructions

## PRODUCT OVERVIEW

1. Air Outlet
2. Fan Body
3. Air Intake
4. LED Screen / Touch Key
5. Base

Included by not shown:

- Remote Control
- Power Cord

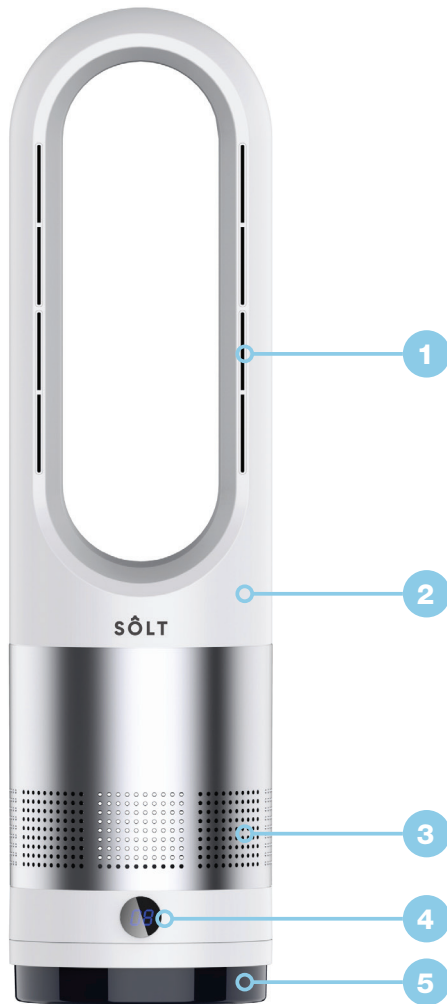

## CONTROL FUNCTIONS

- **Start-Up:** Plug it in at the wall. An alert will sound indicating that the unit has entered standby mode with the digital screen turned off (black).
- **Cool Mode:** While in standby, press the touch key to turn on cool mode. After a power cut, it defaults to speed level 5. Otherwise, the fan remembers the last speed setting you used.
- **Adjusting Cool Speed:** Press the touch key to cycle through speed levels 1 to 8.
- **Heating Mode:** From standby, press and hold the touch key for 1 second. The digital screen will flash, indicating you are in heating mode.
- **Adjusting Heat Speed:** In heating mode, press the touch key to cycle through heating gears 1 to 3.
- **Turning Off & Cool Down:** Press and hold the touch key while running to shut down.

 
**IMPORTANT:** If you were using the heater, the internal heating tube will keep running at a low speed for 30 seconds to safely cool down. Do not unplug the power cord from the wall during this cool-down phase!

- **Auto-Dimming Screen:** If you haven't pressed anything for 30 seconds while the fan is running, the digital display will automatically turn off.
- **Tilt Safety (Dumping Protection):** If the fan accidentally gets knocked over while in heating mode, it will automatically shut off the heat. In cool mode, tipping over has no effect.


**Note:** The images in this user manual are for explanatory purposes only. Your Fan may appear slightly different.

## REMOTE CONTROL OPERATION

1. **Power:** In standby, press the power button to start cool mode. Press again to return to standby. First time use defaults to speed 5; afterwards, it remembers your last setting.
2. **Cool Mode:** If you're in heating mode, press this to switch straight to cool wind. Use the white keys to adjust the breeze.
3. **Hot Mode:** If you're in cool mode, press this to switch to heating (the screen will flash). Use the red keys to adjust the heat.
4. **Strong Wind:** Instantly jumps to the maximum wind speed. The screen will display "H".
5. **Oscillation:** Press once to activate the 80° head swing. Press again to stop it.
6. **Timing Operation:** Press to set an automatic shut-off timer from 0 to 9 hours. Setting it to "0" cancels the timer. A little dot on the top left of the screen will flash when the timer is active.
7. **Sleep Wind:** Drops the fan down to the quietest, lowest wind speed. The screen will display "L".
8. **Temperature Increase (White +Key):** Adjust the cool wind speed from 1 to 8. (These buttons are invalid in heating mode).
9. **Temperature Decrease (White -Key):** Adjust the cool wind speed from 1 to 8. (These buttons are invalid in heating mode).
10. **Speed Increase (Red +Key):** Adjust the heating speed from 1 to 3. (These buttons are invalid in cool mode).
11. **Speed Decrease (Red -Key):** Adjust the heating speed from 1 to 3. (These buttons are invalid in cool mode).
12. **Mute:** Press once to turn off the button sound prompts. Press again to turn the sound back on.

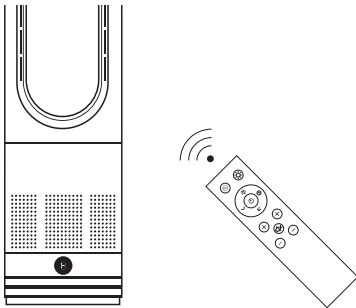

 When using the remote control to operate, need to point the remote control signal receiver on the display screen, so that the remote control signal can reach the best.

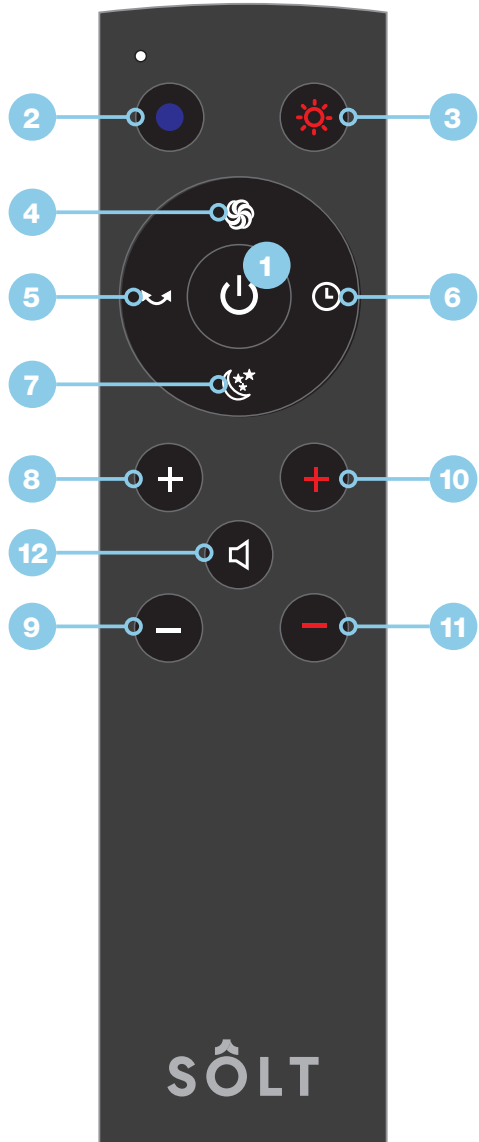

# Battery Installation & Advice

## BATTERY INSTALLATION

- Open the cover on the back of the remote control.
- Insert two new AAA dry cell batteries.
- Make sure the positive (+) and negative (-) ends are facing the correct way for proper polarity.
- Close the cover securely.

 
## SAFETY & BATTERY CARE

- Keep batteries strictly out of the reach of children.
- Do not mix different types of batteries, or mix old and used batteries with new ones.
- Non-rechargeable batteries must not be recharged.
- If using rechargeable batteries, you must remove them from the remote before charging them.
- Do not short-circuit the supply terminals.
- Remove exhausted batteries straight away and dispose of them safely.
- If you are not going to use the remote for a long period, remove the batteries.

## EMERGENCY & DISPOSAL

- **Emergency:** If you suspect a battery has been swallowed, seek medical advice immediately.
- **Disposal:** Dispose of dead batteries in accordance with your local laws and regulations.

**Note:** Because remote controls use overlapping frequencies, you might find that using this remote accidentally triggers other appliances in your home, or another remote might turn this fan on. Also, the remote control cannot completely turn off the fan. Please unplug it from the wall when not in use.

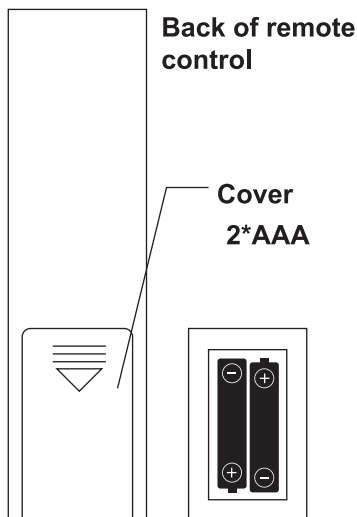

# Troubleshooting

## **DEVICE DOES NOT WORK WHEN PLUGGED IN**

- Verify the plug is properly inserted into the power socket.
- Press the power button to turn the unit on.
- Check whether the display screen is on or off.

## **WEAK AIR VOLUME**

- Check if the air outlet is blocked.
- Confirm the fan is set to the highest level.
- Replace the filter.

## **REMOTE CONTROL DOES NOT WORK**

- Check that the batteries are inserted correctly.
- Insert new batteries.

## **UNABLE TO OPERATE NORMALLY AFTER A POWER FAILURE**

- Unplug the unit from the power point and plug it back in.

## **IMPORTANT NOTICE:**

If the fault remains unresolved after trying these methods, please contact customer service immediately. Do not attempt to disassemble, repair, or install the device yourself.

## **CUSTOMER SERVICE CONTACT DETAILS:**

- Phone: 1300 11 4357
- Email: [support@residentiagroup.com.au](mailto:support@residentiagroup.com.au)

# Maintenance and Cleaning

## MAINTENANCE AND SERVICE

- This appliance is designed with no user-serviceable parts and requires minimal upkeep.
- Do not attempt to perform repairs yourself. Contact qualified service professionals for any required maintenance.
- The fan is permanently lubricated and does not need any additional lubrication for its entire lifespan.

## SAFETY PRECAUTIONS

- Always remove the plug from the power point before performing any maintenance.
- Never handle the plug with wet hands, as this could result in injury or an electric shock.
- Do not splash or apply water directly to the unit while cleaning to prevent electric shock or short circuits.
- If the power cord becomes damaged, it must be replaced by the manufacturer to avoid any safety hazards.

## ROUTINE CLEANING

- If the unit becomes dirty, wipe it down carefully with a damp cloth.
- For easier cleaning, apply a neutral detergent to the damp cloth. Wipe the surface, remove any remaining soap residue with a fresh damp cloth, and then thoroughly wipe the area with a dry cloth.

## DUST & PLUG MAINTENANCE

- Prevent dust from building up on the unit, as this can negatively impact the product's performance. A vacuum cleaner can be used to safely remove dust from the appliance.
- With long-term use, dust and moisture can accumulate between the plug and the power point, which creates a fire hazard. Periodically pull out the plug and wipe it clean with a dry cloth.

## DISPOSAL

This product must not be disposed of via normal household waste after its service life, but must be taken to a collection station for the recycling of electrical and electronic devices. The symbol on the product, the operating instructions or the packaging indicate such disposal procedures. The materials are recyclable in accordance with their respective symbols. By means of re-use, material recycling or any other form of recycling old appliances you are making an important contribution to the protection of our environment. Please ask your local council where your nearest disposal station is located.



# Technical Specifications

Below outlines the technical specifications for your Hot & Cool Bladeless Circulation Fan.

|                           |                    |
|---------------------------|--------------------|
| Model                     | GGSBFCH56W         |
| Power Supply              | 220V~, 50Hz        |
| Rated Power               | 20-1200W           |
| Decibel                   | ≤ 60dB             |
| Air Volume                | 620L/S             |
| Cool Wind Max Speed       | 5800 RPM           |
| Cool Wind Rated Power     | 20W                |
| Heating Max Speed         | 5600 RPM           |
| Heating Max Power         | 1200W              |
| Oscillation (Head Swing)  | 80°                |
| Timer Range               | 0-9                |
| Cable Length              | 1.5m               |
| Net Weight                | 2.0kg              |
| Dimensions (W × D × H mm) | 140 × 140 × 560 mm |

# Purchase Details

For future reference, please record the following information which can be found on the rating plate and the date of purchase which can be found on your sales invoice.

## STORE DETAILS

|               |  |
|---------------|--|
| STORE NAME    |  |
| ADDRESS       |  |
| TELEPHONE     |  |
| PURCHASE DATE |  |

## PRODUCT DETAILS

|             |  |
|-------------|--|
| MODEL NO.   |  |
| SERIAL NO.* |  |

**Attach your receipt  
to this page**



# Warranty Information

## WARRANTY TERMS & CONDITIONS BLADELESS CIRCULATION FANS

This document sets out the terms and conditions of the product warranties for Residentia Group Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Appliance.

### 1. IN THIS WARRANTY

- (a) 'acceptable quality' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL;
- (b) 'ACL' means Trade Practices Amendment (Australian Consumer Law) Act (No.2) 2010;
- (c) 'Appliance' means any Residentia Group product purchased by you accompanied by this document;
- (d) 'ASR' means Residentia Group authorised service representative;
- (e) 'Residentia Group' means Residentia Group Pty Ltd of 165 Barkly Ave, Burnley VIC 3121, ACN 600 546 656 in respect of Appliances purchased in Australia;
- (f) 'major failure' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL and includes a situation when an Appliance cannot be repaired or it is uneconomic for Residentia Group, at its discretion, to repair an Appliance during the Warranty Period;
- (g) 'Warranty Period' means:
  - (i) where the Appliance is used for personal, domestic or household use (i.e. normal single family use) as set out in the instruction manual, the Appliance is warranted against manufacturing defects for 24 months, following the date of original purchase of the Appliance;
  - (h) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia.
3. During the Warranty Period Residentia Group or its ASR will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Residentia Group or its ASR may use remanufactured parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Residentia Group. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
4. Parts and Appliances not supplied by Residentia Group are not covered by this warranty.

5. You will bear the cost of transportation, travel and delivery of the Appliance to and from Residentia Group or its ASR. If you reside outside of the service area, you will bear the cost of:
  - (a) travel of an authorised representative;
  - (b) transportation and delivery of the Appliance to and from Residentia Group or its ASR, in all instances, unless the Appliance is transported by Residentia Group or its ASR, the Appliance is transported at the owner's cost and risk while in transit to and from Residentia Group or its ASR.
6. Proof of purchase is required before you can make a claim under this warranty.
7. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Residentia Group is not liable in the following situations (which are not exhaustive):
  - (a) the Appliance is damaged by:
    - (i) accident
    - (ii) misuse or abuse, including failure to properly maintain or service
    - (iii) normal wear and tear
    - (iv) power surges, electrical storm damage or incorrect power supply
    - (v) incomplete or improper installation
    - (vi) incorrect, improper or inappropriate operation
    - (vii) insect or vermin infestation
    - (viii) failure to comply with any additional instructions supplied with the Appliance;
  - (b) the Appliance is modified without authority from Residentia Group in writing;
  - (c) the Appliance's serial number or warranty seal has been removed or defaced;
  - (d) the Appliance was serviced or repaired by anyone other than Residentia Group, an authorised repairer or ASR.
8. This warranty, the contract to which it relates and the relationship between you and Residentia Group are governed by the law applicable where the Appliance was purchased.
9. To the extent permitted by law, Residentia Group excludes all warranties and liabilities (other than as contained in this document) including liability for any loss or damage whether direct or indirect arising from your purchase, use or non use of the Appliance.
10. For Appliances and services provided by Residentia Group in Australia, the Appliances come with a guarantee by Residentia Group that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. The benefits to you given by this warranty are in addition to your other rights and remedies under a law in relation to the Appliances or services to which the warranty relates.
11. At all times during the Warranty Period, Residentia Group shall, at its discretion, determine whether repair, replacement or refund will apply if an Appliance has a valid warranty claim applicable to it.
12. Missing parts are not covered by warranty. Residentia Group reserves the right to assess each request for missing parts in a case by case basis. Any parts that are not reported missing in the first week after purchase will not provide free of charge.
13. To enquire about claiming under this warranty, please follow these steps:
  - (a) carefully check the operating instructions, user manual and the terms of this warranty;
  - (b) have the model and serial number of the Appliance available;
  - (c) have the proof of purchase (e.g. an invoice) available;
  - (d) telephone the numbers shown below.
14. You accept that if you make a warranty claim, Residentia Group and its ASR may exchange information in relation to you to enable Residentia Group to meet its obligations under this warranty.

#### IMPORTANT

Before calling for service, please ensure that the steps in point 13 have been followed.

#### Telephone contacts

- Service: Please call 1300 11 HELP (4357)
- Spare Parts: Please call 1300 11 SPARE (7727)

**The Australian Consumer Law requires the inclusion of the following statement with this warranty:**

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**An initiative by  
Residentia Group**



**T. 1300 11 4357**

**E. [support@residentiagroup.com.au](mailto:support@residentiagroup.com.au)**

**[www.solt.house](http://www.solt.house)**



E2447

**SÔLT**