



Voosas

PORTABLE WIRELESS SPEAKER

S354 PRO+



USER MANUAL

 
Package Contents

- 1 x S354 PRO+ Karaoke Party Speaker
- 1 x Type-C Cable
- 1 x Carrying Strap
- 1 x User Manual
- 1 x Aux-in Cable
- 2 x Wireless Karaoke Mics

Specifications

Model:	VS-S354 PRO+
Wireless version:	5.3
Maximum power:	300W
Battery capacity:	4000mAh
Play time:	20hours(50% volume)
Charging time:	8 hours
Charging mode:	Type-C 5V/3A
TWS Connection distance:	≥8 m
Wireless connection Straight distance:	≥12 m
Microphone Range:	≥10 meters (open unobstructed space)
Speaker size:	57mm*2+103mm*2
Product size:	343*120*244mm
Product weight:	4350g

Button Configuration

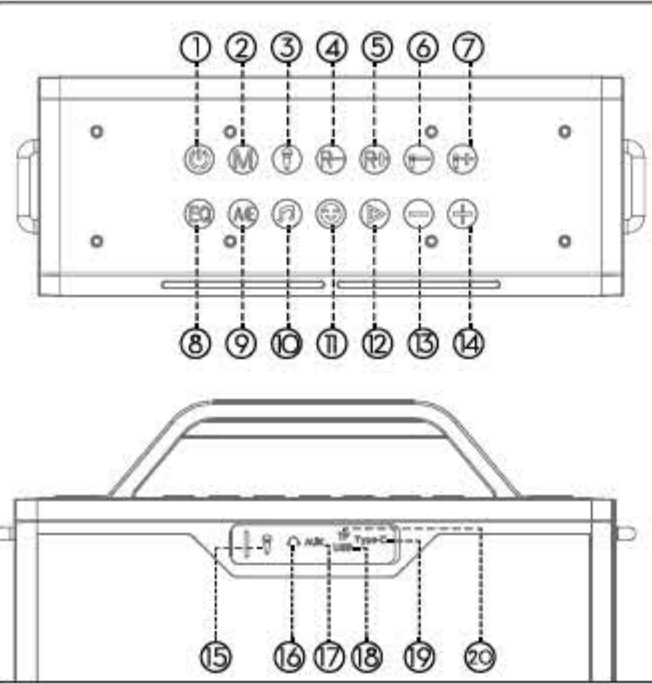

- ① Power on/off/RGB light on/off/ Force shutdown
- ② Mode switch/Force disconnection/ TWS
- ③ Microphone
- ④ Reverb/Bass-
- ⑤ Reverb/Bass+
- ⑥ Volume- of Microphone
- ⑦ Volume+ of Microphone
- ⑧ EQ mode switch/Power-saving mode off/Mute
- ⑨ Vocal sound elimination
- ⑩ Magic Voice
- ⑪ Atmosphere
- ⑫ Pause/Play/Answer/Hang up/Reject/ Redial last number/Voice assistant
- ⑬ Volume-/PREV Track
- ⑭ Volume+/NEXT Track
- ⑮ 6.5mm Instrument Port
- ⑯ Earphone Jack
- ⑰ AUX
- ⑱ USB Port
- ⑲ Type-C Charing Port
- ⑳ TF card slot


Instructions

Button	Operation	Indicator
	Press for 2s to Turn On	Pairing: Indicator Flashes Blue Quickly Connected: Indicator Stays Blue
	Press for 2s to Turn Off	Indicator Off
	Press Once to Switch Lighting Modes	
	Press for 8s to Forcedly Off	Indicator Off
	Press Once to Enter/Exit Karaoke Mode	Pairing: Indicator Flashes Blue Connected: Indicator Stays Blue
	Press Once to Switch Playing Modes among Bluetooth, U-disk, TF Card & Aux in	
	Press for 3s to Disconnect from Device	
	Press for 8s to Reset	
	Double Press to Enter/Exit Stereo Pairing Mode	
	Press Once to Switch EQ Modes among Original, 3D, Deep Bass.	Original: Off 3D: Stays White Deep Bass: Stays Green
	Press for 8s to Enter/Exit Power-Saving Mode to Charge for Your Device	
	Press for 3s to Mute the External Sound, Supports Wired Headphone Via Monitoring Port	
	Eliminate/ Restore Vocal Sound	inate Vocal Sound Stays Green


	Press Once to Play/Pause Music under Bluetooth/TF Card/U-Disk Mode	
	Press Once to Mute under Aux-in Mode	
	Press Once to Answer/End a Call	
	Press for 2s to Reject a Call	
	Double Press to Redial the Last Call	
	Press for 3s to Activate Voice Assistant	
	Press Once to Turn Down Volume	
	Press for 2s to Skip to Previous Track	
	Press Once to Turn Up Volume	
	Press for 2s to Skip to Next Track	
	Short Press to Turn down Microphone Reverb	
	Short Press to Turn up Microphone Reverb	
	Short Press to Turn down Microphone Volume	
	Short Press to Turn up Microphone Volume	
	Short Press to Switch Among 4 Magic Sound Effects	
	Short Press to Switch Among 4 Applauding Modes	

How to Use

 
1. Turn On/Off

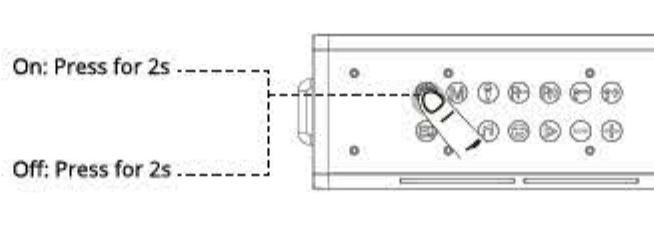

 2. Bluetooth Connection
Search & click 'S354 PRO+' to connect.

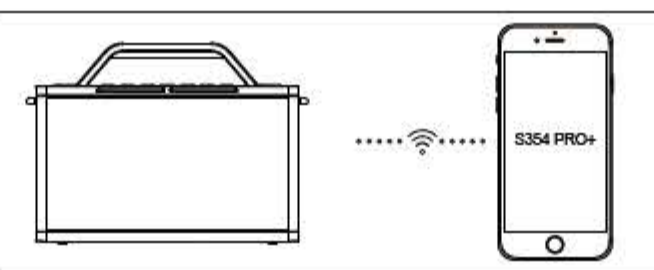

 3. Disconnect from Bluetooth
Press the 'Mode' button for 3s to disconnect from Bluetooth.

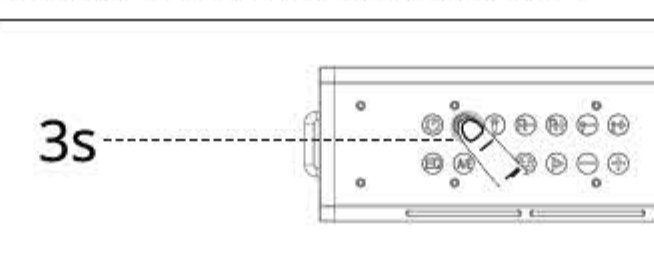


4. USB-A Power Bank Function
This speaker carries a USB charge-out function that will automatically detect your device and begin to charge it when the charging cable is plugged into the USB-A port under powering-on mode.

5. Aux-in Mode
Simply connect the speaker with your non-Bluetooth device via the 3.5 mm audio jack cable.
Note: After plugging in an audio cable, the speaker will automatically switch to Aux-in mode


6. USB Flash Drive Mode
The speaker will play the music from your U-disk when plugging into the slot.

7. TF/Micro SD Card Slot Mode
The speaker will play the music from your TF/Micro SD card when plugging the card into the slot. The maximum supported memory is 128 GB.

 8. Karaoke Mode
Press 'Microphone' button once to enter/exit Karaoke Mode.

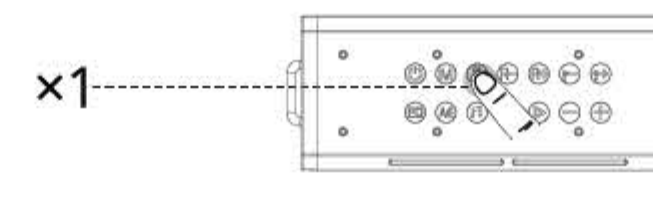


 9. Charging

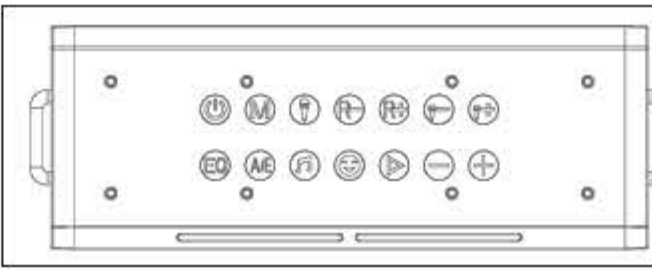

Red Light On	Charging
Goes Off	Charging Completion
Red Light Flashes	Battery Low

 10. Reset
Press 'Mode' button for 8s.

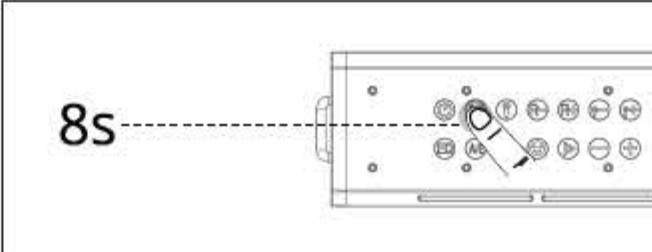

11. Instruction of Wireless Microphone
A. Battery display: 3 layers indicates fully charged; blank means battery low.
B. Red indicator stays on indicates MIC is get fully charged.
C. It is highly suggested that you drain up the battery before charging for the first use.
D. The frequency of 2 MICS are different to avoid the interfere.

12. Auto Power Off
The speaker will power off automatically after 10 minutes if it does not pair with any device through Bluetooth. When in low battery, the speaker will power off automatically as well.

True Wireless Stereo Mode
A. Turn on both speakers and make sure they haven't connected with any device.
B. Double press the 'Mode' button of either speaker to enter stereo pairing mode.
C. If paired successfully, the stereo pairing indicator of both speakers will stay yellow. The Bluetooth indicator of host speaker will flash while the vice one will off.
D. Search & click 'S354 PRO+' to connect.
E. Double press the 'Mode' button of either speaker to exit stereo pairing mode.

Care & Maintenance
-Do not use any form of detergents or cleaning material to clean the product as any type of chemical may make this device unusable.
-Do not disassemble this product. It contains no user serviceable parts.
-Do not drop or jump on it and treat it with care for the best performance.
-Keep the product in a dry location. Dust, dirt & moisture from humidity can accumulate on the body of the product if kept at an unfriendly place.
-Do not dispose this product in fire or batteries may explode or leak.

FCC Warning
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.