

 


 
User Manual

Tower Fan

MODEL: PSFZ40DR6RWV SKU# 6211681

⚠ WARNING NOTICE:
Before using this product, please read this manual carefully and keep it for future reference. For additional support, please call customer service at **1-866-646-4332**.

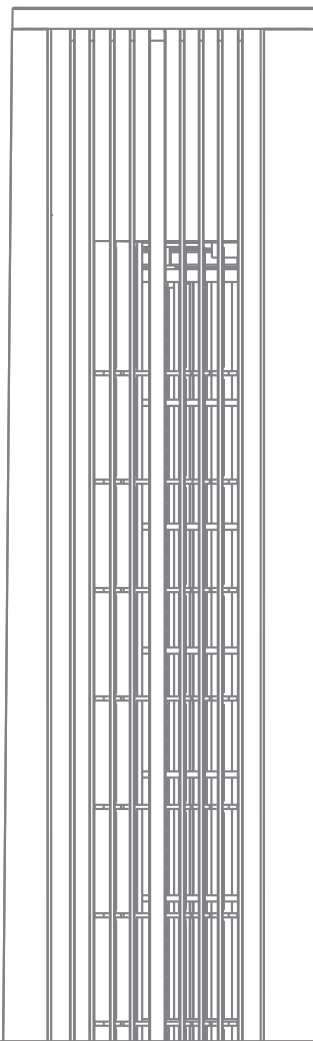

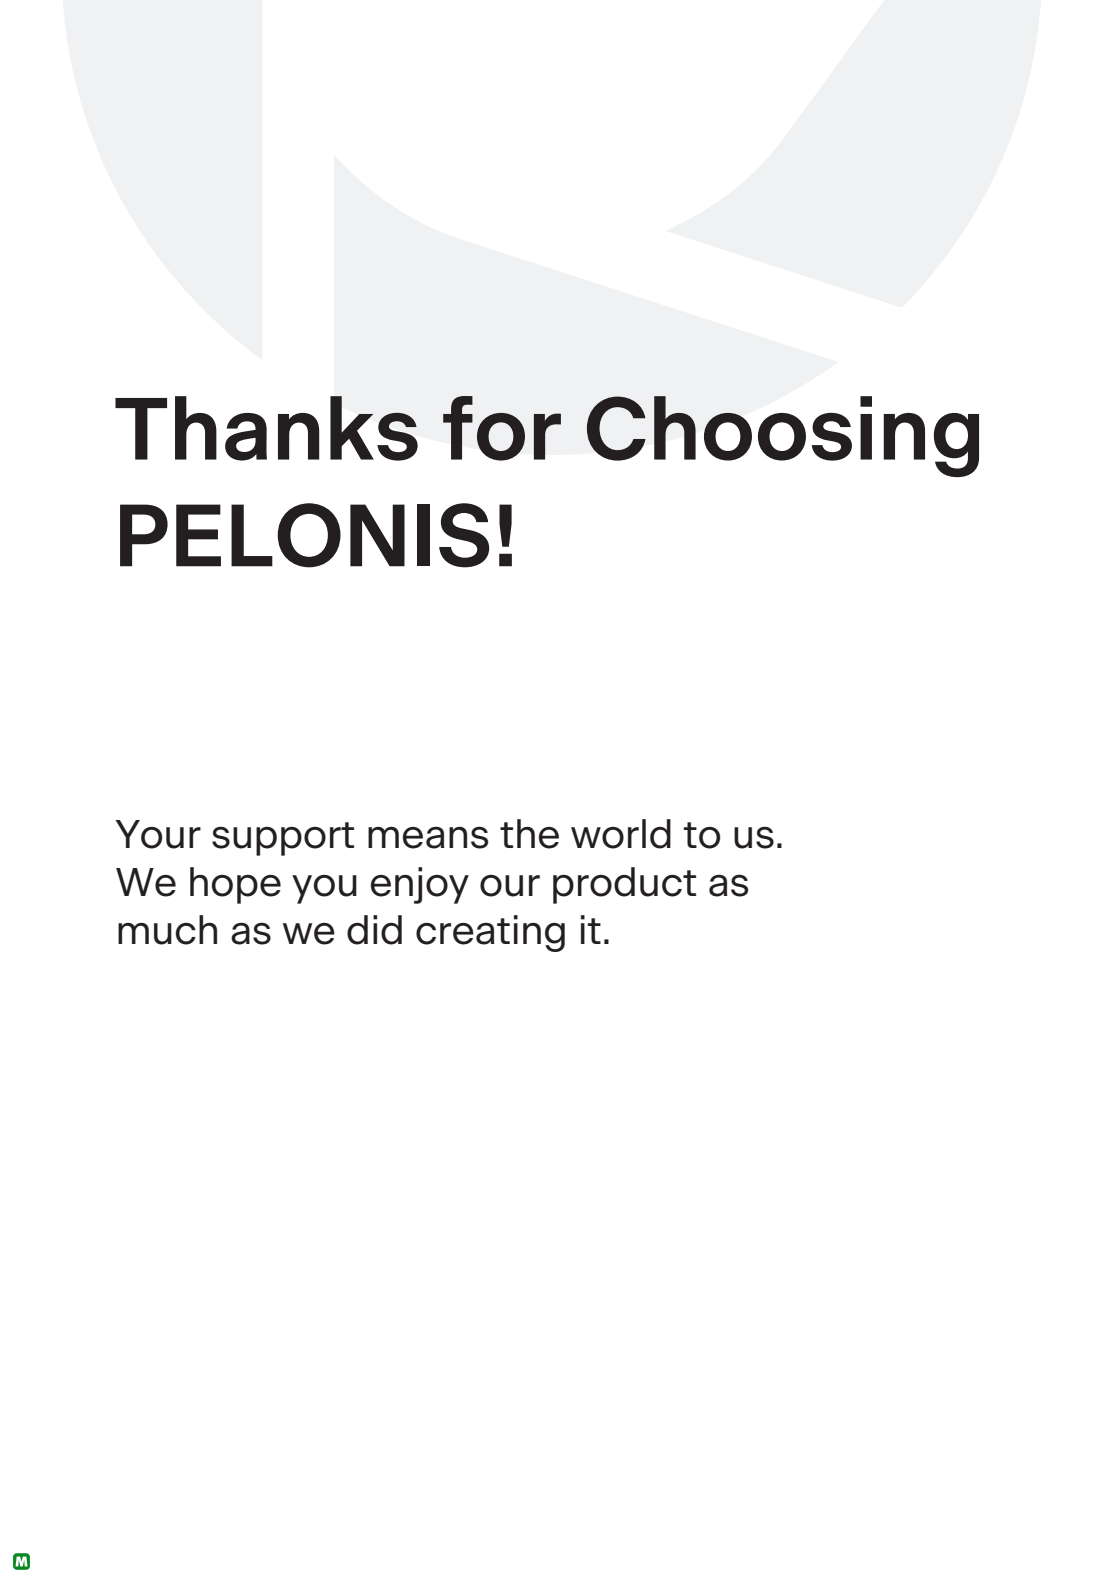

Thanks for Choosing PELONIS!

Your support means the world to us.
We hope you enjoy our product as
much as we did creating it.

Contents

Important Safeguards	01
Product Overview	04
Installation	05
Operating Instructions	07
Troubleshooting	10
Cleaning and Maintenance	11
Specifications	14
Service and Support	15
Warranty	16

Important Safeguards

READ AND SAVE THESE INSTRUCTIONS

CAUTION

1. Read the instructions and rules for safe operation carefully.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. Never insert fingers, pencils, or any other object through the grille when the fan is running.
5. Disconnect the fan when moving from one location to another.
6. Make sure that the fan is on a stable surface when operating to prevent it from falling over.
7. Keep electrical appliances out of reach from children or infirm persons. Do not let them use the appliances without supervision.
8. This fan is meant for household use only.

WARNING

 
1. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
2. To protect against the risk of electrical shock, do not immerse the unit, cord, or plug in water or other liquid.
3. Unplug the appliance from the outlet before cleaning or when the appliance is not in use.
4. Do not take the rotor blade guard off after the fan is assembled.
5. The appliance is only to be used with the power cord provided with the appliance.
6. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
7. **WARNING**—To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
8. This product employs overload protection (fuse).
A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the fuse replacement instructions (see the product specifications for the proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
 - a) Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
 - b) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
9. Do not leave the fan running unattended.
10. To reduce the risk of fire, electric shock, or injury, do not use replacement parts that have not been recommended by the manufacturer (e.g., parts made at home using a 3D printer).
11. The fan shall not be modified by the user, such as by adding supplemental filters to fans not intended to be used for air cleaning purposes.

12. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 2.1 This device may not cause harmful interference, and 2.2 This device must accept any interference received, including interference that may cause undesired operation. 3 Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Product Overview

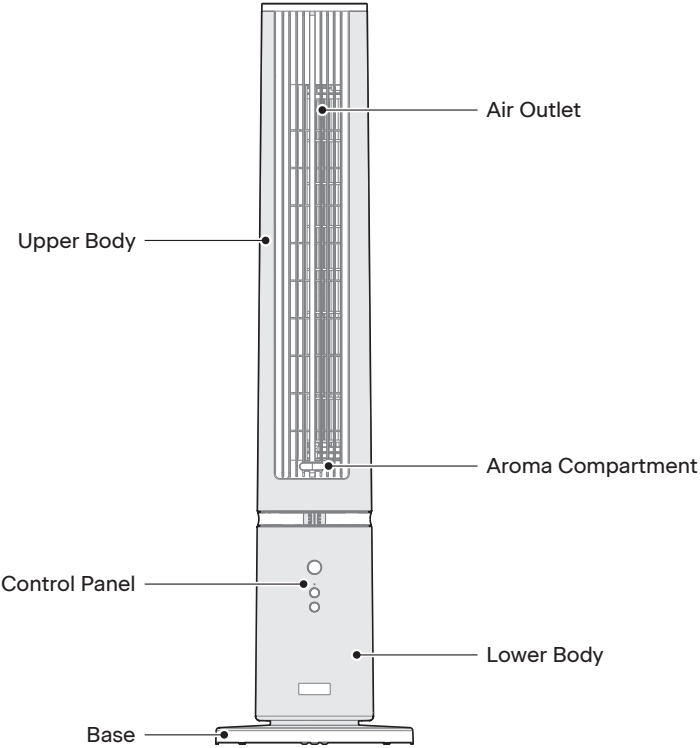

[Note]

All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real object.




Installation

1. Installing the Base


Open the box and take out the base and lower body. Turn the base and lower body upside down, then find the power cord on the lower body. Pass the power cord through the round hole in the center of the base, then fix the base and lower body together with a lock nut. If the base and lower body do not fit together properly, make sure the power cord sits in the wire groove of the base.

 Figure 1

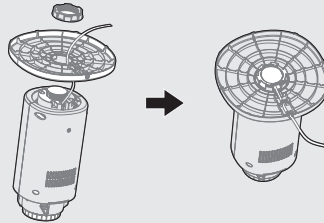

2. Press the power cord firmly down along the wire groove on the base. Secure the power cord in the slots at both ends of the wire groove.

 
Figure 2

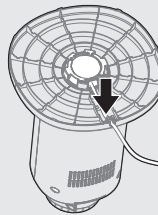


3. Installing the Body

Place the lower body and base on a stable, level surface. Carefully pick up the upper body and align the air outlet on the upper body with the control panel of the lower body. Gently lower the upper body onto the lower body until it is securely connected.

 Figure 3

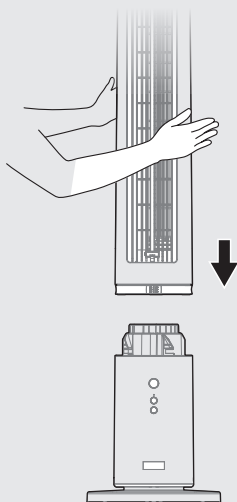

Operating Instructions

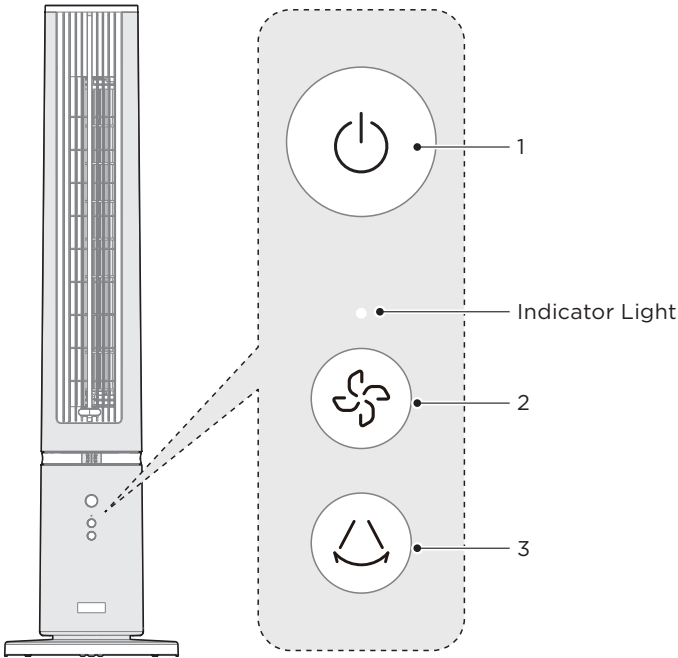 


No	Button	Function description
1	 ON/OFF	• Click to turn the power on or off.
2	 Wind Speed	• Click to cycle through the available wind speeds: 1-2-3-4 • When using the wind speed adjustment button on the fan body to adjust the wind speed, the indicator light will flash according to the wind speed level. For example, if the fan speed is set to level 1, the indicator light will flash once; if the fan speed is set to level 2, the indicator light will flash twice, and so on.
3	 Oscillation	• Click to turn the oscillation function on or off.

Activate the Remote Control

- Plug in the product.
- Remove the battery cavity cover. Insert two AAA batteries into the remote control. The remote control will automatically activate. Slide the battery cover back onto the remote control.
- If activation fails, please disconnect the product's power supply and remove the remote control battery for at least one minute. Repeat the above steps to activate the remote control.

About the Remote Control

 - The remote controller should be used within 16 ft of the front of the product.
- The battery contains many heavy metals, acids and bases, etc., which may threaten human health. Used batteries should be recycled separately or disposed of according to local e-waste regulations.

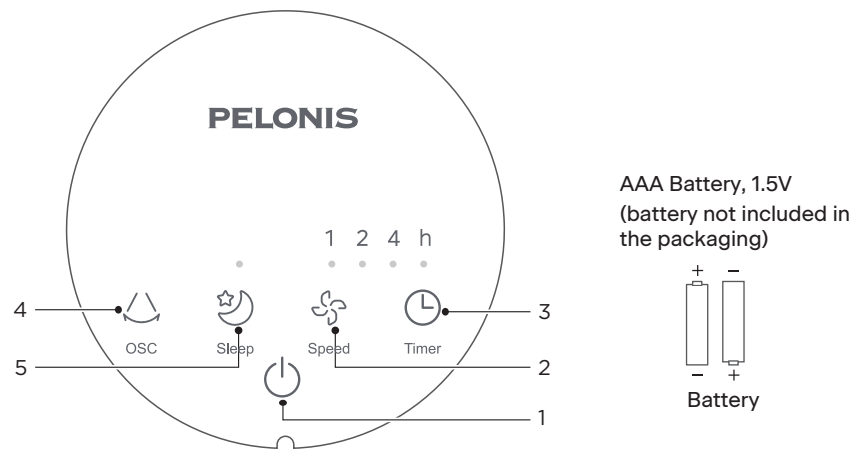

No	Button	Function description
1	 On/Standby	• Click to turn the power on or off.
2	 Wind Speed	• Click to cycle through the wind speeds: 1-2-3-4. • The wind speed indicator lights will display, O to correspond with the set wind speed: Speed 1 Speed 2 Speed 3 Speed 4 1 2 4 1 2 4 1 2 4 1 2 4 O . . . O . O O . . . O

No	Button	Function description
3	 Timer	- Click to set the timer within the range of 1-7 hours. The fan will stop operating and return to standby after the set time passes. - The timer indicator lights will display,  to correspond with the set time: 1h 2h 3h 4h 1 2 4 h 1 2 4 h 1 2 4 h 1 2 4 h             5h 6h 7h 1 2 4 h 1 2 4 h 1 2 4 h         

[Note]

- Please use a AAA manganese or alkaline battery. Do not use a non-recyclable battery.
- Do not mix new batteries with old.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.

Troubleshooting

Operating your appliance can lead to errors and malfunctions. This section contains possible causes and notes for resolving an error message or malfunction. To save your time and money, read this section carefully before calling the service center.

Problem	Cause	Solution
The machine does not work properly after installed	The power cable is not plugged in or has poor contact.	Make sure the plug is properly inserted into the socket.
	The fan is not powered on.	Press the power button to turn the fan on.
The remote control does not work.	The remote control did not connect to the fan.	Remove the remote control battery and disconnect the fan's power supply. Wait for one minute, then install the battery and plug in the fan again.



 
Cleaning and Maintenance

- Before cleaning this product, be sure to turn off the power and unplug it.
- After cleaning and maintenance, be sure to wait until your fan fully dry before using or storing it.
- Do not rinse the base directly with water. Gently wipe the surface with a soft cloth containing a little neutral detergent and then wipe it dry. Do not use solvents such as gasoline.
- Do not disassemble the product for modification. It is recommended to check and clean this product regularly to extend its service life.

Disassembly and Cleaning Method


Separate the Upper and Lower Body

Before disassembling the body and the base, please turn off the power and unplug the fan. Next, unlock the upper body by pushing the lock on the front of the body to the right. Holding the handle hole at the back of the upper body, pull the upper body upwards to separate it from the lower body.

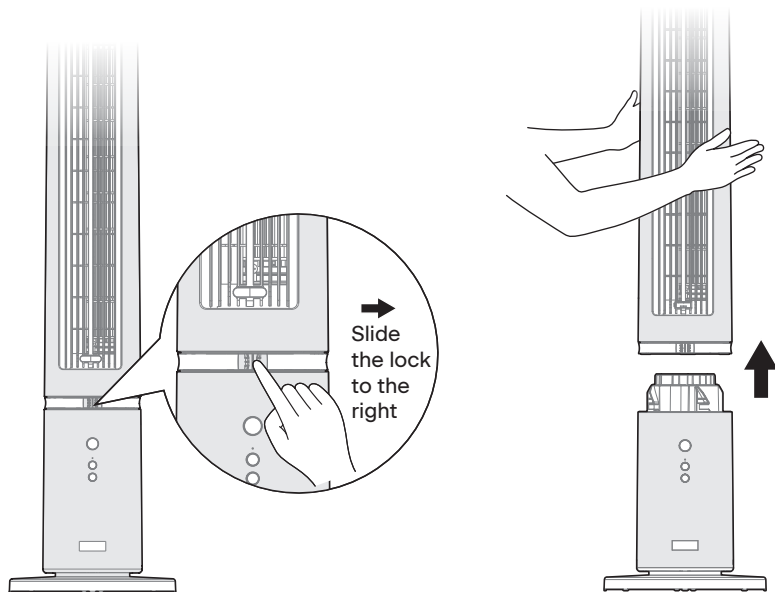


Remove the Lower Body From the Base

 Turn the base upside down, as shown in the figure below. Rotate the lock nut counterclockwise to remove the base.

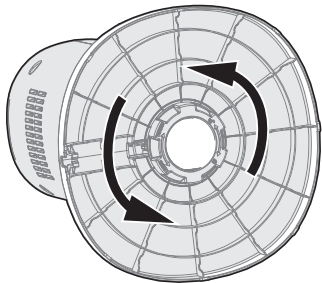

Cleaning method

 Lay the upper body flat horizontally. Rinse it in every direction (up and down; front and back) under running water. After rinsing, gently shake the water out of the body or let it stand until the water is drained. Make sure the upper body is dry before reinstalling it and powering your fan on.

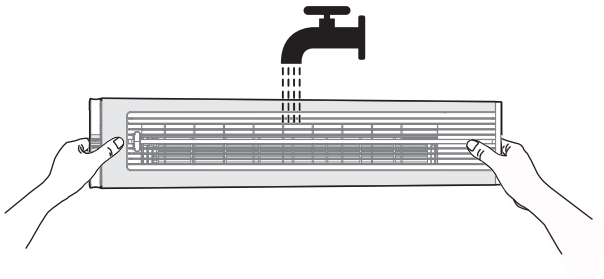


[Note]

When cleaning the body, make sure it is separated from the base.

Replacing the Fuse

 - a) Grasp the plug to remove it from the power outlet. Do not unplug the fan by pulling on the cord.
- b) Open the fuse cover. Find the fuse cover on top of the plug, then slide it towards the prongs to open it and access the fuse. (Fig. ①)
- c) Carefully remove the fuse. Insert the tip of your tool into fuse slot (next to the terminal), then pry the fuse gradually and slowly. Do not use too much force. If you feel resistance, remove your tool and try again. Pry the fuse out little by little. When one side of the fuse has been released, it should be easy to remove the entire fuse. (Fig. ②)
- d) **WARNING** — risk of fire. Replace the fuse with a 2.5 Amp, 125 Volt fuse. Do not use any other kind of fuse. (Fig. ③)
- e) Close the fuse cover. Place the fuse cover back onto the plug and slide it closed. (Fig. ④)
- f) **WARNING** — risk of fire. Do not replace the plug. The plug contains a safety device (fuse) that should not be removed. Discard the product if the plug is damaged.
- g) If your fan suddenly stops working, please check to see if there is a problem with the fuse.

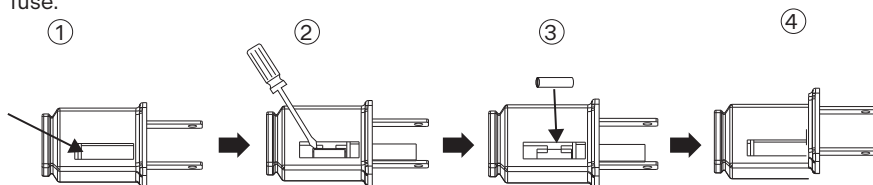

[Note]

- Do not push suddenly or with too much force when replacing the fuse, as forceful movements could damage the product or cause an accident.
- If you feel like the process is difficult, please double-check the instructions to make sure you're performing each step correctly.

Specifications

Model	Power Supply	Rated Power
PSFZ40DR6RWV	120V~, 60Hz	45W



SERVICE AND SUPPORT

In the event of a warranty claim or if service is required for this product, please contact us at the following number:

Toll Free: 1-866-646-4332

For questions or comments, please write to:

Midea America Corp.

300 Kimball Drive,
Parsippany NJ 07054

Email: customersupport@pelonis.com

For your records, staple your sales receipt to this manual and record the following:

DATE OF PURCHASE: _____

PLACE OF PURCHASE: _____

(STAPLE SALES RECEIPT HERE)

**NOTE: PROOF OF PURCHASE IS REQUIRED FOR ALL
WARRANTY CLAIMS**

PRINTED IN CHINA



One (1) Year Limited Warranty

- Please read all instructions before attempting to use this product.

Midea America Corp. warrants as limited herein to the original purchaser of retail that each new product, shall be free of defects in material and workmanship for a period of one (1) year from the date of delivery. This one (1) year warranty is limited to the Motor and Electric Element. The date of delivery establishes the warranty period, should service be required.

In the event of malfunctions or failure of your product, simply deliver or send the product, postage prepaid along with PROOF OF PURCHASE, within the warranty period of one (1) year, to Midea America Corp.. Midea America Corp. reserves the right to inspect the claimed defective part or parts to determine if the defect or malfunction complaint is covered by this warranty. Midea America Corp. shall, within sixty(60) days after receipt of the product, at its option, repair and/or replace the defective part or parts free of charge. This warranty shall only cover defect arising from normal usage. Midea America Corp. assumes no responsibility whatsoever if the product should fail during the warranty period by reason of:

- Misuse, negligence, physical damage or accidents.
- Lack of maintenance (see instructions for proper maintenance).
- Repair by any unauthorized party during the warranty period.
- Damage caused by connection to an improper input voltage (see specification label on your product).

Midea America Corp. makes no further warranties or representations, express or implied except those contained herein. No representative or dealer is authorized to assume any other liability regarding the product. The duration of the implied warranty granted under State law, including warranties of merchantability and fitness for particular purpose are limited in duration should the duration of the express warranty grant it hereunder. Midea America Corp. shall in no event be liable for direct, indirect, special or consequential damages.

Some states do not allow limitations on how long an implied warranty lasts, and/or the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

