 




Smart WiFi Dash Camera S3 Touch

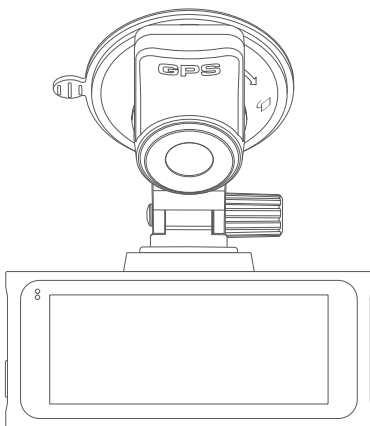

USER MANUAL

Please carefully read the user manual before using
and keep it well for future reference.



Youtube:@Pelsee_official



www.pelsee.com



Facebook:@pelsee

We'll regularly update the user manual as we continuously improve
our product based on user feedback.

Access the latest manual at www.pelsee.com when it's available.

Dear Customer,

Thank you for selecting **Pelsee** as your preferred brand!

We sincerely hope that you will enjoy using our product as much as we do.

If you happen to encounter any issues while using the product, or if you have any ideas on how we can enhance it, please don't hesitate to get in touch with us. You can contact us through our official website at www.pelsee.com or by emailing us at support@pelsee.com.

Our dedicated support team will be delighted to help you find a solution that meets your satisfaction as quickly as possible.

 
**Yours Sincerely,
Pelsee Team**

SAFETY PRECAUTIONS

To prevent injury or damage, please read and follow these safety precautions:

1. Read and understand the user manual before using the product and keep it safe for future reference.
2. Only use the original accessories provided by the manufacturer.
3. Remove the protection film on the LCD display and lenses before using the product.
4. DO NOT try to disassemble, alter or repair the product yourself. Please ask for the help from the manufacturer or similarly qualified person in order to avoid a hazard. After repairing, please do a safety check to ensure that the product is working properly.
5. This product must not be placed in a location that may affect the deployment of air bags, and must not obstruct the driver's view.
6. If there is a malfunction or abnormality, such as smoke or strange odor, please stop using the product immediately, then cut off the power supply and contact us.
7. NEVER install the unit in the place where is exposed to the direct sunlight or extremely high temperature. In extremely hot weather, please detach the front dash cam and store it in the glove box when not in use.
8. Drive safe! NEVER operate the App and the product when you are driving to avoid a traffic accident caused by distraction. Be sure to park the car in a safe place before operating.
9. This product must be securely mounted before driving.

IN THE BOX



WiFi Dash Camera



 
Bracket



Rear Camera



Car Charger Adapter

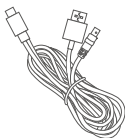

USB Cable



Rear Camera Cable



Easy Pry Tool



Dry Wipe



Static Sticker x2



Adhesive Pads
(1 on Camera)



Adhesive Cable
Clip x4

 


Memory Card



User Manual

KNOW YOUR DASH CAM

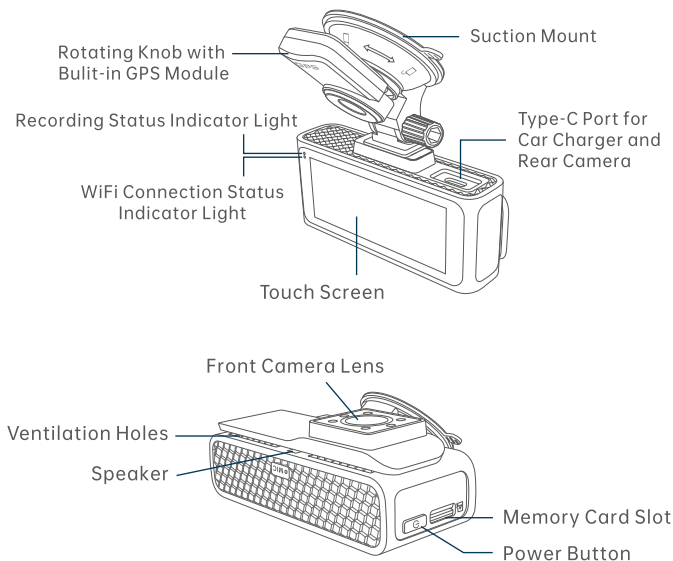

Tip

Indicator light:

Recording: Flash red

WiFi Connected: Solid Blue

Recording Stopped: Off

WiFi not connected: Off

 
INSTALLATION INSTRUCTIONS

Important:

Please turn off your vehicle's engine before installing the dash camera.

Step 1:

To start, insert the memory card into the dash cam, then follow the tip to format it. If the card is missing, please contact us at support@pelsee.com.

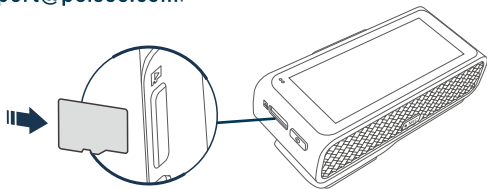


Tips:

1. Turn on the camera, then follow the startup wizard to format the memory card.
2. To ensure smooth video recording, use a reputable Class 10 or higher speed memory card.
3. To avoid damaging the card, please do not remove or install the card while the camera is powered on. If you do this, the dash cam will power off.
4. Memory cards have a limited lifespan. After numerous data overwrites, they may become inoperable. When this occurs, kindly replace your memory card.
5. For consistent performance, it's advisable to regularly format the memory card. We suggest doing this once a month.

Step 2:

 
Snap the bracket into the slot on the dash cam.

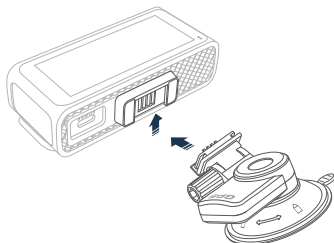**Step 3:**



Turn off your vehicle's engine, and find a suitable location on the front windshield to attach the dash cam. Use the dry wipe provided to clean the spot.

Step 4:

 Loosen the screw on the bracket, hold it up against the front windshield to find the best angle for a clear view, then tighten the screw.

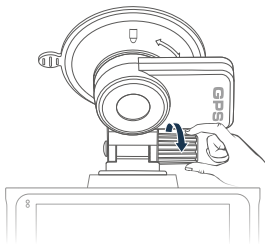
**Step 5:**

  Align the suction cup with the selected spot and press firmly. Then, following the lock icon on the bracket, turn the rotating knob counterclockwise to secure the suction cup in place.

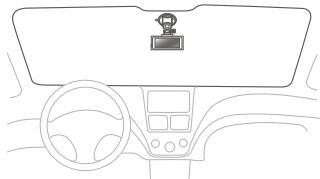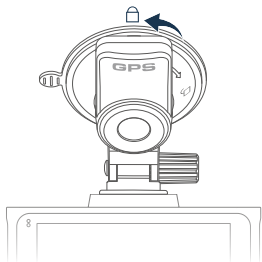


Tip

 To remove the bracket, turn the rotating knob clockwise to unlock it, then use the small tab on the suction cup to pry it off.

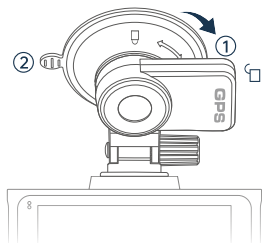


Step 6:

 Securely connect the USB cable to the car charger adapter. If the connection is loose, the dash cam would fail to power on.

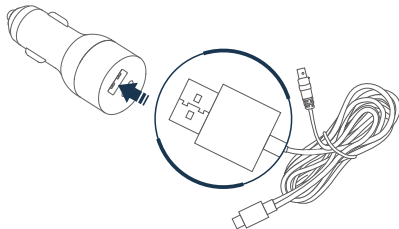

Step 7:

 Connect the Type-C connector of the **Car Charger** to the Type-C Port on the camera, and plug the other end into the **Cigarette Lighter Receptacle** or **12V socket** in your vehicle.

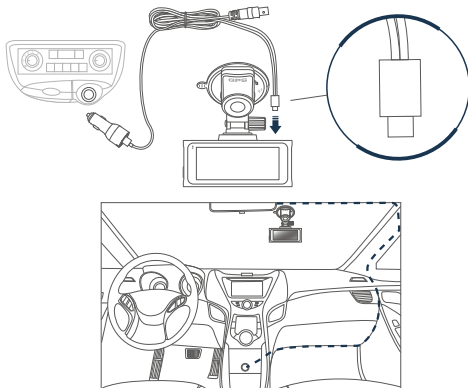


Tip

After installation, start your vehicle's engine to ensure the dash cam powers on and records automatically. If it does, stop the engine and proceed to install the rear camera.


Step 8:

 Connect the Type-C connector of the rear camera cable to the Type-c Port on the rear camera.

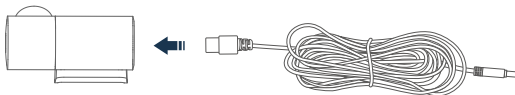


Step 9:

 Connect the 4-pin male connector of the rear camera to the 4-pin connector of the car charger cable. Snake the cable of the rear camera through the vehicle to the rear part.

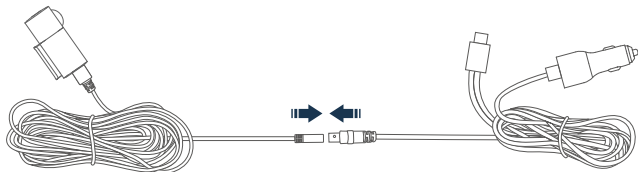


Tip:

 To keep your vehicle tidy, we recommend using the **Adhesive Cable Clips** provided to fix the cables of the car charger or rear camera over the edge of your vehicle.

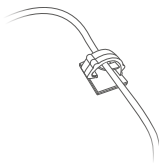


Step 10:

 Select an appropriate location on the upper part of your vehicle's rear windshield, clean it thoroughly, and affix the smaller static sticker onto it. Next, remove the **3M Adhesive Pad** from the rear camera and securely attach it to the static sticker. The camera lens part can be adjusted by rotating it to alter the viewing angle.

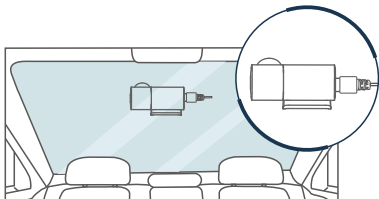

Attach the rear camera inside the back windshield as shown to avoid upside down view

 * The type-C port cable to the rear camera can be pulled out for better installation.

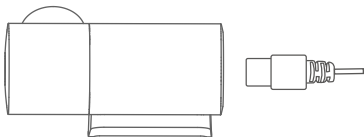

* The selected spot should avoid the shadows from the car's spoiler, so the camera can capture natural lighting and display a more genuine image.

Step 11:

Start your vehicle's engine to verify that the rear camera is installed correctly and working well.

Step 12:

Clean front/rear windshields and remove protective materials from LCD, cameras lenses for clear view.

USE YOUR DASH CAMERA

1. Power On/off

Option 1:

The dash camera will automatically power on when you start the engine and will turn off when you stop the engine.

Option 2:

When the dash camera is off, simply press and hold the power button for 3 seconds to turn it on. When the dash camera is already on, press and hold the power button for 3 seconds to turn it off.

2. Startup Wizard

After powering on, follow the startup wizard to select language & your time zone, and to learn how to swipe the screen up, down, left, and right to access different pages. Then you will enter the live view screen.

If a memory card is inserted for the first time, you will be prompted to format it. Follow the prompt to format the card and start recording.

3. Screen on/off

The dash camera will screen off after 1 minute of inactivity by default. To wake it up, just touch the screen. You can go to **≡ > Settings > Auto Screen off** to adjust the time or disable this function.

Press the power button can manually turn the screen off and on.

4. Recording Interface

The video length of each video is 1 minute by default and the oldest videos will be overwritten by the latest video in a loop when there is no remaining capacity of the card.



① Recording Status and Video Length

② Voice Control Enabled

③ Resolution of the Front Camera

④ WiFi Status :

✖ WiFi Off

📶 WiFi On

⑤ GPS Status :

 Searching for satellites

 Enough satellites found

⑥ Microphone Status :

 Microphone on

 Microphone off

⑦ Memory Card Status :

 Memory card not detected or inserted

 Memory card inserted

 GPS failure or module error

⑧ Date and Time

⑨ GPS Speed

⑩ Main Menu

⑪ Take Photo

⑫ Camera Views Switching

⑬ Lock Current Video

 


Tip:

When the camera is triggered to lock a file, the flashing dot will turn yellow.

INTRODUCTION TO THE MAIN MENU

Touch  in the recording interface to access the main menu.

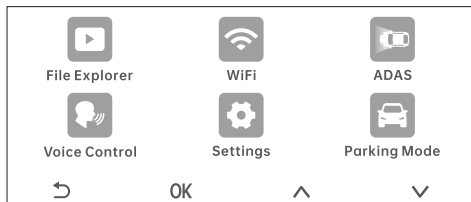

1. File Explorer

Check Videos and Photos

Step 1:

Touch **File Explorer** to access the video and image folders.



Video_F folder includes all standard videos recorded by the front camera.

Video_F_Lock includes the locked videos recorded by the front camera when there is a collision in driving or parking, as well as the videos manually locked by touching the icon  on the recording interface.

Image_F includes photos captured by the front camera.

Video_R folder includes all standard videos recorded by the rear camera.

Video_R_Lock includes the locked videos recorded by the rear camera when there is a collision in driving or parking, as well as the videos manually locked by touching the icon  on the recording interface.

Image_R includes photos captured by the rear camera.

 
Step 2:

Enter the corresponding folder, then select a file and playback it.

Delete Videos and Photos



Step 1:

Select **Settings** in the main menu, then scroll down to select **Delete**.

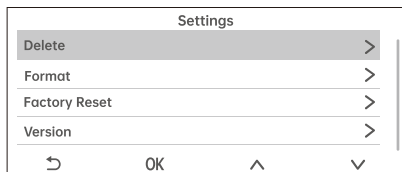

Step 2:

 Choose the corresponding folder, select a delete option from the two available, and then choose the corresponding file(s) for deletion.

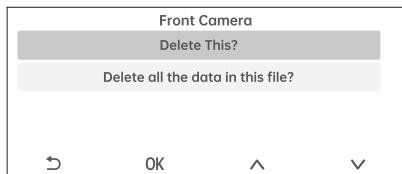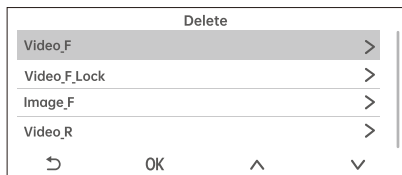

How to transfer the files?

Option 1:

To transfer files, first remove the memory card from the dash camera. Then, connect the memory card to a computer using a card reader (not included).

Option 2:

Tap on **Camera File**  on the homepage of the **Pelsee Cam App**. From here, you can view all the videos and photos, and choose a file to delete or download.

2. WiFi

WiFi Frequency

Change the WiFi frequency between 2.4GHz and 5.8GHz.

WiFi Information

This section explains how to connect the dash cam to the **Pelsee Cam App**.

Important:

 
1. To reduce power consumption and ensure optimal performance of the ADAS, WiFi is disabled by default.
2. When WiFi is enabled, the front camera resolution will be reduced to 2.5K. Once Wi-Fi is disabled, the resolution will return to 4K (when ADAS is not enabled).
2. There is no need to stay connected to the dash cam's WiFi at all times. You only need to connect when you want to download or share videos and photos stored in the dash cam.
3. The WiFi of this dash cam can only be connected to one mobile device at a time.

Step 1:

Download and install the **Pelsee Cam** App on your mobile device by scanning the QR code below or searching for it on Google Play™/App Store™. Alternatively, you can go to **≡ > WiFi > WiFi information** to scan the QR code to download and install the App.



Or

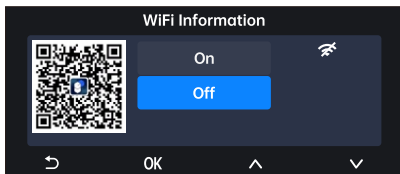


Step 2:

Ensure that the dash camera is turned on and mobile device is within 5 meters of the camera.

Step 3:

 Navigate to **≡ > WiFi > WiFi information** to turn on the WiFi, then the WiFi name and the password will be displayed.

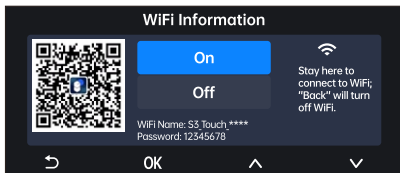

* Please remain on this page while connecting to WiFi, as getting back will disable the WiFi connection.

 
 
* If you stay on the WiFi Info. for more than 2 minutes without connecting to the APP, the WiFi will automatically turn off for better experience.

Step 4:

Open the **Pelsee Cam** App and grant the necessary permissions, then register an account and log in to the App with your email address.



Step 5:

Tap on **Add Camera** to check the wizard and start connecting.

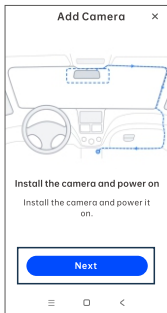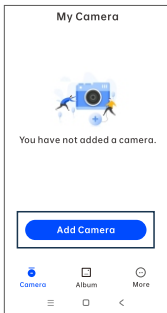


Step 6:

  Tap on **Connect WiFi** and go to **Settings > WLAN** of your mobile device to search for the **S3_Touch_****** WiFi. Enter the password **12345678** to complete the connection process.

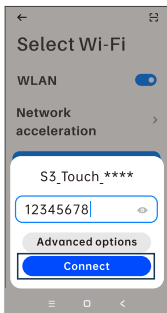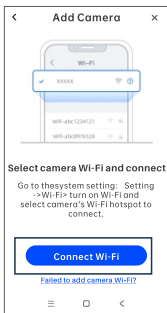

Step 7:


 
Return to the App and wait for the connection. Tap on **Access Camera** to enter the homepage.

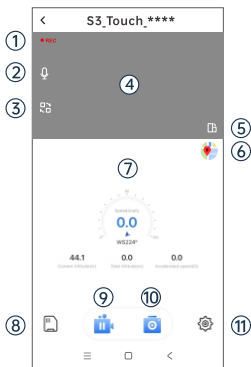

- ① Recording Status
- ② Microphone On/Off
- ③ Switch Cameras' Views
- ④ Live View
- ⑤ Orientation (Portrait or Landscape)
- ⑥ Map
- ⑦ GPS Speed and Direction
- ⑧ Recorded Videos and Captured Images
- ⑨ Start/Stop Recording
- ⑩ Take Photo
- ⑪ Camera's Detailed Settings

* Camera File

  To view and manage your camera files, tap on the icon  on the homepage. From here, you can see all your videos and photos, and select a file to delete or download.

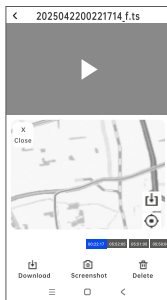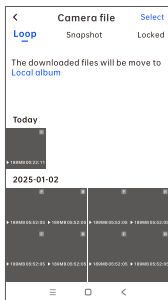

- ① **Loop:** Standard videos from the front and rear cameras
Snapshot: Captured photos from the front and rear cameras
Locked: Locked videos from the front and rear cameras
F: Videos or photos from the front camera
R: Videos or Photos from the rear camera
- ② Tap **Select** on the upper right corner to select the file(s) to download it/them into your mobile device or delete the file(s). After downloading the file(s), you can edit or directly share it(them) to social media.



Important Tip:

When connected to the WiFi, the camera cannot be operated.
If you would like to operate on the device, please disconnect the App first.

3. ADAS(Advanced Driver-assistance System)

Important:

Enabling the ADAS will reduce the resolution of the front camera to 2.5K.

ADAS can help perceive the world in the front of the vehicle, and then provide information to the driver. This smart driving function does not need to be calibrated manually. Just ensure the front camera's view captures 60% sky and 40% road.

① ADAS On/Off:

Enable or disable all the five ADAS functions.

② Forward Collision Warning:

The dash cam will warn you if there is a potential risk of collision with the vehicle ahead in the same lane. Your vehicle should be driving at a speed of over 30 km/h. Above this threshold, higher sensitivity increases the likelihood of triggering the warning.

③ Too Close Distance Warning:

The dash cam will warn you if the distance between your vehicle and the vehicle ahead is too close. Higher sensitivity increases the likelihood of triggering the warning.

④ Pedestrian Collision Warning:

The dash cam will warn you of a potential collision in the same lane if the distance between your vehicle and pedestrians is too short. The higher the sensitivity, the greater the likelihood of triggering the warning.

 
⑤ Lane Departure Warning:

The dash cam will warn you if your vehicle tends to drift toward the left or right lane. Your vehicle should be driving at a speed of over 60 km/h. Above this threshold, higher sensitivity increases the likelihood of triggering the warning.

⑥ Front Vehicle Starts Warning:

The dash cam will warn you when the vehicle ahead in the same lane starts moving, especially while waiting at a red light. The higher the sensitivity, the longer your vehicle will remain stopped before the warning is triggered, increasing the likelihood of its activation.

4. Voice Control





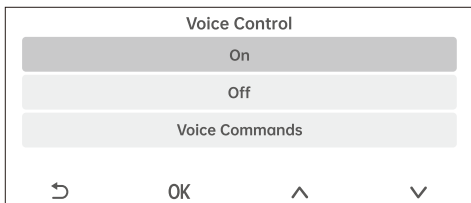


Select **On** or **Off** to enable or disable the voice control feature.

When enabled, you can use the specified voice commands to control certain functions of the dash cam.

Please check **Voice Commands** for the full list of commands.

     5. Settings

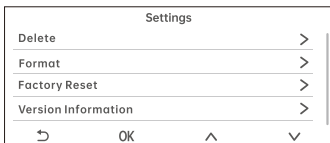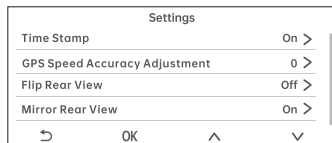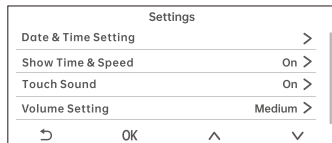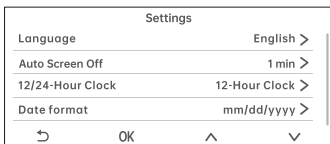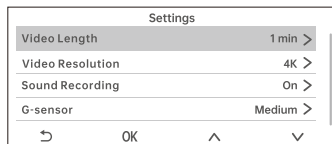

① Video Length

Change the recording time for each video. You can choose from **1 min**, **3 mins**, and **5 mins**.

② Video Resolution

Adjust the resolution of the front camera. Options include **4K** and **2.5K**.

③ Sound Recording

Turn on/off the sound recording during video recording.

④ G-sensor

Set the sensitivity of the G-sensor for collision detection while driving. Choose from **Low**, **Medium**, **High**, or **Off** as needed. If set to **High**, the camera will automatically start recording a locked video during minor collisions. If set to **Low**, the camera will record a locked video during severe collisions. A flashing yellow dot in the upper left corner indicates a locked video.

⑤ Language

Select the language for the dash camera.

⑥ Auto Screen Off

Set the time to enter sleep mode after a certain period of inactivity. Options include **Off**, **1 min**, **2 mins** and **3 mins**.

⑦ 12/24-Hour Clock

Set the time format for the dash camera.

⑧ Date Format

Set the date format for the dash camera.

⑨ Date and Time Setting

Configure the date and time for the dash camera. Swipe up or down to adjust the values.

⑩ Show Time and Speed

Show or hide the time and speed on the live view screen.

⑪ Touch Sound

Enable or disable the sound feedback when tapping on the screen.

⑫ Volume Setting

Turn up or down the volume of the dash camera.

⑬ Time Zone

Select your time zone.

⑭ Frequency

Change the screen fresh rate between 50Hz and 60 Hz.

⑮ GPS Information

View detailed GPS information once the dash camera has searched for sufficient satellites.

⑯ Speed Unit

Switch between different speed units displayed on the screen.

⑰ Time Stamp

Show or hide the date and time on the recorded videos and captured photos.

⑮ GPS Speed Accuracy Adjustment

If the GPS speed indicated on the display is not highly precise, you have the option to manually fine-tune it here.

⑯ Flip Rear View

Flip the rear camera view vertically to change the orientation between upward and downward.

⑰ Mirror Rear View

Mirror the rear camera's view horizontally to change the orientation between leftward and rightward.

⑱ Delete

Delete the recorded videos and captured photos.

⑲ Format

Format your memory card.

⑳ Factory Reset

Restore the dash camera to its factory settings.

㉑ Version Information

Check the firmware version and contact information when needed.

6. Parking Mode

This option includes the **Parking Monitor**, **Time-lapse Recording Duration**, and **Time-lapse Recording FPS**. These functions require an additional Hardwire kit (sold separately).

① Parking Monitor

Enabling any sensitivity level activates the parking monitor function. Higher sensitivity increases the likelihood of triggering recordings while the car is parked. Selecting **Off** disables this function. In this mode, the camera will power on and begin recording a 15s locked video, after which it powers off to preserve your car's battery.

② Time-lapse Recording Duration

Selecting any time duration activates the time-lapse recording function. Selecting **Off** disables this function.

③ Time-lapse Recording FPS

If you choose 1 FPS, the camera will capture time-lapse videos at 1 frame per second during parking, and the same applies for 2 FPS and 5 FPS.

CHECK THE GPS DATA

 
 
Step 1:

Open the **Pelsee Cam** App to see the live view. You can also access real-time GPS speed and direction in the lower part of the homepage.

Tap the map icon to see the live route (for Android device, please tap the icon  to download the offline map first).

Step 2:

Tap  and choose a video to review. You'll also be able to view the detailed GPS route when playing the recorded videos.

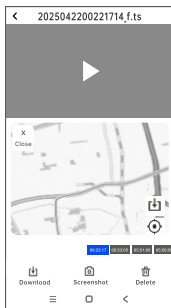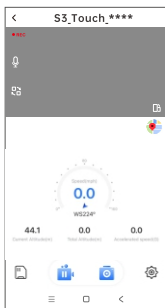

SPECIFICATIONS

Resolution (Front Camera)	4K
Resolution (Rear Camera)	1080P
Video Format	TS
Photo Format	JPG
Input	5V/2.5A

FCC CAUTION

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED Statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).
Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

L'appareil numérique du CIEM conforme canadien peut -3 (b) / nmb -3 (b).

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance. Cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du CNR - 102 et conformité avec RSS 102 de l'exposition aux RF, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs RF et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 0cm between the radiator & your body.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

— — — The symbol indicates DC voltage



RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

This product can be used across EU member states.

EU Compliance Statement: Shenzhen Vycol-Glint Innovations Technology co., ltd hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the Directive 2014/53/EU.



REP Europe GmbH
Address: Prinzenallee 7, 4th floor
40549 Düsseldorf, Germany
E-Mail: info@rep-europe.de



Intercert Global Ltd
Address: 85 Great Portland Street,
First Floor, London, W1W 7LT
E-Mail: info@intercertglobal.co.uk

