



091-11-2784
Distributed by Target Corporation
Minneapolis, MN 55403
Guest Services 1-800-440-0680
©2026 Target Brands, Inc.

REMOTE-CONTROL Shark Water Toy - User's Manual

CONTENTS: • Shark Boat • Controller • User's manual


Ages 3+

WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.

BATTERY INSTRUCTIONS:

• Shark Boat


- Locate and open the battery compartment cover under the Shark Boat.
- Insert 3 X 1.5V AA batteries with polarities matching battery compartment markings.
- Close battery cover and secure screws.
- Reminder: sealing strip **MUST** be in place to prevent water leaking.

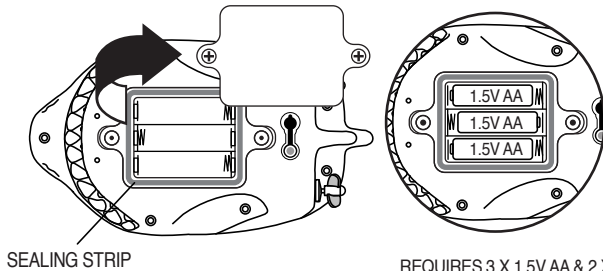

REQUIRES 3 X 1.5V AA & 2 X 1.5V AAA BATTERIES (NOT INCLUDED)


• Controller

- Locate and open the battery compartment cover behind the Controller.
- Insert 2 X 1.5V AAA batteries with polarities matching battery compartment markings.
- Close battery cover and secure screws.
- Reminder: sealing strip **MUST** be in place to prevent water leaking.

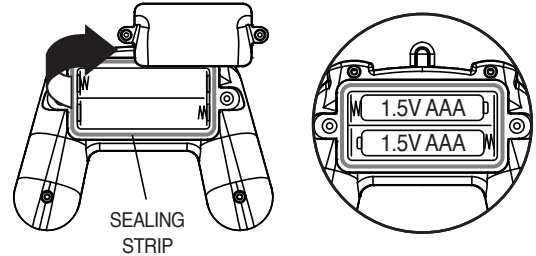

CARE INSTRUCTION:


- Wipe clean, remove batteries and store when not in use.
 - Always keep hands away from propellers.
 - Check and drain excess water for best performance.
1. Unplug **WATER STOPPER**.
 2. Drain water by gently shaking Shark Boat rear pointing down.
 3. Plug the **WATER STOPPER** back in place.

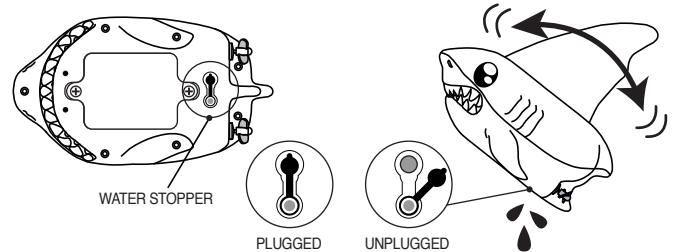


TO PLAY:

AUTO POWER ON


- Automatically turns on when Shark Boat hits the water (WATER SENSORS touch water).
- NO power switch is required.

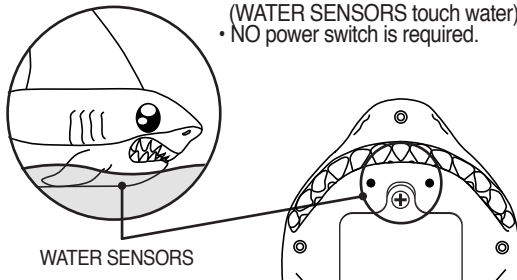


PRESS TO MOVE
FORWARD

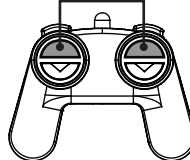


PRESS TO MOVE
BACKWARD

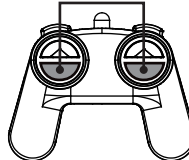

PRESS TO TURN
LEFT

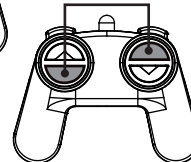

PRESS TO TURN
RIGHT

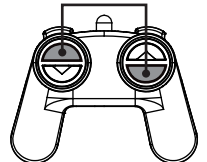

BATTERY WARNING:

- Batteries are to be inserted with the correct polarity and always follow the product and battery manufacturer's instruction.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same equivalent type as recommended are to be used.
- Do not use rechargeable batteries unless specified.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Always remove exhausted or dead batteries from the product.
- Remove batteries from product before storage.
- The supply terminals are not to be short-circuited.
- Batteries may explode or leak if misused.
- Batteries should be installed by an adult only.
- Batteries may present a choking hazard.
- Keep away from young children.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device contains licence-exempt transmitter(s) receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.