

HTC
无线蓝牙耳机98

产品规格
型号: HTC NE98

蓝牙
范围: ≈10m
版本: 6.0

喇叭
直径: 14.2mm
阻抗: 16Ω

耳机功率
输入: 5V≈40mA
电池容量: 40mAh
使用时间: ≈5小时
充电时间: ≈1.5小时

充电仓功率
输入: 5V≈400mA
输出: 5V≈80mA
电池容量: 400mAh
充电时间: ≈1.5小时
充电仓充满电时,能给耳机充电约3次

快速入门指南
使用的请阅读使用说明书
HTC NE98

物品清单

部件

取出耳机并配对

如何佩戴耳机

开机和关机

连接到蓝牙设备

基本操作

功能清除蓝牙配对历史记录

充电仓基本操作

基本操作: 充电仓按键

充电仓显示屏功能介绍

亮度调节

表盘

背景壁纸

语言

相机功能

系统设置

系统菜单

售后服务电话: 400933381

htc

Product Specifications Model: HTC NE98 Bluetooth Range = 10 m Version: 6.0 Speaker Diameter: 14.2 mm Impedance: 16 Ω Earphone power Input: 5 V=40 mA Battery capacity: 40 mAh Battery life = 5 hrs Charging time = 1.5 hrs Charging case power Input: 5 V=400 mA Output: 5 V=60 mA Battery capacity: 400 mAh Charging time = 1.5 hrs Earphone recharges : 3 charges (when case is fully charged) Quick Start Guide HTC NE98	What's in the box Charging case 2 earphones Quick Start Guide USB-C cable	Components Touchpad Earphone LED Earphone speaker Charging contacts Charging case display Multifunction button USB-C port	Take out and pair the earphones If you're using the earphones for the first time, open the lid of the charging case. The LED on one earphone will blink white and cyan alternately, indicating that they are in pairing mode. Note: - If the earphones have not been paired with each other, they will automatically enter pairing mode when turned on. You'll hear two beeps when pairing is successful. - If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect.	How to put on the earphones																						
Power on and off Power on Opening the charging case lid automatically turns on the earphones. To manually turn on each earphone, press and hold the touchpad for three seconds. Power off Placing the earphones in the charging case and then closing the lid automatically turns off the earphones. To manually turn off each earphone, press and hold the touchpad for five seconds. Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.	Connect to Bluetooth device On your device, turn on Bluetooth and choose to connect to "HTC NE98".	Basic operations: Touchpads Power on/off Tap once to power on/off. Tap and hold for 3s/5s to toggle music mode. MUSIC MODE Tap once to play/pause. Tap and hold for 2s to skip forward/backward. Tap and hold for 3s to shuffle/randomize. Tap and hold for 5s to reset earphones.	Key functions • Play/Pause: Tap either touchpad once. • Volume up: Tap the right touchpad twice. • Volume down: Tap the left touchpad twice. • Play previous track: Tap the left touchpad three times. • Play next track: Tap the right touchpad three times. • Answer/End call: Tap either touchpad once. • Reject call: Press and hold either touchpad for two seconds. • Activate voice assistant: Press and hold the left touchpad for two seconds. • Switch modes: Press and hold the right touchpad for two seconds. • Music mode: High quality audio for music listening (default). • Game mode: Low latency audio for gaming. Note: - When switching, the louder notification sound indicates the Game mode. - When using only a single earphone, mode switching is disabled. The gesture will activate the voice assistant instead. - For TikTok controls, see page 22. Indicator LEDs <table border="1"> <thead> <tr> <th>Earphone LED</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Blinking white and cyan</td> <td>Unpaired</td> </tr> <tr> <td>Off</td> <td>Paired or powered off</td> </tr> </tbody> </table>	Earphone LED	Status	Blinking white and cyan	Unpaired	Off	Paired or powered off	How to reset the earphones If the earphones fail to pair or reconnect to each other, reset them by simultaneously tapping both touchpads five times. Note: This will clear their Bluetooth pairing history.	Basic operations: Case display Initialization If you're using the display for the first time, make sure that the case is charged then press and hold the multifunction button for three seconds. Turn on the display Do any of the following: - Open the lid. - Tap the display once. (Tap to wake up must be on.) - Press the multifunction button once. Turn off the display The display automatically turns off after 30 seconds of inactivity. To manually turn it off, press the multifunction button twice.	Navigation Swipe right: View the Menu options/Previous screen. Status icons <table border="1"> <thead> <tr> <th>Icon</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Solid red</td> <td>Earphones are disconnected from the case and your phone.</td> </tr> <tr> <td>Solid white</td> <td>Earphones are disconnected from your phone.</td> </tr> <tr> <td>Solid blue</td> <td>Earphones are connected to the case and paired with your phone.</td> </tr> <tr> <td>Solid yellow</td> <td>Earphones are not charging in the case.</td> </tr> <tr> <td>Solid green</td> <td>Earphones are charging in the case.</td> </tr> <tr> <td>Green lightning icon</td> <td>The case is charging.</td> </tr> </tbody> </table>	Icon	Status	Solid red	Earphones are disconnected from the case and your phone.	Solid white	Earphones are disconnected from your phone.	Solid blue	Earphones are connected to the case and paired with your phone.	Solid yellow	Earphones are not charging in the case.	Solid green	Earphones are charging in the case.	Green lightning icon	The case is charging.
Earphone LED	Status																									
Blinking white and cyan	Unpaired																									
Off	Paired or powered off																									
Icon	Status																									
Solid red	Earphones are disconnected from the case and your phone.																									
Solid white	Earphones are disconnected from your phone.																									
Solid blue	Earphones are connected to the case and paired with your phone.																									
Solid yellow	Earphones are not charging in the case.																									
Solid green	Earphones are charging in the case.																									
Green lightning icon	The case is charging.																									
Basic operations: Multifunction button - Press once: Turn the screen on/off. - Link the earphones to the charging case. - Press and hold for ten seconds: Restart the case display. - Press and hold for two seconds: Open the System menu. The system menu contains the following options: About, Factory reset, Restart, and Power off.	Case display feature overview Home screen Swipe to unlock the screen. Menu Swipe left or right to view the items and tap to access its options. Music Previous Play/Pause Next Volume down Volume up	AI Translation Displays translated content synchronized with the connected app. Equalizer Tap any of the equalizer presets to use it. Find my earphones Tap and hold the Find my earphones button. Once you've found it, tap the button again to stop the beeping.	Voice assistant & Game Voice assistant Tap to start. Tap to activate your phone's voice assistant. Game Tap to start playing.	System settings Configure your charging case settings. System menu Check your device details, perform a factory reset, restart or power off your device.	Brightness, Lock screen wallpaper, Background wallpaper Brightness Adjust the screen brightness by swiping up or down or set an idle screen sleep timer. Lock screen wallpaper Choose a wallpaper to use for the lock screen. Background wallpaper Choose a background image.	Time, Language, Tap to wake up Time Set the time, date, and format to use for the display. Language Choose the language to use for the display. Tap to wake up Enable this so you can turn on the display by tapping it.																				
TikTok If you're browsing TikTok while your earphones are connected to your phone, you can use your earphones to scroll through and like videos. <table border="1"> <thead> <tr> <th>Action</th> <th>Display</th> <th>Earphones</th> </tr> </thead> <tbody> <tr> <td>View previous video</td> <td>Tap</td> <td>Tap any touchpad twice</td> </tr> <tr> <td>Like the video</td> <td>Tap</td> <td>Long press any touchpad</td> </tr> <tr> <td>View next video</td> <td>Tap</td> <td>Tap any touchpad once</td> </tr> </tbody> </table> Notes: - To use this feature on iOS, users must turn on AssistiveTouch in Settings > Accessibility > Touch > AssistiveTouch. - This feature may not be compatible with all phone models. Camera While your earphones are connected to your phone, you can use your charging case to take photos with your phone's camera. To take photos, open your phone's default camera app, and then tap [Camera] on the charging case display. Notes: - This feature only works with the pre-installed camera app. - This feature may not be compatible with all phone models.	Action	Display	Earphones	View previous video	Tap	Tap any touchpad twice	Like the video	Tap	Long press any touchpad	View next video	Tap	Tap any touchpad once	Important Safety Instructions Carefully read all the safety instructions in this document before using the product. General safety instructions • Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed. • Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty. • Only use the product in environments where Bluetooth transmission is permitted. Personal safety instructions • Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating. • Do not use the product when performing high-risk tasks that require your full attention. • For your hearing protection, do not listen at high volume for long periods. • Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking.	Battery safety instructions The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal. • Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight. • Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F). • Do not use or store the product in dust-prone, smoky, high-temperature, high-pressure, or highly humid environments. • Keep the product dry and away from liquids or moisture. • Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC. • Do not use the product charging for longer than eight hours. • Dispose of the product responsibly according to your local waste management guidelines.	FCC ID: ZBHJR-NE98 FCC Caution: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the											
Action	Display	Earphones																								
View previous video	Tap	Tap any touchpad twice																								
Like the video	Tap	Long press any touchpad																								
View next video	Tap	Tap any touchpad once																								