

Thank you to snail for choosing a smartphone

A smart phone Powered by Android™, stylish appearance design, high-quality manufacturing process, multi-touch capacitive touch screen, capacitive touch buttons, let you enjoy a comfortable feel experience.

Using a device powered by Android 14, support FDD / TDD / WCDMA / GSM and network, can automatically switch network connection mode according to the network connection status, so that you enjoy high-speed Internet access, simple and easy to use operation interface, but also let you get started faster.

Do not use any tool root this phone, otherwise there may be irreparable failure, the root phone is not subject to warranty 1

Please read the instructions carefully before use.

Safety precautions

Read the concise rules below. Failure to follow them may lead to danger or violation of the law. This specification provides more detailed information on safety matters



Safe boot

Do not turn on the mobile phone when it causes interference or danger



Traffic safety first

Please comply with all relevant local laws and regulations, and drive a car with both hands as much as possible. Traffic safety should be considered first when using mobile phones in suburban cars.



Shut off when refueling

In
th
e
re
fu
el
in
g
cl
ea
n
(o
nl
y
re
pa
ir
st
at
io
n)
or



near the smoke,
chemical
preparation place.
Please do not use
the cell phone.

Turn it off when taking the plane

Mobile phones can cause interference, and using them on planes is not only dangerous but also illegal



Shutoff near the medical equipment affect the performance. It should be shut off near the blasting site.



Please comply with any relevant Hospitals into restrictions. Do not use the health care equipment where the blasting facilities may operation is performed.



Reasonable use
use devices sensitive to wireless frequencies. Only use the phone in a normal position, and do not touch the antenna area without reason. Please effectively unless necessary.



Use of a qualified repair service
comply with any rules or regulations. Only the qualified maintenance personnel can install or repair this product.

All wireless devices can be disrupted, which can

Introduction to this manual

This practical manual describes the concise information about how to use a mobile phone. If you want to quickly master the basic practical methods of this mobile phone, please refer to "Understand the mobile phone".

	Eye scene	
Safety	precautions.....	6
	Safe boot.....	6
	Traffic safety first.....	6
	Shut down in the restricted area	6
	disturb.....	6
	waterproof.....	6
	The phone is placed out of the son's touch.....	6
	Accessories and batteries.....	6
	Professional services.....	6
	Install the SM card or USIM card and the battery	6
	Charge the battery.....	7
	Power-on and shutdown.....	8
Learn about	cell phones.....	8
	Use the touch screen.....	9
	Lock or unlock the touchscreen and buttons.....	10
	Gradually understand the standby function-1	1
	Access to the application.....	12
	Window small lang piece.....	12
	Custom mobile phone.....	13
	Fingerprint and fingerprint unlock.....	15
	dial.....	15
	dial.....	15

call log.....	15
dial.....	16
Function menu.....	16
information.....	16
camera.....	16
music.....	16
photo album.....	16
hold-all.....	17
radio.....	17
recorder.....	17
clock.....	17
browser.....	17
file management.....	17
calendar.....	18
E-mail.....	18
video frequency.....	18
contacts.....	18
collect.....	18
All of the contacts.....	18
cluster.....	18
counter.....	18
set up.....	18
WLAN.....	18

Steaming teeth.....	18
Dual card and mobile network	19
Traffic monitoring.....	19
Other wireless connections....	19
Display and brightness.....	19
Sound and vibration.....	19
About the cell phones.....	-21
<i>Common problems and solutions</i>	21
Unable to start the phone	2 1
Start the cell phone, with a message showing	2 1
SM card error	2 1
Unable to connect to network	22
The number cannot be exhaled	22
The quality of the call is poor	22
The number cannot be called in	22
The contact person cannot hear of you	22
Short standby time.....	22
Cannot charge.....	23

Safety precautions

To use your cell phone safely and effectively, please read the following information carefully before using it.

Safe boot

Do not use mobile phones in places where they are prohibited, or when they can cause interference or danger

Traffic safety first

Do not use your mobile phone while driving, so as not to drive safely.

Shut down in the restricted area

Please comply with the relevant restrictions or regulations. It should be turned off on the aircraft, or near flammable items,

chemical agents or medical equipment.

disturb

Mobile communications may be subject to radio interference that affecting performance

waterproof

This mobile phone is not waterproof, please keep it dry

The mobile phone is placed in a place

Mobile phones and all their accessories (including accessories) should be placed out of the touch of children

Accessories and electric runs

Please use our designated charger, otherwise cause explosion.

Professional services

Do not remove the mobile phone and accessories without authorization. Only authorized organizations can repair the mobile phone.

Install the SIM card or the USM card and the battery

When you order a mobile phone service, you will receive a User Identification Module (SIM) card containing your subscription details, such as the Personal Identification Number (PIN) and optional services. If it uses the 4G (TD-LTE) service, you can

buy a universal User Identification Module (USIM) card. For installing a SIM card or USIM, card and battery

1. If the phone is turned on, please press [switch key] for 3 seconds and select shutdown to turn it off.
2. Use the card pin and remove the cotto on the right side of the phone
3. Insert a SIM card or a USIM card.

If a SIM or USIM card is not inserted, only the non-network services and partial features of the phone can be used.

4. Insert Cato

Charging for electricity

Before the first use of the phone, the battery must be charged. The phone can be charged by using the travel charger provided or by connecting the phone to the computer through a computer data cable.

Use only the manufacturer licensed charger and cable. Unlicensed charger or cable can cause the battery to explode or damage your phone.

When the battery is low, the phone will sound the device and display the message of low power. If the battery is too low, the phone will automatically shut down, and the battery needs to be charged before continuing to use the phone.

Charge with a travel charger

Insert the small end plug of the travel charger into the multi-function socket. Improper connection of the travel charger may cause serious damage to the mobile phone. Due by misoperation

Any damage, will not be subject to warranty.

1. Plug the large end plug of the travel charger into the power outlet

Use the phone while charging, but this will extend the time for the battery to complete the charge:

When charging, the phone will heat up, which is a normal situation and will not affect the service life or performance of the phone;

If the phone cannot charge properly, please take the phone and the charger to the customer service center for inspection

2. When the battery is fully charged, disconnect the travel charger from the phone and remove it from the power outlet

Charge with a circuit data cable

Before charging, make sure that the computer is turned on.

1. Insert one end of the computer data cable (micro USB) into the multi-function socket

2. Connect the other end of the computer cable to the USB port of the computer. Depending on the type of computer cable used, it may have to wait a moment to start charging

3. Disconnect the computer data cable when the battery is fully charged

Connect to the phone and pull it off from the computer.

Format the SD card storage

In the main menu, select Settings stores storage information to format SD storage.

Before format SD card storage, remember to back up all the important data stored in the phone. Manufacturer Warranty Services does not include data loss due to user operation

Boot and shutdown

If the phone boots, long press [switch key] the phone will turn up and automatically connect to the mobile 4G network.

If you want to shut down, long press [switch key], and then select

Choose to shut down.

In areas where wireless equipment is prohibited (e. g. aircraft and hospitals and hospitals), follow all posted notices and instructions from official personnel.

If you want to use only the non-network service of the mobile phone, you can switch to flight mode, long hold [switch button], and then select flight mode

Understand the mobile phone

number	name	be interrelated
1	The USB / charging port	Also known as I / O port: USB interface and charging interface two in one.
2	Side volume	Also known as volume side key
3	The main screen	also known as LCD
4	Headphone jack	The 3.5mm headphone jack
5	microphone	Also known as the phone delivery device
6	Switch machine health	Short press to enter the lock screen state or light up the screen. Long press to enter the phone option, you can select the flight mode shutdown and heavy white phone
7	telephone receiver	Also known as the receiver: to ensure the quality of the call, please keep listening close to the ear
8	camera	Built-in camera
9	loudspeaker	Lama Yi, also known as the " speaker

Use the touch screen

Using the phone touch mode screen allows you to more easily select items or perform functions
Understand the basic operation of using the touch screen:

To avoid scratching the screen, do not use sharp tools
Do not use the stock touch screen for other electronic devices. Electrostatic discharge may cause the face operation screen failure

Do not let the touch screen touch the water. The touch screen may fail in wet environments or when touching water

To achieve the best use effect, please remove the touch

screen protector before using the phone

The touch screen has a protective layer that reveals the tiny charges emitted by the human body. For optimal performance, click on the touch screen with your fingertips. The touch screen does not respond to the touch of sharp tools, such as a needle pen or pen.

The touch screen can be controlled by performing the following actions:

Click: Click once with your finger to select or start a menu, option, or application

Click and Hold: Hold the item for more than 2 seconds, and the list of options will pop up

Scroll: Click and up, down, drag your finger left or right to move to the items in the list

Drag and drop: Click and hold an item with your finger, then drag your finger to move the item.

Double click: When viewing a photo, quickly click twice with your finger to zoom in or out.

If the phone is not used for the specified length of time, the phone turns off the touch screen. If you want to open the touch screen again, press the [switch key]

Background light time can also be adjusted. In Standby mode, then

select Settings to display one sleep and one sleep time

Lock or unlock the touch screen and button

The touch screen and buttons can be locked to prevent any unexpected phone operation

To lock, press the [Switch key]. If you want to unlock, press [switch key] and then prompt on the screen

Unlock manually

Also step to understand the special machine function

When the phone is in standby mode, you can see the standby screen. In the standby screen, view the status of the phone and access the application.

The standby screen has 2 panels by default. Scroll left or right to select a standby screen panel.

Choose the source of board paper

You can set the key paper from the definition standby screen or lock

screen interface (the wallpaper can customize the images in the album)

Lock screen wallpaper: Set up the lock screen interface image. Make the desktop wallpaper: set up the desktop wallpaper

Dynamic wallpaper: you can set up the dynamic wallpaper

Move the items on the special machine screen

Click and hold the item to move
Drag the item to the desired location after the item vibration.

> **Remove the project from the machine curtain**

Click and hold the item to be removed, vibrate and the delete icon appears at the top of the screen

Drag the project to the remote removal icon

Use the shortcut panel

In standby mode or when using an application, touch the tip indicator circle area of the screen, and then drag your finger down to open the shortcut panel. Other features such as wireless connectivity can be started or canceled, and a list of notifications, such as information, call, activity, or processing status is accessed. To hide the list, drag up to the lower border of the list

Click the shortcut icon in the shortcut panel to use the following options:

Wi-Fi: Start up or turn off the Wi-Fi connection function. Click on this icon to enter the Wi-Fi setting interface.

Data connection: Start up or close the data connection.

Bluetooth: On or off the Bluetooth wireless connection function.

Flight mode: Start-up or off of flight mode

Scenario mode: standard, mute, and switching between conference and outdoor mode

◆ GPS location information: white move or close the position information function. Click on this icon to enter the location information setting interface.

One-click cleaning: click to end the background application and release part of the memory.

Automatic rotation: click on the white or turn off the automatic rotation

Brightness: adjust the brightness of the screen thin.

Power quantity: display the power quantity usage status of the equipment

Traffic monitoring: click to view the use of the flow of this month

Dormancy: Adjust the delay time for the screen to close automatically.

Super screen capture: screen recording and other functions

One-button lock screen: click the device off screen lock standby.

Flashlight: Turn the flashlight on or off

More: you can set up the shortcut function and sequence display in the shortcut panel

Access to the application

If you want to access the phone app: let open the phone lock

Scroll left and right to another application screen Select boot program:

Press the virtual HOME key to return to the main standby screen.

The phone has a built-in action sensor that detects the direction of the phone. If you rotate the phone when using some functions, the phone interface

will automatically switch to the mode screen mode if you want to set the interface will not change with the rotation of the phone, open the shortcut panel at the top of the screen, and then select automatic screen, or select to set a display rotation screen automatically or keep longitudinal.

Rich O widget

Click Menu Jian from standby and select the pl-in.choose and appoint

Mea small part long press, drag to standby

Custom mobile phone

Customize the phone according to personal preferences: theme and desktop slide effects, etc

Set the current time and date

In the main menu interface, then select the setting date and time

Set the time and date and change the other options.

Turn on or off

In the main menu interface, then select set sound and remote standard, click the right setting to select touch prompt.

Adjust the bell volume

Press up or down to adjust the ring volume.

Switch to the Christian voice mode

To mute or mute the phone, perform one of the following:

In the shortcut panel scenario mode, directly switch in standby mode, hold [switch key],

Then select mute
mode,> change ringtone

In the main menu interface, then select Set Sound and Notification Standard One Point Right to set a ringtone / default notification prompt tone / message ringtone. Select ringfrom the list, then select OK

Select the added paper of the special machine screen

In standby mode, select Set a wallpaper and

Magazine lock screen Select the type of wallpaper to set

Adjust the brightness of the alliance display screen

Adjust the screen brightness under the Settings Selection Order:

1. In the main menu interface, then select Set to display brightness.
2. Close the closing button on the automatic adjustment brightness.
3. Drag the slider to adjust the brightness level

The brightness level of the display affects the speed at which the phone consumes battery power

> **Set the unlock pattern**

You can set up the unlock pattern to prevent others from using the phone without permission

1. In the main menu interface, then select Settings–Security one screen then lock pattern.
2. Watch the screen prompt and example pattern and select the next step (if necessary).
3. Pull your finger to connect at least four points and draw a pattern.
4. Choose to Continue
5. Redraw the pattern to confirm.
6. Select a confirmation

After setting the unlock pattern, the unlock pattern is required to be entered every

time you turn it on. If you want to stop the unlock pattern, select the privacy and security screen and lock the lock.

Note: If None is selected, the screen will not be locked.

If you forget to unlock the pattern, you should take your phone to the customer service center to unlock it.

The manufacturer is not responsible for the loss of passwords or private information or other damage caused by the use of illegal software.

Lock the SIM card and fill in the USM card

The phone can be locked by white movement with the PN code provided by the SIM card or USIM card.

1. In the main menu interface, then select the SM card lock mode to lock the SIM card.
2. Enter the PIN code and select OK.

If you start the PIN lock, you must enter the PN code each time you start on.

If the PIN code is incorrect three times, the SIM card or USIM card is locked. A PIN unlock key (PUK) must be entered to unlock the SIM card or USIM card.

If the SIM card is caused by entering the wrong PUK

Or USIM card lock, please take the card to the service provider to unlock,

Fingerprint and fingerprint unlock

fingerprint identification

In order to make the fingerprint recognition function work, the fingerprint information needs to be registered and saved to the device: the following functions can be used after recording the correct and valid fingerprint

2. Lock the screen

Registered fingerprint

1 On the main screen, point set a fingerprint identification (the standby PIN code will be

successfully entered into fingerprint management) a fingerprint tube

Add a fingerprint

2. Put the finger on the fingerprint input device and input a valid fingerprint

3 Raise the finger when the device vibrates, and then put the finger again. On the recognizer, repeat one finger every week until the fingerprint is successfully recorded

4 In the application management to select the need to open the fingerprint lock should be

need

Figure except fingerprint

You can use fingerprint identification to reverse a registered fingerprint

The main interface sets one fingerprint identification, one fingerprint management and selects the fingerprint to be deleted

dial

The number

Learn how to use call features, such as making and answering calls with available options during the call, or to customize and use call-related features.

call log

You can view call records filtered by type

1. In standby mode, click the dial key to enter the dial interface and the call recording interface.

2. In the call record interface, you can record the call by the phone.

3. Select the record to view the call details.

The plate

Click the icon in the lower right corner to fold up or pop up the dial to contact the call record. Each time you dial the contact number, the contact will automatically join the call record page

Functional policy sheet

Contains contacts, quick dial, and setting options.

information

Learn how to create and send SMS (SMS) or SMS (MMS), and view and manage sent or received information. Additional costs for sending or receiving information outside the local service area,

consult the service provider for more information.

camera

In standby mode, the camera can perform the photo and camera function. Camera program takes high-quality photos, support continuous shooting, special effects and other more professional shooting original mode, support shooting high-quality video

music

Learn how to use a music player to listen to your favorite music.

Depending on the mobile phone software, some file formats are not supported.

If the file size exceeds the available storage space, an occur when opening the file.

Zhang jia music

Transfer music files to
the phone to download
from the wireless Web
Copy through the data line
Transmission via Bluetooth

photo album

Learn how to view the images in your memory card and share their videos

hold-all

The toolbox contains a radio, tape recorder, clock, flashlight, one-button lock screen for your easy use, or into the toolbox according to your personal preferences

radio

Listen to the radio program on the radio and can record your favorite while listening, and always connect the provided headphones before using the FM radio (which serves as a radio antenna)

recorder

Help you quickly save voice records, you can set your favorite sound quality and recording mode

clock

You can set up the clock, view the world time, and use the timer and stopwatch functions

Note: Support the shutdown of Hong Zhong.

Trainer

The built-in browser enables faster Internet access speed, more secure website navigation, more convenient mobile Internet access, and more enhancements. High-speed download, skin change, full-screen survey, etc. The built-in viewer is not only easy to use, but also powerful.

file management

Learn to quickly and interestingly open all your pictures, movies, music, documents, and other files stored in your phone.

pay attention to:

1. In addition to MP3, MP4 and picture files, the system files in the mobile phone storage, please do not move and state except;

2. It is recommended to install the APK installation package of the mobile phone storage system. If the manufacturer installs the APK package and resumes, the manufacturer will not bear any responsibility

calendar

You can view the date, the lunar calendar and set calendar events for easy use

E-mail

Send or receive email by mobile phone by configuring a personal or corporate email account

video frequency

You can view, divide video files and sort videos

contacts

Receive can

Make it easier for you to manage your contacts. Each time

after dialing the contact number, the contact will automatically join the frequent contact, the frequent contact can be added to the collection

Note: Only mobile phone contacts can use the collection work

ability

All contacts

Learn how to create and manage a list of personal or company contacts stored on phone memory or SM card or USM card. Save the name of the contact, cell-phone number, Home phone number, email addresses and more information.

cluster

Set up the mobile phone contact population group.

counter

Learn how to perform math directly on a phone, like a normal handheld or desktop calculator.

set up

WLAN

Set the status of a WLAN, network notifications, add networks, etc

PDA

Set the Bluetooth status, search for the Bluetooth devices, and modify it

Bluetooth name, etc

Dual card and mobile network

SM card management: this function can choose to close or open the SIM card; select whether the data connection and international warm tour are open;

Traffic monitoring

Traffic monitoring: view the SIM card traffic usage.

Other wireless connections

Flight mode: It can cut off all communication signals. Default SMS application; Set the default SMS application

Network and sharing and portable hotspot: WAN hotspot, USB sharing network, Bluetooth sharing network. Network sharing and portable hotspot settings

VPN:, you can add a VPN profile,

Mobile network: Set up the data connection.4G services, preference settings, etc.

Measurement and brightness

Set up functions related to mobile phone display, such as screen standby time, automatic screen rotation, interactive screen screensaver, screen lock notification, brightness adjustment, wireless display, etc

Sound and perturbation

Set up the cell phone mode. Default mode: standard, silent,

Meeting, in an outdoor mode

Set the mobile phone ringtone, message ringtone, tone, quantity, etc., and can also set the white definition scenario mode

memory

Check the mobile phone and the SD card storage situation

Electric ground

Check the battery usage of the mobile phone

apply

Local management applications and change the management settings for the installed applications

position information

Location information: Set the positioning mode to view the nearest location information request and location information service.

safe

Screen lock: set to no, slide, voice unlock pattern, PIN, fingerprint, password lock mode.

Enable widgets: Open or close the widget of the lock screen page.

Owner information; when edited, your edited information is displayed at the standby lock

Encrypt mobile phone: please check the instructions for details.

Set up the SIM card lock:

Lock SM card: click lock SM card, enter PIN code to open white lock SIM card function.

Change the SM card PIN: first input the original PN code, and then enter two new PIN code.

Display Password: Turn the display password on and off

Device Manager: View or deactivate the Device Manager.

Unknown source: Whether applications from unknown sources can be turned on and off

Self-start management: allow or prohibit the application boot to run automatically

Application rights: Manage application rights for security and privacy

Mobile phone anti against theft: remotely lock the phone or destroy data remotely

Storage Type: displays the type of storage

Trust credentials: Use certificates and credentials to ensure safe use of each application

Install from the phone storage: install the encrypted certificate stored in the phone storage

Clear credentials: state except the credentials in the phone, and

Reset the password.

account

Add an account: Change the settings for the automatic synchronization features or manage the accounts you want to synchronize

Language and affection

Language and input method: you can choose the language, set the keyboard, and select the input method.

Backup and reset

Backup and reset: restoring the factory default setting will clear all data on the phone. Be careful.

Date and time

Automate the date and time: capture the time by using the network.

Automatically determine the time zone: to use the time zone provided by the network

Set date: manually set the current date, set time:

manually set the current time select time zone: set the local time zone

Use a 24-hour format: Set the display time in a 24-hour format. Select date format: Select the date format.

Timed switch machine

Set the time when the phone is switched on and off

Smart plastic auxiliary

Including intelligent wake change, intelligent answer, three-finger screen capture, application split body, space operation, auxiliary functions and other functions

put a seal on

Connect the printer to print the required pictures and other files

About mobile phones

Query the information about the mobile phone, such as system upgrade, status information, legal information, mobile phone model, version number, processor and other information

Common problems and solutions

In order to save your time and unnecessary expenses, please conduct the following simple inspection before the professional after-sales service

Can't move your phone in vain

Check to hold the [switch key] key for at least 1 second,

Check that the battery power is exhausted, and please charge.

Start the mobile phone, there is a fear of interest display

Enter the mobile phone lock password, choose the automatic lock function, must enter the phone password before use.

Input PIN code, select the function of PIN, must input PIN code.

Input the PUK code: connect the input error PIN code for three times. It will lock the SM card and shall enter the PUK code provided by the operator.

SM card error

On the metal surface of SIM card, wipe the metal contact point of SIM card with a clean cloth.

If the SIM card is not installed, install the SIM card correctly

according to the manual instructions.

SM card is damaged, contact your web service provider

Can't connect with the same complex

The signal is weak, please move to a strong signal area and try again. Beyond the network service provider of the network frontier cover area.

The SM card is invalid, contact your network provider

The number cannot be exhaled

Please confirm whether you press the dial button after dialing. Please confirm whether the call is prohibited due to overdue

payment. Please confirm that the SM card is valid.

Please confirm if the call limit function is set and that the fixed dial function is set.

Call circle amount whole

Please check if the volume adjustment is not appropriate.

Radio waves cannot be effectively conveyed by using mobile phones in poorly receiving areas, such as near tall buildings or in basements.

Using mobile phones during periods of intensive calls, such as commuting,

Line congestion causes no calls.

The number cannot be called in

Please confirm that the phone is turned on and connected to the network. Please confirm whether calling is prohibited due to arrears please confirm whether the SIM card is valid.

Please confirm that the call limit feature is set.

The contact could not hear the question

Please confirm that the microphone is turned on

Please keep the bottom of the phone close to your mouth

Special time is short

The standby time is related to the system settings of the network and may be in a poorly receiving area. When the signal is not received, the phone will continue to launch to find the base station, consuming a lot of battery power, resulting in shorter standby time. Please move to a strong signal place to use or temporarily turn off the phone.

For the battery replacement, please replace the new battery

Unable to charge

Poor contact, check whether the plug is well connected

After up, wipe the wiring port
of the phone and battery with a
soft and clean cloth

When charging in an environment
below 0°C or above 45°C, change the
charging environment

Battery or charger is damaged and needs replacement.

If the above guidance
information cannot help you to
solve the problem, please record
the model and serial number of your
mobile phone, authorization, or

insurance policy information, and a clear description of the problem, and then contact the local after-sales service provider

Android is a trademark of Google LLC.

customer

customer name: _____ contact number: _____

address: _____

product name: _____ product model: _____

Seller Unit and Address: _____

date of purchase: _____ year _____ moon _____

Daily Invoice Number: _____

maintenance

date	failure logging	sign one's name

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The device has been evaluated to meet general RF exposure requirement.
The device can be used in an uncontrolled environment without restriction.

This device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. The SAR limit of USA (FCC) is 1.6 W/kg averaged. Device types: TD-LTE digital mobile phone (FCC ID: 2BVYF-S26UITRA) has also been tested against this SAR limit. SAR information can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device FCC ID number for search. This device was tested simulation typical 10mm to body. To maintain compliance with FCC RF exposure requirements, use accessories should maintain a separation distance between the user's bodies mentioned above, use accessories should not contain metallic components in its assembly, the use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.