


材质：80g书写纸,双面印刷,钉装； 尺寸：140*140mm,共16页；

PETKIT™

USER MANUAL

PETKIT YUMSHARE SOLO 2 WITH CAMERA
SMART PET FEEDER

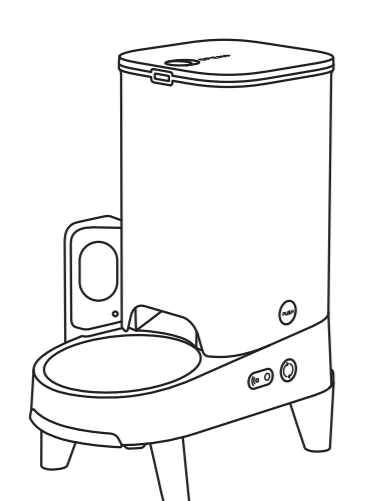

Please read the user manual carefully before using the product and keep it handy for future reference.

TABLE OF CONTENTS

PACKAGE LIST 3

PRODUCT INTRODUCTION 4

INSTALLATION GUIDE 6

USAGE GUIDE 9

CLEANING AND MAINTENANCE 11

VIDEO GUIDE 13


BASIC SPECIFICATIONS 13

TO OUR VALUED USERS 14

SAFETY INSTRUCTIONS 14


01 PACKAGE LIST

* Please confirm that the following accessories are complete before installation and use.
(Batteries or screwdrivers are not equipped and need to be purchased separately.)

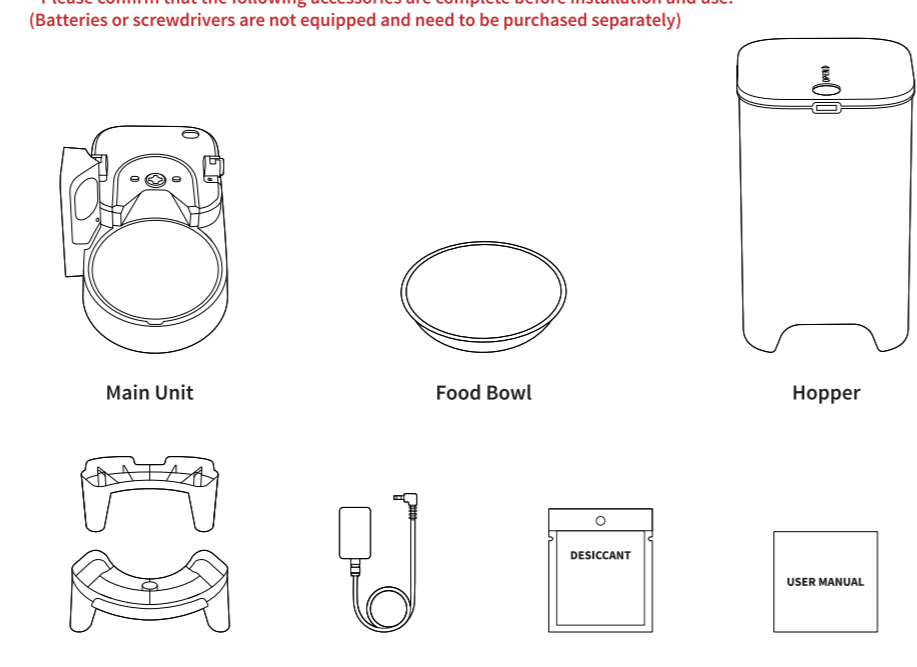

* Due to continuous product improvements, there may be slight differences in the actual product (including but not limited to appearance, structure, and color). The product image (displaying packaging and promotional material) are for reference only.

02 PRODUCT INTRODUCTION

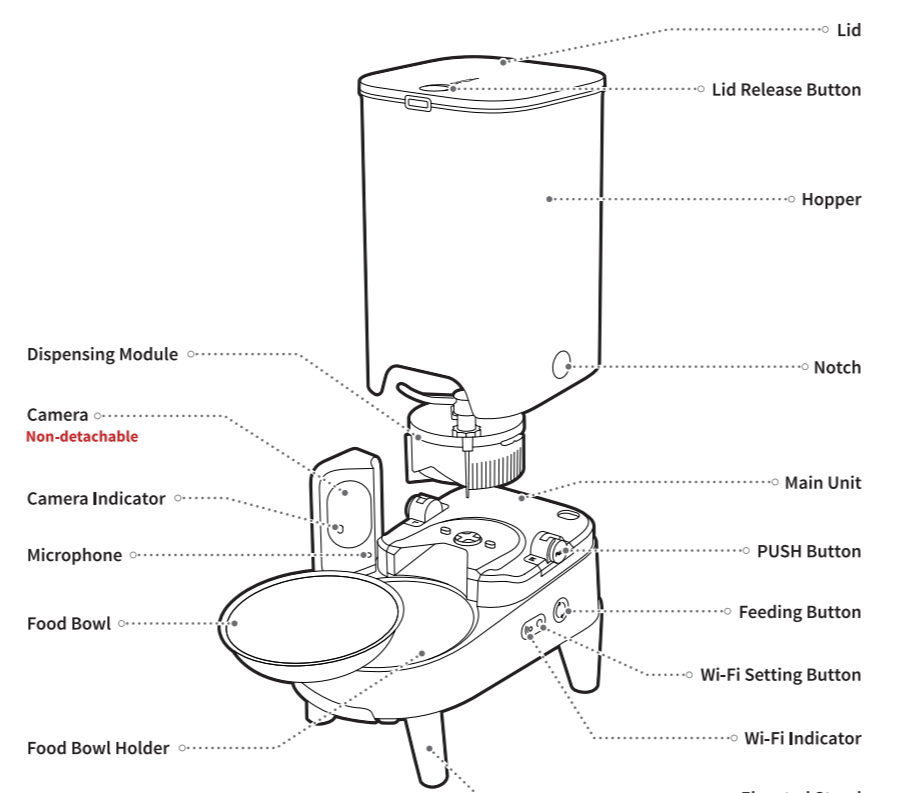

03 INSTALLATION GUIDE

3.1 Installing the Main Unit

● Face the main unit on the level ground or desk.

● Lift the hopper, align the notches on both sides with the PUSH button on the main unit, and place it vertically downwards.

● Press and hold the PUSH buttons until they are fully stuck into the notches.

● Turn the feeder upside down. Remove the two rear anti-slip pads. Insert the elevated stand marked "BACK" into the rear slots of the feeder.

3.2 Connecting to the Power Supply

Take out the power adapter and insert it into the power port, then connect it to the power supply.

3.3 Installing Batteries

Depending on your usage needs, you may choose to install batteries. If needed, install the batteries before attaching the elevated stands. (Please purchase batteries separately. Only alkaline batteries are supported.)

● Unscrew the screws and remove the battery cover.

● Install five AA batteries (pay attention to the orientation).

● Install the battery cover and tighten the screws.

Note: Replace promptly when low on power. If away for long, check and replace with new ones.

3.4 Installing the Desiccant

● Press the lid release button to the right as shown in the picture, and lift it up to remove the lid.

● Open the desiccant compartment, put the desiccant in it, and close the desiccant compartment.

封面

02

03

04

05

06

07

08

04 USAGE GUIDE

4.1 Adding Pet Food

● Remove the lid and add pet food. Do not exceed the MAX line.

Recommended kibble size: 12mm (0.47in)
Recommended free-fall food size: 25mm (0.99in)

● Install the lid. Insert the rear side of the lid into the two holes above the hopper, then press down on the lid.

4.2 Indicator Light


Wi-Fi Indicator	Slow flashing white	Fast flashing white	Solid white
Status	Device is not connected to Wi-Fi	Device is connecting to Wi-Fi	Device is connected to Wi-Fi

The camera indicator can be turned on or turned off in the PETKIT App. In battery mode, the camera indicator is off.

Camera Indicator	Solid green	Light off
Status	Camera is turned on	Camera is turned off

4.3 Manual Feeding


Press and hold the button to dispense food. Release it to stop dispensing.

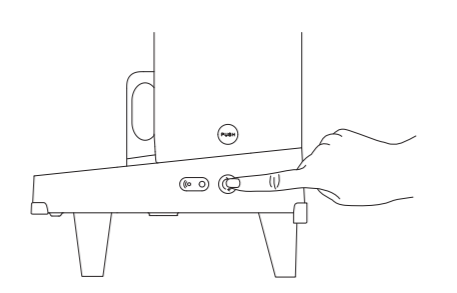

4.4 App Binding

● Download the PETKIT App from the App Store or Google Play. Or scan the QR code to download it.

● Open the App, tap "+" to add the device, then complete the binding following the instructions.

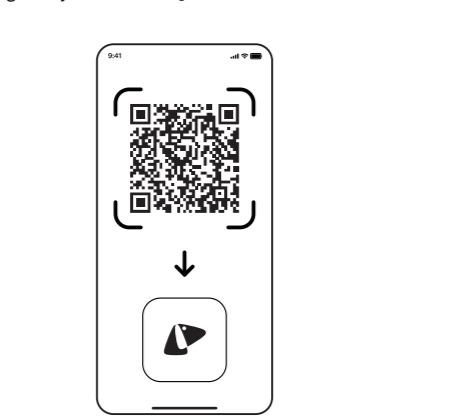

05 CLEANING AND MAINTENANCE

● Set feeding plans in the app, and the feeder will dispense food automatically at the scheduled times. You'll receive notifications for dispensing and feeding status.

● The app supports real-time monitoring and voice interaction, with options to share and review images.

● Explore more features in the App

05 CLEANING AND MAINTENANCE

● Open the lid, remove the used desiccant, and remove the bowl.

● Hold the PUSH buttons on both sides, and lift up to remove the hopper.

● Pull out the food dispensing vanes in the hopper. Rotate clockwise to remove the impeller cover and take out the impeller.

● Wipe the main unit and elevated stands with a soft cloth. To clean the elevated stands, turn the feeder upside down and pull the elevated stands out.

● Clean the hopper, vanes, impeller cover, impeller, upper lid and food bowl in turn. It is recommended to add appropriate amount of detergent and rinse well.


● After cleaning, wait for each part to dry completely and install them back in turn.

* Please refer to the maintenance & cleaning video for detailed steps (see the QR code below)

● Clean the hopper interior with a sponge or soft cloth; avoid harsh tools to prevent scratching plastic parts or damaging the sensor. Do not immerse the main unit in water; wipe with a damp tissue instead.


06 VIDEO GUIDE

6.1 Installation and Usage Video



Scan to watch

6.2 Cleaning and Maintenance Video



Scan to watch

BASIC SPECIFICATIONS

Name	PETKIT YUMSHARE SOLO 2 WITH CAMERA SMART PET FEEDER	Model	P512
Weight (with elevated stand)	About 3.54 lb (1.79 kg)	Capacity	3L
Dimensions	with elevated stand: 15.51" x 11.81" x 18.11" (393*300*457 mm) without elevated stand: 12.44" x 12.11" x 15.45" (315*300*296 mm)	Rated Input	6V 500mA
		Connection	2.4 & 5GHz Wi-Fi
		Scope of Application	Cats and small-breed dogs

TO OUR VALUED USERS

Thank you for choosing the PETKIT YUMSHARE SOLO 2 WITH CAMERA SELF-CLEANING CAT LITTER BOX.

Please read the user manual carefully before installing and using the product. Any installation or usage instructions that you have read and accepted the safety instructions below.

PETKIT is not responsible for any liability for any accidents or injuries resulting from the improper use of the product.

PETKIT reserves the right to interpret or revise the instructions.

SAFETY INSTRUCTIONS

Failure to follow the safety guides outlined below can result in product malfunction or other unforeseen mishaps.

- This appliance can be used by children aged from 14 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and maintenance shall not be made by children without supervision.
- Install and use the product in accordance with the instructions.
- Do not disassemble the camera with force.
- Do not scratch the camera with sharp objects.
- Use the product indoors only, avoid placing in direct sunlight or near fire sources.
- This product is powered by safe low voltage, but pet biting of wires may still cause electric leakage. Please secure and hide the power cord during use to prevent pet biting. If pet biting is observed, stop it immediately.
- Use the original adapter only. Using non-original adapters may damage the device or pose a safety hazard.
- Place on a level surface. Do not tip over the device to prevent safety hazards.
- To prevent pets from knocking over the product, it is recommended to place it in a corner or against a wall.
- Do not place this product at a high location to avoid damage to the product or safety risks due to falling.
- The main unit of this product must not be immersed or soaked in water, and the entire unit should not be used in a humid environment.
- After cleaning the hopper, ensure all components are completely dry before reassembling and using the product.
- If you want to stop using the product, remove the batteries, unplug the power cord, clean and dry it before storage.
- Please unplug the power cord before moving the product.
- Children should use the device under the guidance of adults.
- For safety reasons, please do not attempt to repair this product yourself—repairs should only be carried out by qualified maintenance personnel to prevent accidental injury.
- If you are away from home for an extended period, please check the batteries to ensure they are fully charged (the product is only compatible with alkaline batteries).
- Contact customer service promptly if any issues arise during product use.

Disposal

This equipment complies with part 25 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the requirements for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates noise and can radiate radio frequency energy and, if installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device has been tested to meet general RF exposure requirements.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The antenna(s) for this equipment must be installed and used in a separation distance of at least 20 cm from all persons.

FCC warning:

This device complies with Industry Canada license exempt RSS (standard). Operation is subject to the following two conditions:

(1) This device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

French:

Le présent appareil fonctionne aux RSS (sans licence) de l'industrie Canada. Son utilisation est soumise aux conditions suivantes:

(1) L'appareil ne doit pas causer d'interférence, et

(2) l'appareil doit accepter toute interférence radio, y compris toute interférence susceptible de perturber le fonctionnement de l'appareil.

09

10

11

12

13

14

15

封底

