

**PARTYPAL 200**



**WHERE'S YOUR  
PARTY TONIGHT?**

USER MANUAL

## PARTYPAL 200

boAt

Thank you for purchasing boAt PartyPal 200. You are now just a step away from the realm of pure audio bliss. Please follow this user manual carefully in case of any doubts and difficulties that may arise.

Please note that play time will vary depending on the selected volume level. You can stay plugged into the sound via Bluetooth wireless technology, USB, TF, FM and aux wire compatibility. This portable wireless speaker has been designed for smooth interface that requires the minimal of efforts.



## PACKAGE CONTAINS:

- 1x Portable Bluetooth Speaker
- 1x Type-C Charging Cable
- 1x Audio Cable
- 1x User Manual
- 1x Microphone

## PRODUCT OVERVIEW:

### POWER ON/OFF:

Utilize the power switch to turn the speaker on or off.

### Note:

*Play time varies according to the level of volume.*



## BASIC FUNCTIONS:

1. Volume Up/Down: Rotate the Volume Control to adjust the volume
2. Switch Modes: Short press Mode button to switch among playing modes: BT (Bluetooth) / USB / TF / FM / LINE (AUX)
3. Play/Pause: Short press the Play/Pause button to play or pause a track
4. LED Mode ON/OFF/Switch Pattern: Short press the LED button to switch on the LED or change the LED pattern. Long press the LED button to turn off LED mode.
5. Adjust EQs: Short press the EQ button and rotate the Volume Control to adjust treble or bass
6. Next Song: Short press Next Track button for next track.
7. Last Song: Short press Previous Track button for previous track.

## BLUETOOTH CONNECTIVITY:

1. Turn the speaker on and short press the Mode button in case the playback mode is non Bluetooth, the blue LED flashes quickly
2. Activate the phone's Bluetooth functionality and search for "PartyPal 200". As soon as the speaker has been selected by you and paired, there occurs a sound prompt indicating pairing and the blue LED turns steady.

### *Note:*

- *The speaker can automatically reconnect to the last paired device.*
- *The speaker gets automatically turned off if there's no pairing established for 5 minutes.*
- *To disconnect from the current Bluetooth device, simply long press "↻"*

## TWS CONNECTION:

1. Turn on the two PartyPal 200 speakers that you require to be forged into one, both under Bluetooth mode. You only need to set one of the two units.
2. Long press the TWS button on the selected speaker (auxiliary, right channel)
3. It searches for the other speaker (primary, left channel) for a few seconds
4. Once both the speakers get connected via TWS mode, it gets indicated by a sound prompt and both the speakers display 'TWS'
5. Perform a Bluetooth connection as mentioned in the user manual to play music via the two paired speakers simultaneously.

*Note:*

- *Once two units execute TWS function, they automatically get paired again if next time they are turned on within effective range.*
- *Long press the 'TWS' button to disconnect TWS mode.*
- *During TWS mode, you can operate **⏮/⏭/⏸/EQ/-VOLUME+** functions on one of the two speakers; for LED mode, you require to operate on both the speakers*

## **FM RADIO:**

1. Short press Mode button to switch to FM mode.
2. Under FM mode, long press Play/Pause button to auto scan the FM Channels and store the same automatically.
3. After the auto scan, short press the "CH" button to switch channel adjust mode.
4. Short press "**⏮/⏭**" button to adjust channel or frequency.
5. Short-press Play/Pause button to mute/unmute the speaker.

*Note:*

- *You can plug in the provided AUX cable as FM antenna for a better signal reception.*
- *In FM mode, long pressing the DEL button can delete the selected station.*

## **AUX MODE**

1. Insert the provided AUX cable into the AUX port and press the Mode button to switch to AUX mode
2. Short press the Play/Pause button to play or pause a track.

## USB / TF MODE

1. Insert USB flash drive or TF card into the designated slot, the device starts playback automatically.
2. Short press the Play/Pause button to play or pause a track.
3. Long press “▶▶” the button to fast forward the track.
4. Long press “◀◀” the button to rewind the track.
5. You can short press the “↺” to switch repeat modes among: looping the playback, repeating the current track or random playback.

## MICROPHONE / KARAOKE MODE

1. Attach the microphone to the speaker
2. Short press the MIC PRI button to suppress the playback volume and prioritize the mic
3. The mic echo can be adjusted via the ECHO Control

## CHARGING:

- Connect one end of the provided charging cable to the charging input and the other end to an adaptor of 5V/2A
- During charging, the LED indicator stays solid red; once the charging gets completed the indicator turns off.

### *Note:*

- *Please don't use the speaker while it is in charging as it may decrease the battery's performance.*
- *The unit does not have power bank function, the USB port is only for music playback. It's forbidden to charge other device via this unit or to connect other device via a USB cable.*

## RESET FUNCTIONALITY:

Press EQ button for 3 seconds & the display will show SEL  
Press Auto Scan button and the display will show ---- These four lines indicate that the reset process is complete.

### *Note:*

*If the speaker doesn't turn off or doesn't respond, you could use the Reset functionality.*

## SPECIFICATIONS:

Bluetooth Version:	V5.0
Dimension:	230*255*632mm
Net Weight:	6.8 kg
Working Range:	10m
Driver Size:	1.5"*2, 3.5"*2, 8"*1
Supported Profiles:	A2DP/AVRCP
Compatibility	AUX, USB, TF, Bluetooth, FM
Frequency:	50Hz-20kHz
Input Voltage:	DC 5V/2A
Output Power:	70W
Charging Time:	4 Hours
Playing Time:	Up to 7 Hours (at 60% volume)
Battery:	4000mAh

## WARNING

- Please keep this product safe from coming in contact with any liquid.
- Don't use/store this product in extreme temperatures.
- Please keep the product away from anything that generates heat, such as radiators, stoves, etc.
- In order to have hearing protection and an extended speaker life, avoid listening to songs on maximum volume.
- Don't try to dismantle / repair the product on your own

boAt



**PARTYPAL 200**

USER MANUAL