 


MINI-唱片音响

DZ-012

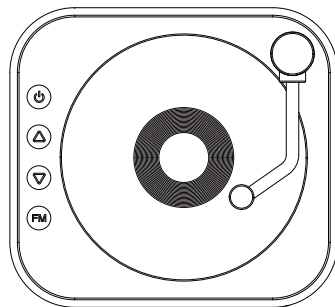

产品使用说明书

感谢您选择我们的产品 希望您尽情享受音乐之旅

• 安全指导

- 在使用前请仔细阅读此说明书，并保存好以供之后参考。
01. 远离热源，太阳暴晒和尖锐物体。
 02. 远离明火。
 03. 不要插入任何金属物体，避免短路。
 04. 不要自行修理产品而应联系授权维修人员。
 05. 避免产品淋雨，喷雾。
 06. 如果产品过热，损坏或坠入液体中，请停止使用。
 07. 根据标准和规定使用产品。

• 包装配件

 
01. DZ-012音响*1
02. TYPE-C充电线*1
03. 产品说明书*1

• 内置电池

01. 内置可充电电池，初次使用需2-3小时完成充电，放电周期。
02. 不要把充满电的电池继续充电，过度充电会缩短电池寿命。
03. 如果放置不用，满载的电量可能会有些许流失。
04. 产品置于过热或者过冷的地方，都会缩短产品寿命。

• 充电功能

01. 插入TYPE-C充电线，另一头连接充电器。
02. 产品的LED充电指示灯常亮红灯，即音响正常充电。
03. 当产品充满电时，LED指示灯红灯熄灭。



• 操作功能

- ① 开 / 关机
 - ② 上一曲 / 声音加
 - ③ 下一曲 / 声音减
 - ④ FM收音机模式
 - ⑤ USB 优盘端口
 - ⑥ AUX 音频接入端口
 - ⑦ TF卡端口
 - ⑧ TYPE-C 充电端口
 - ⑨ LED 充电指示灯
01. 开/关机键，播放音乐时，短按开/关机键暂停，再次短按继续播放音乐。长按“心”形按键，提示“Bluetooth mode”即开机完成进入蓝牙模式、碟片转动5秒后停止、手机连接蓝牙播放音乐碟片重新转动、无音乐30秒后碟片停止转动
02. ②短按进入上一曲，长按音量增大
03. ③短按进入下一曲，长按音量减小
04. ④收音机功能，收音机频段87.5Hz~108Hz，使用操作说明：
(1)将配线Type-c头插在音响Type-c充电端口上，线的另一端“不能”插在充电器上(TYPE-c线作为增益天线)。
(2)短按FM按键进入收音机模式，然后需要短按开/关机按键进行收音机提台，若需退出收音机模式则再次短按FM按键。
(3)收到电台后，音量上/下键短按进行切换电台。
05. ⑤在关机状态下插入U盘再开机，则开机后自动先播放U盘内音乐（注：支持最大内存为：32GB，音频文件格式仅支持：MP3、WAV格式）
06. ⑥开机状态下，插入音频线自动进入AUX模式
07. ⑦在关机状态下，插入TF卡时再开机，则开机后自动播放TF卡中的音频（注：支持最大内存为：32GB，音频文件格式仅支持：MP3、WAV格式）
08. ⑧可通过TYPE-C充电线给音箱充电
09. ⑨LED充电指示灯，判断充电状态

• 故障排查

故障现象	可能原因	解决方案
无法搜索蓝牙	电池没有电关机了	给音响充电
无法配对蓝牙	音响已经配对了另外的设备且没有进入配对模式	关闭其他配对设备重新搜索并进行配对

• 技术规格


产品名称	MINI-唱片音响
产品型号	DZ-012
蓝牙名称	BT-012
产品材质	ABS
充电电压	5V=1A
音响电池容量	800mAh
蓝牙	5.3
喇叭功率	5W
音响尺寸	131*120*67mm
执行标准	GB 4943.1-2022

感谢您的支持！

FC CE RoHS

MINI RECORD AUDIO

 DZ-012

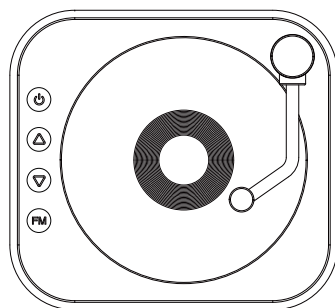

Product Instruction Manual

Thank you for choosing our products and I hope you enjoy your musical journey

• SAFETY INSTRUCTION

- PLEASE READ THIS MANUAL CAREFULLY BEFORE USE AND KEEP IT FOR FUTURE REFERENCE
- 01.Keep away from heat, sun exposure and sharp objects.
 - 02.Stay away from the open fire.
 - 03.Don't insert any metal objects. Avoid short circuit.
 - 04.Don't repair the product by yourself, but contact the authorized repairer .
 - 05.Avoid products from getting caught in the rain, spray.
 - 06.If the product is overheated. Damaged or fell into liquid. Please stop using.
 - 07.Use products according to standards and regulations.

• PACKAGING ACCESSORIES

 
- 01.DZ-012 Audio*1
- 02.TYPE-C charging cable*1
- 03.Product description*1

• INTERNAL BATTERY

- 01.Built-in rechargeable battery takes 2-3 hours to complete the charging and discharge cycle.
- 02.Don't continue charging a fully charged battery. Overcharging will shorten the battery life.
- 03.If the full load is placed, it may be a little loss.
- 04.Placing the product in a place that is overheated or too cold will shorten the product life.

• CHARGING FUNCTION

- 01.Plug in the TYPE-C charging cable and connect the charger at the other end.
- 02.The product's LED charging indicator light is always on in red, that is, the sound is charging normally.
- 03.When the product is fully charged, the LED red light is off.



• OPERATION FUNCTION

- ① Power on /Power off
 - ② Previous Song/Sound Plus
 - ③ Next song/Sound reduction
 - ④ FM mode
 - ⑤ The USB superior disk port
 - ⑥ The AUX audio access port
 - ⑦ TF card port
 - ⑧ TYPE-C charging port
 - ⑨ LED indicator light
01. Turn on/off button, When playing music, press the On/Off button briefly to pause and press it briefly again to continue playing music. Long press the "心" button, prompt "Bluetooth Mode". After completing the Bluetooth mode, the disc rotation of the disc, stop after 5 seconds, the mobile phone connection Bluetooth played music discs re-rotated, and the disc will stop rotating after 30 seconds without music.
02. ② Short press to go to previous song, long press to increase volume
03. ③ Short press and enter the next song, long press the volume reduction
04. ④ Radio function, radio frequency band 87.5 Hz-108Hz, use instructions:
(1) plug the wiring Type-c head into the audio Type-c charging port, the other end of the line "Can not" plug into the charger (Type-c line, for the gain antenna) (2) short press FM button to enter radio mode, then short press on/off button to search radio station, and Short Press FM button again to exit radio mode. (3) after receiving the radio, press the volume up/down button to switch the radio station.
05. ⑤ Insert the USB flash drive and turn on the U disk when the shutdown state, then automatically play the music in the U disk after booting (Note: Support Maximum Memory is: 32GB, audio file format only support: MP3, WAV format)
06. ⑥ When turned on, insert the audio line automatically into AUX mode
07. ⑦ In the shutdown state, then turn on when the TF card is inserted, the audio in the TF card is automatically played after turning on (Note: Support Maximum Memory is: 32GB, audio file format only support: MP3, WAV format)

08. ⑧ Charging the speaker via TYPE-C charging cable
09. ⑨ LED charging indicator to determine charging status

• TROUBLESHOOTING

Failure phenomenon	Possible reasons	Solution
Unable to search Bluetooth	The battery is not powered off	Charge the audio
Unable to pair Bluetooth	The audio has been paired with another device and has not entered pairing mode	Turn off other paired devices Search again and pair

• TECHNICAL SPECIFICATIONS

Product Name	MINI-Record Audio
Product Model	DZ-012
Bluetooth Name	BT-012
Product Material	ABS
Charging Voltage	5V=1A
Audio battery capacity	800mAh
Bluetooth	5.3
Speaker Power	5W
Audio Size	131*120*67mm
Execution Standard	GB 4943.1-2022

Thank you for your support!

FC CE RoHS

80x274MM



FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.