

# SENCOR<sup>®</sup>

## SFP 1000

**MP3 player with changeable faces**

### **Instruction Manual**

Please read this manual carefully before operation.

**EN**

**MP3 přehrávač s výměnnými kryty**

### **Návod k obsluze**

Přečtěte si prosím tento návod ještě dříve, než začnete s přístrojem pracovat.

**CZ**

**MP3 prehrávač s výměnnými krytmi**

### **Návod na obsluhu**

Prečítajte si, prosím, tento návod ešte skôr, než začnete s prístrojom pracovať.

**SK**

**Cserélhető előlapos MP3 lejátszóhoz**

### **Használati útmutató**

Kérjük olvassa el ezt a használati útmutatót mielőtt a készüléket használni kezdi.

**HU**

**Odtwarzacza MP3 z zmiennymi obudowami**

### **Instukcja obsługi**

Przed rozpoczęciem używania urządzenia zapoznaj się z jego instrukcją obsługi.

**PL**

# 1. DECLARATION

First of all, thank you for using our MP3 digital player.

Before using please read this manual instruction carefully to operate unit properly. There may be alteration in the content of this manual. There will be no separate notice in the case of any changes in the performance and functions of this product.

If some sets and procedure are not identical, please take the real unit as standard


## 2. INCLUDED CONTENTS



Mp3



 Earphone

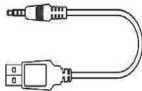

USB

 


Manual

Three changeable faces are included in the package. If you would like to differentiate your cover then simply use a sticker with your own design.

Turn the cover to the right to replace it and to the left to put it on. Never lift up the cover.


put on ← → take off

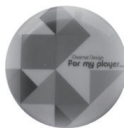

### 3. MAJOR FUNCTIONS

- It supports the music format of MP3
- It supports WIN98S/ME, WIN2000, WINXP, Vista and Win7 systems
 
#### BUTTONS

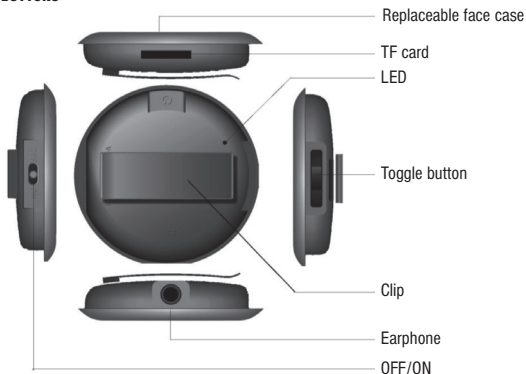

#### KEYS OPERATION:

- 1 "OFF/ON": Power on/off
- 2 "Toggle button": It is thumbwheel switches .PRE/ NEXT /VOL+/VOL-
- 3 "Earphone jack": Earphone slot

## 4. AUDIO PLAY

 
1. Put the earphone into the earphone slot.
2. Put the TF Card into the TF Card slot.
3. Turn the ON/OFF switch of the player for power ON
4. Select music: PRE: Short press PRE/VOL- key to select previous track  
NEXT: Short press NEXT/VOL+ key to select next track
5. Control volume: Long press PRE/VOL- to turn down the volume.  
Long press NEXT/VOL+ to turn up the volume.

### LED INDICATOR

Function	LED
Charging	Slow flash
Full power	Long bright
Low power	Long bright and power off
Play	Slow flash
USB Data	Fast Blinking

## 5. CONNECT WITH THE PC

1

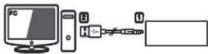


2



3



 4

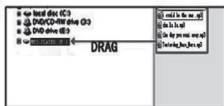

## 6. SPECIFICATION

Product Specification		
Item	Specification	
Support System	Windows 98/SE/ME/2K/XP/Vista/7	
Internal memory	Without internal memory	
Music	format	MP3
	bit rate	8 ~ 320kbps
Environmental temperature	-20 ~ +60 °Cs	
Relative Humidity	20% ~ 93% (40°C)	
Dimensions	45 × 45 × 13.3mm	
Weight	15g	
Battery	power	lithium battery
Mp3 playing time	more than 3 hours	
Micro SD slot	supports a max. capacity of up to 16MB, support SDHC	



#### **INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS**

Dispose of packaging material at a public waste disposal site.

#### **DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES**

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

#### **For business entities in the European Union**

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

#### **Disposal in other countries outside the European Union**

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



#### **This product meets all the basic EU regulation requirements that relate to it.**

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.