

Canon

IXUS 105

IXUS 107

Camera User Guide




Photo of IXUS 105

ENGLISH


- Make sure you read this guide before using the camera.
- Store this guide safely so that you can use it in the future.

Checking the Package Contents

 Check if the following items are included in your camera package. If anything is missing, contact the retailer from which you purchased the camera.

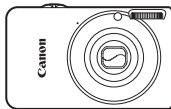


Camera

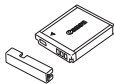 


Battery Pack NB-6L
(with Terminal Cover)



 Battery Charger
CB-2LY/CB-2LYE

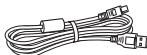

Interface Cable
IFC-400PCU

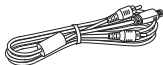 

AV Cable
AVC-DC400



Wrist Strap WS-DC7



Getting Started



DIGITAL CAMERA
Solution Disk



Warranty System
Booklet

Using the Manuals

Also refer to the manuals on the DIGITAL CAMERA Manuals Disk.

- **Camera User Guide (This Guide)**

Once you have mastered the basics, use the camera's many features to shoot more challenging photos.

- **Personal Printing Guide**

Read when you want to connect the camera to a printer (sold separately) and print.

- **Software Guide**

Read when you want to use the included software.



- A memory card is not included.
- Adobe Reader is required to view the PDF manuals. Microsoft Word/Word Viewer can be installed to view the Word manuals (required only for manuals for the Middle East).

Read This First

Test Shots and Disclaimer

Take some initial test shots and play them back to make sure the images were recorded correctly. Please note that Canon Inc., its subsidiaries and affiliates, and its distributors are not liable for any consequential damages arising from any malfunction of a camera or accessory, including memory cards, that results in the failure of an image to be recorded or to be recorded in a way that is machine readable.

Warning Against Copyright Infringement

The images recorded with this camera are intended for personal use. Do not record images that infringe upon copyright laws without the prior permission of the copyright holder. Please be advised that in certain cases the copying of images from performances, exhibitions, or commercial properties by means of a camera or other device may contravene copyright or other legal rights even if the image was shot for personal use.

Warranty Limitations

For information on your camera's warranty, please refer to the Canon Warranty System Booklet supplied with your camera. For Canon Customer Support contacts, please see the Warranty System Booklet.

LCD Monitor

- The LCD monitor is produced with extremely high-precision manufacturing techniques. More than 99.99% of the pixels operate to specification, but occasionally non-performing pixels may appear as bright or dark dots. This is not a malfunction and has no effect on the recorded image.
- The LCD monitor may be covered with a thin plastic film for protection against scratches during shipment. If so, remove the film before using the camera.

Camera Body Temperature

Please take care when operating the camera for an extended period as the camera body may become warm. This is not a malfunction.

What Do You Want to Do?

Shoot

Shoot, leaving it to the camera to make settings.	24
Shoot to match special conditions.	54 – 56

Take good people shots



Portraits
(p. 54)



At night
(p. 54)



Kids and pets
(p. 55)



At the beach
(p. 55)



Against snow
(p. 56)

Shoot various other scenes



Indoors
(p. 55)



Fireworks
(p. 56)



Underwater
(p. 56)



Low light
(p. 55)

Focus on faces.	24, 62, 78
Shoot in places where I cannot use the flash (turn off the flash)	57
Take pictures with me in them too (self-timer)	61, 62, 74, 75
Insert the date and time into my shots	60
Take close-up pictures of subjects (macro shooting)	67
Take sepia toned or black and white pictures.	72
Change the size of picture I want to take (recording pixels)	68
Take pictures continuously	73
Change the ISO speed	70
Make dark subjects appear brighter (i-Contrast).	83


View

Look at my pictures	28
Automatically play back pictures (slideshow).	96
Look at my pictures on a TV	99
Look at my pictures on a computer	33
Quickly search pictures	94, 95
Erase pictures	29, 101
Protect pictures from accidental erasure	100


Shoot/View Movies

Shoot movies	30
View movies	32


Print

Easily print pictures	108
---------------------------------	-----


Save

Save images to a computer	33
-------------------------------------	----


Other

Turn off sounds	48
Use the camera abroad	15
Understand what is displayed on the screen.	128

Table of Contents

Chapters 1 – 3 explain the basic operations and frequently used functions of this camera. Chapters 4 onward explain the advanced functions, letting you learn more as you read each chapter.

Checking the Package Contents	2
Read This First	3
What Do You Want to Do?	4
Conventions Used in this Guide	8
Safety Precautions.....	9

1 Getting Started..... 13

Charging the Battery	14
Compatible Memory Cards (Sold Separately).....	16
Inserting the Battery and Memory Card.....	16
Setting the Date and Time	19
Setting the Display Language.....	21
Formatting Memory Cards	22
Pressing the Shutter Button.....	23
Taking Pictures (Smart Auto).....	24
Viewing Images	28
Erasing Images.....	29
Shooting Movies	30
Viewing Movies.....	32
Transferring Images to a Computer for Viewing	33
Accessories	37
Separately Sold Accessories	38

2 Learning More..... 41

Components Guide.....	42
Indicator	43
Screen Display.....	44
FUNC. Menu – Basic Operations	46
MENU – Basic Operations.....	47
Changing the Sound Settings	48
Changing the Screen Brightness	49

Returning the Camera to Default Settings	50
Low Level Memory Card Formatting.....	51
Power Saving Function (Auto Power Down).....	52

3 Shooting in Special Conditions and Commonly Used Functions.....53

Shooting in Various Conditions	54
Turning the Flash Off	57
Zooming in Closely on Subjects (Digital Zoom)	58
Inserting the Date and Time	60
Using the Self-Timer	61
Using the Face Self-Timer	62


4 Choosing Settings Yourself.....63

Shooting in Program AE.....	64
Adjusting the Brightness (Exposure Compensation)	65
Turning the Flash On	66
Shooting Far Away Subjects (Infinity).....	66
Shooting Close-ups (Macro)	67
Changing the Recording Pixel Setting (Image Size)	68
Changing the Compression Ratio (Image Quality)	68
Changing the ISO Speed	70
Adjusting the White Balance	71
Changing the Tone of an Image (My Colors)	72

Continuous Shooting.....	73	Erasing All Images	101
Shooting Using the Two Second Self-Timer	74	Rotating Images	102
Customizing the Self-Timer.....	75	Resizing Images.....	103
Shooting Using a TV Monitor.....	76	Correcting the Brightness (i-Contrast).....	104
Changing the Composition with the Focus Lock.....	76	Correcting the Red-Eye Effect.....	105
5 Getting More Out of Your Camera 77		8 Printing 107	
Changing the AF Frame Mode.....	78	Printing Images	108
Magnifying the Focal Point.....	80	Choosing Images for Printing (DPOF).....	110
Shooting with the AF Lock	81	9 Customizing Camera Settings 113	
Changing the Metering Mode.....	81	Changing Camera Settings	114
Shooting with the AE Lock.....	82	Changing Shooting Function Settings.....	117
Shooting with the FE Lock	82	Changing Playback Function Settings.....	120
Correcting the Brightness and Shooting (i-Contrast)	83	10 Useful Information..... 121	
Red-Eye Correction	84	Using Household Power	122
Shooting with Slow Synchro	85	Troubleshooting.....	123
Shooting Long Exposures.....	86	List of Messages That Appear on the Screen	126
6 Using Various Functions for Shooting Movies..... 87		Information Displayed on the Screen.....	128
Changing the Image Quality	88	Functions Available in Each Shooting Mode.....	130
AE Lock/Exposure Shift.....	89	Menus.....	132
Other Shooting Functions	90	Handling Precautions	135
Playback Functions.....	91	Specifications	136
7 Using Various Playback and Editing Functions 93		Index.....	139
Quickly Searching Images	94		
Searching for Images Using the Jump Display	95		
Viewing Slideshows	96		
Checking the Focus	97		
Magnifying Images.....	98		
Changing Image Transitions.....	98		
Viewing Images on a TV.....	99		
Protecting Images.....	100		

Conventions Used in this Guide

- Icons are used in the text to represent the camera buttons and switches.
- Language that displays on the screen appears inside [] (square brackets).
- The directional buttons and FUNC./SET button are represented by the following icons.

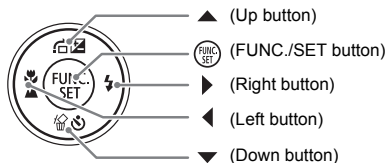

- !: Things you should be careful about.
- ? : Troubleshooting tips.
- 💡 : Hints for getting more out of your camera.
- 📝 : Supplemental information.
- (p. xx): Reference pages. “xx” stands for a page number.
- This guide assumes all functions are at their default settings.
- The various types of memory cards that can be used in this camera are collectively referred to as memory cards in this guide.

Safety Precautions

- Before using the camera, please ensure that you read the safety precautions described below. Always ensure that the camera is operated correctly.
- The safety precautions noted on the following pages are intended to prevent injuries to yourself and other persons, or damage to the equipment.
- Be sure to also check the guides included with any separately sold accessories you use.



Warning

Denotes the possibility of serious injury or death.



Caution

Denotes the possibility of injury.

Caution

Denotes the possibility of damage to the equipment.



Warning

Camera

- **Do not trigger the flash in close proximity to people's eyes.**

Exposure to the intense light produced by the flash could damage eyesight. In particular, remain at least one meter (39 inches) away from infants when using the flash.

- **Store this equipment out of the reach of children and infants.**

Strap: Putting the strap around a child's neck could result in asphyxiation.

Memory card: Dangerous if swallowed. If this occurs, contact a doctor immediately.

- **Do not attempt to disassemble or alter any part of the equipment unless expressly indicated to do so in this guide.**
- **To avoid the risk of injury, do not touch the interior of the camera if it has been dropped or otherwise damaged.**
- **Stop operating the camera immediately if it emits smoke, a strange smell, or otherwise behaves abnormally.**
- **Do not use organic solvents such as alcohol, benzene, or thinner to clean the equipment.**
- **Do not allow liquids or foreign objects to enter the camera.**

This could result in fire or electrical shock.

If liquid or foreign objects come into contact with the camera interior, immediately turn the camera power off and remove the battery.

- **Use only recommended power sources.**

Using other power sources could result in fire or electrical shock.

Battery and Battery Charger

- Use only recommended batteries.
- Do not place the battery near or in direct flame.
- Do not let the battery come into contact with water (e.g. sea water) or other liquids.
- Do not attempt to disassemble, alter or apply heat to the battery.
- Avoid dropping or subjecting the battery to severe impacts.

This may cause explosions or leaks, resulting in fire, injury and damage to the surroundings. In the event that a battery leaks and the eyes, mouth, skin or clothing contacts these substances, immediately flush with water and seek medical assistance.

If the battery charger becomes wet, unplug it from the outlet and consult your camera distributor or the closest Canon Customer Support Help Desk.

- Use only the specified battery charger to charge the battery.
- Unplug the power cord periodically and wipe away any dust and dirt that has collected on the plug, the exterior of the power outlet, and the surrounding area.
- Do not handle the power cord with wet hands.
- Do not use the equipment in a manner that exceeds the rated capacity of the electrical outlet or wiring accessories. Do not use if the power cord or plug are damaged, or not fully plugged into the outlet.
- Do not allow dirt or metal objects (such as pins or keys) to contact the charger terminals or plug.

This could result in fire or electrical shock.

Other Warnings

- Do not play the supplied CD-ROM(s) in any CD player that does not support data CD-ROMs.

Playing the CD-ROM(s) in an audio CD player (music player) could damage the speakers. It is also possible to suffer hearing loss from listening with headphones to the loud sounds of a CD-ROM played on a music CD player.



Caution

- Be careful not to bang the camera or subject it to strong impacts or shocks when hanging it by the strap.
- Be careful not to bump or push strongly on the lens.

This could damage the camera or lead to injury.

- Avoid using, placing or storing the camera in the following places.

- Places subject to strong sunlight.
- Places subject to temperatures above 40 °C (104 °F).
- Humid or dusty areas.

These could cause leakage, overheating or an explosion of the battery, resulting in electrical shock, fire, burns or other injuries. High temperatures may also cause deformation of the casing.

- **When using the flash, be careful not to cover it with your fingers or clothing.** This could result in burns or damage to the flash.

Caution

- **Do not aim the camera at bright light sources (the sun, etc.).** Doing so may cause malfunctions or damage the image sensor.

- **When using the camera on a beach or at a windy location, be careful not to allow dust or sand to enter the camera.**

This may cause the camera to malfunction.

- **In regular use, small amounts of smoke may be emitted from the flash.**

This is due to the high intensity of the flash burning dust and foreign materials stuck to the front of the unit. Please use a cotton swab to remove dirt, dust or other foreign matter from the flash to prevent heat build-up and damage to the unit.

- **Unplug the battery charger from the power outlet after recharging is complete, or when you are not using it.**
- **Do not place anything, such as cloth on top of the battery charger while it is charging.**

Leaving the unit plugged in for a long period of time may cause it to overheat and distort, resulting in fire.

- **Remove and store the battery when you are not using the camera.**

If the battery is left inside the camera, damage caused by leakage may occur.

- **Before you discard battery, cover the terminals with tape or other insulators.** Contacting other metal materials in waste containers may lead to fire or explosions.

- **Do not place the battery near pets.**

Pets biting the battery could cause leakage, overheating or explosion, resulting in fire or injuries.

- **Do not sit down with the camera in your pocket.**

Doing so may cause malfunctions or damage the LCD monitor.

- **When putting the camera in your bag, ensure that hard objects do not come into contact with the LCD monitor.**

- **Do not attach accessories to the strap.**

Doing so may cause malfunctions or damage the LCD monitor.






1

Getting Started

This chapter explains preparations before shooting, how to shoot in **AUTO** mode, and then how to view and erase the images you take. The latter part of this chapter explains how to shoot and view movies and transfer images to a computer.


Attaching the Strap/Holding the Camera

- Be sure to attach the supplied strap to the camera and wrap it around your wrist when shooting to avoid dropping the camera.
- Keep your arms tight against your body while holding the camera firmly by the sides. Be sure that your fingers do not block the flash.

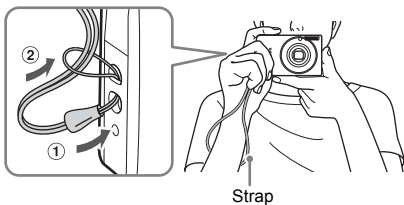


Charging the Battery

 Use the included charger to charge the battery. Be sure to charge the battery as it is not charged at the time of purchase.

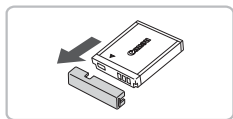


1 Remove the cover.

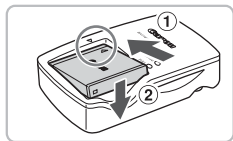



2 Insert the battery.

- Align the ▲ marks on the battery and charger, then insert the battery by sliding it in ① and down ②.

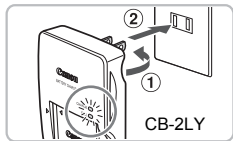

3 Charge the battery.

- For **CB-2LY**: Flip out the plug ① and plug the charger into a power outlet ②.
- For **CB-2LYE**: Plug the power cord into the charger, then plug the other end into a power outlet.
- ▶ The charge lamp lights red and charging starts.
- The charge lamp will light green when charging has finished. Charging takes approx. 1 hour and 55 minutes.

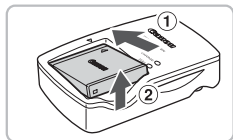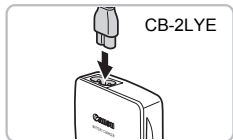

4 Remove the battery.

- Unplug the battery charger from the power outlet, then remove the battery by sliding it in ① and up ②.



To protect the battery and prolong its life, do not charge it for longer than 24 hours continuously.




Approximate Number of Shots That Can Be Taken

Number of Shots	240
Playback Time (Hours)	7

- The number of shots that can be taken is based on the Camera & Imaging Products Association (CIPA) measurement standard.
- Under some shooting conditions, the number of shots that can be taken may be less than mentioned above.

Battery Charge Indicator

An icon or message will appear on the screen indicating the battery's charge state.

Display	Summary
	Sufficient charge.
	Slightly depleted, but sufficient.
 (Blinking red)	Nearly depleted. Charge the battery.
"Change the battery pack."	Depleted. Recharge the battery.



Using the battery and charger effectively


- **Charge the battery on the day, or the day before, it will be used.**
Charged batteries continue to discharge naturally even if they are not used.



Attach the cover to a charged battery so that the ▲ mark is visible.

- **How to store the battery for long periods:**
Deplete and remove the battery from the camera. Attach the terminal cover and store the battery. Storing a battery for long periods of time (about a year) without depleting it may shorten its life span or affect its performance.
- **The battery charger can also be used when abroad.**
The charger can be used in regions that have 100 – 240 V (50/60 Hz) AC power. If the plug does not fit the outlet, use a commercially available plug adapter. Do not use electrical transformers for foreign travel as they will cause damage.
- **The battery may develop a bulge.**
This is a normal characteristic of the battery and does not indicate a problem. However, if the battery bulges to the point where it will no longer fit into the camera, please contact a Canon Customer Support Help Desk.
- **If the battery is quickly depleted even after charging, it has reached the end of its life span.**
Purchase a new battery.

Compatible Memory Cards (Sold Separately)

- SD memory cards (2GB and less)*
- SDHC memory cards (More than 2 GB, up to and including 32 GB)*
- SDXC memory cards (More than 32 GB)* 
- MultiMediaCards
- MMCplus memory cards
- HC MMCplus memory cards

 
* This memory card complies with the SD standards. Some cards may not operate properly depending on the brand of card used.



Depending on your computer's OS version, SDXC memory cards may not be recognized when using a commercially available card reader. Check to make sure that your OS supports this function beforehand.


Inserting the Battery and Memory Card

Insert the included battery and a memory card (sold separately).

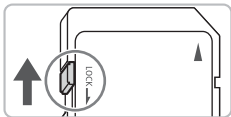


1 Check the card's write-protect tab.

 - If the memory card has a write-protect tab, you will not be able to record images if the tab is in the locked position. Slide the tab up until you hear a click.

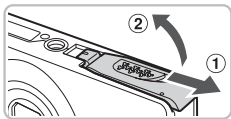

2 Open the cover.


- Slide the cover ① and open it ②.

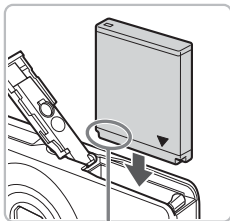

Terminals

3 Insert the battery.


- Insert the battery as shown until it locks into place with a click.
- Be sure to insert the battery in the correct direction or it will not properly lock into place.

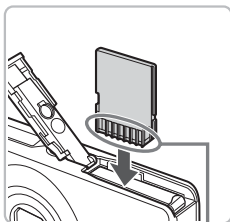

Terminals

4 Insert the memory card.

 - Insert the memory card as shown until it locks into place with a click.
- Be sure the memory card is oriented correctly. Inserting the memory card in the wrong direction could damage the camera.

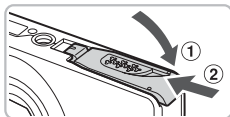

5 Close the cover.


- Close the cover ①, and press downward as you slide it until it clicks into place ②.



What if [Memory card locked] appears on the screen?


SD, SDHC and SDXC memory cards have a write-protect tab. If this tab is in the locked position, [Memory card locked] will appear on the screen and you will not be able to take or erase images.

Removing the Battery and Memory Card

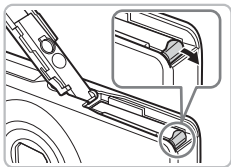

Remove the battery.

- Open the cover and press the battery lock in the direction of the arrow.
- ▶ The battery will pop up.

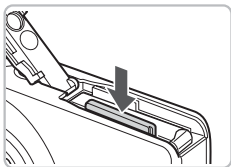

Remove the memory card.

- Push the memory card in until you hear a click, then slowly release it.
- ▶ The memory card will pop up.

Approximate Number of Shots per Memory Card

Memory Card	4 GB	16 GB
Number of shots	1231	5042

- Values are based on the default settings.
- The number of shots that can be taken will vary depending on camera settings, the subject and the memory card used.



Can you check the number of shots that can be taken?

 
You can check the number of shots that can be taken when the camera is in a Shooting mode (p. 24).

Number of shots
that can be taken




Setting the Date and Time

The Date/Time settings screen will appear the first time the camera is turned on. Since the dates and times recorded into your images are based on these settings, be sure to set them.

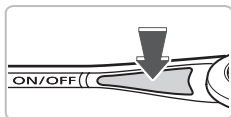

1 Turn on the camera.

- Press the ON/OFF button.
- ▶ The Date/Time screen will appear.

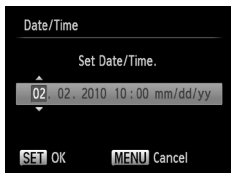


2 Set the date and time.

- Press the ◀▶ buttons to choose an option.
- Press the ▲▼ buttons to set a value.



3 Complete the setting.

 
- Press the  button.
- ▶ Once the date and time have been set, the Date/Time screen will close.
- Pressing the ON/OFF button will turn off the camera.

? Reappearing Date/Time screen

Set the correct date and time. If you have not set the date and time, the Date/Time screen will appear each time you turn on the camera.

Changing the Date and Time

You can change the current date and time settings.

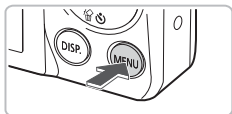

1 Display the menus.

- Press the **MENU** button.



 
2 Choose [Date/Time] in the YT tab.

- Press the ◀▶ buttons to choose the **YT** tab.
- Press the ▲▼ buttons to choose [Date/Time], then press the **FUNC SET** button.



3 Change the date and time.

- Follow Steps 2 and 3 on [p. 19](#) to adjust the setting.
- Pressing the **MENU** button will close the menu.

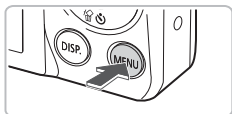


Date/Time battery

- The camera has a built-in date/time battery (backup battery) that allows the date/time settings to be retained for about three weeks after the battery pack has been removed.
- By inserting a charged battery or connecting an AC adapter kit (sold separately, [p. 38](#)) the date/time battery can be charged in about 4 hours even if the camera is not turned on.
- If the date/time battery is depleted, the Date/Time menu will appear when you turn the camera on. Follow the steps on [p. 19](#) to set the date and time.

Setting the Display Language

 You can change the language that displays on the screen.

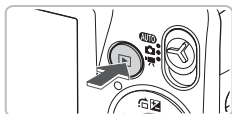

1 Enter Playback mode.

- Press the button.



2 Display the settings screen.

- Press and hold the button, then press the **MENU** button.

English	Svenska	Türkçe
Deutsch	Español	繁體中文
Français	简体中文	한국어
Nederlands	Русский	मराठी
Dansk	Português	العربية
Suomi	Ελληνικά	Română
Italiano	Polski	فارسی
Norsk	Čeština	日本語
Українська	Magyar	

3 Set the display language.

 
- Press the buttons to choose a language, then press the button.
- ▶ Once the display language has been set, the settings screen will close.



You can also change the display language by pressing the **MENU** button, choosing the tab, and choosing the [Language] menu item.

Formatting Memory Cards

Before you use a new memory card or one that has been formatted in other devices, you should format the card with this camera. Formatting (initializing) a memory card erases all data on the memory card. As you cannot retrieve the erased data, exercise adequate caution before formatting the memory card.

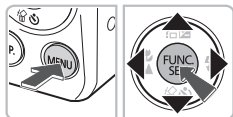


1 Display the menu.

- Press the **MENU** button.


2 Choose [Format].

- Press the **◀▶** buttons to choose the **YT** tab.
- Press the **▲▼** buttons to choose [Format], then press the **FUNC/SET** button.

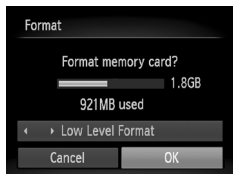


3 Format the memory card.

- Press the **◀▶** buttons to choose [OK], then press the **FUNC/SET** button.
- ▶ A confirmation screen will appear.

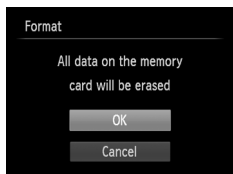

- Press the **▲▼** buttons to choose [OK], then press the **FUNC/SET** button.
- ▶ The memory card will be formatted.
- ▶ When formatting ends, [Memory card formatting complete] will appear on the screen.

- Press the  button.

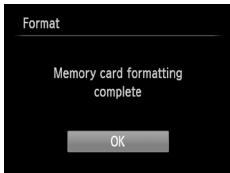


Formatting or erasing data on a memory card merely changes the file management information on the card and does not ensure its contents are completely erased. Be careful when transferring or disposing of a memory card. When disposing of a memory card, take precautions such as physically destroying the card to prevent personal information leaks.



The total capacity of the memory card displayed in the formatting screen may be less than indicated on the memory card.


Pressing the Shutter Button

 To take images that are in focus, be sure to first press the shutter button lightly (halfway) to focus, then press fully to shoot.

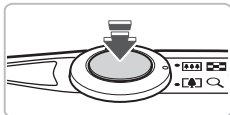

1 Press halfway (lightly to focus).

 - Press lightly until the camera beeps twice and AF frames appear where the camera focused.

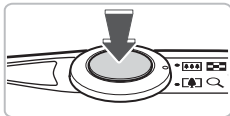

2 Press fully (all the way to shoot).

 
- ▶ The camera plays the shutter sound and takes the shot.



If you shoot without pressing the shutter button halfway, the image may not be in focus.

Taking Pictures (Smart Auto)

Since the camera can determine the subject and shooting conditions, you can let it automatically select the best settings for the scene and just shoot. The camera can also detect and focus on faces, setting the color and brightness to optimal levels.

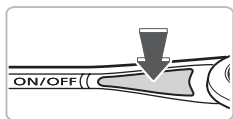


1 Turn on the camera.

- Press the ON/OFF button.
- ▶ The start-up screen will appear.



 2 Choose **AUTO** mode.

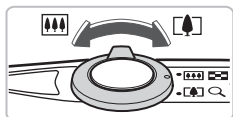

- Set the mode switch to **AUTO**.
- When you point the camera toward the subject, the camera will make a slight noise as it determines the scene.
- ▶ The icon for the determined scene will appear in the upper right of the screen.
- ▶ The camera will focus on detected faces and display frames on them.

 


Zoom bar



3 Compose the shot.

- Moving the zoom lever toward  will zoom in on your subject, making it appear larger. Moving the lever toward  will zoom out from your subject, making it appear smaller (the zoom bar will appear).

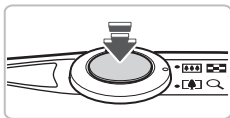


4 Focus.

- Press the shutter button halfway to focus.
- ▶ When the camera focuses, it will beep twice and AF frames will appear where the camera focused.

Several AF frames will appear when the camera focuses on more than one point.



 AF Frame

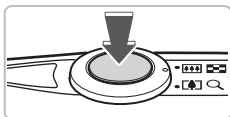

5 Shoot.

- Press the shutter button fully.
- ▶ The camera will play the shutter sound and shoot. The flash will automatically fire in low light conditions.
- ▶ The image will appear on the screen for about two seconds.
- You can take a second picture even while an image is displayed by pressing the shutter button again.

Scene Icons

The camera displays an icon for the scene it has determined and then automatically focuses and selects the optimum settings for subject brightness and color.









Subject	Background		Bright		Including Blue Skies		Sunsets	Dark	
				Backlit		Backlit			When Using Tripod
People							—		
Non-Human Subjects/ Landscapes	AUTO		AUTO				AUTO		
Close Subjects					—		—		
Icon Background Color	Gray		Light Blue		Orange		Dark Blue		

 * Appears when the scene is dark and the camera is attached to a tripod.



Under certain conditions, the icon that appears may not match the actual scene. Especially when there is an orange or blue colored background (a wall for example), or the “Including Blue Skies” icons may appear and it may not be possible to shoot with the appropriate color. If this happens, try shooting in **P** mode (p. 64).

What if...


- **What if white and gray frames appear when you point the camera toward a subject?**
 When faces are detected, a white frame appears on the face of the main subject, while gray frames appear on other detected faces. The frames will follow the subjects within a certain range (p. 78).
- **What if the indicator blinks orange and  blinks on the screen?**
 Attach the camera to a tripod so that the camera does not move and blur the image.
- **What if the camera does not play any sounds?**
 Pressing the **DISP.** button while turning on the camera power will turn off all sounds except for warning sounds. To turn the sounds on, press the **MENU** button, choose the  tab, and then choose [Mute]. Press the  buttons to choose [Off].
- **What if the image comes out dark even if the flash fired when shooting?**
 The subject is too far away for the flash to reach. Move the zoom lever toward  and hold it until the lens stops moving. The camera will be at its maximum wide angle setting and you can shoot within the effective flash range of approximately 30 cm – 4.0 m (12 in. – 13 ft.).
 Move the zoom lever toward  and hold it until the lens stops moving. The camera will be at its maximum telephoto setting and you can shoot within the effective flash range of approximately 50 cm – 2.0 m (1.6 – 6.6 ft.).
- **What if the camera beeps once when the shutter button is pressed halfway?**
 Your subject may be too close. Move the zoom lever toward  and hold it until the lens stops moving. The camera will be at its maximum wide angle setting and you will be able to focus on subjects that are approximately 3 cm (1.2 in.) or more away from the end of the lens.
 Move the zoom lever toward  and hold it until the lens stops moving. The camera will be at its maximum telephoto setting and you will be able to focus on subjects that are about 50 cm (1.6 ft.) or more away from the end of the lens.
- **What if the lamp lights when the shutter button is pressed halfway?**
 To reduce red-eye and to assist in focusing, the lamp may light when shooting in dark areas.
- **What if the  icon blinks when you try to shoot?**
 The flash is charging. You can shoot when recharging ends.

Viewing Images

You can view the images you have taken on the screen.



 



1 Enter Playback mode.

- Press the  button.
- ▶ The last image you took will appear.



2 Choose an image.

- Pressing the  button will cycle through the images in the reverse order they were taken, from the newest image to the oldest.
- Pressing the  button will cycle through the images in the order they were taken, from oldest to newest.
- The images change more quickly if you keep the  buttons pressed, but they will appear coarse.
- The lens will retract after approximately 1 minute elapses.
- Pressing the  button again while the lens is retracted will turn off the power.

 


Switching to Shooting mode

Pressing the shutter button halfway while in Playback mode switches the camera to Shooting mode.


Erasing Images

You can choose and erase images one at a time. Please note that erased images cannot be recovered. Exercise adequate caution before erasing an image.

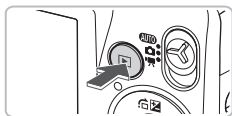

1 Enter Playback mode.

- Press the button.
- ▶ The last image you took will appear.

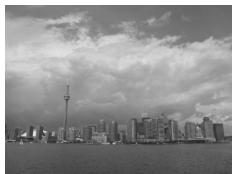

2 Choose an image to erase.

- Press the buttons to display an image to erase.



3 Erase the image.

- Press the button.
- ▶ [Erase?] appears.
- Press the buttons to choose [Erase], then press the button.
- ▶ The displayed image will be erased.
- To exit instead of erasing, press the buttons to choose [Cancel], then press the button.



Shooting Movies

 
The camera can automatically select all settings so that you can shoot movies just by pressing the shutter button.





1 Enter mode.


- Set the mode switch to .

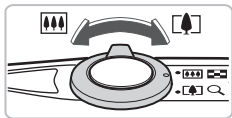Shooting Time




2 Compose the shot.

 - Moving the zoom lever toward  will zoom in on your subject, making it appear larger. Moving the lever toward  will zoom out from your subject, making it appear smaller.

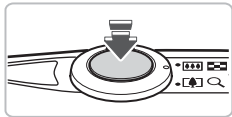

3 Focus.

 
- Press the shutter button halfway to focus.
- ▶ When the camera focuses, it will beep twice and the indicator will light green.

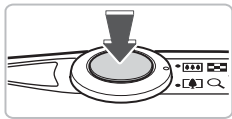


4 Shoot.

- Press the shutter button fully.

Elapsed Time

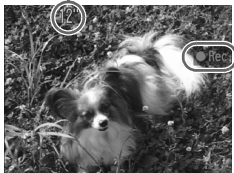

Microphone

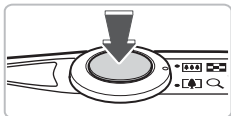 

5 Stop shooting.

- Press the shutter button fully again.
- ▶ The camera will beep once and stop shooting.
- ▶ The movie will record to the memory card.
- ▶ Shooting will automatically stop when the memory card fills.



Magnifying the subject while shooting

Pressing the zoom lever toward [M] while shooting will zoom in on the subject. However, operation sounds will be recorded and the movie may appear coarse.

Estimated Shooting Times

Memory Card	4 GB	16 GB
Shooting Time	32 min. 26 sec.	2 hrs. 12 min. 50 sec.

- Shooting times are based on default settings.
- Recording will automatically stop when either the clip file size reaches 4 GB or the recording time reaches approximately 1 hour.
- Recording may stop even if the maximum clip length has not been reached on some memory cards. SD Speed Class 4 or higher memory cards are recommended.

Viewing Movies

You can view the movies you have shot on the screen.



1 Enter Playback mode.

- Press the button.
- ▶ The last image you shot will appear.
- ▶ **SET** appears on movies.



2 Choose a movie.

- Press the buttons to choose a movie, then press the button.
- ▶ The movie control panel will appear.



3 Play the movie.

- Press the buttons to choose (Play), then press the button.
- ▶ The movie will play.
- You can pause/resume the movie by pressing the button again.
- Press the buttons to adjust the volume.
- ▶ After the movie finishes, **SET** appears.

Transferring Images to a Computer for Viewing

You can use the included software to transfer images you have shot with the camera to a computer for viewing. If you are already using ZoomBrowser EX/ImageBrowser, install the software from the included CD-ROM, overwriting your current installation.

System Requirements

Windows

OS	Windows 7 Windows Vista (including Service Pack 1 and 2) Windows XP Service Pack 2, Service Pack 3
Computer model	The above OS should be pre-installed on computers with built-in USB ports.
CPU	Pentium 1.3 GHz or higher
RAM	Windows 7 (64 bit): 2 GB or more Windows 7 (32 bit), Windows Vista: 1 GB or more Windows XP: 512 MB or more
Interface	USB
Free Hard Disk Space	ZoomBrowser EX: 200 MB or more* PhotoStitch: 40 MB or more
Display	1,024 x 768 pixels or higher

* For Windows XP, Microsoft .NET Framework 3.0 or later (max. 500MB) must be installed. Installation may take some time depending on your computer's capabilities.

Macintosh

OS	Mac OS X (v10.4 – v10.6)
Computer model	The above OS should be pre-installed on computers with built-in USB ports.
CPU	PowerPC G4/G5 or Intel Processor
RAM	Mac OS X v10.4 – v10.5: 512 MB or more Mac OS X v10.6: 1 GB or more
Interface	USB
Free Hard Disk Space	ImageBrowser: 300 MB or more PhotoStitch: 50 MB or more
Display	1,024 x 768 pixels or higher

Preparations

Windows Vista and Mac OS X (v10.5) are used for these explanations.

1 Install the Software.

Windows



1 Place the CD in the computer's CD-ROM drive.

- Place the supplied CD-ROM (DIGITAL CAMERA Solution Disk) (p. 2) into the computer's CD-ROM drive.

2 Begin installation.

- Click [Easy Installation] and follow the on-screen instructions to proceed with the installation.
- If the [User Account Control] window appears, follow the on-screen instructions to proceed.



3 When the install finishes, click [Restart] or [Finish].

4 Remove the CD-ROM.

- Remove the CD-ROM when your desktop screen appears.


Macintosh




1 Place the CD in the computer's CD-ROM drive.

- Place the supplied CD-ROM (DIGITAL CAMERA Solution Disk) (p. 2) into the computer's CD-ROM drive.

2 Begin installation.


- Double-click the  on the CD.
- Click [Install], and follow the on-screen instructions to proceed with the installation.

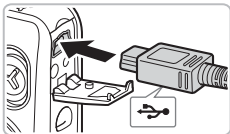

2 Connect the camera to the computer.


- Turn off the camera.
- Open the cover, and insert the cable's smaller plug firmly into the camera terminal in the direction shown.
- Insert the cable's larger plug into the computer. For connection details, refer to the user guide provided with the computer.

3 Turn on the camera.

- Press the  button to turn on the camera.


4 Open CameraWindow.

Windows

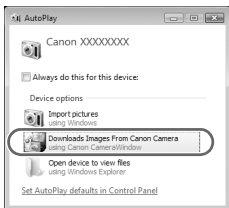




- Click [Downloads Images From Canon Camera using Canon CameraWindow].
- ▶ CameraWindow will appear.
- If CameraWindow does not appear, click the [Start] menu and choose [All Programs], followed by [Canon Utilities], [CameraWindow] and [CameraWindow].

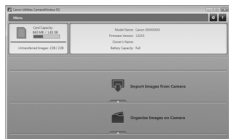Macintosh



 
- ▶ CameraWindow will appear when you establish a connection between the camera and computer.
- If CameraWindow does not appear, click the CameraWindow icon on the Dock (the bar which appears at the bottom of the desktop).

For Windows 7, use the following steps to display CameraWindow.

- Click  on the task bar.
- In the screen that appears, click the  link to modify the program.
- Click [Downloads Images From Canon Camera using Canon CameraWindow], then click [OK].
- Double click .



Transfer and View Images

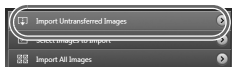

- Click [Import Images from Camera], and then click [Import Untransferred Images].
- ▶ All images not previously transferred will transfer to the computer. Transferred images will be sorted by date and saved in separate folders in the Pictures folder.
- When [Image import complete.] appears, click [OK], then click [X] to close CameraWindow.
- Turn off the camera and unplug the cable.
- For further operations, refer to the *Software Guide*.

You can transfer images without installing the included software by simply connecting your camera to a computer. There are, however, the following limitations.

- After connecting to the camera, it may take a few minutes until you can transfer images.
- Movies will not transfer correctly.
- Images shot in the vertical position may be transferred in the horizontal position.
- Protection settings for images may be lost when transferred to a computer.
- There may be problems transferring images or image information correctly depending on the version of the operating system in use, the file size, or the software in use.



Accessories

 
Supplied with Camera



Wrist Strap
WS-DC7



DIGITAL CAMERA
Solution Disk

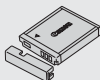

Battery Pack NB-6L*
(with Terminal Cover)



Battery Charger
CB-2LY/CB-2LYE*



*Also available for purchase separately.



Memory Card



Card Reader



Windows/Macintosh

Canon-Brand PictBridge Compliant Printers



Compact Photo Printers
(SELPHY series)



Inkjet Printers

See the user guide supplied with the printer for more information on the printer and interface cables.




TV/Video

Separately Sold Accessories

The following camera accessories are sold separately. Some accessories are not sold in some regions, or may no longer be available.

Power Supplies

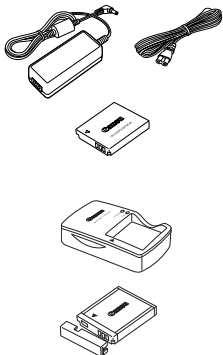

AC Adapter Kit ACK-DC40

This kit lets you power the camera using household power. Recommended for powering the camera for an extended period of time or when connecting to a computer or printer. Cannot be used to charge the battery inside the camera.

Battery Charger CB-2LY/CB-2LYE

An adapter for charging Battery Pack NB-6L.

Battery Pack NB-6L

Rechargeable lithium-ion battery.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO LOCAL REGULATION.



Using accessories abroad

The battery charger and the AC adapter kit can be used in regions that have 100 – 240 V (50/60 Hz) AC power. If the plug does not fit the outlet, use a commercially available plug adapter. Do not use electrical transformers for foreign travel as they will cause damage.

 
Flash



High-Power Flash HF-DC1

This attachable supplementary flash can be used to capture photographic subjects that are too distant for the light from the built-in flash to illuminate.

Other Accessories

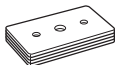

Waterproof Case WP-DC36

Use this case to take underwater shots at depths of up to 40 meters (130 ft.), or to shoot in the rain, at the beach, or on the ski slopes.

Waterproof Case Weight WW-DC1

When using the Waterproof Case to take photographs underwater, the weights prevent the case from floating.

Printers



SELPHY series



Inkjet Printers

Canon-Brand PictBridge Compliant Printers

By connecting your camera to a Canon-brand PictBridge compliant printer, you can print your images without having to use a computer.

For more information, visit your nearest Canon retailer.

Use of genuine Canon accessories is recommended.

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.




2

Learning More

This chapter explains the parts of the camera and what appears on the screen, as well as the basic operating instructions.

Components Guide

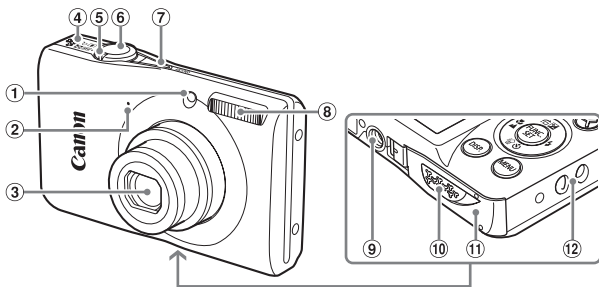

- ① Lamp (pp. 43, 117)
- ② Microphone (p. 31)
- ③ Lens
- ④ Speaker
- ⑤ Zoom Lever
Shooting: (Telephoto) / (Wide Angle) (p. 24)
Playback: (Magnify) / (Index) (pp. 94, 98)
- ⑥ Shutter Button (p. 23)
- ⑦ ON/OFF Button (p. 19)
- ⑧ Flash (pp. 57, 66)
- ⑨ Tripod Socket
- ⑩ DC Coupler Terminal Cover (p. 122)
- ⑪ Memory Card / Battery Cover (p. 16)
- ⑫ Strap Mount (p. 13)


Mode Switch


Use the mode switch to change the Shooting mode.

You can leave it to the camera to select settings for fully automatic shooting (p. 24).

You can shoot with the best settings for the scene (p. 54) or choose settings yourself to take various types of pictures (pp. 53, 63, 77).

For shooting movies (pp. 30, 87).

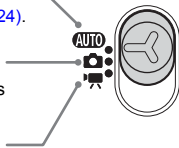

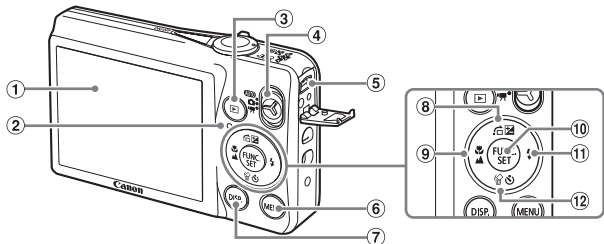

- ① Screen (LCD Monitor) (p. 44)
- ② Indicator (p. 43)
- ③ (Playback) Button (pp. 28, 93, 107)
- ④ Mode Switch
- ⑤ AV OUT (Audio/Video Output) / DIGITAL Terminal (pp. 35, 99, 108)
- ⑥ MENU Button (p. 47)
- ⑦ DISP. (Display) Button (p. 44)
- ⑧ (Exposure Compensation) (p. 65) / (Jump) Button (p. 95) / Button
- ⑨ (Macro) (p. 67) / (Infinity) (p. 66) / Button
- ⑩ FUNC./SET (Function/Set) Button (p. 46)
- ⑪ (Flash) (pp. 57, 66, 85) / Button
- ⑫ (Self-Timer) (pp. 61, 74, 75) / (Single Image Erase) (p. 29) / Button

Indicator

The indicator on the back of the camera will light or blink depending on the camera's status.

Colors	Status	Operation Status
Green	Lights	Shooting preparation complete/Display off (p. 116)
	Blinks	Recording/reading/transmitting image data
Orange	Lights	Shooting preparation complete (flash on)
	Blinks	Camera shake warning (p. 57)



When the indicator blinks green, data is being recorded to/read from the memory card or various information is being transmitted. Do not turn off the power, open the memory card slot/battery cover, shake or jolt the camera. These actions may corrupt the image data or cause the camera or memory card to malfunction.

Screen Display

Switching the Display

You can change the screen display using the **DISP.** button. Refer to [p. 128](#) for details on information that appears on the screen.

Shooting



Information Display



No Information Display

Playback



No Information Display



Simple Information Display




Detailed Information Display



Focus Check Display
([p. 97](#))



You can also switch the display by pressing the **DISP.** button while the image displays shortly after shooting. However, Simple Information Display is not available. You can change the display that appears first by pressing the **MENU** button to choose the  tab, then setting [Review Info] ([p. 118](#)).


Screen Display in Dark Shooting Conditions

The display automatically brightens when shooting in dark conditions, allowing you to check the composition (Night Display function). However, the brightness of the image on the screen, and the brightness of the actual image recorded may be different. Screen noise may appear and the movement of the subject may appear somewhat jagged on the screen. This has no effect on the recorded image.

Overexposure Warning during Playback

In “Detailed Information Display” (p. 44), overexposed areas of the image flash on the screen.

Histogram during Playback

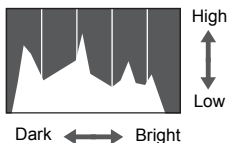

- The graph that appears in “Detailed Information Display” (p. 44) is called the histogram. The histogram shows the distribution of brightness in an image horizontally, and the amount of brightness vertically. When the graph approaches the right side, the image is bright, but when it approaches the left side, the image is dark, and in this way you can judge the exposure.

FUNC. Menu – Basic Operations

Commonly used shooting functions can be set with the FUNC. menu. The menu items and options differ depending on the mode (pp. 130 – 131).



1 Choose a shooting mode.

- Set the mode switch to the desired shooting mode.



2 Display the FUNC. menu.

- Press the  button.




3 Choose a menu item.

- Press the ▲▼ buttons to choose a menu item.
 - ▶ The available options for the menu item appear in the lower part of the screen.

Menu Items


Available Options

4 Choose an option.

- Press the ◀▶ buttons to choose an option.
- You can also choose settings by pressing the DISP. button on options that display .

 


5 Complete the setting.

- Press the  button.
 - ▶ The shooting screen will reappear and the setting you chose will appear on the screen.

MENU – Basic Operations

Various functions can be set from the menus. The menu items are organized under tabs, such as for shooting (📷) and playback (▶). The available menu items differ depending on the mode (pp. 132 – 135).

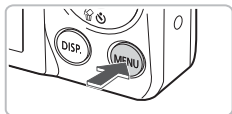

1 Display the menu.

- Press the **MENU** button.



2 Choose a tab.

- Press the ◀▶ buttons, or move the zoom lever (p. 42) left or right to choose a tab.

3 Choose a menu item.

- Press the ▲▼ buttons to choose a menu item.
- Some items require you to press the **FUNC SET** button or ▶ button to display a submenu in which you change the setting.

 


4 Choose an option.

- Press the ◀▶ buttons to choose an option.

5 Complete the setting.


- Press the **MENU** button.
- ▶ The normal screen will reappear.

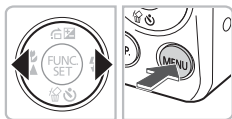

Changing the Sound Settings

You can silence or adjust the volume of camera sounds.

Muting Sounds

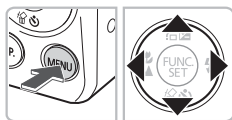


1 Display the menu.

- Press the **MENU** button.

2 Choose [Mute].

- Press the ◀▶ buttons to choose the **Y** tab.
- Press the ▲▼ buttons to choose [Mute], then press the ◀▶ buttons to choose [On].
- Press the **MENU** button again to return to the normal screen.

 Adjusting the Volume

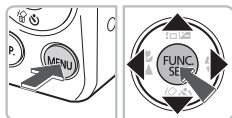

1 Display the menu.

- Press the **MENU** button.

2 Choose [Volume].

- Press the ◀▶ buttons to choose the **Y** tab.
- Press the ▲▼ buttons to choose [Volume], then press the **FUNC SET** button.

3 Change the volume.

- Press the ▲▼ buttons to choose an item, then press the ◀▶ buttons to adjust the volume.
- Press the **MENU** button twice to return to the normal screen.

Changing the Screen Brightness

The screen brightness can be changed in two ways.

Using the Menu

 


1 Display the menu.

- Press the **MENU** button.

2 Choose [LCD Brightness].


- Press the **◀▶** buttons to choose the **☰** tab.
- Press the **▲▼** buttons to choose [LCD Brightness].

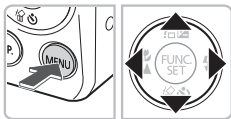

3 Change the brightness.

- Press the **◀▶** buttons to change the brightness.
- Press the **MENU** button twice to return to the normal screen.

 Using the DISP. Button

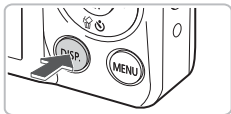

- Press the **DISP.** button for more than one second.
- ▶ The screen increases to maximum brightness regardless of the setting in the **☰** tab.
- Pressing the **DISP.** button again for more than one second will return the screen to the original brightness.



- The next time you turn on the camera, the screen will be at the brightness setting chosen in the **☰** tab.
- When you have set the brightness to its highest setting in the **☰** tab, you cannot change the brightness with the **DISP.** button.

Returning the Camera to Default Settings

When you have mistakenly changed a setting, you can reset the camera to the default settings.

 


1 Display the menu.

- Press the **MENU** button.

2 Choose [Reset All].

- Press the **◀▶** buttons to choose the **YT** tab.
- Press the **▲▼** buttons to choose [Reset All], then press the **FUNC SET** button.

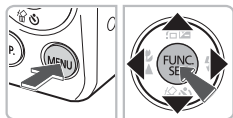

3 Reset the settings.


 
- Press the **◀▶** buttons to choose [OK], then press the **FUNC SET** button.
- ▶ The camera will reset to the default settings.

? Are there functions that cannot be reset?

- The [Date/Time] (p. 19) in the **YT** tab, [Language] (p. 21), [Video System] (p. 99).
- The saved data for custom white balance (p. 71).

Low Level Memory Card Formatting

Perform low level formatting when you think that the recording/reading speed of a memory card has dropped. Performing a low-level format on a memory card erases all data on the memory card. As you cannot retrieve the erased data, exercise adequate caution before performing a low-level format.

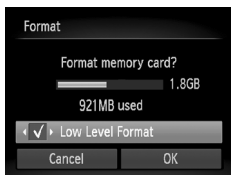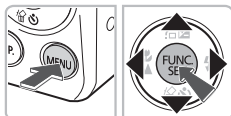

1 Display the menu.

- Press the **MENU** button.

2 Choose [Format].

- Press the **◀▶** buttons to choose the **☰** tab.
- Press the **▲▼** buttons to choose [Format], then press the **FUNC. SET** button.

3 Perform the low level format.

- Press the **▲▼** buttons to choose [Low Level Format], then press the **◀▶** buttons to display **✓**.
- Press the **▲▼◀▶** buttons to choose [OK], then press the **FUNC. SET** button.
 - ▶ A confirmation screen will appear.
- Press the **▲▼** buttons to choose [OK], then press the **FUNC. SET** button.
 - ▶ When low level formatting ends, [Memory card formatting complete] will appear.
- Press the **FUNC. SET** button.

? About low level formatting

- If the [Memory card error] message appears, or if the camera does not work correctly, performing a low level format may solve the problem. Copy the images from the memory card to a computer or other device before performing a low level format.

Power Saving Function (Auto Power Down)



- Low level formatting may take longer than standard formatting, since all recorded data are erased.
- You can stop a low level format of a memory card by choosing [Stop]. When stopping low level formatting, the data will be erased but the memory card can be used without problem.

Power Saving Function (Auto Power Down)

To save battery power, the camera shuts down automatically when it is not operated for a certain time.

Power Saving during Shooting

The screen will turn off approximately 1 minute after the camera is last operated. After about 2 more minutes, the lens will retract and the power will turn off. When the screen has turned off but the lens has not yet retracted, pressing the shutter button halfway (p. 23) turns on the screen and shooting can continue.

Power Saving during Playback

The power will turn off approximately 5 minutes after the camera is last operated.





- You can turn off the Power Saving Function (p. 116).
- You can adjust the time before the screen turns off (p. 116).

3

Shooting in Special Conditions and Commonly Used Functions

This chapter explains how to shoot in different conditions, as well as how to use common functions, such as the self-timer.



- When you choose a Shooting mode that matches a particular set of conditions, the camera will automatically select any necessary settings. All you need do is press the shutter button to take an optimized picture.
- This chapter assumes the mode switch is set to **AUTO** for “Turning the Flash Off” (p. 57) to “Using the Self-Timer” (p. 61). When shooting in a mode other than **AUTO**, check which functions are available in that mode (pp. 130 – 131).
- “Using the Face Self-Timer” (p. 62) assumes the mode switch has been set to  and  mode has been chosen.

Shooting in Various Conditions

The camera will select the necessary settings for the conditions in which you wish to shoot when you choose the matching mode.




 



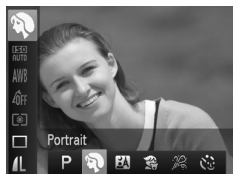
1 Set the mode switch to  (p. 42).

2 Choose the Shooting mode.

- After pressing the  button, press the  buttons to choose **P**.

3 Choose the desired shooting mode.

- Press the  buttons to choose the desired mode, then press the  button.
- To shoot special scenes (p. 55), choose  (at the far right), then press the **DISP.** button. Press the  buttons to choose an item, then press the  button.



4 Shoot.



 **Take portraits (Portrait)**

- Produces a soft effect when photographing people.



 **Take snapshots at night (Night Snapshot)**

- Lets you take beautiful snapshots of city nightscapes or people against night backgrounds.
- If you hold the camera firmly, you can take pictures with reduced camera shake, even without a tripod.




Take shots of kids and pets (Kids&Pets)

- Lets you capture subjects that move around, such as children and pets, without missing photo opportunities.

Take indoor shots (Indoor)

- Lets you shoot indoors with natural colors.

Special Scenes

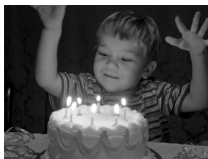


Take shots in low light conditions (Low Light)

- Depending on the scene, the ISO speed will be set higher and the shutter speed faster than in **AUTO** mode so that you can shoot in dark places with reduced camera shake and subject blur.
- A recording pixel setting of **M** will appear, and the image will be fixed at 1600 x 1200 pixels.



Take shots of people at the beach (Beach)

- Lets you take shots of brightly lit people on sandy beaches where the reflected sunlight is strong.

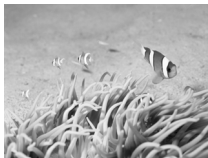

Shoot underwater (Underwater)

- Lets you take natural-colored shots of aquatic life and underwater scenery when used with Waterproof Case WP-DC36 (sold separately).



Take shots of foliage (Foliage)

- Lets you shoot trees and leaves, such as new growth, autumn leaves or blossoms, in vivid colors.



Take shots of people in snow (Snow)


- Lets you take bright, natural-colored shots of people against snowy backgrounds.






 
Take shots of fireworks (Fireworks)

- Lets you take shots of fireworks in vivid colors.



In  mode, attach the camera to a tripod to prevent the camera from moving and blurring the image. Additionally, you should set [IS Mode] to [Off] (p. 119).





In , ,  or  mode, images may appear coarse because the ISO speed (p. 70) is increased to match the shooting conditions.



Modes for other scenes

In addition to the modes explained here, the following scene modes are also available.

-  Face Self-timer (p. 62)
-  Long Shutter (p. 86)


Turning the Flash Off




 
You can shoot with the flash turned off.



1 Press the ► button.




2 Choose .

- Press the ◀▶ buttons to choose , then press the  button.
- ▶ Once set,  will appear on the screen.
- To turn the flash back on, follow the steps above to return the setting to .




 **What if the indicator blinks orange and a flashing  appears?**

 When you press the shutter button halfway in low light conditions where camera shake is likely, the indicator will blink orange and a flashing  will appear on the screen. Attach the camera to a tripod to prevent it from moving.


Zooming in Closely on Subjects (Digital Zoom)

You can use the digital zoom to zoom up to a maximum equivalent of 16x and capture subjects that are too far away for the optical zoom to enlarge. The images may appear coarse, however, depending on the recording pixel setting (p. 68) and the zoom factor used.

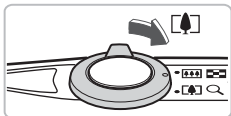

1 Move the zoom lever toward .

- Hold the lever until zooming stops.
- ▶ The zoom will stop when the largest possible zoom factor without image deterioration has been reached, and the zoom factor will appear when you release the zoom lever.

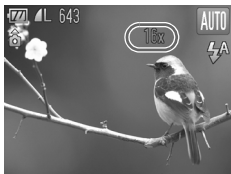

2 Move it toward again.

- ▶ The digital zoom will zoom in even further on the subject.




What if the zoom factor appears in blue?

Images shot at zoom factors that appear in blue will be coarse.



Turning off the digital zoom

To turn off the digital zoom, press the **MENU** button, choose the  tab, and choose [Digital Zoom] and the [Off] option.



The focal length when using the optical zoom is 28 – 112 mm, and the focal length when using the digital zoom is 112 – 448 mm (35 mm film equivalent).


Digital Tele-Converter


The focal length of the lens can be increased by an equivalent of 1.5x or 2.0x. This enables a faster shutter speed and less chance of camera shake than the zoom (including digital zoom) used by itself at the same zoom factor.

The images may appear coarse, however, depending on the combination of recording pixel (p. 68) and digital tele-converter settings used.



1 Choose [Digital Zoom].

 - Press the **MENU** button.
- Press the **◀▶** buttons to choose the  tab.
- Press the **▲▼** buttons to choose [Digital Zoom].

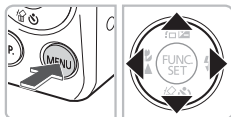

2 Accept the setting.

- Press the **◀▶** buttons to choose the zoom factor.
- Pressing the **MENU** button will restore the shooting screen.
 - ▶ The view will be enlarged and the zoom factor will appear on the screen.
- To return to standard digital zoom, choose [Digital Zoom] and the [Standard] option.

? What if the zoom factor appears in blue?

- Using [1.5x] at a recording pixel setting of **L** or **M1** will cause image deterioration (the zoom factor will appear in blue).
- Using [2.0x] at a recording pixel setting of **L**, **M1** or **M2** will cause image deterioration (the zoom factor will appear in blue).




- The respective equivalent focal lengths when using [1.5x] and [2.0x] are 42.0 – 168 mm and 56.0 – 224 mm (35mm film equivalent).
- The digital tele-converter cannot be used together with the digital zoom.

 
Inserting the Date and Time

You can insert the shooting date and time in the lower right corner of an image. Once inserted, however, they cannot be deleted. Be sure to check beforehand that the date and time are correctly set (p. 19).



1 Choose [Date Stamp].

- Press the **MENU** button.
- Press the ◀▶ buttons to choose the  tab.
- Press the ▲▼ buttons to choose [Date Stamp].

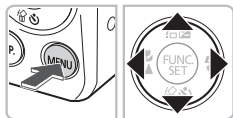

2 Accept the setting.

- Press the ◀▶ buttons to choose [Date] or [Date & Time].
- Pressing the **MENU** button will restore the shooting screen.
- ▶ [DATE] will appear on the screen.



3 Shoot.

- ▶ The shooting date or time will be recorded in the image's lower right corner.
- To restore to the original setting, choose [Off] in Step 2.



You can insert and print the shooting date in images which do not have an embedded date and time as follows. However, if you do this for images with an embedded date and time, the date and time may be printed twice.




- **Use the DPOF print settings (p. 110) to print.**
- **Use the included software to print.**
Refer to the *Software Guide* for details.
- **Print using printer functions.**
Refer to the *Personal Printing Guide* for details.

Using the Self-Timer

The self-timer can be used to shoot a group photo that includes the photographer. The camera will activate approximately 10 seconds after the shutter button is pressed.




1 Press the ▼ button.

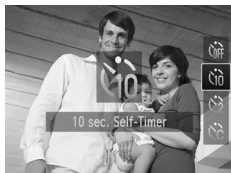

2 Choose 10.

 - Press the ▲▼ buttons to choose 10, then press the FUNC SET button.
- ▶ Once set, 10 will appear.

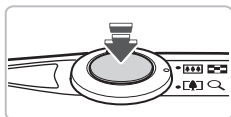

3 Shoot.

- Press the shutter button halfway to focus on the subject, then press it fully.
- ▶ When the self-timer starts, the lamp blinks and the self-timer sound plays.
- ▶ Two seconds before the shutter releases, the lamp and sound speed up (the lamp remains lit when the flash will fire).
- To cancel shooting with the timer after countdown has started, press the ▼ button.
- To restore the original setting, choose Off in Step 2.




You can change the delay time and number of shots (p. 75).

Using the Face Self-Timer

To take a photo that includes the photographer, such as a group photo, compose the shot, and press the shutter button. The camera will shoot two seconds after you enter the shot and it detects your face (p. 78).




1 Choose .

- Follow Steps 1 – 3 on p. 54 and choose .

2 Compose the shot and press the shutter button halfway.

- Make sure a green frame appears on the face focused on and white frames appear on other faces.

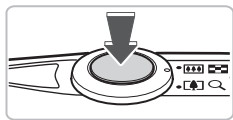


3 Press the shutter button fully.

- ▶ The camera will enter shooting stand-by, and [Look straight at camera to start count down] will appear on the screen.
- ▶ The lamp will blink and the self-timer sound will play.



4 Join the subjects and look at the camera.

- ▶ When the camera detects a new face, the lamp and sound will speed up (the lamp remains lit when the flash will fire), and two seconds later the shutter will release.
- To cancel the countdown after the timer has started, press the  button.



Changing the number of shots

For the screen in Step 1, press the **DISP.** button, then press the  buttons to change the number of shots. Press the  button to accept the setting.




Even if your face is not detected after joining the subjects, the shutter will release approximately 15 seconds later.

4

Choosing Settings Yourself

In this chapter you will learn how to use the various functions in **P** mode to progressively advance your shooting skills.





- This chapter assumes that the mode switch is set to  and the camera is in **P** mode.
- **P** stands for Program AE.
- Before attempting to shoot using a function explained in this chapter in modes other than **P** mode, check if the function is available in those modes (pp. 130 – 131).

Shooting in Program AE

You can choose the settings for various functions to suit your preferences. AE stands for Auto Exposure.



- 1 Set the mode switch to  (p. 42).
- 2 Choose **P**.
 - Choose **P** in Step 2 on p. 54 and press the  button.
- 3 Adjust the settings according to your purposes (pp. 65 – 76).
- 4 Shoot.

? What if the shutter speed and aperture value appear in orange?

If a correct exposure cannot be obtained when pressing the shutter button halfway, the shutter speed and aperture value are shown in orange. Try the following settings to obtain the correct exposure.

- Turn on the flash (p. 66)
- Choose a higher ISO speed (p. 70)

Adjusting the Brightness (Exposure Compensation)


You can adjust the standard exposure set by the camera in 1/3-stop increments in the range of -2 to +2.



1 Enter Exposure Compensation mode.

- Press the ▲ button.

2 Adjust the brightness.


- While watching the screen, press the ◀▶ buttons to adjust the brightness and press the  button.
- ▶ The exposure compensation amount will appear on the screen.

Turning the Flash On

You can make the flash fire every time you shoot. At maximum wide angle, the flash range is approximately 30 cm – 4.0 m (12 in. – 13 ft.), and at maximum telephoto, it is 50 cm – 2.0 m (1.6 – 6.6 ft.)



Choose ⚡.


- After pressing the ► button, press the ◀▶ buttons to choose ⚡, then press the  button.
- ▶ Once set, ⚡ will appear on the screen.

Shooting Far Away Subjects (Infinity)


When it is difficult to focus because your shot contains subjects that are both near and far, you can change the focus range (the distance range from your subject) to focus more reliably on far away subjects (approx. 3 m (9.8 ft.) or more) only.



Choose ▲.






- After pressing the ◀ button, press the ◀▶ buttons to choose ▲, then press the  button.
- ▶ Once set, ▲ will appear on the screen.

Shooting Close-ups (Macro)

You can shoot an object at a close distance or even shoot extreme close-ups of it. The shooting range (focusing zone) is approximately 3 – 50 cm (1.2 in. – 1.6 ft.) from the end of the lens (when the zoom lever is moved toward  and held until the lens stops moving, which is the maximum wide angle setting of the lens).



Choose .



- After pressing the  button, press the  buttons to choose , then press the  button.
- ▶ Once set,  will appear on the screen.



The edges of the image may darken if the flash fires.

 


About the Zoom Bar

- When you move the zoom lever, the zoom bar appears on the screen. When shooting in Macro mode, the camera cannot focus in the range of the yellow bar.
- When zooming within the range of the yellow bar,  will be grayed out and shooting will be done in .



How can I take better close-ups?

- Try attaching the camera to a tripod and shooting in , to prevent the camera from moving and blurring the image (p. 74).
- You can reduce the AF frame size when you want to focus on a specific portion of the subject (p. 79).

Changing the Recording Pixel Setting (Image Size)

You can choose from six recording pixels (image size) settings.



1 Choose the recording pixel setting.

- After pressing the **FUNC SET** button, press the **▲▼** buttons to choose **L**.

2 Choose an option.


- Press the **◀▶** buttons to choose an option, then press the **FUNC SET** button.
- ▶ The setting you chose will appear on the screen.



If you choose **W**, you cannot use Digital Zoom (p. 58) or Digital Tele-Converter (p. 59).

Changing the Compression Ratio (Image Quality)

You can choose from the following two levels of compression ratio (image quality): **L** (Fine), **L** (Normal).

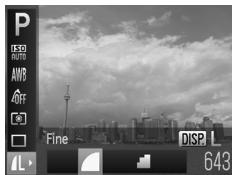













1 Choose the compression ratio setting.

- Press the **FUNC SET** button, then press the **▲▼** buttons to choose **L** and press the **DISP.** button.

2 Choose an option.


- Press the **◀▶** buttons to choose an option, then press the **FUNC SET** button.
- ▶ The setting you chose will appear on the screen.

Approximate Values for Recording Pixels and Compression Ratio

Recording Pixels	Compression Ratio	Single Image Data Size (Approx. KB)	Number of Recordable Images	
			4 GB	16 GB
L (Large) 12M/4000 x 3000		3084	1231	5042
		1474	2514	10295
M1 (Medium 1) 8M/3264 x 2448		2060	1828	7487
		980	3771	15443
M2 (Medium 2) 5M/2592 x 1944		1395	2681	10981
		695	5247	21486
M3 (Medium 3) 2M/1600 x 1200		558	6352	26010
		278	12069	49420
S (Small) 0.3M/640 x 480		150	20116	82367
		84	30174	123550
W (Widescreen) 4000 x 2248		2311	1630	6677
		1105	3352	13727


* The values in the table are measured according to Canon standards and may change depending on the subject, memory card and camera settings.

Approximate Values for Paper Size

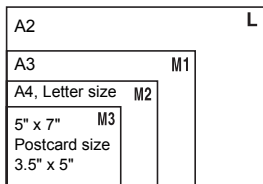

- **S** Suitable for sending images as e-mail attachments.
- **W** For printing on wide size paper.

Changing the ISO Speed

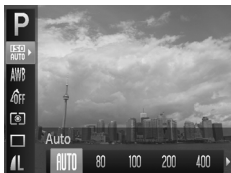

1 Choose the ISO speed.

- After pressing the button, press the buttons to choose .

2 Choose an option.

- Press the buttons to choose an option, then press the .
- ▶ The setting you chose will appear on the screen.

	Automatically adjusts the ISO speed to the Shooting mode and shooting conditions.	
	Low	Fine weather conditions, outdoor shooting.
	↓	Cloudy, Twilight
	High	Nightsapes, Dark interiors



Changing the ISO speed


- Lowering the ISO speed results in sharper images, but there may be an increased chance of image blurring in certain shooting conditions.
- Raising the ISO speed results in a faster shutter speed, reducing camera shake and letting the flash reach greater distances to the subject. The images, however, will appear coarse.



- When the camera is set to , you can press the shutter button halfway to display the automatically set ISO speed.
- In (p. 55), ISO speeds will automatically be set higher than in mode, depending on the scene.

Adjusting the White Balance

The white balance (WB) function sets the optimal white balance for natural looking colors to match the shooting conditions.

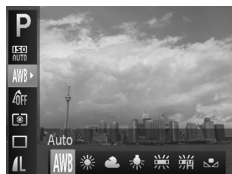

1 Choose the white balance function.

- After pressing the button, press the to choose **AWB**.


2 Choose an option.

- Press the to choose an option, then press the .
- ▶ The setting you chose will appear on the screen.

AWB	Auto	Automatically sets the optimal white balance for the shooting conditions.
	Day Light	Fine weather conditions, outdoor shooting
	Cloudy	Cloudy, shady, twilight conditions
	Tungsten	Tungsten, bulb-type (3-wavelength) fluorescent lighting
	Fluorescent	Warm-white fluorescent, cool-white fluorescent, warm-white-type (3-wavelength) fluorescent lighting
	Fluorescent H	Daylight fluorescent, daylight-type (3-wavelength) fluorescent lighting
	Custom	Manually sets a custom white balance.

Custom White Balance

You can adjust the white balance to the light source at the shooting location. Make sure that you set the white balance under the light source of the actual scene you will shoot.

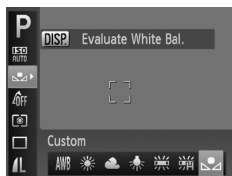

- In Step 2 above, choose .
- Make sure the entire screen is filled with a plain, white colored subject, then press the **DISP.** button.
- ▶ The tint on the screen will change after recording the white balance data.



If you change camera settings after recording white balance data, the tone may not turn out properly.

Changing the Tone of an Image (My Colors)

You can change the tone of an image to sepia or black and white when shooting.



1 Choose My Colors.

- After pressing the **FUNC SET** button, press the **▲▼** buttons to choose **OFF**.

2 Choose an option.

- Press the **◀▶** buttons to choose an option, then press the **FUNC SET** button.
- ▶ The setting you chose will appear on the screen.


OFF My Colors Off	—
V Vivid	Emphasizes the contrast and color saturation for a vivid impression.
N Neutral	Tones down the contrast and color saturation for neutral hues.
Se Sepia	Sepia tones.
BW B/W	Black and white.
C Custom Color	You can adjust contrast, sharpness, and color saturation etc. to your preference.



The white balance cannot be set in the **Se** and **BW** modes (p. 71).

Custom Color

The contrast, sharpness, and color saturation in an image can be chosen and set at 5 different levels.

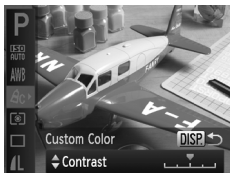

- Follow Step 2 on p. 72 to choose AC , then press the **DISP.** button.
- Press the \blacktriangle / \blacktriangledown buttons to choose an option, then press the \blacktriangleleft / \blacktriangleright buttons to choose a value.
- The more to the right, the stronger/deeper the effect gets, the more to the left, the weaker/lighter the effect gets.
- Press the **DISP.** button to accept the setting.

Continuous Shooting

You can shoot continuously at a maximum speed of approximately 0.9 images/second while the shutter button is pressed fully and held.



1 Choose a Drive mode.

- After pressing the FUNC SET button, press the \blacktriangle / \blacktriangledown buttons to choose \square .

2 Choose an option.

- Press the \blacktriangleleft / \blacktriangleright buttons to choose \square , then press the FUNC SET button.

3 Shoot.


- ▶ As long as you hold the shutter button down, the camera will shoot successive images.

- Cannot be used with the self-timer (pp. 61, 62, 74, 75).
- Continuous shooting speed increases in ∞ (p. 55).
- For a certain interval, images may not be recorded, and the shooting speed for may slow down depending on the shooting conditions and the camera settings.
- For continuous shooting, the focus and exposure are locked when the shutter button is pressed halfway.
- As the number of images increases, the shooting speed may slow down.
- If the flash fires, the shooting speed may slow down.






Shooting Using the Two Second Self-Timer

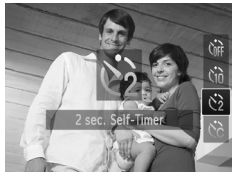The camera will shoot approximately two seconds after the shutter button is pressed, avoiding any camera shake that occurs when pressing the shutter button.




 Choose .




- After pressing the \blacktriangledown button, press the \blacktriangle button to choose , then press the  button.
- ▶ Once set,  will appear on the screen.
- Follow Step 3 on p. 61 to shoot.


Customizing the Self-Timer

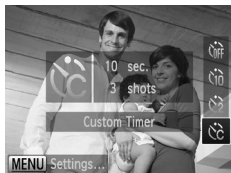 You can set the time delay (0 – 30 seconds) and the number of shots (1 – 10 shots).







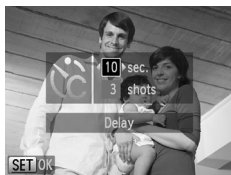
1 Choose .

- Press the  button, then press the  buttons to choose , then press the MENU button.



2 Choose the settings.

- Press the   buttons to choose [Delay] or [Shots].
- Press the   buttons to choose a value, then press the  button.
- Follow Step 3 on [p. 61](#) to shoot.



What if the number of shots is set to two or more shots?

- Exposure and white balance settings are set with the first shot.
- When you set the time delay for more than 2 seconds, the self-timer lamp and sound speed up 2 seconds before the shutter releases (when the flash will fire, the lamp lights).



- If the flash fires, the shooting interval may be longer.
- If you set a high number of shots, the shooting interval may be longer.
- If the memory card becomes full, shooting stops automatically.

Shooting Using a TV Monitor

You can use a TV to display the camera screen content while shooting.

- Connect the camera to a TV as described in “Viewing Images on a TV” (p. 99).
- Shooting procedures are the same as when using the camera screen.

Changing the Composition with the Focus Lock

While you keep the shutter button pressed halfway, the focus and exposure are locked. You can now recompose and shoot. This is called Focus Lock.



1 Focus.

- Center the subject you want in focus, and press the shutter button halfway.
- Confirm that the AF Frame is green.



2 Recompose.

- Keep the shutter button pressed halfway and recompose the scene.

3 Shoot.




- Press the shutter button fully.

5

Getting More Out of Your Camera


This chapter serves as the advanced version of Chapter 4 and explains how to take pictures using various functions.






- This chapter assumes that the mode switch is set to  and the camera is in **P** mode.
- “Shooting Long Exposures” (p. 86) assumes you have set the mode switch to  and chosen .
- Before attempting to shoot using a function explained in this chapter in modes other than **P** mode, check if the function is available in those modes (pp. 130 – 131).

Changing the AF Frame Mode

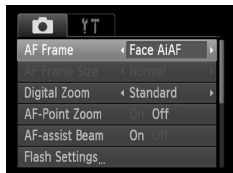You can change the AF (Auto Focus) frame mode to match the conditions you want to shoot.



Choose [AF Frame].

- Press the **MENU** button, choose the  tab, and then choose the [AF Frame] menu item. Press the   buttons to choose an option.

Face AiAF

- Detects people's faces and sets the focus, exposure (evaluative metering only) and white balance (**AWB** only).
 - When the camera is pointed at subjects, a white frame appears on the face the camera judges to be the main subject, and gray frames (max. 2) will appear on other faces.
 - A frame will follow a detected face that is moving within a certain range.
 - When the shutter button is pressed halfway, up to 9 green frames will appear on faces on which the camera focuses.
-
- If a face is not detected and only gray frames (no white frame) appear, up to 9 green frames will appear on the areas the camera focuses on when the shutter button is pressed halfway.
 - Examples of faces that cannot be detected:
 - Subjects that are far away or extremely close.
 - Subjects that are dark or light.
 - Faces turned to the side or at a diagonal, or faces with a portion hidden.
 - The camera may mistakenly identify non-human subjects as a face.
 - If the camera cannot focus when you press the shutter button halfway, the AF frame will not appear.




Center


The AF frame is locked to the center. This is effective for focusing on a specific point.



You can reduce the AF frame size


- Press the **MENU** button, choose the  tab, then choose the [AF Frame Size] menu item and [Small] option.
- The setting is configured to [Normal] when the Digital Zoom (p. 58) or Digital Tele-converter (p. 59) is used.






If the camera cannot focus when you press the shutter button halfway, the AF frame will turn yellow and  will appear.

Magnifying the Focal Point

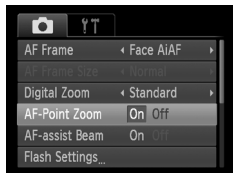If you press the shutter button halfway, the AF frame will magnify and you can check the focus.



1 Choose [AF-Point Zoom].

- Press the **MENU** button, choose the  tab, and then choose the [AF-Point Zoom] menu item. Press the   buttons to choose [On].



2 Check the focus.

- Press the shutter button halfway.
 - ▶ In [Face AiAF] (p. 78), the face detected as the main subject will appear magnified.
 - ▶ In [Center] (p. 79), the contents of the center AF frame will appear magnified.



What if the display does not magnify?

The display will not appear magnified in [Face AiAF] if a face cannot be detected or is too big in relation to the screen. In [Center], it will not appear magnified if the camera cannot focus.



The magnified display will not appear when using Digital Zoom (p. 58) or Digital Tele-converter (p. 58) or when connected to a TV (p. 99).

Shooting with the AF Lock

The focus can be locked. After locking the focus, the focal distance will not change even when you release your finger from the shutter button.




1 Lock the focus.

- Keep the shutter button pressed halfway and press the ◀ button.
- ▶ The focus locks and AFL appears on the screen.
- If you release your finger from the shutter button and press the ◀ button again, AFL will disappear and the focus will unlock.

2 Compose the scene and shoot.

Changing the Metering Mode

 
You can change the Metering mode (brightness measuring function) to match the shooting conditions.

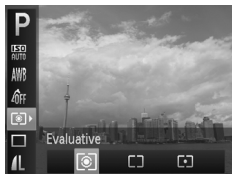
 



1 Choose the Metering mode.

- After pressing the  button, press the ▲▼ buttons to choose .

2 Choose an option.

- Press the ◀▶ buttons to choose an option, then press the  button.
- ▶ The setting will appear on the screen.

 Evaluative	Suitable for standard shooting conditions, including back lit shots. Automatically adjusts the exposure to match the shooting conditions.
 Center Weighted Avg.	Averages the light metered from the entire frame, but gives greater weight to the center.
 Spot	Only meters within the [] (Spot AE Point frame).

Shooting with the AE Lock

You can lock the exposure and shoot, or set the focus and exposure separately to shoot.

AE stands for “Auto Exposure”



1 Lock the exposure.

- Point the camera toward the subject and press the ▲ button while pressing the shutter button halfway.
- ▶ When AEL appears, the exposure will be locked.
- If you release your finger from the shutter button and press the ▲ button again, AEL will disappear and the AE will unlock.

2 Compose the scene and shoot.

Shooting with the FE Lock

Just as with the AE lock (p. 82), you can lock the exposure for shooting with the flash.

FE stands for “Flash Exposure”.



1 Choose (p. 66).

2 Lock the flash exposure.

- Point the camera toward the subject and press the ▲ button while pressing the shutter button halfway.
- ▶ The flash will fire and when FEL appears, the flash output will be retained.
- If you release your finger from the shutter button and press the ▲ button again, FEL will disappear and the FE will unlock.



3 Compose the scene and shoot.

Correcting the Brightness and Shooting (i-Contrast)

The camera can detect areas in the scene, such as faces or backgrounds, that are too bright or dark and automatically adjust them to the optimum brightness when shooting. Also, when the overall image is lacking in contrast, the camera will automatically correct the image for a sharper impression when shooting.



Choose [i-Contrast].

- Press the **MENU** button, choose the  tab, and then choose the [i-Contrast] menu item. Press the **◀▶** buttons to choose [Auto].
- ▶ Once set,  will appear on the screen.



Under some conditions, the image may appear coarse or may not be corrected properly.



You can correct recorded images (p. 104).


Red-Eye Correction

You can automatically correct red-eye that occurs in images taken with the flash.



1 Choose [Flash Settings].

- Press the **MENU** button, choose [Flash Settings] from the tab and press the button.

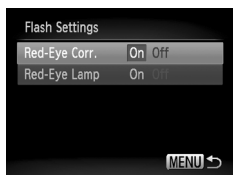

2 Adjust the setting.

- Press the buttons to choose [Red-Eye Corr.] and press the buttons to choose [On].
- ▶ Once set, will appear on the screen.




Red-eye correction may be applied to areas other than red eyes. For example, when red make-up has been used around eyes.



- You can correct recorded images ([p. 105](#)).
- You can also display the screen in Step 2 by pressing the button, then the **MENU** button.

Shooting with Slow Synchro

You can make the main subject, such as people, appear bright by having the camera provide the appropriate illumination with the flash. At the same time, you can use a slow shutter speed to brighten the background that the light from the flash cannot reach.

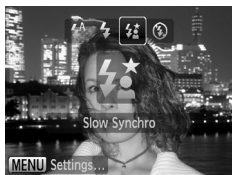

1 Choose

- After pressing the button, press the buttons to choose , then press the button again.
- ▶ Once set, will appear on the screen.

2 Shoot.


- Even if the flash fires, ensure that the subject does not move until the shutter sound ends.





Attach the camera to a tripod to prevent the camera from moving and blurring the image. You should set the [IS Mode] to [Off] when shooting with a tripod (p. 119).


Shooting Long Exposures

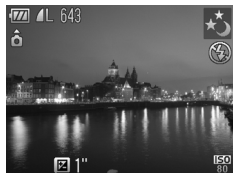You can set the shutter speed to a range between 1 and 15 seconds to shoot long exposures. However, you should attach the camera to a tripod to prevent the camera from moving and blurring the image.






1 Choose .

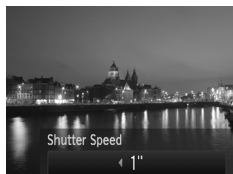- Choose  in Steps 1 – 3 on [p. 54](#) and press the  button.



2 Choose the shutter speed.


- Press the  button.
- Press the  buttons to select the shutter speed, then press the .

3 Confirm the exposure.

- When you press the shutter button halfway, the exposure for the chosen shutter speed will appear on the screen.

- The brightness of the image may differ from the brightness of the screen in Step 3 when the shutter button was pressed halfway.
- When shutter speeds of 1.3 seconds or slower are used, images are processed to eliminate noise after being taken. A certain amount of processing time may be needed before you can take the next shot.
- You should set the [IS Mode] to [Off] when shooting with a tripod ([p. 119](#)).




If the flash fires, the image may be overexposed. If this happens, set the flash to  and shoot.

6

Using Various Functions for Shooting Movies

This chapter provides more advanced information than the “Shooting Movies” and “Viewing Movies” sections of Chapter 1.



- This chapter assumes that the mode switch is set to  (Movie mode).

Changing the Image Quality

You can choose between two image quality settings.



1 Choose the image quality setting.

- After pressing the button, press the buttons to choose .

2 Choose an option.

- Press the buttons to choose an option, and press the button.
- ▶ The setting will appear on the screen.

Image Quality Table

Image Quality (Recording Pixels/Frame Rate)	Content
640 x 480 pixels, 30 frames/sec.	For shooting standard quality movies.
320 x 240 pixels, 30 frames/sec.	Since the number of the recording pixels is smaller, the image quality will appear coarse when compared with , but you can record three times the length.

Estimated Shooting Time

Image Quality	Shooting Time	
	4 GB	16 GB
	32 min. 26 sec.	2 hrs. 12 min. 50 sec.
	1 hr. 31 min. 25 sec.	6 hrs. 14 min. 23 sec.

- Based on Canon's testing standards.
- Recording will automatically stop when either the clip file size reaches 4 GB or the recording time reaches approximately 1 hour.
- Recording may stop even if the maximum clip length has not been reached on some memory cards. SD Speed Class 4 or higher memory cards are recommended.

AE Lock/Exposure Shift

You can lock the exposure or change it in 1/3 steps within a range of ± 2 before shooting.



1 Focus.

- Press the shutter button halfway to focus.



2 Lock the exposure.

- After releasing the shutter button, press the **▲** button to lock the exposure. The exposure shift bar appears.
- Press the **▲** button again to release the lock.

3 Change the exposure.

- While watching the screen, press the **◀▶** buttons to adjust the brightness.

4 Shoot.

Other Shooting Functions

The following functions can be used in the same way as for still images.

- **Zooming in Closely on Subjects (Digital Zoom) (p. 58)**

You can use the digital zoom while shooting, but the optical zoom cannot be used.

If you want to shoot at the maximum zoom factor, you should adjust the optical zoom to the maximum before shooting.

The sounds from zoom operation will be recorded.

- **Using the Self-Timer (p. 61)**

- **Shooting Far Away Subjects (Infinity) (p. 66)**

- **Shooting Close-ups (Macro) (p. 67)**

- **Adjusting the White Balance (p. 71)**

- **Changing the Tone of an Image (My Colors) (p. 72)**

- **Shooting Using the Two Second Self-Timer (p. 74)**

- **Shooting Using a TV Monitor (p. 76)**

- **Shooting with the AF Lock (p. 81)**

- **Turning off the AF Assist Beam (p. 117)**

- **Displaying the Overlay (p. 119)**

[3:2 Guide] is not available.

- **Changing the IS-Mode Settings (p. 119)**










 
You can switch between [Continuous] and [Off].


Playback Functions

The following functions can be used in the same way as for still images.

- Erasing Images (p. 29)
- Quickly Searching Images (p. 94)
- Searching for Images Using the Jump Display (p. 95)
- Viewing Slideshows (p. 96)
- Changing Image Transitions (p. 98)
- Viewing Images on a TV (p. 99)
- Protecting Images (p. 100)
- Erasing All Images (p. 101)
- Rotating Images (p. 102)

Summary of Movie Control Panel in “Viewing Movies” (p. 32)


	Exit
	Playback
	Slow Motion Playback (you can use the ◀▶ buttons to adjust the speed. Sound will not play back.)
	Display the first frame
	Previous frame (Rewind if you hold down the  button.)
	Next frame (Fast forward if you hold down the  button.)
	Display the last frame
	Appears when connected to a PictBridge compliant printer (p. 108). Refer to the <i>Personal Printing Guide</i> for details.

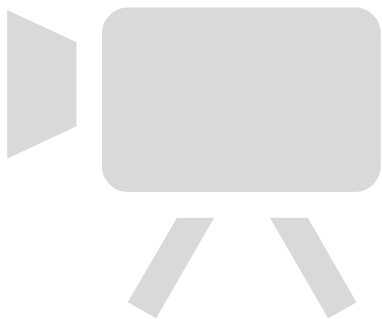

7

Using Various Playback and Editing Functions

This chapter explains various ways to play back and edit images.

- Press the  button to enter Playback mode before operating the camera.




- It may not be possible to play back or edit images that have been edited on a computer, had their file name changed, or have been taken on a different camera.
- The edit function (pp. 103 – 105) cannot be used if the memory card does not have free space available.



Quickly Searching Images

Searching Images Using Index Display

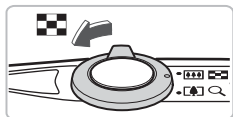 Displaying multiple images at a time lets you quickly find the image you want.








1 Move the zoom lever toward .

- ▶ Images will display in an index.
- Move the zoom lever toward  to increase the number of images. The number of images increases each time you move the lever.
- Move the zoom lever toward  to reduce the number of images. The number of images will reduce each time you move the lever.







2 Choose an image.

- Press the     buttons to choose an image.
- ▶ An orange frame appears on the chosen image.
- Press the  button to display the chosen image by itself.



Searching from a large number of images

By repeatedly moving the zoom lever toward , you can display an index of up to 100 images. If you move the zoom lever toward  again, an orange frame appears around all of the images and you can quickly search by pressing the   buttons to switch between sets of 100 images.

Searching for Images Using the Jump Display

When there are many images on the memory card, you can search them by a specified method or image unit.



1 Choose a jump method.

- In Single Image Playback, press the ▲ button.
- ▶ The search method and the position of the currently displayed image will appear at the bottom of the screen.
- Press the ▲▼ buttons to choose the desired search method.



Position of currently displayed image

2 Switch images.

- Press the ◀▶ buttons.
- ▶ The camera will use the chosen search method to jump to an image.
- To return to Single Image Playback, press the MENU button.

	Jump 10 Images	Jumps over 10 images at a time.
	Jump 100 Images	Jumps over 100 images at a time.
	Jump Shot Date	Jumps to the first image in each shooting date group.
	Jump to first	Jumps to still images only.
	Jump to Movie	Jumps to a movie.

* The number of images matching the search filter will appear on the right side of the screen except for and .



If there are no images matching the jump method, the ◀▶ buttons will not function.


Viewing Slideshows

You can automatically play back images recorded to a memory card.



1 Choose [Slideshow].

- Press the **MENU** button, choose [Slideshow] from the tab and press the button.

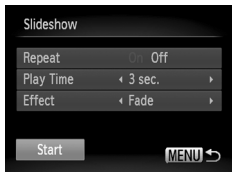

2 Make the setting.

- Press the buttons to choose an item, and press the buttons to adjust the setting.

Repeat	Repeats playback of images
Play Time	Display time for each image
Effect	Transition effects when switching between images

3 Choose [Start].


- Press the buttons to choose [Start], then press the button.
 - ▶ The slideshow will start a few seconds after [Loading image...] displays.
- You can pause/restart a slideshow by pressing the button again.
- Press the **MENU** button to stop the slideshow.



- If you press the buttons during playback, the image will switch. If you keep the buttons pressed, you can fast-forward through images.
- The power saving function does not work during slideshows (p. 52).

Checking the Focus

You can magnify the area of a recorded image that was inside the AF Frame, or the area of a face that was detected, to check the focus.

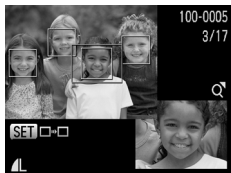


1 Press the DISP. button, and switch to the focus check display (p. 44).

 
- ▶ A white frame will appear where the AF frame or face was when the focus was set.
- ▶ A gray frame will appear on a face detected during playback.
- ▶ The area within the orange frame appears magnified.



 
2 Switch frames.

- Move the zoom lever toward Q once.
- ▶ The screen shown to the left will appear.
- Press the  button to move to a different frame when multiple frames appear.

3 Change the magnification level or location.





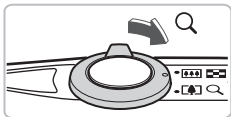








- Use the zoom lever to change the display size, and the  buttons to change the display position while checking the focus.
- Pressing the **MENU** button resets the display to Step 1.

Magnifying Images



Approximate Location of Displayed Area

Move the zoom lever toward .




- The display will zoom in on the image and  will appear. If you continue to hold the zoom lever, it will continue to zoom in up to a maximum factor of 10x.
- If you press the     buttons, you can move the location of the displayed area.
- Move the zoom lever toward  to zoom out, or continue to hold it to return to Single Image Playback.
- When  appears on the screen, press the  button to switch to . Press the   buttons to switch between images in the zoomed state. Press the  button again to return to .

Changing Image Transitions

You can choose from two transition effects when switching between images in Single Image Playback.




Choose [Transition].

- Press the **MENU** button and choose the  tab, then choose [Transition] and press the   buttons to choose an option.

Viewing Images on a TV


Using the supplied AV cable (p. 2), you can connect the camera to a TV to view images you have shot.

1 Turn off the camera and TV.

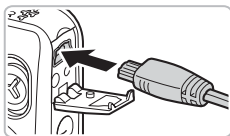


2 Connect the camera to the TV.

- Open the camera's terminal cover and fully insert the cable plug into the camera's terminal.
- Insert the cable plug fully into the video input terminals as shown in the illustration.

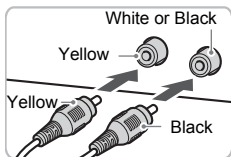

3 Turn on the TV and switch it to the input to which the cable is connected.

4 Turn on the camera.

- Press the  button to turn on the camera.
- ▶ The image will appear on the TV (nothing will appear on the screen of the camera).
- After you finish, turn off the camera and TV, and unplug the cable.



What if the images don't properly display on the TV?



Images will not display correctly if the camera's video output setting (NTSC/PAL) does not match the TV system. Press the **MENU** button, choose the **YT** tab and [Video System] to switch to the correct video system.

Protecting Images

You can protect important images so that they cannot be accidentally erased with the camera (pp. 29, 101).









1 Choose [Protect].

- Press the **MENU** button, choose [Protect] in the  tab, and then press the  button.






2 Choose an image.

- Press the   buttons to choose an image, then press the  button.
 - ▶  will appear.
- If you press the  button again,  will disappear.
- To protect additional images, repeat the above procedure.



3 Protect images.

- If you press the **MENU** button, a confirmation screen will appear.
- Press the   buttons to choose [OK], then press the  button.
 - ▶ The images will be protected.




- If you format the memory card (pp. 22, 51), protected images will also be erased.
- If you switch Shooting modes or turn off the power before performing the operations in Step 3, images will not be protected.





Protected images cannot be erased with the camera's erase function. To erase an image, cancel protection first.


Erasing All Images

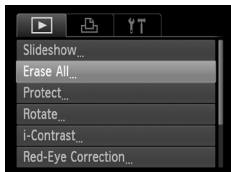You can erase all images at once. Since erased images cannot be recovered, exercise adequate caution before erasing. Protected images (p. 100) cannot be erased.






1 Choose [Erase all].

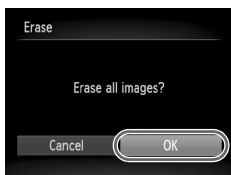- Press the **MENU** button, choose [Erase All] in the  tab, and press the  button.



2 Erase all images.



- Press the   buttons to choose [OK], then press the  button.
- ▶ All images will be erased.
- Pressing the **MENU** button will restore the menu screen.

Rotating Images

You can change the orientation of an image and save it.






1 Choose [Rotate].

- Press the **MENU** button, choose [Rotate] in the  tab, and press the  button.



2 Rotate the image.

- Press the   buttons to choose an image.
- The image will rotate 90° with each press of the  button.
- Pressing the **MENU** button will restore the menu screen.

Resizing Images

You can resize images to a lower pixel setting and save the resized image as a separate file.



1 Choose [Resize].

- Press the **MENU** button, choose [Resize] in the tab, and press the button.

2 Choose an image.

- Press the buttons to choose the image and press the button.


3 Choose an image size.

- Press the buttons to choose an option, then press the button.
 - ▶ The [Save new image?] screen will appear.



4 Save the new image.

- Press the buttons to choose [OK] and press the button.
 - ▶ The image will be saved as a new file.

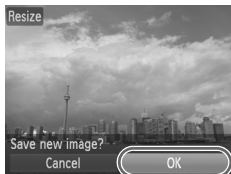

5 Display the new image.

- When you press the **MENU** button, the [Display new image?] screen will appear.
- Press the buttons to choose [Yes], and press the button.
 - ▶ The saved image will be displayed.



- You cannot resize an image to a larger size.
- Images with a recording pixel setting of (p. 68), saved as **XS** in Step 3 cannot be edited.

Correcting the Brightness (i-Contrast)

The camera can detect areas in an image, such as faces or backgrounds, that are too dark and automatically adjust them to the optimum brightness. Also, when the overall image is lacking in contrast, the camera will automatically correct the image for a sharper impression. You can choose from 4 levels of correction: [Auto], [Low], [Medium] or [High]. Corrected images will be saved as a new file.



1 Choose [i-Contrast].

- Press the **MENU** button, choose [i-Contrast] in the tab, and press the button.

2 Choose an image.

- Press the buttons to choose the image and press the .

3 Choose a menu item.

- Press the buttons to choose an option, then press the .

4 Save as a new image and display.

- Follow Steps 4 and 5 on [p. 103](#).



What if the image wasn't corrected by the [Auto] option as well as you would like?

Choose [Low], [Medium] or [High] and adjust the image.



- Under some conditions, the image may appear coarse or the correction setting may not be suitable.
- Repeatedly adjusting the same image may cause the quality to deteriorate.

Correcting the Red-Eye Effect

You can automatically correct red eyes in images and save them as new files.



1 Choose [Red-Eye Correction].

- Press the **MENU** button, choose [Red-Eye Correction] in the tab, and press the button.

2 Choose an image.

- Press the buttons to choose an image.

3 Correct the image.

- Press the button.
 - ▶ Red-eye detected by the camera will be corrected and a frame will appear around the corrected portion.
- You can magnify or reduce the size of the image using the procedures in “Magnifying Images” (p. 98).



4 Save as a new image and display.

- Press the buttons to choose [New File], and press the button.
 - ▶ The image will be saved as a new file.
- Follow Step 5 on [p. 103](#).



- Some images may not be properly corrected.
- When [Overwrite] in Step 4 is chosen, the uncorrected image is overwritten with the corrected data, erasing the original image.
- Protected images cannot be overwritten.




8

Printing

This chapter explains how to choose images for printing, and print using a PictBridge compliant printer (sold separately, [p. 39](#)). Please also refer to the *Personal Printing Guide*.

Canon-Brand PictBridge Compliant Printers

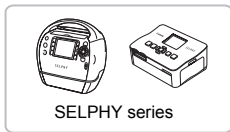


Printing Images

You can easily print the pictures you take by connecting the camera to a PictBridge compliant printer using the supplied interface cable (p. 2).




1 Turn off the camera and printer.

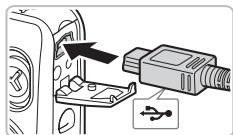

2 Connect the camera to the printer.

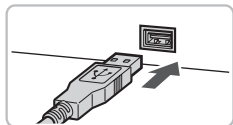

- Open the cover, and insert the small end of the plug firmly into the camera terminal in the direction shown.
- Insert the cable's larger plug into the printer. For connection details, refer to the user guide provided with the printer.



3 Turn on the printer.





4 Turn on the camera.

- Press the  button to turn on the camera.
- ▶  SET will appear on the screen.




5 Choose an image to print.

- Press the  buttons to choose an image, then press the  button.





6 Print images.

- Press the ▲▼ buttons to choose [Print] and press the  button.
- ▶ Printing will start.
- If you want to print additional images, repeat Steps 5 and 6 after printing has completed.
- After printing has completed, turn off the camera and printer, and unplug the interface cable.



- Refer to the *Personal Printing Guide* for details on printing.
- Refer to [pp. 37, 39](#) for Canon-brand Pictbridge compliant printers.

Choosing Images for Printing (DPOF)



You can choose up to 998 images on a memory card for printing and specify settings such as the number of copies so that they can be printed together or processed at a photo developer service. These selection methods comply with the DPOF (Digital Print Order Format) standards.

Print Settings



 
 
You can set the print type, date and file number. These settings apply to all images chosen for printing.



1 Choose [Print Settings].

- Press the **MENU** button and choose the  tab, then choose [Print Settings] and press the  button.


2 Adjust the settings.

- Press the   buttons to choose a menu item, then press the   buttons to choose an option.
- ▶ Pressing the **MENU** button accepts the settings and restores the menu screen.

Print Type	Standard	Prints one image per page.
	Index	Prints several reduced size images per page.
	Both	Prints both standard and index formats.
Date	On	Prints the shooting date.
	Off	–
File No.	On	Prints the file number.
	Off	–
Clear DPOF data	On	Removes all print settings after printing.
	Off	–

- Some printers or photo developer services may not be able to reflect all of the settings in the output.



-  may appear when using a memory card with print settings set by a different camera. These settings will be overwritten with those set by your camera.
- If [Date] is set to [On], some printers may print the date twice.



- With [Index] chosen, the [Date] and [File No.] options cannot be set to [On] at the same time.
- The date will be printed in the style set in the [Date/Time] function in the **↑↑** tab (p. 19).

Choosing the Number of Copies



1 Choose [Select Images & Qty.].

- Press the **MENU** button and choose the tab, then choose [Select Images & Qty.] and press the **FUNC SET** button.

2 Choose an image.

- Press the **◀▶** buttons to choose an image, then press the **FUNC SET** button.
 - ▶ You will be able to set the number of print copies.
- If you choose [Index], ✓ appears on the screen. Pressing the **FUNC SET** button again will deselect the image and ✓ will disappear.



3 Set the number of prints.

- Press the **▲▼** buttons to set the number of prints (maximum 99).
- Repeat Steps 2 and 3 to choose other images and the number of prints for each.
- You cannot set the number of print copies for index prints. You can only choose which images to print.
- Pressing the **MENU** button accepts the settings and restores the menu screen.

Set All Images to Print Once




1 Choose [Select All Images].

- In Step 1 on [p. 111](#), choose [Select All Images] and then press the button.

2 Make print settings.

- Press the buttons to choose [OK] and press the button.

Clearing All Selections

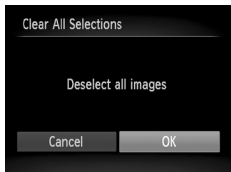

1 Choose [Clear All Selections].

- In Step 1 on [p. 111](#), choose [Clear All Selections] and then press the button.

2 All selections will be cleared.

- Press the buttons to choose [OK], then press the button.

Printing Images with DPOF Settings

Number of copies to print



1 Connect the camera to the printer.

- Follow Steps 1 – 4 on [p. 108](#).

2 Print.

- Press the buttons, choose [Print now] and press the button.
 - ▶ Printing will start.

9

Customizing Camera Settings

You can customize various settings to suit your shooting preferences. The first part of this chapter explains convenient and commonly used functions. The latter part explains how to change shooting and playback settings to suit your purposes.

Changing Camera Settings

You can customize convenient and commonly used functions from the **Y/T** tab (p. 47).

Turning Off the Start-up Image

You can turn off the start-up image that displays when you turn on the camera.



- Choose [Start-up Image], then press the **◀▶** buttons to choose [Off].

Changing the File Number Assignment

Images you shoot are automatically assigned file numbers in the order they were taken, from 0001 – 9999, and saved to folders of up to 2,000 images. You can change the file number assignment.



- Choose [File Numbering], then press the **◀▶** buttons to choose an option.

Continuous	Even if you shoot using a new memory card, the file numbers are assigned consecutively until an image with the number 9999 is taken/saved.
Auto Reset	If you replace the memory card with a new one, or a new folder is created, file numbering begins with 0001 again.



- If you use a memory card already containing images, the newly assigned file numbers may continue the existing numbering for both the [Continuous] and [Auto Reset] settings. If you want to start over with file number 0001, format the memory card before use (p. 51).
- Refer to the *Software Guide* for information regarding folder structure or image types.

Creating Folders by Shooting Date


Images are saved into folders created each month, however, you can also create folders by shooting date.



- Choose [Create Folder] and press the ◀▶ buttons to choose [Daily].
- Images will be saved into folders created on each shooting date.

Changing the Lens Retract Time


For safety reasons, the lens retracts about 1 minute after pressing the ▶ button when in a Shooting mode (p. 28). If you want the lens to retract immediately when you press the ▶ button, set the retract time to [0 sec.].

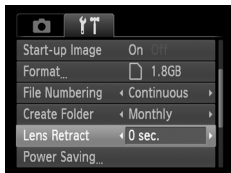


- Choose [Lens Retract], then press the ◀▶ buttons to choose [0 sec.].

Turning off the Power Saving Function


You can set the power saving function (p. 52) to [Off]. Setting it to [On] is recommended to save battery power.

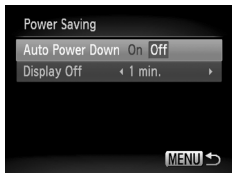


- Choose [Power Saving], then press the  button.
- Press the ▲▼ buttons to choose [Auto Power Down], then use the ◀▶ buttons to choose [Off].
- If you set the power saving function to [Off], be sure to turn the camera off after use.

Setting the Screen Shut-Off Time

You can adjust the time the screen takes to shut off automatically (p. 52). This also works when [Auto Power Down] is set to [Off].

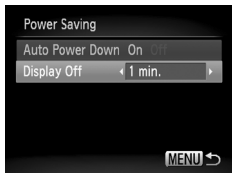

- Choose [Power Saving], then press the  button.
- Press the ▲▼ buttons to choose [Display Off], then use the ◀▶ buttons to choose a time.
- In order to save battery power, you should choose less than [1 min.].

Changing Shooting Function Settings

If you set the mode switch to **Ⓜ**, and the mode to **P**, you can change the settings in the **Ⓜ** tab (p. 47).



Before attempting to shoot using a function explained in this chapter in modes other than **P** mode, check if the function is available in those modes (pp. 132 – 133).

Turning off the AF Assist Beam


The lamp will automatically light to assist focusing in low light conditions when you press the shutter button halfway. You can turn off the lamp.



- Choose [AF-assist Beam], then press the **◀▶** buttons to choose [Off].

Turning Off the Red-Eye Reduction Function

The red-eye reduction lamp lights in order to reduce the red-eye effect that occurs when shooting in dark conditions with the flash. You can turn off this function.

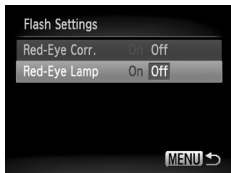

- Choose [Flash Settings], then press the **FUNC/SET** button.
- Press the **▲▼** buttons to choose [Red-Eye Lamp], then press the **◀▶** buttons to choose [Off].

Changing the Image Display Time Right After Shooting

You can change the length of time the images display after shooting.




- Choose [Review], then press the ◀▶ buttons to choose an option.

2 – 10 sec.	Displays images for the set time.
Hold	The image displays until you press the shutter button halfway.
Off	No image displays

Changing the Way the Image Displays Right After Shooting

You can change the way the image displays after shooting.

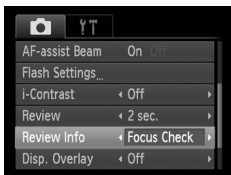

- Choose [Review Info], then press the ◀▶ buttons to choose an option.

Off	Displays the image only.
Detailed	Displays detailed information (p. 44).
Focus Check	The area inside the AF frame is magnified, allowing you to check the focus. The procedure is the same as in "Checking the Focus" (p. 97).

Displaying the Overlay

You can display gridlines for vertical and horizontal guidance, or a 3:2 guide to confirm the printable area for postcard size prints.



- Choose [Disp. Overlay], then press the **◀▶** buttons to choose an option.

Grid Lines	A grid overlays the display.
3:2 Guide	Gray bars will appear on the top and bottom of the display. This area will not print when printing on paper with a 3:2 aspect ratio.
Both	Both grid lines, and the 3:2 guide will appear.



- In **W** mode, you cannot set [3:2 Guide] or [Both].
- Grid Lines will not be recorded on the image.
- The gray areas displayed with [3:2 Guide] are the areas that will not be printed. The actual image recorded will include the portion in the gray areas.

Changing the IS-Mode Settings



- Choose [IS Mode], then press the **◀▶** buttons to choose an option.

Continuous	Image stabilization is always on. You can confirm the result directly on the display, which makes it easier to check the composition or focus.
Shoot Only	Image stabilization is only active at the moment of shooting.
Panning	Image stabilization only counters up and down motion. This option is recommended for shooting objects moving horizontally.




- If camera shake is too strong, attach the camera to a tripod. You should set the IS Mode to [Off] when the camera is attached to a tripod.
- When using [Panning], hold the camera horizontally to shoot. Image stabilization does not work when the camera is held vertically.

Changing Playback Function Settings

You can adjust the settings in the  tab by pressing the  button (p. 47).

Choosing the Image that First Displays in Playback



- Choose [Resume], then press the  buttons to choose an option.

Last seen	Resumes with the image last viewed.
Last shot	Resumes with the most recently shot image.

10


Useful Information

This chapter introduces how to use the AC adapter kit (sold separately), troubleshooting tips, and contains lists of functions and items that appear on the screen. The index also appears at the end.

Using Household Power

If you use AC Adapter Kit ACK-DC40 (sold separately), you can use the camera without worrying about how much charge is left in the battery.


////////////////////////////////////

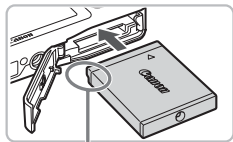

Terminals


1 Insert the coupler.

- Open the cover (p. 16) and insert the coupler as shown until it locks into place with a click.
- Close the cover (p. 17).

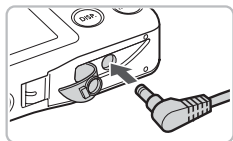

2 Plug the cord into the coupler.

 - Open the cover and fully insert the plug into the coupler.

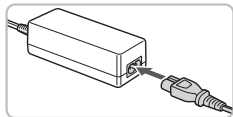

3 Connect the power cord.

- Connect the power cord to the compact power adapter, then plug the other end into a power outlet.
- You can turn the camera on to use it.
- After you finish, turn off the camera and unplug the power cord from the power outlet.



Do not unplug the plug or power cord with the camera turned on. This could erase images you have taken or damage the camera.

Troubleshooting

If you think there is a problem with the camera, first check the following. If the items below do not solve your problem, contact a Canon Customer Support Help Desk as listed on the included customer support list.

Power

You pressed the ON/OFF button, but nothing happened.

- Confirm that the battery is not depleted (p. 15).
- Confirm that the battery is properly inserted (p. 17).
- Confirm that the memory card/battery cover is securely closed (p. 17).
- If the battery terminals are dirty, battery performance will decrease. Clean the terminals with a cotton swab and re-insert the battery several times.

Battery is consumed quickly.

- Battery performance decreases at low temperatures. Warm the battery, for example, by placing it in your pocket with the terminal cover on.

Lens will not retract.

- Do not open the memory card/battery cover while the power is on. After closing the memory card/battery cover, turn the power on then back off (p. 17).

TV output

Image is distorted or not showing on TV (p. 99).

Shooting

Cannot shoot.

- When in Playback mode (p. 28), press the shutter button halfway (p. 23).

Screen does not display properly in dark places (p. 45).

Screen does not display properly while shooting.

Please note, the following will not be recorded in still images, but will be recorded in movies.

- When the camera is subjected to powerful light sources, the display may darken.
- When shooting under fluorescent lighting, the screen may flicker.
- When shooting bright light sources, a bar of light (purplish red) may appear on the screen.

⚡ appears on the screen and the shot cannot be taken even though the shutter button was pressed fully (p. 27).

📷 appears when the shutter button was pressed halfway (p. 57)

- Set the [IS mode] to [Continuous] (p. 119).
- Set the flash to ⚡ (p. 66).
- Increase the ISO speed (p. 70).
- Attach the camera to a tripod.


Image is blurred.

- Press the shutter button halfway to focus on the subject, then press fully to shoot (p. 23).
- Shoot the subject within the focusing distance (p. 136).
- Set the [AF-assist Beam] to [On] (p. 117).
- Confirm that functions which you do not intend to use (macro, etc.) are not set.
- Shoot using the focus lock or AF lock (pp. 76, 81).

Even when you press the shutter button halfway, the AF frame does not appear, and the camera does not focus.

- If you center on the light and dark contrasting area of the subject and push the shutter button halfway, or repeatedly push the shutter button halfway, the frame will appear and the camera will focus.

Subject is too dark.

- Set the flash to  (p. 66).
- Adjust the brightness with exposure compensation (p. 65).
- Adjust the image with i-Contrast (pp. 83, 104)
- Use the AE lock, or spot metering to shoot (pp. 81, 82).

Subject is too bright (overexposed).



- Set the flash to  (p. 57).
- Adjust the brightness with exposure compensation (p. 65).
- Use the AE lock, or spot metering to shoot (pp. 81, 82).
- Reduce the light illuminating the subject.

Image is dark even though the flash fired (p. 27).

- Increase the ISO speed (p. 70).
- Shoot within an appropriate distance for flash photography (p. 66).

Image taken using the flash is too bright (overexposed).

- Shoot within an appropriate distance for flash photography (p. 66).
- Set the flash to  (p. 57).

White dots appear on the image when shooting with the flash.

- Light from the flash has reflected off dust particles or other objects in the air.

Image appears rough or grainy.

- Shoot with the ISO speed on a lower setting (p. 70).
- Depending on the Shooting mode, when shooting in a high ISO speed the image may appear rough or grainy (pp. 55, 70).

Eyes appear red (p. 84).

- Set the [Red-Eye Lamp] to [On] (p. 117). When shooting with the flash, the lamp (on the front of the camera) (p. 43) lights, and for approximately 1 second while the camera is reducing red-eye, it is not possible to shoot. It is more effective if the subject is looking directly at the lamp. Even better results can be obtained by increasing the lighting in indoor settings or approaching closer to the subject.

Recording images to the memory card takes a long time, or continuous shooting slows down.

- Perform a low-level format of the memory card in the camera (p. 51)

When you can't make settings for shooting functions or FUNC. menu.

- The items in which settings can be made differ depending on the shooting mode. Refer to "Functions Available in Each Shooting Mode" (pp. 130 – 131).

Shooting movies

Correct shooting time does not display, or stops.

- Format the memory card in the camera, or use a memory card capable of recording at high speeds. Even when the shooting time does not display properly, the recorded video will be the length that it was actually shot (pp. 31, 88).

❗ appeared on the screen and shooting ended automatically.

The camera's internal memory was insufficient. Try one of the following:

- Perform a low-level format of the memory card in the camera (p. 51).
- Change the image quality setting (p. 88).
- Use a memory card capable of recording at high speeds (p. 51).

Zoom does not operate.

- You can use the digital zoom while recording, but not the optical zoom (p. 90).

Playback

Cannot play back images or movies.

- If the file name or folder structure is changed on a computer, you may not be able to play back images or movies. Refer to the *Software Guide* for information regarding folder structure or file names.

Playback stops, or audio cuts out.

- Use a memory card that has been formatted on this camera (p. 51).
- If you copy a movie to a memory card that reads slowly, playback may interrupt momentarily.
- Depending on its capabilities, when playing movies, the computer may drop frames or the audio may cut out.

Computer

Cannot transfer images to a computer.

It may be possible to solve the problem when the camera is connected to the computer via cable by reducing the transfer speed.

- Press and hold down the **MENU** button, then press and hold the **▲** and **FUNC SET** buttons simultaneously. Choose [B] when it appears on the screen, then press the **FUNC SET** button.

List of Messages That Appear on the Screen

If error messages appear on the screen, try one of the following solutions.

No memory card

- The memory card is not installed in the correct direction. Install the memory card in the correct direction (p. 17).

Memory card locked

- The SD memory card, SDHC memory card or SDXC memory card's write protect tab is set to "LOCK". Unlock the write protect tab (p. 16).

Cannot record!

- You attempted to shoot an image without a memory card, or with a memory card installed incorrectly. Install the memory card in the correct direction to shoot (p. 17).

Memory card error (p. 51)

- If the same message appears even when a formatted memory card is installed in the correct direction, contact your Canon Customer Support Help Desk (p. 17).

Insufficient space on card

- There is not enough free space on the memory card to shoot (pp. 24, 53, 63, 77) or edit images (pp. 103 – 105). Erase the images (pp. 29, 101) to open space for new images, or insert an empty memory card (p. 17).

Change the battery pack. (p. 17)

No Image.

- There are no images recorded on the memory card that can be displayed.

Protected! (p. 100)

Unidentified Image/Incompatible JPEG/Image too large./Cannot play back MOV/RAW

- Unsupported images, or images with corrupted data cannot be displayed.
- Images manipulated on a computer, that have had their file name changed, or have been taken with a different camera may not display.

Cannot magnify!/Cannot rotate/Cannot modify image/

Unselectable image.

- Incompatible images cannot be magnified (p. 98), rotated (p. 102), edited (pp. 103 – 105), or added to a print list (p. 110).
- Images manipulated on a computer, that have had their file name changed, or have been taken with a different camera may not be magnified, rotated, edited, or added to a print list.
- Movies cannot be magnified (p. 98).

Exceeded selection limit

- You chose more than 998 images in print settings. Choose less than 998 images (p. 110).
- Print settings could not be saved correctly. Reduce the number of selected images and try again (p. 110).

Communication error

- Images could not be transferred to the computer or printed due to the large amount of images (approx. 1000) stored on the memory card. Use a commercially available USB card reader to transfer the images. Insert the memory card into the printer's card slot to print.

Naming error!

- The folder or image could not be created because there is an image with the same file name as the folder or image that the camera is attempting to create, or the highest possible file number has already been reached. In the **Y** menu, change [File Numbering] to [Auto Reset] (p. 114) or format the memory card (p. 51).

Lens Error


- This error can occur if you hold the lens while it is in motion or when using it in a location with excessive dust or sand in the air.
- If this error message continues to appear, contact your Canon Customer Support Help Desk as there may be a problem with the lens.

A camera error was detected (Error number)

- If an error code appears directly after taking a picture, the shot may not have been recorded. Check the image in Playback mode.
- If this error code reappears, note the Error number (Exx) and contact your Canon Customer Support Help Desk as there may be a problem with the camera.

Information Displayed on the Screen

Shooting (Information Display)

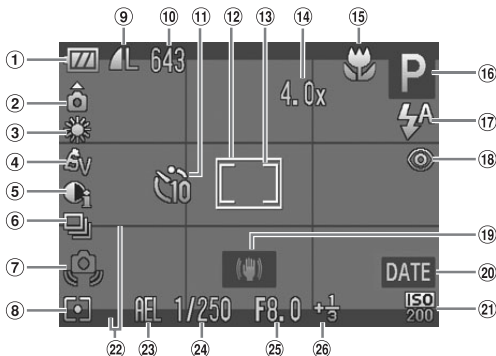


- ① Battery Charge Indicator (p. 15)
- ② Camera Orientation* (p. 15)
- ③ White Balance (p. 71)
- ④ My Colors (p. 72)
- ⑤ i-Contrast (p. 83)
- ⑥ Drive Mode (p. 73)
- ⑦ Camera Shake Warning (p. 123)
- ⑧ Metering Modes (p. 81)
- ⑨ Image Quality (Compression) (p. 68), Recording Pixels (pp. 68, 88)
- ⑩ Still Images: Recordable Shots (pp. 15, 69)
Movies: Remaining Time/Elapsed Time (pp. 31, 88)
- ⑪ Self-Timer (pp. 61, 62, 74, 75)
- ⑫ AF Frame (p. 78)
- ⑬ Spot AE Point Frame (p. 81)
- ⑭ Digital Zoom Magnification (p. 58) / Digital Tele-converter (p. 59)
- ⑮ Focusing Zone (pp. 66, 67), AF Lock (p. 81)
- ⑯ Shooting Mode (p. 42)
- ⑰ Flash Mode (pp. 57, 66, 85)
- ⑱ Red-Eye Correction (p. 84)
- ⑲ Image Stabilizer (p. 119)
- ⑳ Date Stamp (p. 60)
- ㉑ ISO Speed (p. 70)
- ㉒ Disp. Overlay (p. 119)
- ㉓ AE Lock (p. 82), FE Lock (p. 82)
- ㉔ Shutter Speed
- ㉕ Aperture Value
- ㉖ Exposure Compensation (p. 65)

* : Standard, : Held vertically





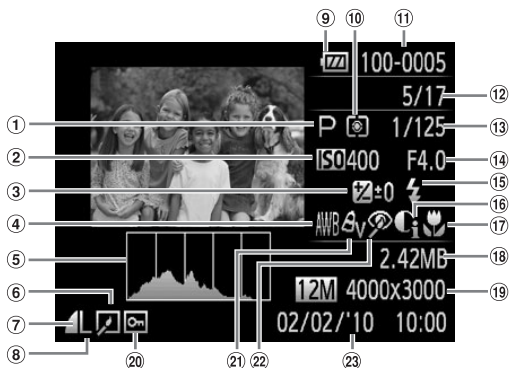






 
When shooting, the camera detects if it is held vertically or horizontally, and adjusts settings accordingly for the best shot. It also detects orientation during playback, so you can hold the camera in either orientation and it will automatically rotate images for correct viewing. This function may not operate correctly when the camera is pointed straight up or down.

Playback (Detailed Information Display)










- | | | |
|--|---|--|
| ① Shooting Mode (p. 42) | ⑨ Battery Charge Indicator (p. 15) | ⑰ Focusing Zone (pp. 66, 67) |
| ② ISO Speed (p. 70) | ⑩ Metering Modes (p. 81) | ⑱ File Size (p. 69) |
| ③ Exposure Compensation (p. 65), Exposure Shift Amount (p. 89) | ⑪ Folder Number – File Number (p. 114) | ⑲ Still Images: Recording Pixels (p. 68)
Movies: Movie Length (p. 88) |
| ④ White Balance (p. 71) | ⑫ Displayed image number / Total number of images | ⑳ Protect (p. 100) |
| ⑤ Histogram (p. 45) | ⑬ Shutter Speed | ㉑ My Colors (p. 72) |
| ⑥ Image Editing (pp. 103 – 105) | ⑭ Aperture Value, Image Quality (Movies) (p. 88) | ㉒ Red-Eye Correction (pp. 84, 105) |
| ⑦ Compression (Image Quality) (p. 68), | ⑮ Flash (p. 66) | ㉓ Shooting Date and Time (p. 19) |
| ⑧ Recording Pixels (p. 68), AVI (Movies) | ⑯ i-Contrast (pp. 83, 104) | |


Functions Available in Each Shooting Mode

Function	Shooting modes			
		AUTO	P	
Exposure Compensation (p. 65)		—	○	○
AE Lock/FE Lock (p. 82)		—	○	—
AE Lock/Exposure Shift (p. 89)		—	—	—
Focusing Zone (pp. 66, 67)		—	○	—
		○	○	○
		—	○	—
AF Lock (p. 81)		—	○	—
Flash (pp. 57, 66, 85)*3		○	○	○
		—	○	○
		*1	○	—
		○	○	○
Self-Timer (pp. 61, 74, 75)		○	○	○
		○	○	○
		○	○	○


FUNC. Menu















ISO Speed (p. 70)		○	○	○
	ISO 80 ISO 100 ISO 200 ISO 400 ISO 800 ISO 1600	—	○	—
White Balance (p. 71)	AWB	○	○	○
		—	○	—
My Colors (p. 72)	OFF	○	○	○
		—	○	—
Light Metering (p. 72)		○	○	○
	[] 	—	○	—
Drive Mode (p. 73)		○	○	○
		—	○	○
Recording Pixels (p. 68)/Compression Ratio (Image Quality) (pp. 68, 88)		○	○	○

*1 Not selectable, but flash fires automatically depending on conditions.

*2 Not selectable, but set to  when the flash fires.

*3 Possible settings: 0 – 30 seconds in [Delay], and 1 – 10 shots in [Shots].

*4 Recording pixels are fixed to . The compression setting is selectable.




												
												
○	○	○	○	○	○	○	○	○	○	○	—	—
—	—	—	—	—	—	—	—	—	—	—	—	—
—	—	—	—	—	—	—	—	—	—	—	—	○
—	—	—	—	—	—	○	—	—	—	○	○	○
○	○	○	○	○	○	○	○	○	○	○	○	○
—	—	—	—	—	—	○	—	—	—	○	○	○
—	—	—	—	—	—	—	—	—	—	○	○	○
○	○	○	○	○	○	○	○	○	—	—	—	—
○	○	○	○	—	○	○	○	○	○	—	○	—
+2	—	—	—	—	—	—	—	—	—	—	+2	—
○	○	○	○	○	○	○	○	○	○	○	○	—
○	○	○	—	○	○	○	○	○	○	○	○	○
○	○	○	—	○	○	○	○	○	○	○	○	○
○	○	○	—	○	○	○	○	○	○	○	○	—

FUNC. Menu											
○	○	○	○	○	○	○	○	○	○	—	○
—	—	—	—	—	—	—	—	—	—	○	—
○	○	○	○	○	○	○	○	○	○	○	○
—	—	—	—	○	—	—	—	—	—	○	○
○	○	○	○	○	○	○	○	○	○	○	○
—	—	—	—	—	—	—	—	—	—	○	○
○	○	○	○	○	○	○	○	○	○	○	○
—	—	—	—	—	—	—	—	—	—	—	—
○	○	○	○	○	○	○	○	○	○	○	○
○	○	○	—	○	○	○	○	○	○	○	—
○	○	○	○	+4	○	○	○	○	○	○	○














 
○ Selectable, or set automatically. — Not selectable

Menus

Shooting Menu

Function	Shooting modes				
			P		
AF Frame (p. 78)	Face AiAF		○	○	○
	Center		—	○	○
AF Frame Size (p. 79)	Normal/Small		—	○	—
Digital Zoom (p. 58)	Standard		○	○	○
	Off		○	○	○
	Digital Tele-converter (1.5x/2.0x)		○	○	○
AF-Point Zoom (p. 80)	On/Off		○	○	○
AF-assist Beam (p. 117)	On/Off		○	○	○
Flash Settings (pp. 84, 117)	Red-Eye Corr.	On/Off	○	○	○
	Red-Eye Lamp	On/Off	○	○	○
i-Contrast (p. 83)	Auto/Off		*2	○	—
Review (p. 118)	Off/2 – 10 sec./Hold		○	○	○
Review Info (p. 118)	Off/Detailed/Focus Check		○	○	○
DISP. Overlay (p. 119)	Off/Grid Lines		○	○	○
	3:2 Guide/Both		○	○	○
IS Mode (p. 119)	Continuous		○	○	○
	Off		—	○	○
	Shoot Only/Panning		—	○	○
Date Stamp (p. 60)	Off/Date/Date & Time		○	○	○

*1 AiAF *2 Always [Auto].

											
											
○	○	○	○	○	○	○	○	○	—	○	*1
○	○	○	—	—	○	○	○	○	○	○	—
—	—	—	—	—	—	—	—	—	—	—	—
○	○	○	○	—	○	○	○	○	○	○	○
○	○	○	○	○	○	○	○	○	○	○	○
○	○	○	○	—	○	○	○	○	○	○	—
○	○	○	○	○	○	○	○	○	—	○	—
○	○	○	○	○	○	○	○	○	—	○	○
○	○	○	○	○	○	○	○	○	—	○	—
○	○	○	○	○	○	○	○	○	—	○	—
—	—	—	—	*2	—	—	—	—	—	—	—
○	○	○	○	○	○	○	○	○	○	○	—
○	○	○	○	○	○	○	○	○	○	○	—
○	○	○	○	○	○	○	○	○	○	○	○
○	○	○	○	○	○	○	○	○	○	○	—
○	○	○	○	○	○	○	○	○	○	○	○
○	○	○	○	○	○	○	○	○	○	○	○
○	○	○	○	○	○	○	○	○	○	○	—
○	○	○	○	—	○	○	○	○	○	○	—

○ Selectable, or set automatically. — Not selectable

Set up Menu

Item	Options/Summary	Ref. Page
Mute	On/Off*	p. 48
Volume	Set all operation sounds (5 levels).	p. 48
LCD Brightness	Set within a range of ± 2 .	p. 49
Start-up Image	On*/Off	p. 114
Format	Formats memory card, erasing all data	pp. 22, 51
File Numbering	Continuous*/Auto Reset	p. 114
Create Folder	Monthly*/Daily	p. 115
Lens Retract	1 min.*/0 sec.	p. 115
Power Saving	Auto Power Down: On*/Off Display Off: 10, 20 or 30 sec./1*, 2 or 3 min.	pp. 52, 116
Date/Time	Date and time settings	p. 19
Video System	NTSC/PAL	p. 99
Language	Choose display language.	p. 21
Reset All	Returns camera to default settings.	p. 50

* Default setting

Playback Menu

Item	Options/Summary	Ref. Page
Slideshow	Plays back images automatically.	p. 96
Erase All	Erases images.	p. 101
Protect	Protects images.	p. 100
Rotate	Rotates images.	p. 102
i-Contrast	Corrects dark portions and contrast in still images.	p. 104
Red-Eye Correction	Corrects red eyes in still images.	p. 105
Resize	Resizes and saves still images.	p. 103
Resume	Last seen*/Last shot	p. 120
Transition	Fade*/Slide/Off	p. 98

* Default setting

 **Print Menu**

Item	Options/Summary	Ref. Page
Print	Displays printing screen.	p. 108
Select Images & Qty.	Chooses individual images for printing.	p. 111
Select All Images	Chooses all images for printing.	p. 112
Clear All Selections	Cancels all settings for printing.	p. 112
Print Settings	Sets the printing style.	p. 110

Handling Precautions

- This camera is a high-precision electronic device. Do not drop it or subject it to strong impacts.
- Never place the camera close to magnets, motors or other devices that generate strong electromagnetic fields. Exposure to strong magnetic fields may cause malfunctions or corrupt image data.
- If water droplets have fallen onto, or dirt is stuck on the camera or screen, wipe with a dry soft cloth or eyeglass wiper. Do not rub or apply force.
- Never use cleaners containing organic solvents to wipe the camera or screen.
- Use a commercially available blower brush to remove dust from the lens. For stubborn dirt contact a Canon Customer Support Help Desk as listed in your Warranty System Booklet.
- When you move the camera rapidly from cold to hot temperatures, condensation may form on the internal or external surfaces of the camera. To avoid condensation, put the camera in an airtight, resealable plastic bag and let it adjust to temperature changes slowly before removing it from the bag.
- If condensation has formed, stop using the camera immediately. Continued use may damage the camera. Remove the battery and memory card, and wait until the moisture has completely evaporated before resuming use.

Specifications

Camera Effective Pixels	Approx. 12.1 million
Image Sensor	1/2.3 type CCD (Total number of pixels: Approx. 12.7 million)
Lens	5.0 (W) – 20.0 (T) mm 35mm film equivalent: 28 (W) – 112 (T) mm f/2.8 (W) – f/5.9 (T)
Zoom Magnification	4.0x (Up to approx. 16x in combination with the digital zoom)
LCD Monitor	6.8 cm (2.7 in.) TFT LCD color monitor Approx. 230,000 dots, Picture coverage approx. 100%
AF Frame Mode	Face AiAF/Center
Focusing Range (from end of lens)	Auto, Low Light: 3 cm (1.2 in.) – infinity (W)/ 50 cm (1.6 ft.) – infinity (T) Normal: 5 cm (2.0 in.) – infinity (W)/ 50 cm (1.6 ft.) – infinity (T) Macro: 3 – 50 cm (1.2 in. – 1.6 ft.) (W) Infinity: 3 m (9.8 ft.) – infinity Kids&Pets: 1 m (3.3 ft.) – infinity
Shutter	Mechanical shutter and electronic shutter used together
Shutter Speed	1 – 1/1500 sec. 15 – 1/1500 sec. (Total shutter speed range)
Image Stabilization	Lens-shift type
Metering System	Evaluative, Center-weighted average or Spot
Exposure Compensation	±2 stops in 1/3-stop increments
ISO speed	Auto, ISO 80/100/200/400/800/1600
(Standard Output Sensitivity, Recommended Exposure Index)	
White Balance	Auto, Day Light, Cloudy, Tungsten, Fluorescent, Fluorescent H, Custom
Built-in Flash	Auto, On, Slow Synchro, Off * Red-eye correction/Red-eye reduction/FE lock settings available
Built-in Flash Range	30 cm – 4.0 m (W)/ 50 cm – 2.0 m (12 in. – 13 ft.) (W)/(1.6 – 6.6 ft.) (T))
Shooting Modes	Auto, Program AE, Portrait, Night Snapshot, Kids&Pets, Indoor, Face Self-timer, Low Light, Beach, Underwater, Foliage, Snow, Fireworks, Long Shutter, Movie
Continuous Shooting	Approx. 0.9 images/sec.
Self-timer	Approx. 10-sec./Approx. 2-sec. delay, Custom Timer
i-Contrast	Auto/Off
Recording Media	SD memory card, SDHC memory card, SDXC memory card, MultiMediaCard, MMCplus memory card, HC MMCplus memory card
File Format	Design rule for Camera File system and DPOF compliant (version 1.1)
Data Type	Still images: Exif 2.2 (JPEG) Movies: AVI (Image data: Motion JPEG, Audio data: WAVE (Mono))

Number of Recording Pixels (Still images)	Large: 4000 x 3000 pixels Medium 1: 3264 x 2448 pixels Medium 2: 2592 x 1944 pixels Medium 3: 1600 x 1200 pixels Small: 640 x 480 pixels Widescreen: 4000 x 2248 pixels
(Movies)	640 x 480 pixels (30 frames/sec.)* 320 x 240 pixels (30 frames/sec.)* * Actual frame rate is 29.97 frames/sec.
Compression (Still images)	Fine, Normal
Number of Possible Shots (CIPA compliant)	Approx. 240 images
Playback Function	Single Image, Movie, Magnified Display, Index, Magnified, Slideshow
Editing Function	Erase, Protect, Resize, i-Contrast, Rotate, Red-Eye Correction
Direct Print Type	PictBridge compliant
Interface	Digital input/output: Hi-Speed USB (mini-B compatible)* Analog audio output: Monaural* Analog video output: NTSC/PAL selectable* * Dedicated connector (female) with unified type of digital, audio and video.
Communication Settings	MTP, PTP
Power	Battery Pack NB-6L (rechargeable lithium-ion battery) AC Adapter Kit ACK-DC40
Operating Temperatures	0 – 40 °C (32 – 104 °F)
Operating Humidity	10 – 90%
Dimensions (CIPA compliant)	90.5 x 55.8 x 21.2 mm (3.56 x 2.20 x 0.83 in.)
Weight (CIPA compliant)	Approx. 140 g (4.94 oz.) (Including the battery and memory card) Approx. 117 g (4.13 oz.) (Camera body only)

Battery Pack NB-6L

Type	Rechargeable lithium-ion battery
Voltage	3.7 V DC
Capacity	1000 mAh
Charging cycles	Approx. 300 times
Operating temperature	0 – 40 °C (32 – 104 °F)
Dimensions	34.4 x 41.8 x 6.9 mm (1.35 x 1.65 x 0.27 in.)
Weight	Approx. 21 g (0.74 oz.)

Battery Charger CB-2LY/CB-2LYE

Rated input	100 – 240 V AC (50/60 Hz), 0.085 A (100 V) – 0.05 A (240 V)
Rated output	4.2 V DC, 0.7 A
Charge time	Approx. 1 hour 55 min.
Operating temperature	0 – 40 °C (32 – 104 °F)
Dimensions	58.6 x 86.4 x 24.1 mm (2.31 x 3.40 x 0.95 in.)
Weight	Approx. 70 g (2.47 oz.) (CB-2LY) Approx. 61 g (2.15 oz.) (CB-2LYE) (excluding power cord)

- All data is based on tests by Canon.
- Camera specifications or appearance are subject to change without notice.

Numerics

3:2 Guide..... 119

A

AC Adapter Kit..... 38, 122
 Accessories..... 37
 AE Lock..... 82, 89
 AF Frames..... 25
 AF Lock..... 81
 AV Cable..... 2

B

Battery

Battery and Charger Kit..... 38
 Battery Charger..... 2, 14
 Charge Indicator..... 15
 Date/Time battery..... 20
 Power Saving..... 52, 116
 Recharge..... 14
 Battery Charger..... 14
 Beach (Scene Mode)..... 55
 Black and White Images..... 72

C

Camera Shake..... 57, 119
 Center..... 79
 Components Guide..... 42
 Continuous Shooting..... 73

D

Date and Time

Adding to Image..... 60
 Changing..... 20
 Setting..... 19
 Settings..... 19
 Date and Time → Date/Time
 Default Settings..... 50
 Deleting → Erasing
 DIGITAL CAMERA Solution Disk..... 2
 Digital Tele-Converter..... 59
 Digital Zoom..... 58
 Display Language..... 21
 Display Overlay..... 119
 DPOF..... 110

E

Editing

i-Contrast..... 104
 Red-Eye Correction..... 105
 Resizing (Making Images Smaller)..... 103
 Rotating Images..... 102
 Equipment..... 2
 Default Settings..... 50
 Holding the Camera..... 13
 Erasing All Images..... 101
 Erasing Images..... 29, 101
 Error Messages..... 126
 Exposure
 AE Lock..... 82, 89
 Compensation..... 65
 Correction..... 65
 FE Lock..... 82
 Shift..... 89

F

Face AiAF..... 78
 Face Self-Timer (Scene Mode)..... 62
 Factory Settings → Default Settings
 FE Lock..... 82
 File Numbering..... 114
 Fireworks (Scene Mode)..... 56
 Flash
 Off..... 57
 On..... 66
 Slow Synchro..... 85
 Focus
 AF Frame Mode..... 78
 AF Frames..... 25
 AF Lock..... 81
 AF-Point Zoom..... 80
 Focus Check..... 97
 Focus Lock..... 76
 Format → Memory Card, Formatting
 Formatting (Memory Card)..... 22, 51
 FUNC. Menu
 Basic Operations..... 46
 List..... 130

G

Green Leaves/Autumn Foliage (Scene Mode).....	56
Grid Lines.....	119

H

Histogram.....	45
Household Power.....	122

I

i-Contrast.....	83, 104
Image Quality (Compression).....	68
Image Quality → Compression Ratio	
Images	
Display Time.....	118
Editing → Editing	
Erasing Images.....	29, 101
Playback → View	
Protect.....	100
Indicator.....	43
Indoor (Scene Mode).....	55
Infinity.....	66
Interface Cable.....	2
ISO Speed.....	70

K

Kids&Pets (Scene Mode).....	55
-----------------------------	----

L

Lamp.....	42, 61, 117
Low Level Formatting.....	51
Low Light (Scene Mode).....	55

M

Macro.....	67
Magnified Display.....	98
Manual	
White Balance.....	71
Memory Card → Card	
Memory Cards.....	16
Available Shots.....	18, 69
Formatting.....	22

Menu

Basic Operations.....	47
List.....	132
Metering Mode.....	81
Mode Switch.....	42
Movie	
Recording Pixels.....	88
Shooting Time.....	88
Viewing (Playback).....	32, 91
MultiMediaCard/MMCplus/HC MMCplus	
Memory Card → Memory Card	
My Colors.....	72

N

Night Snapshot (Scene Mode).....	54
Number of Shots.....	15, 69

O

ON/OFF Button.....	42
--------------------	----

P

Package Contents → Accessories	
Personal Printing Guide.....	2
Playback → View	
Playback Button.....	28, 43
Playback With Transition Effects.....	98
Portrait (Scene Mode).....	54
Postcard Size.....	69
Power → Battery	
Power Saving.....	52, 116
Printer.....	37
Printing.....	108
Program AE.....	64
Protect.....	100

R

Recording Pixels (Image Size).....	68
Red-Eye	
Auto Correction.....	84
Correction.....	105
Reduction.....	117
Resizing (Making Images Smaller).....	103
Rotating Images.....	102

S

Screen	
Display Language	21
Switching the Display	44
SD/SDHC/SDXC Memory Card → Memory Card	
Self-Timer	
10 second Self-Timer	61
Changing Delay and Number of Shots	75
Face Self-Timer	62
Two Second Self-Timer	74
Sepia Tones	72
Shooting Date and Time → Date/Time	
Shooting Using a TV	76
Shutter Button	23
Slideshow	96
Snow (Scene Mode)	56
Software	
DIGITAL CAMERA Solution Disk	2
Software Guide	2
Transferring Images to a Computer	33
Sound Settings	48

T

Terminal	35, 99, 108
Tone (White Balance)	71
Troubleshooting	123

U

Underwater (Scene Mode)	56
-------------------------------	----

V

Video → Movies	
Viewing (Playback)	
Images on a TV	99
Index Display	94
Magnified Display	98
Single Image Playback	28
Slideshow	96
Viewing Images on a TV	99

W

White Balance	71
Wide (Recording Pixels)	68, 69
Wrist Strap → Strap	

Z

Zoom	24, 30, 58
------------	------------

Disclaimer

- Reprinting, transmitting, or storing in a retrieval system any part of this guide without the permission of Canon is prohibited.
- Canon reserves the right to change the contents of this guide at any time without prior notice.
- Illustrations and screenshots in this guide may differ slightly from the actual equipment.
- Every effort has been made to ensure that the information contained in this guide is accurate and complete. However, if you notice any errors or omissions, please contact the Canon customer service center indicated on the customer support list included with the product.
- The above items notwithstanding, Canon accepts no liability for damages due to mistaken operation of the products.