


USE AND CARE GUIDE

4 FT ANIMATED INTERACTIVE HOLIDAY MICKEY MOUSE

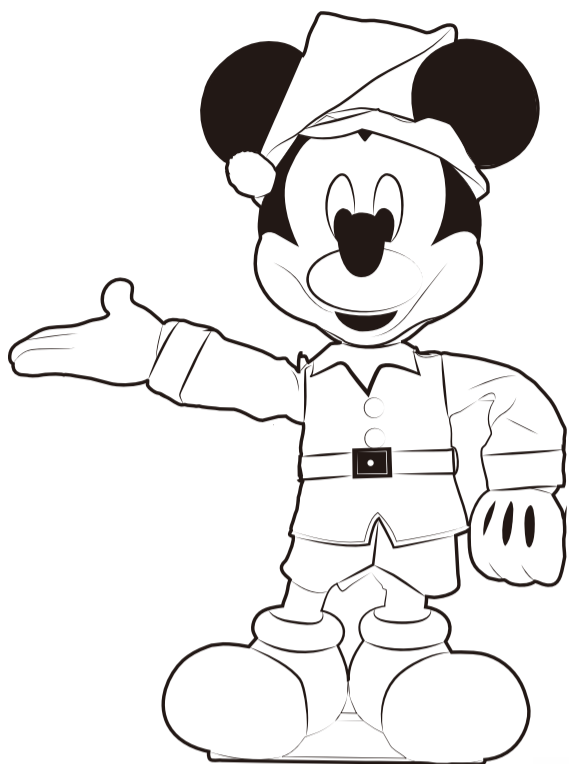

Questions or feedback? Our customer support team is ready to help! To learn more about our policies, get assembly assistance, shop parts, and connect to our community, visit sviservice.com or email us at customerservice@svius.com.



PARTS LIST

- A. Base x 1
- B. Poles x 2
- C. Shoes x 2
- D. Foam Tubes x 2
- E. Stockings x 2
- F. Pants x 1
- G. Body Frame x 1
- H. Shirt x 1
- I. Left Arm x 1
- J. Right Arm x 1
- K. Neck x 1
- L. Head x 1
- M. Hat x 1
- N. Left Ear x 1
- O. Right Ear x 1
- P. Tail x 1
- Q. Adapter * Indoor


Power Adapter * Spec
 Input: 100-240V~50/60Hz
 Output: 5.9V \equiv 2.0A
 Wattage: 11.8W




NOTE: Throughout the instructions, Right and Left are relative to the character.

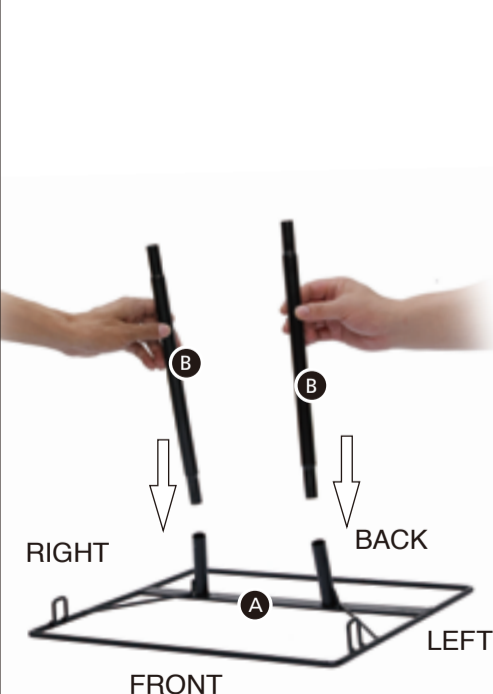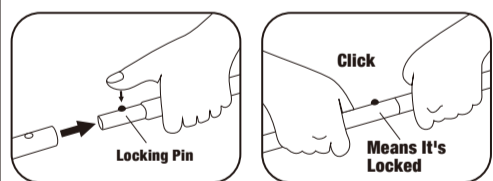


1.1

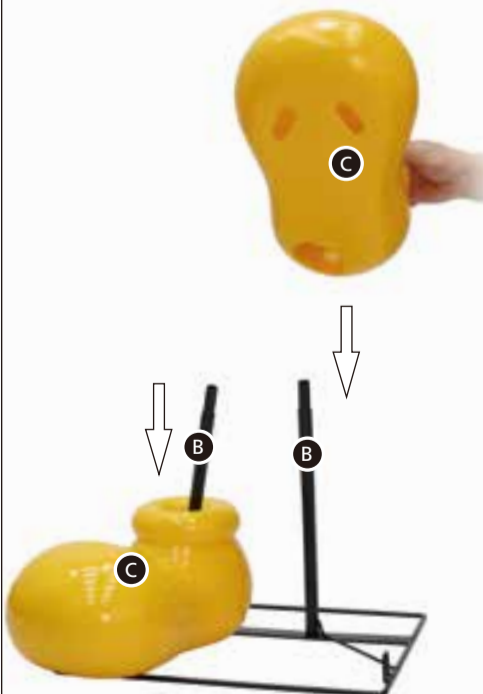

1.2


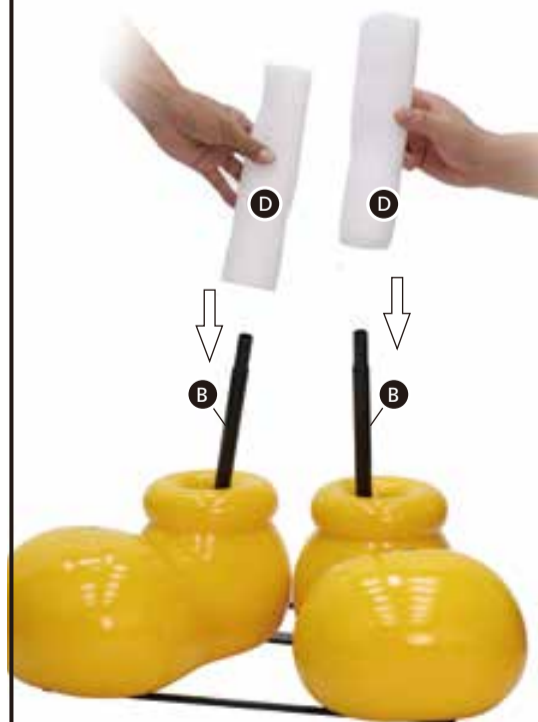


2.1

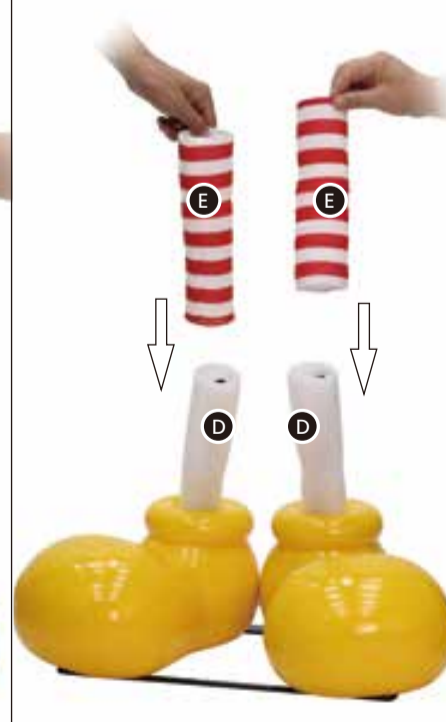


2.2

NOTE: Slide the (F) Pants onto the assembly with the tag at the back of the (F) Pants facing towards the back.

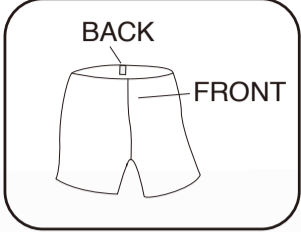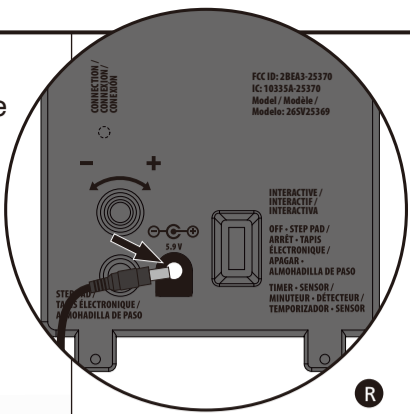


ADAPTER

Plug the adapter into the Function Control Box.

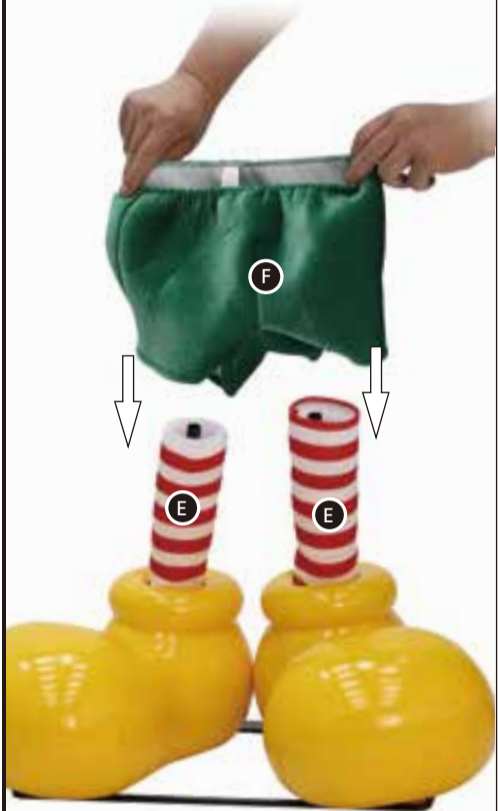

3.1

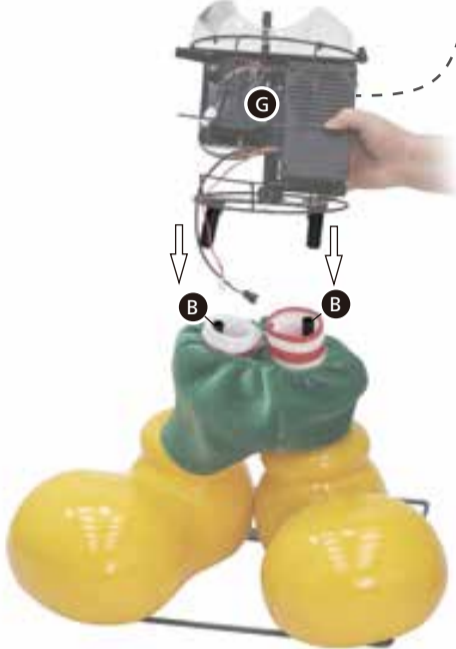

3.2


NOTE: Pull the (F) Pants up over the hip hoop available on the (G) Body Frame.




4.1



4.2

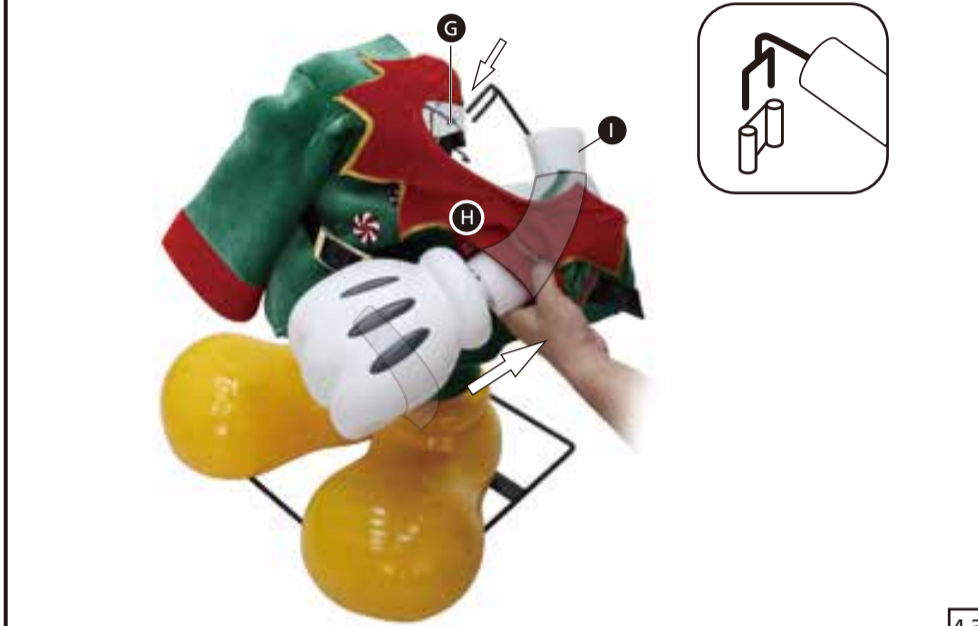

4.3

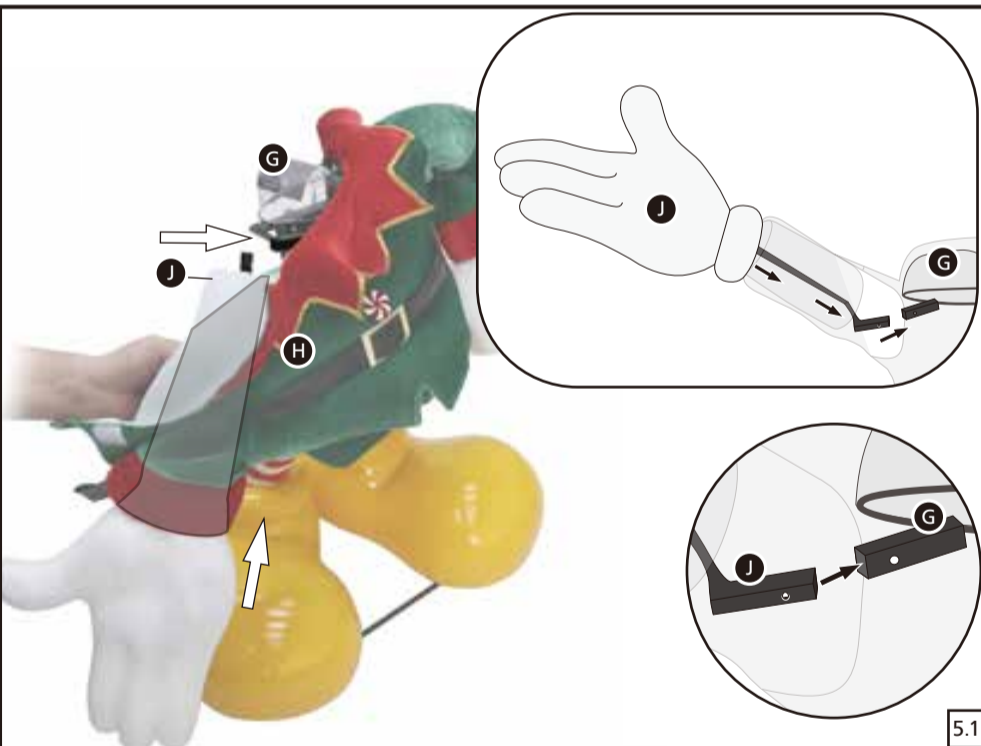

5.1



6.1



6.2


NOTE: Make sure the (L) Head is fully seated before tightening.



5.2



6.3

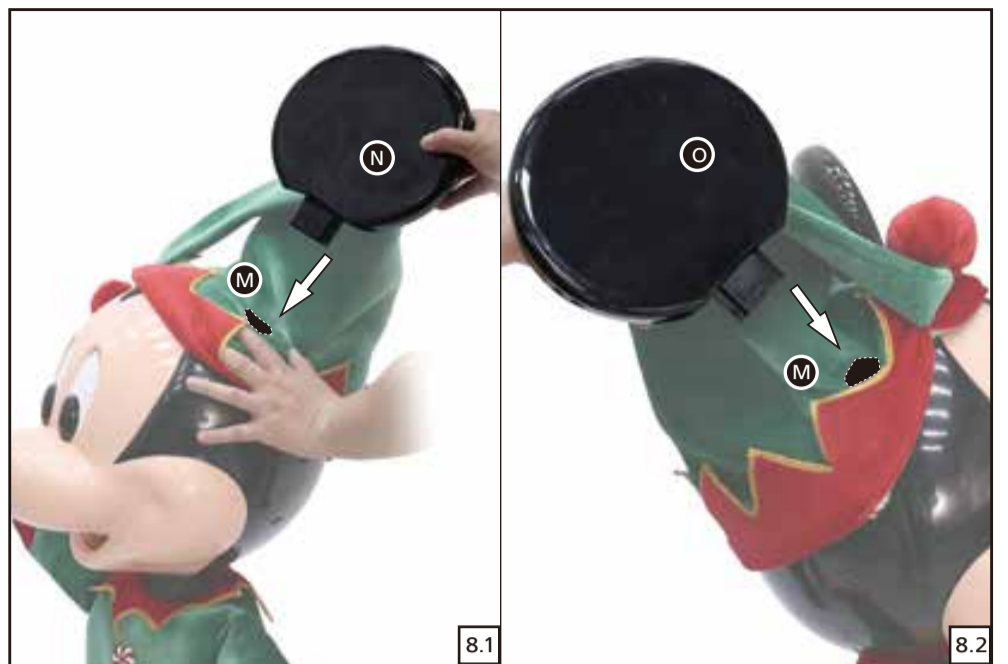

**4 FT ANIMATED INTERACTIVE HOLIDAY
MICKEY MOUSE IS NOW FULLY
ASSEMBLED. PLUG IN AND TURN ON TO
LET THE FUN BEGIN!**



IR SENSOR
Be sure nothing is
blocking the
sensor.

OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the (G) Body Frame, as desired.

2. Settings:

INTERACTIVE /
INTERACTIF /
INTERACTIVA

When both products are set to Interactive mode; the Interactive indicator light changes from flashing to steady on. A steady on light indicates a successful connection. Ensure that the two products are within 10 m/32.5 ft of each other, then trigger the sensor on either product. The infra-red (IR) sensor has a range of up to 4 m/13 ft and will activate when someone comes within an 80-degree angle of either character from left, right, above or below. The interactive products will hold a brief conversation. Triggering the sensor again will produce a different conversation.

OFF • STEP PAD /
ARRÊT • TAPIS
ÉLECTRONIQUE /
APAGAR •
ALMOHADILLA DE PASO

This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad (Not Included). The first press will activate the activity cycle. If pressed a second time during the activity cycle, the activity cycle will end immediately. If pressed a third time, the following activity cycle will be activated. It will do the Mickey standalone dialogue only.

TIMER • SENSOR /
MINUTEUR • DÉTECTEUR /
TEMPORIZADOR • SENSOR

This switch mode will activate SENSOR mode for 6 hours followed by a deactivated period of 18 hours. This cycle will continue indefinitely unless the setting is changed. During the 6-hour active period, the Infra-red (IR) sensor can be triggered. If the Infra-red (IR) sensor is activated, the prop will activate for one activity cycle. The infra-red (IR) sensor has a range of up to 4 m/13 ft and will activate when someone comes within an 80-degree angle from left to right as well as from above or below. It will do the Mickey standalone dialogue only.



Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.

THIS PRODUCT IS COMPATIBLE WITH EXTERNAL TIMERS AND PRESERVES ITS SETTING WHEN THE POWER IS TURNED OFF/ON.

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep flammables away from the adapter, as it heats up during operation.

Please view all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

CAN ICES (B) / NMB (B)

IMPORTANT TIPS:

- A one-to-one connection is required. Please note that if multiple products are connected (one-to-many) or placed together, interference may occur, preventing a successful connection.
- If you change the connection target or the signal is interrupted, unplug the power and reconnect. Please note that turning the switch to the OFF position will not work; the power must be disconnected before reconnecting.
- Please ensure the product is kept away from routers, Bluetooth devices, microwave ovens, and other 2.4G interference sources to avoid signal interruptions and disconnections.
- Ensure that the item's adapter is plugged in at the function control box and in the wall.
- Ensure that the switch on the function control box is on the desired setting.
- If not functioning properly (Head or right arm doesn't move, doesn't make sound), ensure that cables are connected.
- Be sure nothing is blocking movement or caught in moving parts.
- Ensure that the floor or surface that the item sits on is flat and level.
- Ensure that the volume is not all the way down.

NOTE: 2026 Holiday Mickey can only connect with 2026 Holiday Minnie (sold separately). Set both props to INTERACTIVE mode to establish a connection for dialogue.

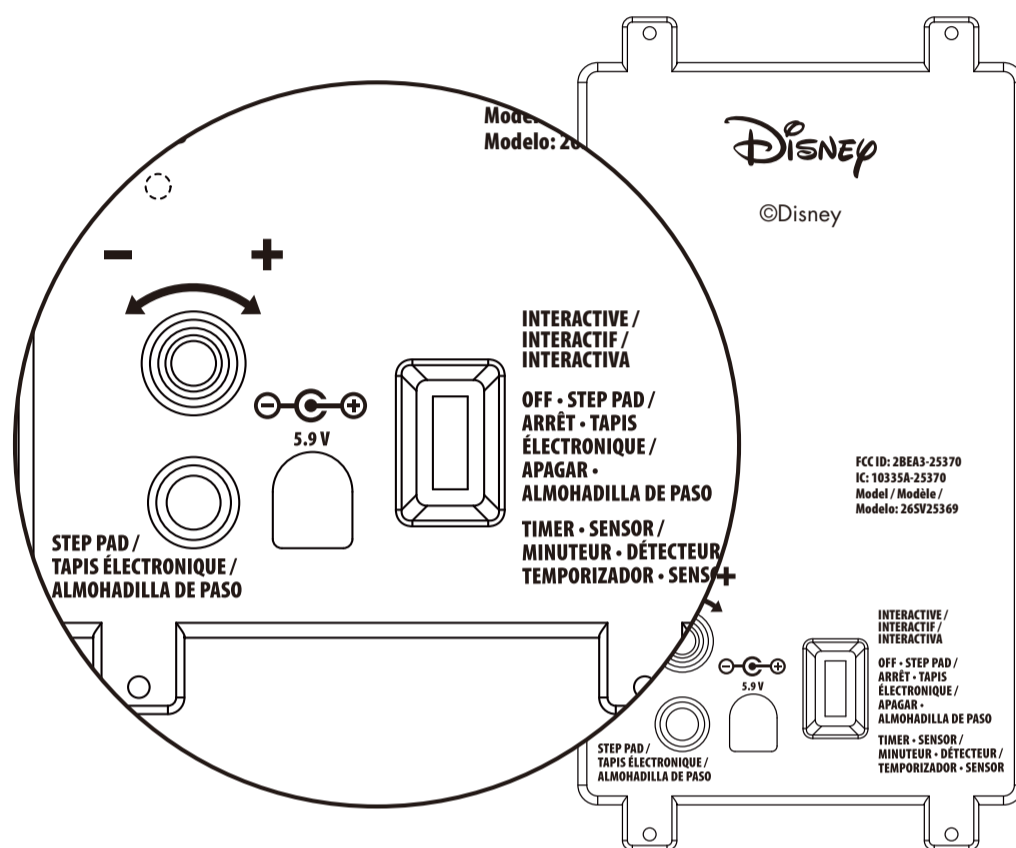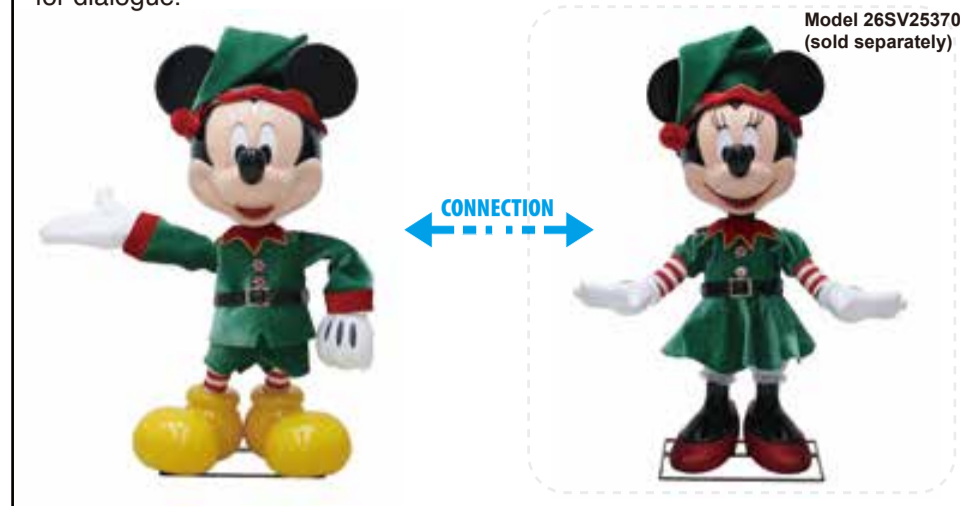

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Questions or feedback? Our customer support team is ready to help! To learn more about our policies, get assembly assistance, shop parts, and connect to our community, visit svservice.com or email us at customerservice@svius.com.