

1. Install "Smart Life" app in the Google play or apple store, and register an account

Vine App Setup

1.To download the "Vine Thermostat" or "Smart life" app, scan the QR code or search "Vine Thermostat" or "Smart Life" in the Apple App Store or Google Play Store.



2. Open the "Vine Thermostat" or "Smart Life" app. If you already have an account, tap Sign In. To create a new account, tap Sign Up.

Note: You must create your own Vine account to use third-party services and products. These will not work with a guest account. With a Vine account, you can also allow your family and friends to control your smart thermostat.

3. Tap + and select your smart thermostat.

4. Follow the in-app instructions to set up your smart thermostat.

Note: You can change the name and icon at any time by going to the smart thermostat screen and tapping. You can use the Vine app to connect your smart thermostat to Amazon Alexa or Google Assistant.

2. Use the power adaptor to power on the device
 3. Tap the device, and slider the screen to switch the interface, configure the internet by app
 4. Menu----->Connect, tap "WiFi" icon in the Menu interface, and depend on the instruction to configure network.
- The device is set to keep screen on.

IC statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient un émetteur (S)/ récepteur (S) exempté (S) de licence qui est conforme
Avec l'innovation, la Science

Et les RSS exemptées de permis de développement économique Canada. Le fonctionnement est

Sous réserve de ce qui suit

Deux conditions:

(1) ce dispositif ne peut pas causer d'interférence.

(2) ce dispositif doit accepter toute interférence, y compris l'interférence qui peut

Provoquer un fonctionnement indésirable de l'appareil.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.