


INSTRUCTION MANUAL

COFFEE MAKER

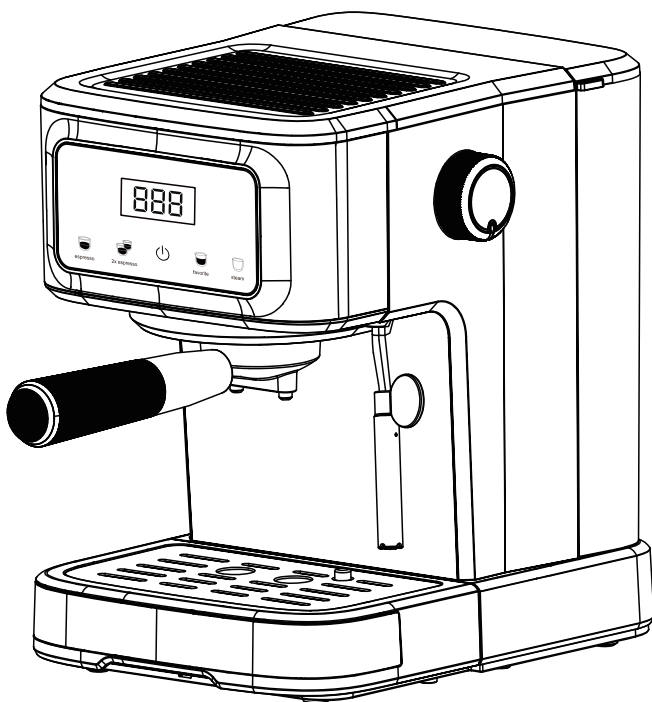

MODEL NO.: CM8501IF-UL
ITEM NO.:80501KCM0-BLACK



Scan the QR code to watch
the product videos



Email: service@electacticshop.com



Web: www.electacticshop.com

CONTENTS

IMPORTANT SAFEGUARDS	1
KNOWING YOUR COFFEE MAKER	3
BEFORE FIRST USE	4
USING YOUR MACHINE	5
CLEANING AND MAINTENANCE	8
CLEANING MINERAL DEPOSITS	8
TROUBLESHOOTING	9
ENVIRONMENT FRIENDLY DISPOSAL	9

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:


1. Read all instructions.
2. Before using, check that the voltage of wall outlet corresponds to rated voltage marked on the rating plate.
3. To protect against fire, electric shock and injury to persons, do not immerse cord, plug in water or other liquid.
4. Remove plug from wall outlet before cleaning and when not in use. Allow appliance to cool down completely before taking off, attaching components or before cleaning.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
6. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
7. Place appliance on flat surface or table, do not hang power cord over the edge of table or counter.
8. Ensure that the power cord do not touch hot surface of appliance.
9. Do not place the coffee maker on hot surface or beside fire in order to avoid being damaged.
10. To disconnect, remove plug from wall outlet. Always hold the plug. But never pull the cord.
11. Do not use appliance for other than intended use and place it in a dry environment.
12. Close supervision is necessary when your appliance is being used near children.
13. Be careful not to get burned by the steam.
14. Do not touch the hot surface of appliance (such as steam wand, and the filter just boiled). Use handle or knobs.

IMPORTANT SAFEGUARDS

15. Do not let the coffee maker operate without water.
16. Do not remove the funnel when appliance is brewing coffee or making steam.
17. Connect plug to wall outlet before using and turn any switch off before plug is removed from wall outlet.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
21. Do not use outdoors.
22. Save these instructions.
23. If you won't use the product for a long time, you need to turn on the power and then release steam for 3 minutes before leaving this product.
24. If you cut off power during steam release, residual heat will make product continue to release steam for a length of time, the product will stop releasing steam immediately once you turn off steam knob.

**SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY**

KNOW YOUR COFFEE MAKER

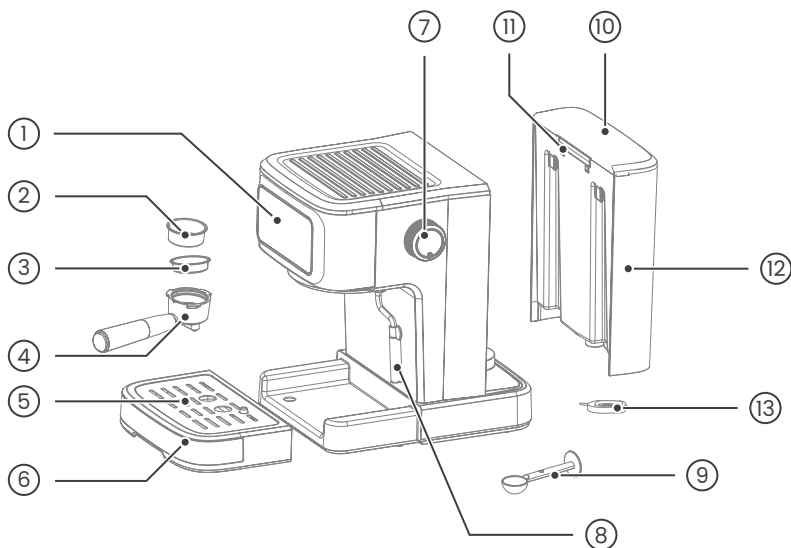

- | | | | |
|-------------------|---------------------|------------------------|--------------|
| ① Control Panel | ② Double-cup filter | ③ Single-cup filter | ④ Funnel |
| ⑤ Drip plate | ⑥ Drip tray | ⑦ Steam/hot water knob | ⑧ Steam wand |
| ⑨ Measuring Spoon | ⑩ Tank cover | ⑪ Handle | ⑫ Water tank |
| ⑬ Cleaning pin | | | |

BEFORE FIRST USE

To ensure the first cup of coffee tastes excellent, you should rinse the coffee maker with warm water as follows:

1. Pour water into the detachable water tank, the water level should not exceed the "MAX" mark.
2. Set the filter into the funnel (no coffee inside).
3. Place an jug underneath. Make sure the knob is on the OFF position.
4. Connect the power supply and press the power button once, the indicator light will flash. This indicates that the machine is in the preheating stage.
5. Press the single or double-cup button, the pump will pump water. When there is water flowing out, press the single or double-cup button to stop.
6. Pour the water in the jug out, then clean thoroughly. Now you can start brewing.

Note:

There may be noise when pumping the water for the first time, which is normal. The appliance is releasing the air inside. After about 20s, the noise will disappear.

USING YOUR MACHINE

Preheating

To make a cup of good hot Espresso, we recommend you preheating the appliance before making coffee, including the funnel, filter and cup, so that the coffee flavour can not be influenced by the cold parts.

1. Fill the tank with clean potable water.
2. Select the filter and put into the funnel.
3. Make sure the tube on the funnel aligns with groove of the brewing head, then insert and turn the funnel anticlockwise to firmly fix into the appliance.
4. Place an espresso cup underneath.
5. Make sure the steam control knob is on the close position. Then connect the power supply.
6. Press the power button one time, the indicator blinks. After finish preheating, the coffee indicator lights solidly.
7. Press the single or double-cup button. When there is water flowing out, press the single or double-cup button to stop.
8. The funnel, filter and cup are warmed up. Pour the water in the cup out (the cup could be placed on the top of the machine) and remove and dry the filter after turning it clockwise. Now you can start brewing.

Making Espresso

1. Add ground coffee with measuring spoon (a spoon ground coffee power can make about a cup of top-grade coffee). Then press the powder tightly and evenly with the tamper of the spoon.
2. Put the funnel with filter into the appliance, and press the single or double-cup button.

WARNING: Do not leave the coffee maker unattended during making the coffee!

Note: Recommended single coffee cup is approximately 1.35 fl. oz, double coffee cup approximately 2.37 fl. oz.

3. Favorite function allows you to obtain your desired extraction volume each time. Press the favorite button once to start extraction. When the desired extraction time is reached, press the favorite button again to stop extraction. The brewing time is 60 seconds at most, and the water pump will stop working if the working time exceeds 60 seconds.

USING YOUR MACHINE

4. After finishing making the coffee, take the funnel out, then pour the coffee residue out. Let them cool down completely, then rinse under running water.
5. If there is no any operation within 25 minutes, the unit will power off automatically.

Custom mode

The extraction time can be adjusted according to personal preference. Press and hold the single or double cup button for 3 seconds to enter the custom mode, then press the corresponding button again to start the brewing.

When the desired time is reached, press the corresponding button to end the process. The mode is saved now.

Valid time of single cup: 15 to 25 seconds.

Valid time of double cup: 25 to 45 seconds.

The shortest time will be recorded if the set time has not reached the shortest time yet.

Making Hot Water

Hot water could be used to warm cup, make tea or cool down the appliance.

When the preheating is finished, counterclockwise turn the knob and the hot water will flow out from the steam wand. To stop making hot water, turn off the knob.

Making Frothed Milk

You get a cup of cappuccino when you top up a cup of espresso with frothed milk.

USING YOUR MACHINE

1. Prepare espresso first with container big enough according to the part “Making Espresso”, make sure that the steam control knob is at the “OFF” position.
2. Press the steam button, wait until the indicator is illuminated.
3. Fill a jug with about 3.38 fl. oz of chilled whole milk for each cappuccino to be prepared.

NOTE: In choosing the size of jug, it is recommend the diameter is not less than 2.76 ± 0.20 in, and bear in mind that the milk will increase in volume by 2 times, make sure the height of jug is enough.

4. Turn the knob anticlockwise to pre-release the steam for several seconds to stabilize the steam, then reset the knob.

NOTE: Never turn the knob rapidly, as the steam will release rapidly in short time, which may increase the potential of the risk of scalds.

5. Insert the wand into the milk lightly and turn the knob anticlockwise to froth the milk.
6. When the required amount is reached, you can close the knob.
7. Clean the wand with wet sponge immediately after steam stops generating and release the steam for several seconds to rinse clean inside the wand.
8. Pour the frothed milk into the espresso prepared, now the cappuccino is ready.
9. Press the power button to cut the power source off. All indicators will be extinguished.

Tips For Releasing Pressure

- After using the steam function, the coffee cannot continue to be made immediately and the single-cup and double-cup lights keep flashing which is a high-temperature alarm.
- At this point, the knob needs to be turned counterclockwise to the steam/hot water position. The steam wand will release water to relieve pressure and cool down.
- About 20 seconds later, the steam wand stops discharging water and the steam icon flashes, indicating that the pressure relief is complete.
- Reset the knob and all icons light up, meaning that you can continue to make coffee now.

CLEANING AND MAINTENANCE

1. Cut off power source and let the coffee maker cool down completely before cleaning.
2. Clean housing of coffee maker with moisture-proof sponge often and clean and dry the water tank, drip tray and drip plate regularly.

NOTE: Do not clean with alcohol or solvent cleanser. Never immerse the housing in water for cleaning.

3. After each brewing, detach the funnel and get rid of coffee residue inside the filter, then you can clean it with cleanser, but at last you must rinse with clear water.
4. Clean all the attachments in the water and dry thoroughly.

CLEANING MINERAL DEPOSITS

1. In standby mode, make the descaling solution of about 33.81 fl. oz as ratio of 1 : 20 (cleaner : water).
2. Press and hold the steam button for 3 seconds to enter the cleaning program. After the liquid is discharged for 25 seconds, let it stand for 5 minutes (the single and double cup light flash).
3. After two cycles (first discharging 8.45 fl. oz), the steam icon will flash. You need to turn the knob on, and the steam wand will discharge water for 60 seconds (then discharging another 10.14 fl. oz). After all four lights flash 5 times, the steam light will flash, indicating that the knob needs to be reset. The whole process takes approximately 12 minutes.
4. After resetting, it will enter the standby mode. Users need to clean the water tank and add 33.81 fl. oz of clean water. Click the favorite button to perform a 60-second cleaning.
5. After the user uses it 500 times, the indicator light will alert for cleaning. After the cleaning is completed, the count will be reset to 0.

TROUBLESHOOTING

SYMPTOM	CAUSE	CORRECTIONS
The metal parts in the tank have rust.	The descaler is not recommended type. It may corrode the parts.	Use the descaler recommended.
Water leaks from the bottom of coffee maker.	There is much water in the drip tray.	Please clean the drip tray.
	The coffee maker is malfunction.	Please contact with the authorized service facility for repairing.
Water leaks out of outer side of filter.	There is some coffee powder on the filter edge.	Get rid of them.
Acid (vinegar) taste exists in coffee.	No clean correctly after cleaning mineral deposits.	Clean the machine as in "before the first use" for several times.
	The coffee powder is stored in a hot, wet place for a long time. The coffee powder turns bad.	Please use fresh coffee powder, or store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal tightly and store in a refrigerator to maintain its freshness.
The milk cannot froth.	The container is too big or the shape is not fit.	Use high and narrow cup.
	You have used skimmed milk.	Use whole or half-skimmed milk.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal center.

ROWAN ELECTRIC APPLIANCE LLC

**8:30am–5:30pm P.S.T.
Monday to Friday**