

ivation

50 Pint Dehumidifier with Wi-Fi®
(Formerly Labeled 70 Pint — Capacity Has Not Changed)
SKU: IVADUWIFI50

User Guide



Thank you for purchasing the Ivation 50 Pint Dehumidifier with Wi-Fi®. This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference. This product is intended for household use only.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

This dehumidifier is Energy Star rated for quality assurance (www.energystar.gov).

TABLE OF CONTENTS

- 3 FEATURES**
- 4 SAFETY PRECAUTIONS**
- 6 PRODUCT OVERVIEW**
- 8 USAGE**
- 14 CARE**
- 15 TROUBLESHOOTING / SPECS**
- 16 WARRANTY**
- 17 GET IN TOUCH!**

FEATURES:

- Wi-Fi® allows you to operate and monitor your dehumidifier from your smartphone
- Energy Star compliant
- Removes up to 50 pints of moisture from the air per day
- Full reservoir alert
- Removable, cleanable filter
- 4 durable, smooth-rolling casters for easy portability
- Adjustable humidity control
- 2-speed fan
- 24-hour timer
- Auto defrost
- Direct drainage feature

EUROPEAN DISPOSAL INSTRUCTIONS

When using this product in European countries, follow the instructions below:

DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary. Disposal of this appliance in domestic household waste is prohibited.

For proper disposal, there are several possibilities:

A) Each municipality has established collection systems, where electronic waste can be disposed of free of charge to the user.

B) When buying a new product, the retailer will take back the old product free of charge.

C) The manufacturer will take back the old appliance for disposal free of charge to the user.

D) As old products contain valuable resources, they can be sold to scrap metal dealers.

Unauthorized disposal of waste in forests and other natural land endangers public health when hazardous substances leak into the ground water and infiltrate the food chain.

CAUTION!

- This appliance should be operated by children ages eight (8) years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge. Children should not play with this appliance. Cleaning and maintenance should not be performed by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance must be installed in accordance with wiring regulations.
- Operation should take place at least three feet (one meter) from combustible materials.
- Contact an authorized service technician for repair or maintenance of this unit.

SAFETY PRECAUTIONS

To prevent injury to the user or others as well as property damage, the following instructions must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage.

WARNING

Do not exceed the power rating of the outlet or connection device.

This may cause electric shock or fire due to excess heat generation.

Do not modify power cord length or share the outlet with other appliances.

This may cause electric shock or fire due to heat generation.

Disconnect the power if strange sounds, smell, or smoke comes from it.

This may cause fire and electric shock.

Do not use the machine near flammable gas or combustibles, such as gasoline, benzene, thinner, etc.

This may cause an explosion or fire.

Do not operate or stop the unit by switching on or off the power.

This may cause electric shock or fire due to heat generation.

Do not insert or pull out plug with wet hands.

This may cause electric shock.

Never try to take apart or repair the unit by yourself.

This may cause failure of machine or electric shock.

Do not drink or use the water drained from the unit.

This contains contaminants and could make you sick.

Do not damage or use an unspecified power cord.

This may cause electric shock or fire.

Do not place the unit near a heat source.

Plastic parts may melt and cause a fire.

Before cleaning, turn off the power and unplug the unit.

This may cause electrical shock or injury.

Do not remove water bucket during operation.

This may cause electric shock.

⚠ CAUTION

Do not cover the intake or exhaust openings with cloths or towels.

A lack of airflow can lead to overheating or fire.

Never insert fingers or other foreign objects into grills or openings.

Take special care to warn children of these dangers.

It may cause electric shock or failure of appliance.

Always insert the filters securely. Clean filter once every two weeks.

Operation without filters may cause failure of appliance.

Care should be taken when using the unit in a room with the following persons:

Infants, children, elderly people, and people not sensitive to humidity.

Do not place heavy objects on the power cord and take care so that the cord is not compressed.

This presents a danger of fire or electric shock.

If water enters the unit, turn the unit off and disconnect the power.

Contact a qualified service technician.

This may cause failure of appliance or accident.

Do not use in areas where chemicals are handled.

This will cause the unit to deteriorate due to chemicals and solvents dissolved in the air.

Do not climb up on or sit on the unit.

You may be injured if you fall or if the unit falls over.

 
Do not place flower vases or other water containers on top of the unit.

Water may spill inside the unit, causing insulation failure and electrical shock or fire.

ELECTRICAL INFORMATION

- See the information on the rear panel of the unit for electrical and other technical data specific to this unit.
- Be sure the unit is properly grounded. To minimize shock and fire hazards, proper grounding is necessary.
- The power cord is equipped with a three-prong grounding plug for protection against shock hazards.
- Your unit must be used in a properly grounded wall outlet. If the wall outlet you intend to use is not adequately grounded or protected by a time delay fuse or circuit breaker, have a qualified electrician install the proper outlet.
- Ensure the outlet is accessible after unit installation.
- **Do not use extension cords or an adapter plug with this unit.** However, if it is necessary to use an extension cord, use an approved dehumidifier extension cord only (available at most local hardware stores).
- To avoid the possibility of personal injury, always disconnect the power supply to the unit, before installing and/or servicing.


PARTS

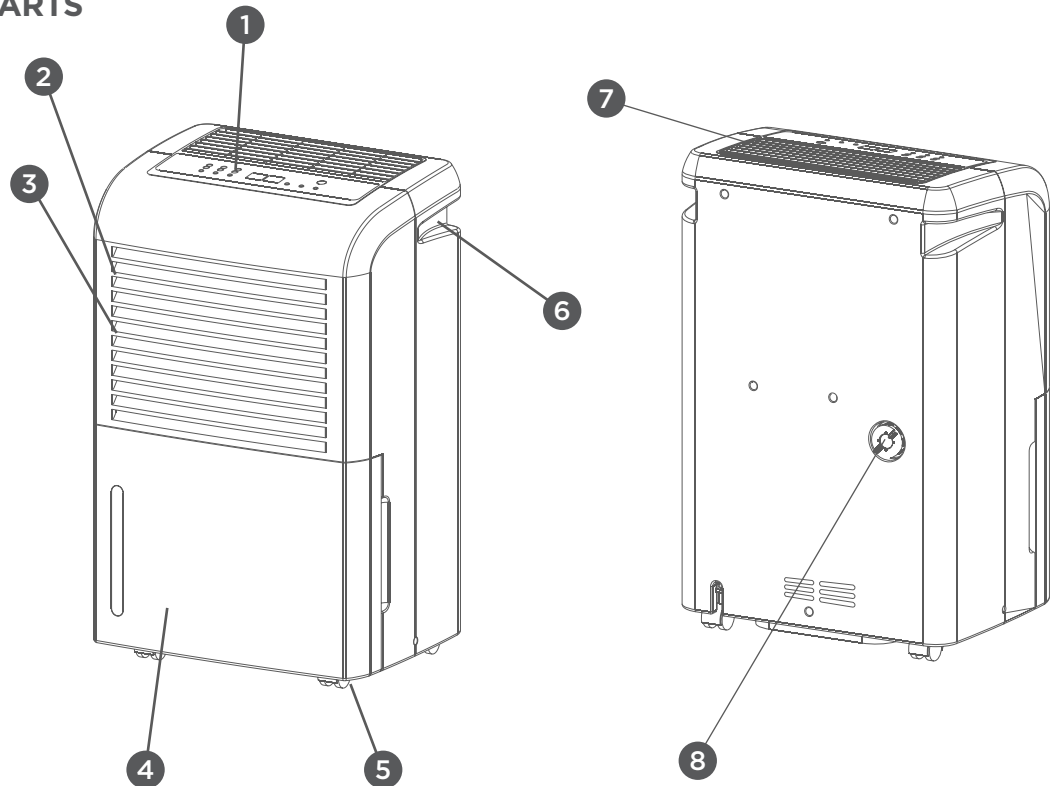

- | | |
|--------------------|------------------------------|
| ① Control panel | ⑥ Handle |
| ② Moist air intake | ⑦ Dehumidified dry air vent |
| ③ Air filter | ⑧ Continuous drainage outlet |
| ④ Drain reservoir | |
| ⑤ Roll casters | |

UNDERSTANDING THE CONTROL PANEL

 The control panel may differ slightly from the illustration below.

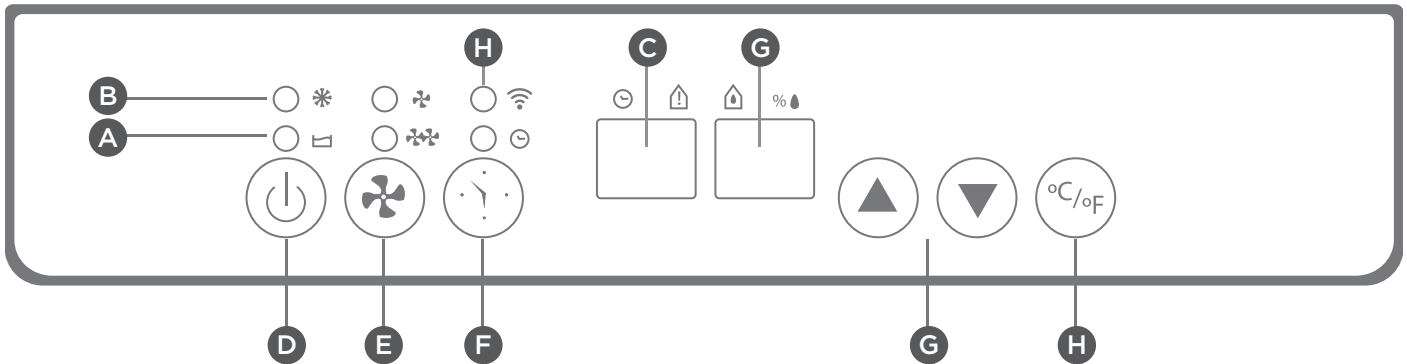

LIGHTS AND DISPLAYS

- A Reservoir full light**
Indicates when water reservoir is full
- B Defrost light**
Indicates Defrost Mode activation when temperature is low
- C Current temp/timer display**
Displays current temperature when unit is in operation. When “Timer” button is pressed to set operation time, this display shows set time for ten (10) seconds before returning to current temperature display.
- G Set humidity/current humidity display**
Displays current humidity when unit is in operation. To select preferred humidity, press ▲ or ▼. Selections will display here in increments of 5% with each press. Adjustable range is between 30% and 90% RH (relative humidity). Once humidity is set, display will return to current humidity after ten (10) seconds.
- H Wi-Fi® indicator light**
Displays connection status

CONTROL BUTTONS

- D Power ON/OFF button**
Turns the unit ON or OFF manually.
- E Fan speed button**
Choose HIGH (⚡) or LOW (⚡) fan speed (speed indicator lights above button)
- F Timer button**
Press to initiate the Auto start and Auto stop feature.
- H °C/°F button**
Press to switch between Celsius and Fahrenheit.

OPERATIONAL INSTRUCTIONS

GENERAL OPERATION

1. Place the unit in the upright position ensuring that it is on a flat, stable, heat-resistant surface.

Note: To avoid a hazardous condition, do NOT place within 39 inches (100 mm) of anything that is flammable or heat-sensitive.

2. Plug unit into wall socket (check the rating label to ensure that it matches the voltage of your electrical outlet).
3. Ensure that the Water Reservoir ④ is properly attached and placed.



 
Note: If the Reservoir Full light illuminates on first use, slide water reservoir out and make sure that "Float" lever moves freely. Return reservoir to proper position.

SETTING UP YOUR WI-FI® FEATURE

The Wi-Fi® feature of your new dehumidifier works best when located 3 to 10 feet (1 to 3 meters) from a router, with no walls or other obstructions between the unit and the router.

Download the My Ivation® App



- Scan the QR Code below with your smartphone to download through your App Store or Google Play.

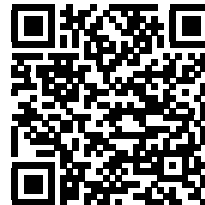

- Authorize the app to access network and location services.

Create New Account

  
- Click “Register” and follow the prompts to register your account.

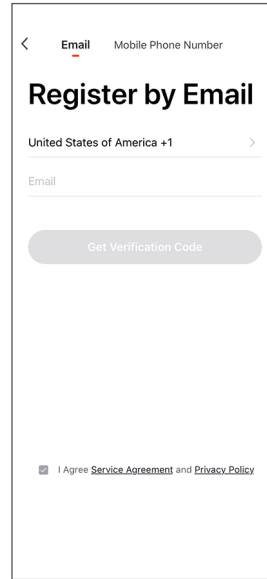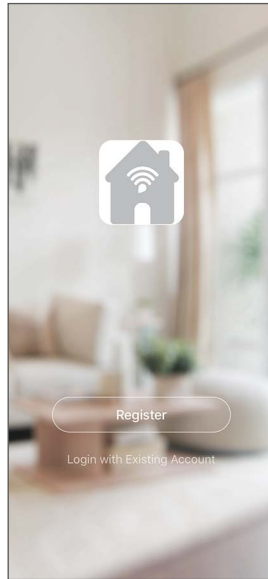

Add Device





On Your Smartphone:

 - From the Home Page, click “Add Device.”
- You may also add a device by selecting + in the top right corner of the screen. (If you already have a device added to your account, the “Add Device” button will not appear.)
- When the indicator blinks rapidly:
 - Click “Confirm.”
 - Select your Wi-Fi® network.
 - Enter your router password.
- This step may take up to 60 seconds.
- Once complete, the indicator will stop blinking and remain lit.
- Once the device is added, you can use the menu to change the name and location of the device.
- When you are finished, click “Done.”

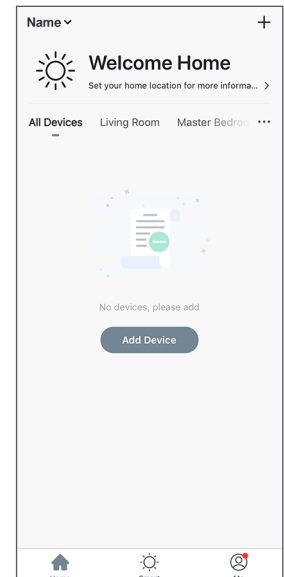


If You Have Trouble Connecting:

    - Press and hold the dehumidifier’s power button until it beeps, then let go.
- The indicator light will now blink slowly.
- From the Home Page, click “Add Device.”
- Click “AP Mode” in the top right corner.
- Click “Confirm.”
- Select your Wi-Fi® network.
- Enter your password.
- Click “Confirm.”
- The next screen will say “Connect your mobile phone to the device’s hotspot.”
- Click “Go to connect.”
- This will take you to your phone’s settings (or Wi-Fi® list for Android®)
- Select “SmartLife-XXXX.”
- Navigate back to the My Ivation App.
- Click “Next.”
- Your smartphone will automatically connect.
- This step may take up to 60 seconds.
- Once complete, the indicator will stop blinking and remain lit.
- Once the device is added, you can use the menu to change the name and location of the device.
- When you are finished, click “Done.”

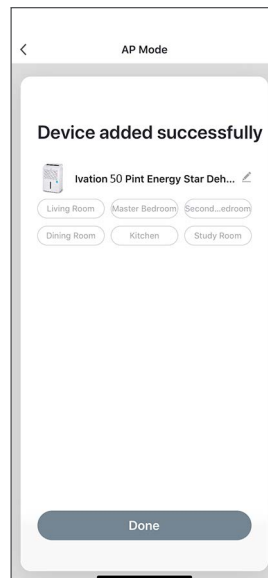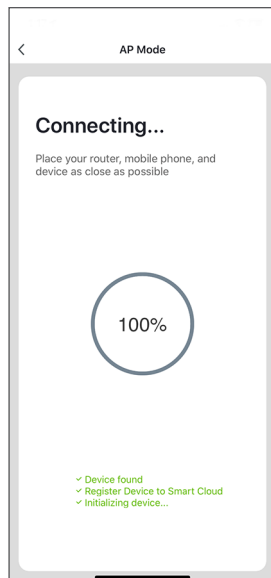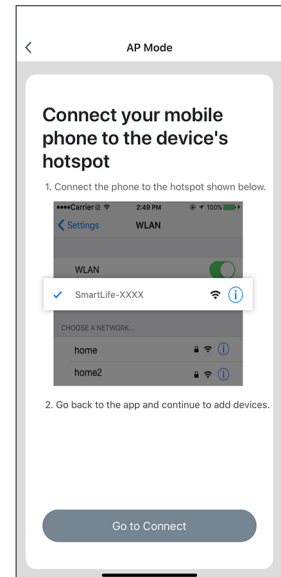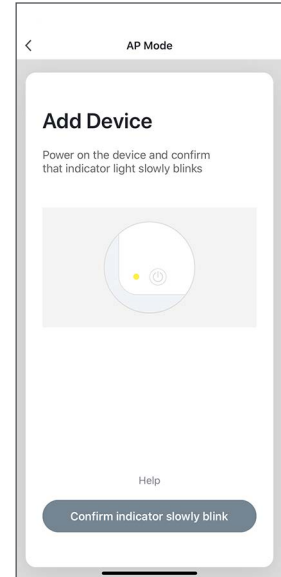

Dehumidifier App Homepage

 
- Power (On/Off)
- Time (Amount of time left on timer)
- Humidity (Current humidity level)
- Room Temperature (Current temperature)
- Water Status (Reservoir empty/full)
- Defrost Mode (Low-temperature operation)
- Set Humidity (Desired humidity level)
- Wind Speed (Fan low or high)
- Set Timer (Choose amount of time to run the unit)
- Temperature (Select Celsius or Fahrenheit)
- Continuous Mode (Run the unit continuously)

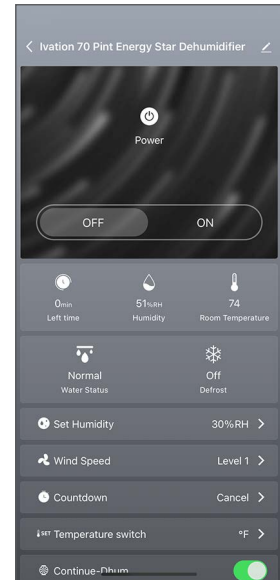

More Settings


Click “-/” for More Settings. You can:

 - Check for updates
- Modify the device name
- Add to your home screen
- Share the device with other users
- Create a group with multiple devices
- Give feedback
- Remove the device

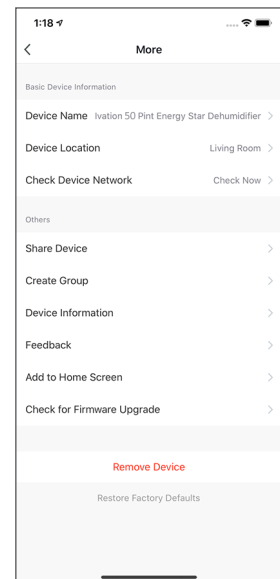

Error Messages

 
- If the unit is powered off or loses connection, you will receive a “Device offline” error message. You may need to plug the unit back in or reset the unit manually.
- If the reservoir is full or dislodged, you will receive a “Full tank” error message and the app will no longer allow you to make selections. You may need to empty or re-settle the reservoir.

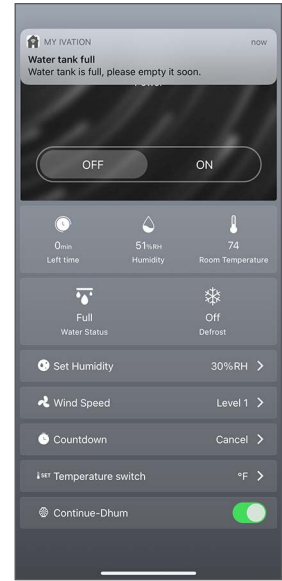

WHEN RESERVOIR FULL LIGHT IS ON

When the reservoir is full, the unit will stop and the “Reservoir Full” light **A** will illuminate. Carefully remove the reservoir from the unit by sliding it out from the front of the unit, and discard water. Once the reservoir is empty, return it to position. The unit will return to normal operation.

 Note: Use both hands when emptying the reservoir to avoid spillage.

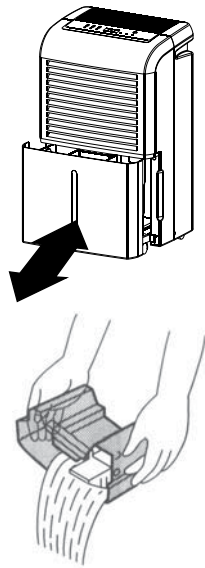

DEFROST MODE

When the unit operates at low temperatures (less than 56.6°F/12°C, a layer of frost may develop on the evaporator surface, which reduces the dehumidifier’s efficiency. In these cases, the unit goes into periodic Defrost Mode. Time to defrost may vary.

 
Note: This unit can operate in temperatures as low as 41°F/5°C. If the unit freezes, turn OFF and restart. If the room temperature remains below 41°F/5°C, switch the unit OFF.

CONTINUOUS DRAINAGE FUNCTION

CONTINUOUS DRAINAGE FUNCTION


If the unit is operating in a location with good drainage, follow the steps below to use the Continuous Drainage Function:

1. To avoid periodic emptying of the water reservoir, use the Continuous Drainage Function by attaching the drain hose (included) to the continuous drainage outlet **8** at the back of the unit. (a standard garden hose can also be used).
2. Unscrew and remove drain cover.
3. Remove soft rubber stopper (place in water reservoir for storage).
4. Insert the drain hose through the hole in the drain cover.
5. Connect drain hose to continuous drainage outlet.
6. Tighten drain cover by turning clockwise.
7. Return water reservoir to original position.

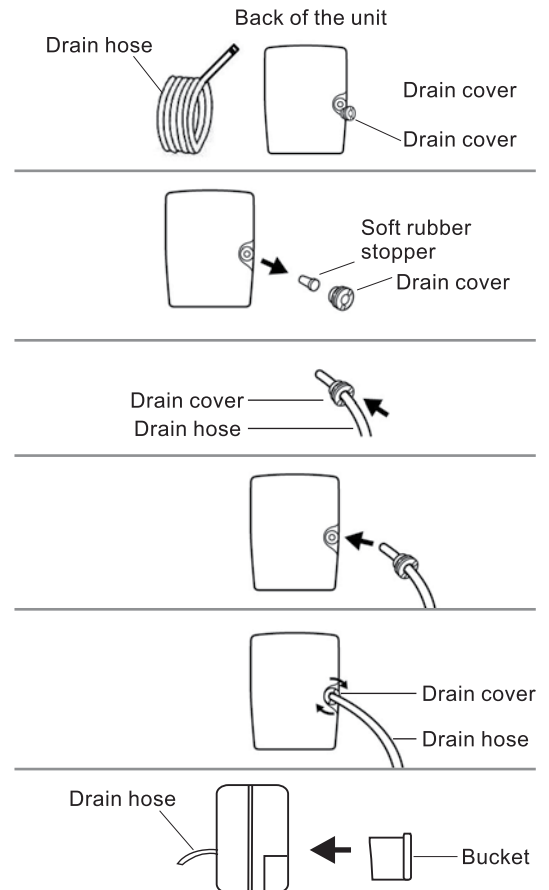

MAINTENANCE

 Make sure the unit is unplugged from wall unit before cleaning.

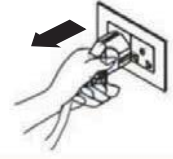



CLEANING THE EXTERIOR

1. Wipe with clean soft cloth.
2. If unit is especially dirty, use mild detergent with a moist cloth.
3. Do NOT clean with hose or immerse in water as this may short circuit the unit causing it to malfunction.

CLEANING THE AIR FILTER

The air filter **3** is designed to filter dust and other materials from the air. When the air filter is clogged, the unit will use more electricity to operate. For optimal efficiency, clean the air filter once every two (2) weeks.

  1. Pull air filter out gently.
2. Clean with a vacuum cleaner or wash with clean water and dry with a soft cloth.
3. Carefully re-install air filter to the unit

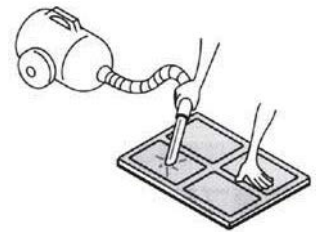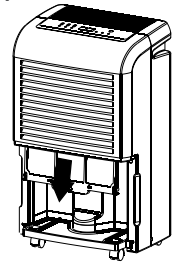

TROUBLESHOOTING

UNIT DOES NOT START

- Make sure the dehumidifier's plug is secured entirely into the outlet.
- Check your home fuse/circuit breaker box.
- Dehumidifier has reached its preset level or bucket is full.
- Water bucket is not in the proper position.

DEHUMIDIFIER DOES NOT DRY THE AIR AS IT SHOULD

- Allow enough time to remove the moisture.
- Make sure there are no curtains, blinds or furniture blocking the front or back of the dehumidifier.
- The humidity control may not be set low enough.
- Check that all doors, windows and other openings are securely closed.
- Room temperature is too low, below 41°F (5°C).
- There is a kerosene heater or something giving off water vapor in the room.

THE UNIT MAKES A LOUD NOISE WHEN OPERATING

- The air filter is clogged.
- The unit is tilted instead of upright as it should be.
- The floor surface is not level.

FROST APPEARS ON THE COILS

- This is normal. The dehumidifier has Auto defrost feature.

WATER ON FLOOR

- Hose to connector or hose connection may be loose.
- Intend to use the bucket to collect water, but the rear drain plug is removed.

ES, AS, P2 AND EC APPEAR IN THE DISPLAY

- These are error codes and protection code. See the CONTROL BUTTONS section.

SPECIFICATIONS

Power: 115V~60Hz

Moisture Removal: 50 Pint (64.9°F/60%RH)

Refrigerant: R-410A

Current Consumption: 8.6A

Dimensions: 23.5" x 11.1" x 15.28"

Weight: 41 lbs.

Operating Temperature: 41°F~89.6°F

WARRANTY INFORMATION

LIMITED WARRANTY ON IVATION® 50 PINT DEHUMIDIFIER WITH WI-FI®

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

WE WARRANT THAT DURING THE WARRANTY PERIOD, THE PRODUCT WILL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP.

LIMITATION OF LIABILITY

TO THE EXTENT NOT PROHIBITED BY LAW, THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. EXCEPT FOR THE EXPRESS WARRANTIES CONTAINED IN THIS LIMITED WARRANTY STATEMENT AND TO THE EXTENT NOT PROHIBITED BY LAW, WE DISCLAIM ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, STATUTORY OR OTHERWISE, INCLUDING WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SOME STATES DO NOT ALLOW DISCLAIMERS OF IMPLIED WARRANTIES, SO THIS DISCLAIMER MAY NOT APPLY TO YOU. TO THE EXTENT SUCH WARRANTIES CANNOT BE DISCLAIMED UNDER THE LAWS OF YOUR JURISDICTION, WE LIMIT THE DURATION AND REMEDIES OF SUCH WARRANTIES TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY.

OUR RESPONSIBILITY FOR DEFECTIVE GOODS IS LIMITED TO REPAIR, REPLACEMENT OR REFUND AS DESCRIBED BELOW IN THIS WARRANTY STATEMENT.

WHO MAY USE THIS WARRANTY? C&A Marketing, Inc. located at 114 Tived Lane East, Edison, NJ (“**we**”) extend this limited warranty only to the consumer who originally purchased the product (“**you**”). It does not extend to any subsequent owner or other transferee of the product.

WHAT DOES THIS WARRANTY COVER? This limited warranty covers defects in materials and workmanship of the Ivation® 50 Pint Dehumidifier with Wi-Fi® (the “**product**”) for the Warranty Period as defined below.

WHAT DOES THIS WARRANTY NOT COVER? This limited warranty does not cover any damage due to: (a) transportation; (b) storage; (c) improper use; (d) failure to follow the product instructions or to perform any preventive maintenance; (e) modifications; (f) unauthorized repair; (g) normal wear and tear; or (h) external causes

such as accidents, abuse, or other actions or events beyond our reasonable control.

WHAT IS THE PERIOD OF COVERAGE? This limited warranty starts on the date of your purchase and lasts for one year (the “**Warranty Period**”). The Warranty Period is not extended if we repair or replace the product. We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive.

WHAT ARE YOUR REMEDIES UNDER THIS WARRANTY? With respect to any defective product during the Warranty Period, we will, at our sole discretion, either: (a) repair or replace such product (or the defective part) free of charge or (b) refund the purchase price of such product if an exchange unit cannot be provided.

HOW DO YOU OBTAIN WARRANTY SERVICE? To obtain warranty service, you must contact us at 1-866-849-3049 or by email at info@myivation.com during the Warranty Period to obtain a Defective Merchandise Authorization (“**DMA**”) number. No warranty service will be provided without a DMA number and return shipping costs to our facilities shall be assumed by you, the purchaser. Shipping costs of the replacement unit to you shall be assumed by us.

GET IN TOUCH!

GET IN TOUCH!

✉ info@myivation.com

☎ 1-866-849-3049

IVATION is a trademark of C&A IP Holdings, LLC, in the U.S, Canada, and the E.U.

WI-FI is a trademark of Wi-Fi Alliance in the US and/or other countries.

APP STORE is a trademark of Apple, Inc. in the US and other countries.

GOOGLE PLAY is a trademark of Google, LLC.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement or approval.

Distributed by C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837.

MADE IN CHINA

© 2019. C&A IP Holdings, LLC. All Rights Reserved.