



## HARMONICS Z11 Pro

Wireless Stereo Headset


User Manual

### Package Contains

1. Harmonics Z11 Pro
2. Charging Cable
3. Earbuds
4. User Manual

### Product Functions

- A. Earbuds
- B. Magnetic Hall Switch
- C. Volume Up/Next Track
- D. MFB (Multifunctional) Button
- E. Volume Down/Previous Track

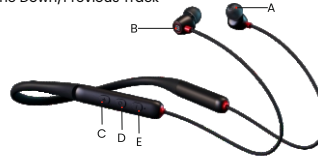

- **Power On:** Separate the earphones from each other.  
*Voice Prompt:* "Power On, Your Device is Ready to Pair" (vibration for 1s).  
*LED:* Red & Blue lights flicker.
- **Power Off (Auto):** If no Bluetooth connection is made within 5 minutes, the earphones turn off.  
*Voice Prompt:* "Power Off".  
*LED:* Lights off.
- **Low Battery Auto Off:** Shuts down if battery is below 3.1V.

### Pairing & Bluetooth

- **First Time Pairing:** Automatically enters pairing mode after power on.  
*LED:* Red & Blue lights flash alternately.
- **Connect Bluetooth:** Turn on Bluetooth on your phone → Select device name → Click connect.  
*Voice Prompt:* "You are now connected".  
*LED:* Blue light flashes once every 5s.
- **Disconnect Bluetooth:** Manually disconnect from phone.  
*Voice Prompt:* "Device Disconnected".  
*LED:* Red & Blue lights flash alternately.
- **Auto Reconnection:** When powered on, device reconnects automatically to the last paired phone.  
*Voice Prompt:* "Power On, Your Device is Ready to Pair. You are now connected".  
*LED:* Blue light flashes once every 5s.
- **Over-Distance Reconnection:** If disconnected due to distance, reconnects automatically when back in range.  
*Voice Prompt:* "You are now connected".  
*LED:* Blue light flashes once.

### Calling Functions

- **Answer Call:** Press Function Button once.  
*LED:* Blue light flashes 5 times.
- **Reject Call:** Long press Function Button (3s).
- **Incoming Call:** Device rings + vibration (1s interval × 5 times).
- **Last Redial:** Double-click Function Button.  
*Voice Prompt:* "DO".
- **Voice Assistant:** Press & hold Function Button for 1.5s.

### Music Control

- **Play Music:** Press Function Button once.
- **Pause Music:** Press Function Button once.
- **Next Song:** Long press "Volume +" button.
- **Previous Song:** Long press "Volume -" button.
- **Volume +:** Click "Volume +" button.  
*Prompt:* Beep beep (max volume).
- **Volume -:** Click "Volume -" button.  
*Prompt:* Beep beep (min volume).

### Products Specification :

BT Version : 5.4  
Driver Size : 10mm  
Wireless Frequency : 2402-2480MHz  
Working Distance : 10m  
Charging Port : Type-C (5V/1A)  
Playtime : Upto 35 hrs.  
Working Temperature Range : -20°C -50°C

### Charging & Battery

- **Charging:** Red light stays ON while charging.
- **Fully Charged:** Blue light stays ON.
- **Low Battery:** Voice Prompt – "Low Battery, Please Charge" (repeats every 30s).  
*LED:* Red light flashes.



[www.portronics.com](http://www.portronics.com)

For Support

Visit : [www.portronics.com](http://www.portronics.com)

Email : [help@portronics.com](mailto:help@portronics.com)

Contact No. : +91 9555245245

(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)



E-Waste Management  
E: [info@3rrecycler.com](mailto:info@3rrecycler.com)

For E-Waste & ROHS compliance refer to [www.portronics.com/ewaste](http://www.portronics.com/ewaste)