


ETK7000/D, ETK8000/D, ETK7070/D  
ETK8080/D, ETK7080/D

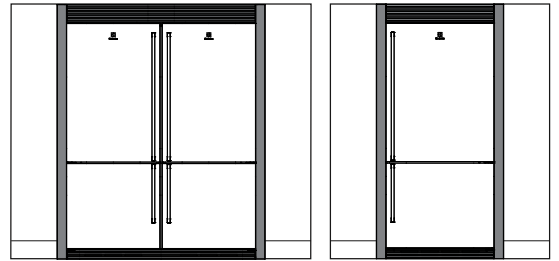

---

Electrolux Refrigeration Trim Kit  
Installation Manual





## CONGRATULATIONS

Dear customer,

Congratulations and thank you for choosing our trim kit. We are sure you will find your new trim kit a pleasure to use. Before you use the trim kit we recommend that you read through the relevant sections of this manual, which provides a description of your trim kit and its functions.

To avoid the risks that are always present when you use an electric appliance, it is important that the refrigerator and trim kit are installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

We recommend that you keep this instruction booklet for future reference and pass it on to any future owners.

After unpacking the trim kit, please check it is not damaged. If in doubt, do not install the trim kit but contact your local customer care centre.

The symbols you will see in this booklet have these meanings:



### WARNING

This symbol indicates information concerning your personal safety.



### CAUTION

This symbol indicates information on how to avoid damaging the trim kit.



### IMPORTANT

This symbol indicates tips and information about use and installation of the trim kit.



### ENVIRONMENT

This symbol indicates tips and information about economical and ecological use of the trim kit.

## CONDITIONS OF USE

This trim kit is designed and intended to be used in normal domestic applications only.

### IMPORTANT INFORMATION THAT MAY IMPACT YOUR MANUFACTURER'S WARRANTY

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under the Electrolux manufacturer's warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the Electrolux manufacturer's warranty in the event that your product fault is due to failure to adhere this manual.

## CONTENTS

Trim kit contents (Installation) .....	4
Trim kit contents (Single refrigerators) .....	5
Trim kit contents (Dual installation only) .....	6
Cabinetry dimensions .....	8
Single and Dual Installations .....	10
Joining the refrigerators (Dual installation only) .....	11
Installation .....	13
Warranty Information .....	19



### CAUTION

**Be careful when unpacking components. Do not use sharp objects when removing packaging material. This may scratch the surface of the trim components. Take care not to drop the trim kit as this may damage the components.**



### WARNING

**Use extreme care when handling the metal trim pieces as the corners are very sharp.**







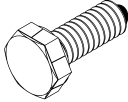
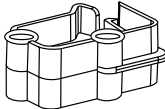
- Use only the parts that come with the trim kit for installation
- Keep ventilation openings in the appliance enclosure or the built-in structure clear of obstruction.
- Ensure that the floor and surrounding cupboards are adequately protected from damage during unpacking and throughout the installation process.
- Ensure that one (two for dual refrigerator installations) accessible powerpoints are installed before installing and connecting your appliances. These powerpoints should also be readily accessible after fridge installation is completed. Connect the mains plug to the mains outlet only after the installation is complete.
- Do not use extension leads or power board or double adapter under any circumstances as it may lead to electric shock and / or fire. Seek assistance of a licensed electrician if required.
- Due to size and weight of the refrigerators as well as complexity of the task ensure that installation is attempted with at least two able-bodied persons



### IMPORTANT

- If your fridge model has an external water filter, plan ahead to locate the filter where you can access it without needing to remove the trim and fridges
- Unpack the connection kit and check for completeness by referring to the components section.
- The floor where the refrigerator is to be placed must be level, otherwise you will not be able to install your refrigerator properly.

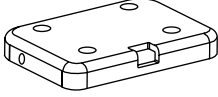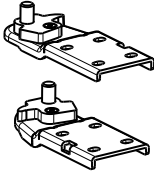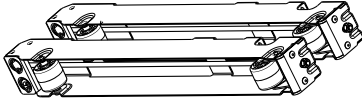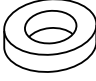
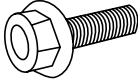



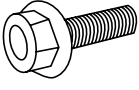




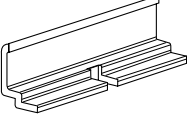


## TRIM KIT CONTENTS (SINGLE & DUAL REFRIGERATOR INSTALLATION) FOR STEP 1 - INSTALLING THE LEVELLING SYSTEM (PAGE 9)

Item	description	quantity	
		ETK7000/D / ETK8000/D	ETK7080/D / ETK7070/D / ETK8080/D
1	 Replacement foot base with M4 threaded holes	2	2
2	 Replacement hinge base LH/RH	RH x 1 LH x 1	RH x 1 LH x 1
3	 Leveller assembly	2	4
5	 Space leveller 8.4mm	6	12
6	 Screw trilobular M5 x 26mm	8	16
7	 Screw self tapping 6 x 30mm	2	4
8	 Leg leveller	2	4
9	 Clip trim bottom	2	4

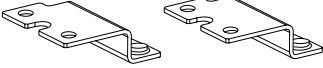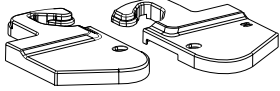**NOTE:**

**Kits contain additional parts for installation of various models.**
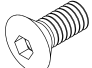
## TRIM KIT CONTENTS (SINGLE REFRIGERATORS)







Item	description	quantity	
		ETK7000/D	ETK8000/D
1	 Bracket top trim LH & RH	RH x 1 LH x 1	RH x 1 LH x 1
2	 Top hinge cover LH & RH	RH x 1 LH x 1	RH x 1 LH x 1
3	 Top trim 7000 Top trim 8000	1	1
4	 Insert top trim	1	1
5	 Spacer 3mm top trim bracket	2	2
(2H)			
6	 Screw trilobular M5 x 10mm	4	4
(8H)			
7	 Shoulder bolt M5 x 10mm (No. 4 allen key)	2	2
(6H)			
8	 Side trim LH & RH	RH x 1 LH x 1	RH x 1 LH x 1
9	 Screw counter sunk M4	2	2
(5H)			
10	 Bottom trim 7000 Bottom trim 8000	1	1
11	 Insert bottom trim	1	2
12	 Screw 6G x 1/4" type AB pan head phillips	1	2
(10H)			
13	 Screw 8G x 1/2" type AB pan head phillips	4	4
(4H)			

### NOTE:

Kits contain additional parts for installation of various models.

## TRIM KIT CONTENTS (DUAL REFRIGERATORS INSTALLATION ONLY)




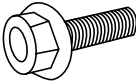
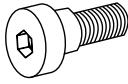
 
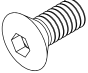

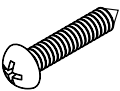
FOR STEP 2 - JOINING THE REFRIGERATORS (PAGE 10)

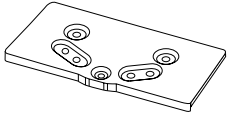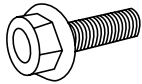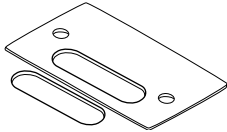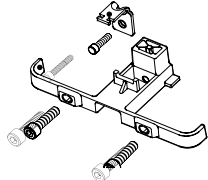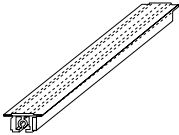Item		description	quantity
			ETK7080/D / ETK7070/D / ETK8080/D
1		Top front bracket	1
2		Screw trilobular M5 x 13mm	6
(8H)			
3		Bottom rear bracket	1
4		Bottom front bracket assembly M4 screws x 2	1
5		Centre trim assembly	1
6		Screw thread cutting #8 x 5/8	1

**NOTE:**

Kits contain additional parts for installation of various models.

## TRIM KIT CONTENTS (DUAL REFRIGERATORS INSTALLATION)

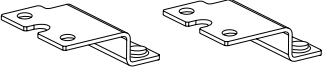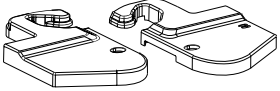Item	description	quantity		
		ETK7080/D	ETK7070/D	ETK8080/D
1	 Bracket top trim LH & RH	RH x 1 LH x 1	RH x 1 LH x 1	RH x 1 LH x 1
2	 Top hinge cover LH & RH	RH x 1 LH x 1	RH x 1 LH x 1	RH x 1 LH x 1
3	 Top trim - 7080 Top trim - 7070 Top trim - 8080	1	1	1
4 (8H)	 Screw trilobular M5 x 13mm	4	4	4
5 (6H)	 Shoulder bolt M5 x 10mm (No.4 allen key)	2	2	2
6	 Side trim LH & RH	RH x 1 LH x 1	RH x 1 LH x 1	RH x 1 LH x 1
7 (85H)	 Screw counter sunk M4	2	2	2
8	 Bottom trim - 7080 Bottom trim - 7070 Bottom trim - 8080	1	1	1
9 (4H)	 Screw 8G x 1/2" type AB pan head phillips	4	4	4

### NOTE:

Kits contain additional parts for installation of various models.

**!** **WARNING**

**Safety: Always wear safety glasses when using power tools.**

**Tools needed:**

Phillips™ Screwdriver, Tape Measure, Socket Wrench 8mm, Flat Tip Screwdriver, Power Drill, Dia 3.2mm drill bit, Step Ladder, 4mm Allen key


**i** **IMPORTANT**

This information must be read in combination with the cabinetry cut-out dimensions on page 9.


**TRIM KIT OVERALL OUTER DIMENSIONS (ASSEMBLED)**

KIT NO.	WIDTH (W)	HEIGHT (H)
ETK7000/D	836 mm	1904 mm
ETK8000/D	936 mm	1904 mm
ETK7070/D	1551 mm	1904 mm
ETK7080/D	1651 mm	1904 mm
ETK8080/D	1746 mm	1904 mm

**SINGLE INSTALLATION:**

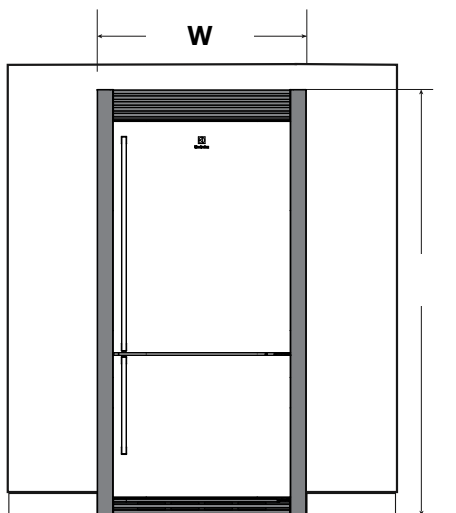

**DUAL INSTALLATION:**

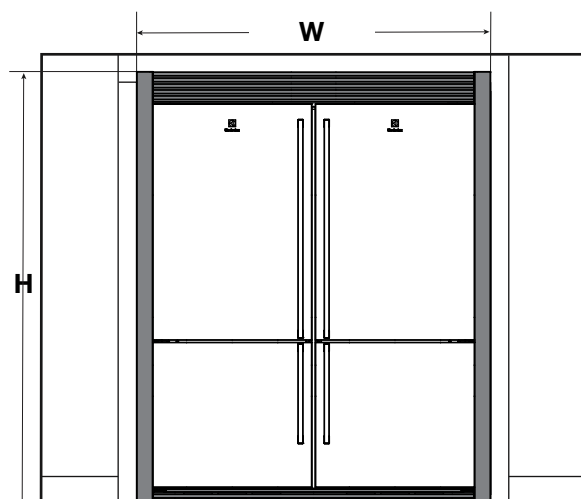

**i** **IMPORTANT**


When joining a 700 mm and 800 mm refrigerator, the 700 mm must be placed on the left.

## CABINETRY CUT-OUT DIMENSIONS: (INSTALLATION)

Recommended minimum rear gaps for adequate ventilation:

**i IMPORTANT**


This information must be read in combination with the product overall dimensions on page 8.

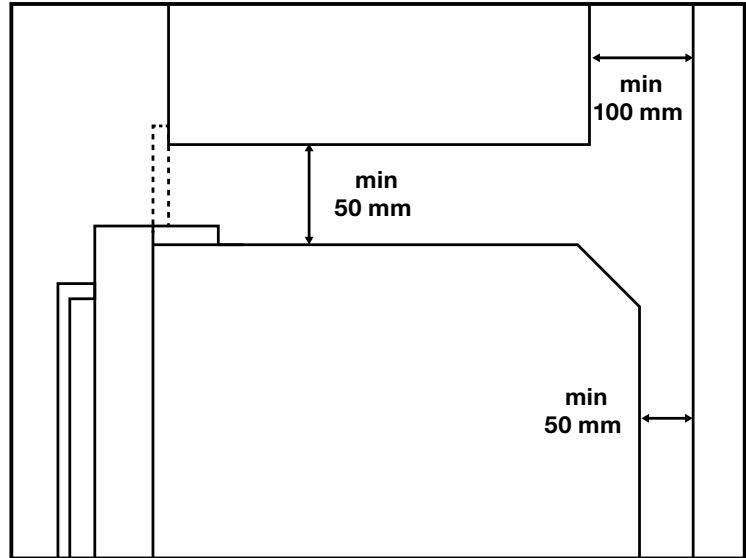

### PROUD INSTALLATION

KIT NO.	WIDTH (W1)*	DEPTH (D1)	HEIGHT (H1)
ETK7000/D	800 mm	680 mm (min)	1870 mm
ETK8000/D	900 mm	680 mm (min)	1870 mm
ETK7070/D	1515 mm	680 mm (min)	1870 mm
ETK7080/D	1615 mm	680 mm (min)	1870 mm
ETK8080/D	1710 mm	680 mm (min)	1870 mm

\*Dimension allows 5mm clearance / side

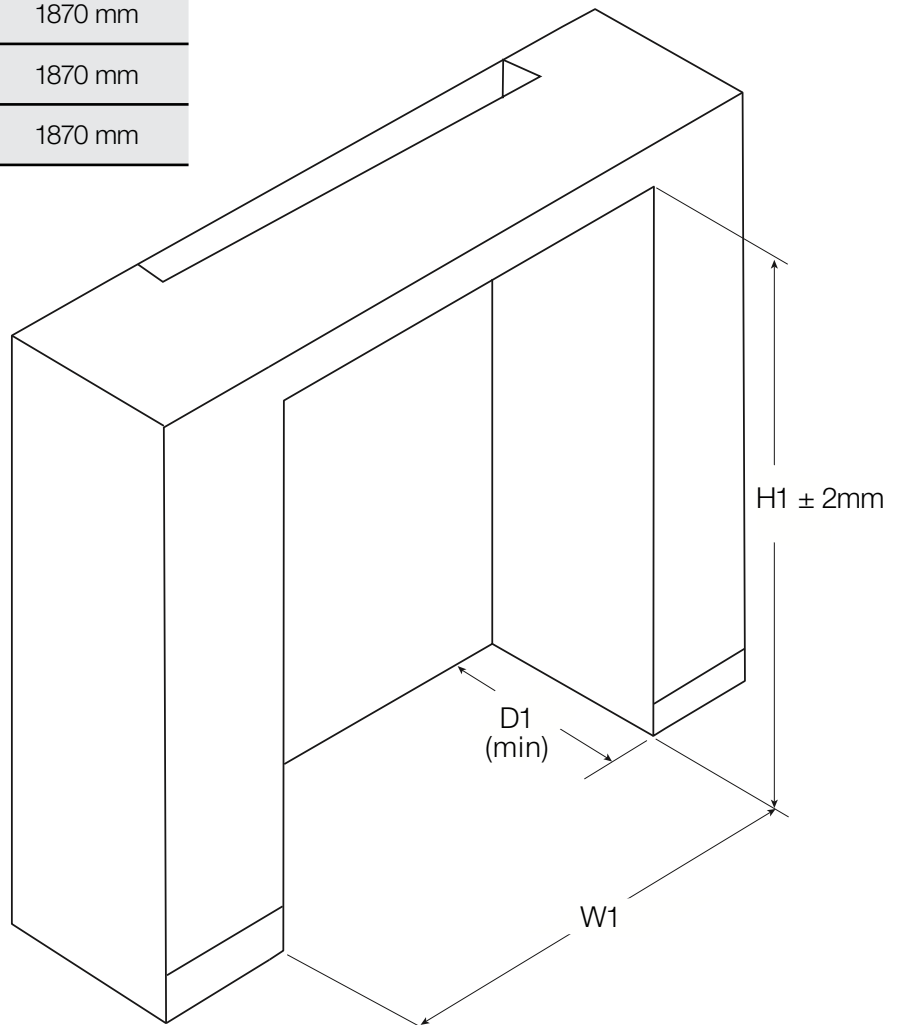

# STEP 1 - INSTALLING THE LEVELLING SYSTEM FOR SINGLE AND DUAL REFRIGERATOR INSTALLATIONS

## Leveling system install

### Preparing non-door hinge side

- Tape door(s) to cabinet (to maintain door alignment) and lay refrigerator(s) on its back on packaging material or a drop cloth to prevent damage.
- Remove large levelling nut by turning anti clockwise past the stop (discard)
- Remove the two outside screws (1&2) and roller assembly (discard). Remove the two inside screws (3&4) (keep) and discard the foot base

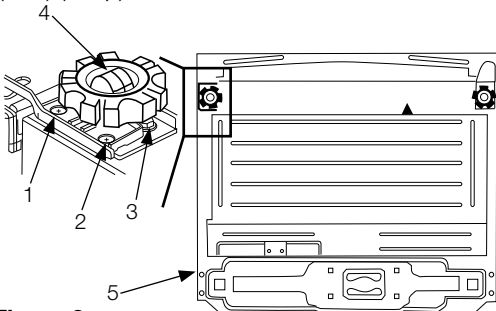


Figure 2

- Remove screw (5) on the compressor base
- Attach replacement foot base to the refrigerator to the two holes at the front of the refrigerator using two of the removed screws (See Figure 3)

Ensure tapped hole is on the outside of refrigerator (recommended torque 8Nm)

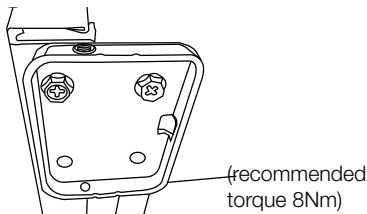


Figure 3

- Discard the factory fitted base and remaining screws.
- For french door models, repeat the steps 'b' to 'd' on other side of the refrigerator

### Preparing door hinge side (non french door models)

- Remove large levelling nut by turning anti-clockwise past the stop (discard). Remove the two outside screws and roller assembly (discard). remove the two inside screws (keep) and discard hinge assembly.
- Ensuring the doors are properly aligned, attach the Hinge Base included in the Trim Kit using removed screws 3 and 4 (Fig 4). For Right Hand models, use 'Hinge Base Right Assy' and for Left Hand models, use 'Hinge Base Left Assy'

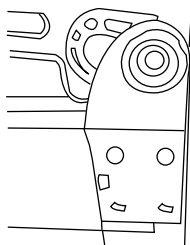


Figure 4

### Attaching the levelling systems (2 per refrigerator)

- The leveller assembly attaches to the refrigerator with 3 spacers (1H) and 3 screws 9H and 3H (Fig 5).
- Ensuring slotted adjusting bolt is at the front, align the side of the leveller assembly to the side of the refrigerator.

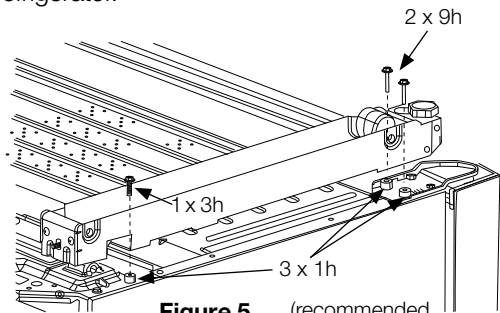


Figure 5

- Attach Leg leveller to the leveller hole farthest from the cabinet side face and wind it up fully. (Fig 6)

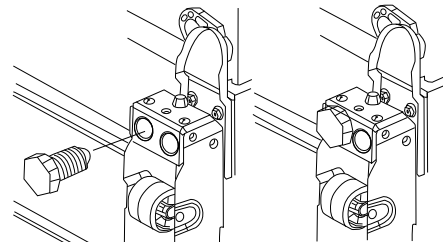


Figure 6

- Attach Clip Trim Bottom to the inside of each leveller assembly using screws 9H

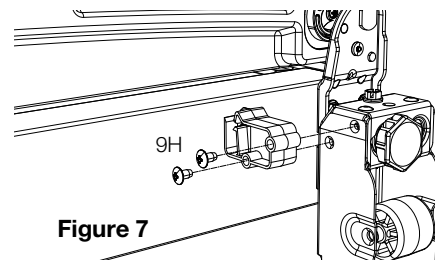


Figure 7

- Repeat the procedure to fix the other levelling system to other side of the refrigerator.

### Stand the appliance(s) to vertical position.

Your refrigerators are delivered with hole covers that cover the screw holes. These holes are located on the top of the refrigerator, opposite from the door hinge. Carefully remove these covers, care must be taken to avoid damaging the refrigerators surface. Use the pry slot at the rear of the cover.

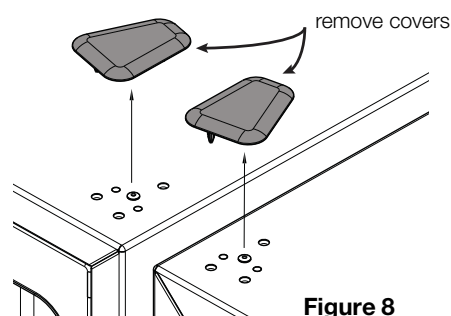


Figure 8

## STEP 2 - JOINING THE REFRIGERATORS

### FOR DUAL REFRIGERATOR INSTALLATION ONLY

Carefully pull the refrigerators together adjacent to the final installation location, then adjust the front and rear feet to the same height.

#### Top-front and bottom-rear bracket installation

##### Install the top-front bracket

- Assemble the top-front bracket, fit the screws (8H) in place, but do not tighten them yet leave the screws loose.

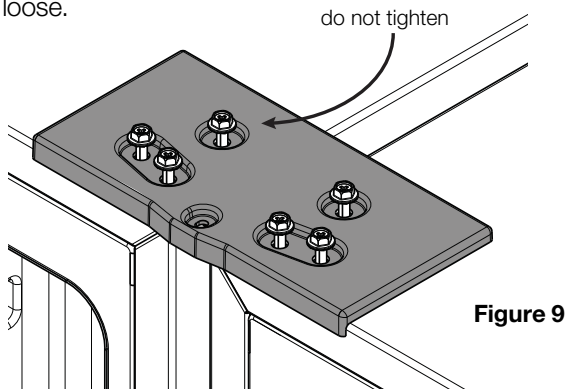


Figure 9

##### Install the bottom rear bracket

- Remove 2 screws at the bottom of rear panel
- Assemble the rear-bottom rear bracket to the refrigerators using the original screws and tighten.

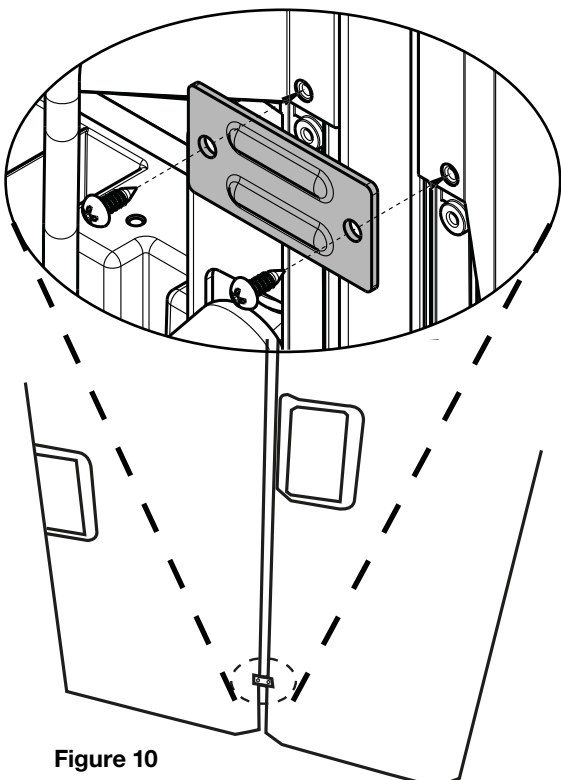


Figure 10

#### Bottom-front bracket installation

##### Position the bottom-front bracket

- Position the bottom-front bracket between the two refrigerators.
- Fasten with the two M4 screws using a Phillips head screwdriver.
- Pull tensioner towards front to allow fitment of centre trim

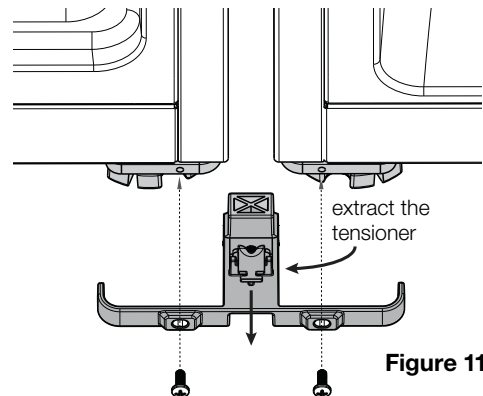


Figure 11

##### Fit the centre cover

- Push the centre trim between the two refrigerators
- Engage the bottom end of the centre trim into the tensioner of the bottom-front bracket. (Fig. 12)
- Lift the top-front bracket (screws should be loose enough) and slide the centre trim underneath. (Fig. 13)
- Tighten the screws in the top-front bracket. (Fig. 14)
- Adjust the tensioner screw as required. (Fig. 15)
- Fasten the centre trim to the top-front bracket using the provided self-tapping screw. (Fig. 16)

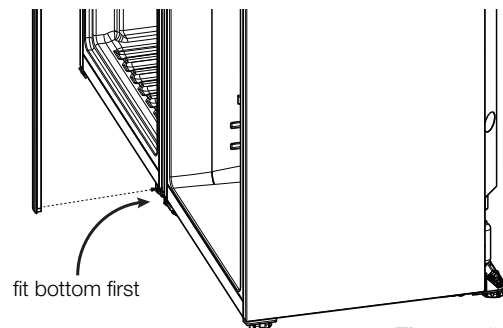


Figure 12

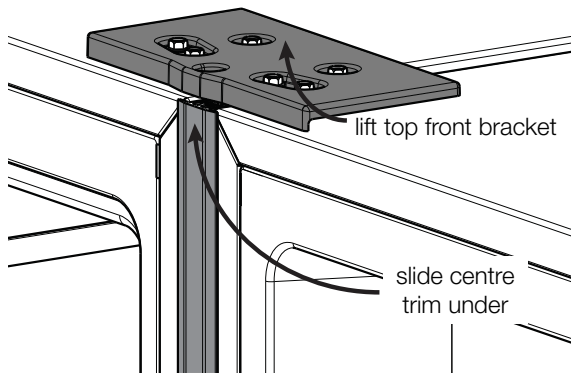


Figure 13

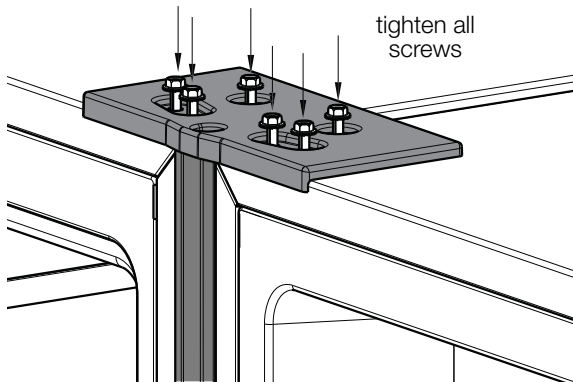


Figure 14

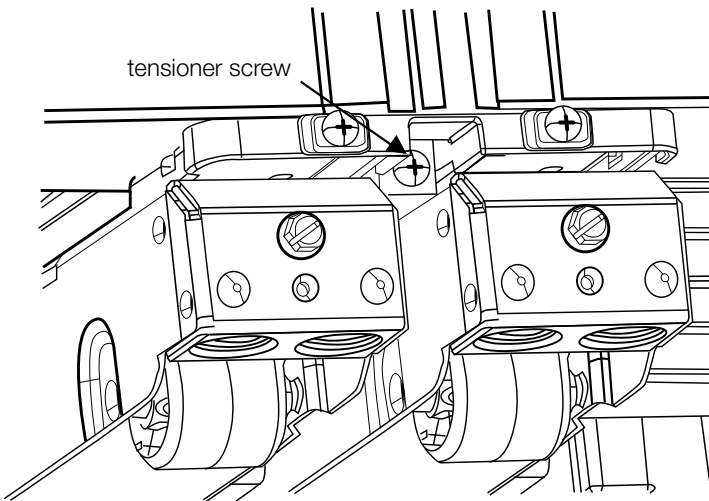


Figure 15

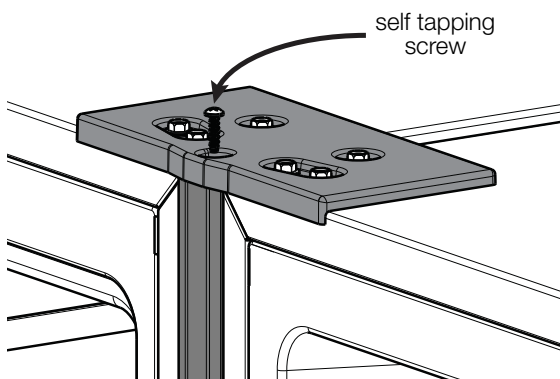


Figure 16

## STEP 3 - INSTALLING THE TRIMS AND LEVELLING

### FOR SINGLE & DUAL REFRIGERATOR INSTALLATIONS

#### Trim kit installation

##### Single unit installation – non french door models

Attaching the bracket – non hinge side

- Attach the bracket to the unit using two screws.

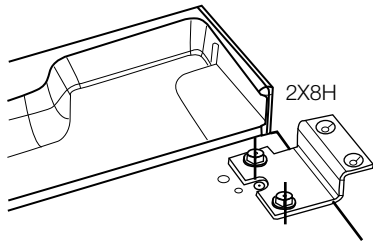


Figure 17

##### Single and dual installations

Attaching the bracket – hinge side

- Remove outer screw from top hinge cover and save for later. Remove the top hinge cover and discard. (Fig. 18)

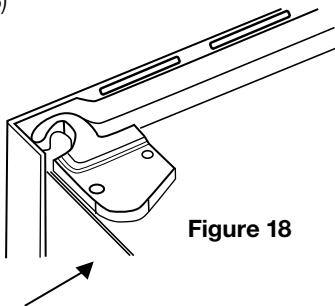


Figure 18

- Remove the two screws shown. Attach the bracket to the top hinge using the removed screws. Recommended screw torque 8Nm.

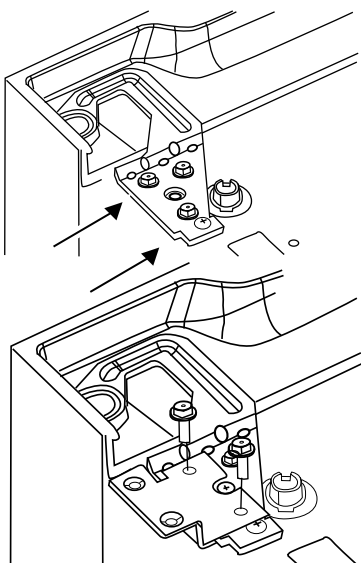


Figure 19

- Assemble the Replacement Top Hinge Cover to the Top Hinge using the screw removed from factory fitted Top Hinge Cover. (Fig. 20)

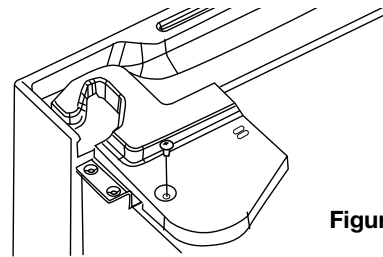


Figure 20

#### **i** IMPORTANT

##### Door alignment

- Push refrigerator(s) into final position to check alignments.
- Align refrigerator cabinet(s) using the leveller assembly using the adjuster bolt to raise or lower the rear roller
- Raise front using leg leveller (N.B. you will need to wind back up to move refrigerators forward)
- Align top doors by loosening top hinge - tighten screws.
- Pull refrigerator(s) forward to complete final steps

##### French and Dual door Installations

- (French Door model Only) Attach the bracket LH and Replacement Top Hinge Cover on the other door hinge as well.
- (Dual Installation Only) Attach the bracket and Replacement Top Hinge Cover on door hinge side of second refrigerator as well.

##### Top Trim Install

##### Single installation only Non-French door models

Attach Insert Top Trim to top trim by pushing into the slot on the non-hinge side of the refrigerator.


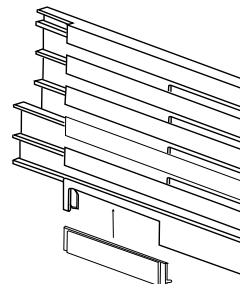


Figure 21

**All models**


Align the front of the top trim to the front of the refrigerator and attach with screws (8H) and spacer 2H (Non French Door models only) as shown. (Fig. 22)

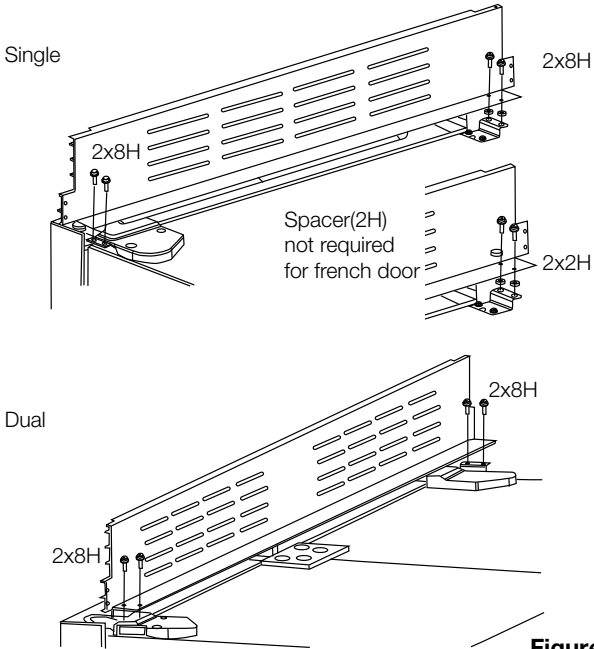

**Figure 22**


**Side trim install**

a. Attach a shoulder screw into the lower side hole on outward facing side of levelling systems (Fig. 23). For dual installation, do this only on the extreme left and extreme right levelling systems.

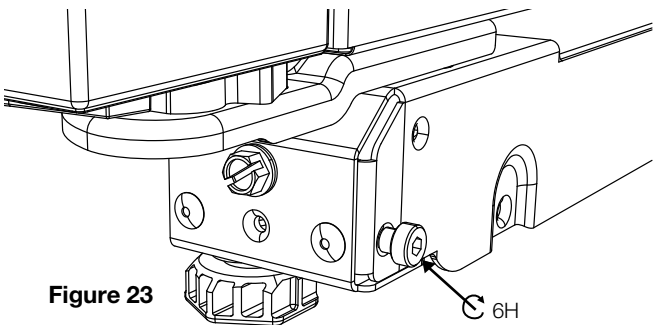


**Figure 23**

b. Locate slot in right hand side trim over shoulder screw.

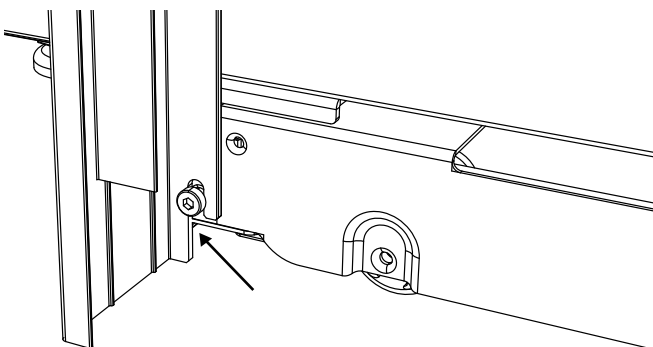

**Figure 24**

c. Locate side trim over the top trim and attached with countersunk self tapping screws (5H) (Fig. 25). Push side trim again against refrigerator to close gap before tightening.

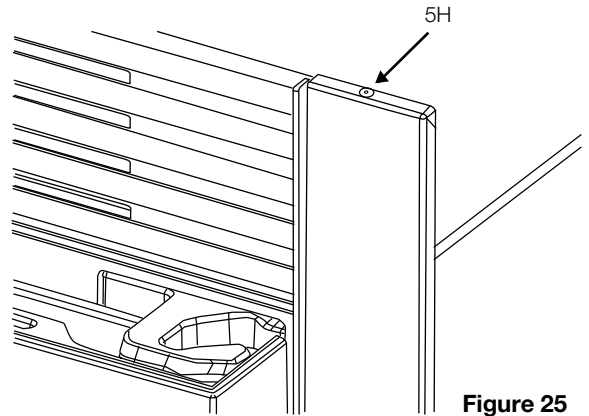

**Figure 25**

d. Assemble the left hand side trim to the appliance using the same method.

Push the appliance(s) carefully into the cabinetry cavity until the trims are close to the cabinetry front faces. (Fig. 26)

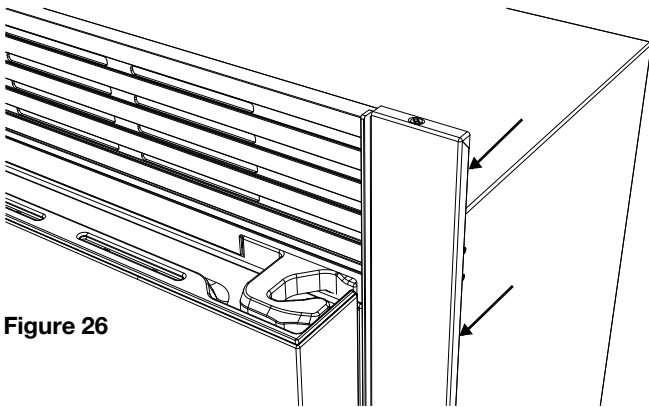


Figure 26

- e. Adjust the front and rear levelling feet (Fig. 27) if necessary to align the edges of the trims to the front face of the cabinetry.

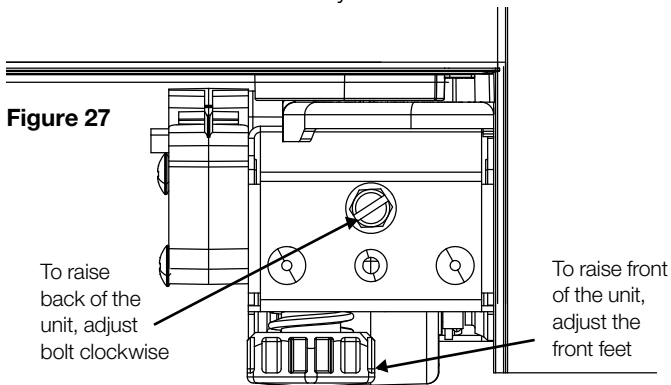


Figure 27

- f. Adjust the leg levellers (Fig. 28) so that they touch the ground and can't be rotated further by bare hands. This will stop the refrigerator rolling forward when opening the doors.

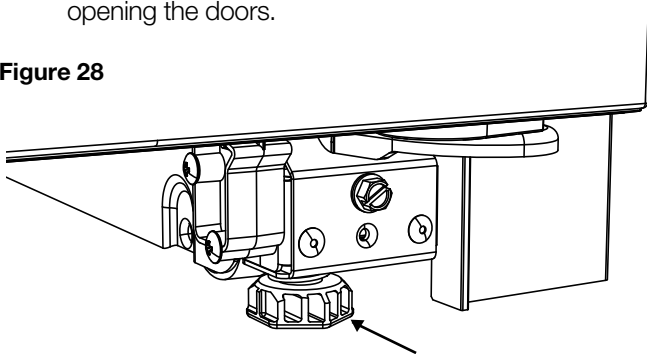


Figure 28

- g. Remove the screws holding the side trim to the top trim and take out the side trim by carefully sliding it up and away from the unit.

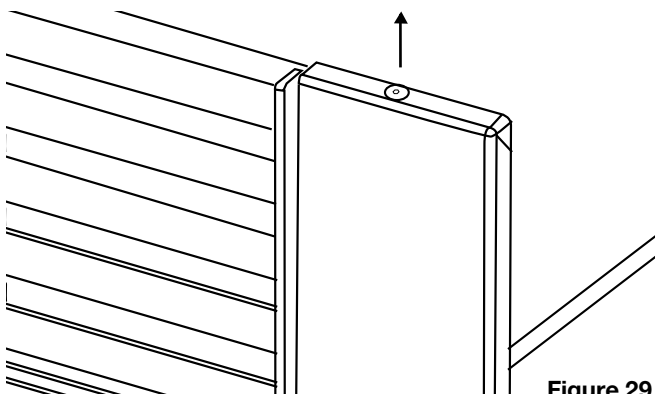


Figure 29

- h. Drill dia 3.2mm pilot holes on the cabinetry and secure the Top Trim to the cabinetry using two screws each on left and right ends.

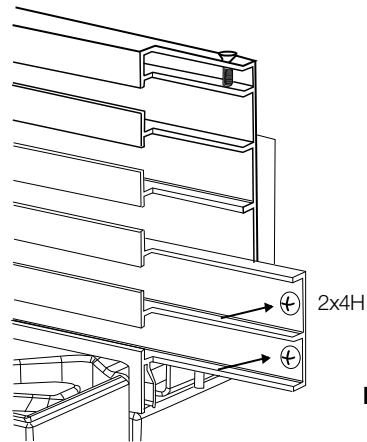


Figure 30

- i. Attach both the side trims back to the unit

**Bottom trim install**

**Single installation only**

Attach the insert bottom trim to the slot on the non-hinge side using screw 10H.

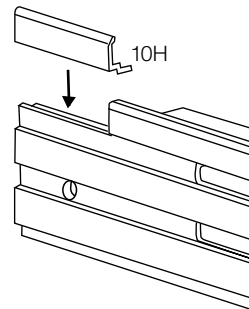


Figure 31

**Single and dual Installations**

Open doors and align the bottom trim between the clips and push to clip it in place.

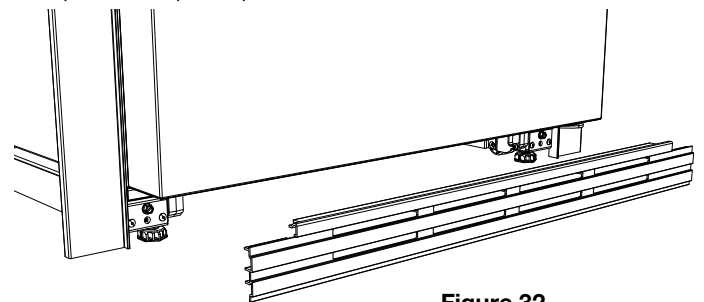


Figure 32

## **Uninstall Sequence**

### **1. Uninstalling the trims**

- a. Remove the bottom trim by pulling it towards you.
- b. Remove the Side trims by pulling it up and away from the refrigerator after unscrewing the top screw.
- c. Remove the screws attaching the top trim to timber cabinetry.
- d. Pull out the refrigerator from the cabinetry cavity.
- e. Remove the top trim.

### **2. Uninstall the Connection kit components**

- a. Remove the top front bracket.
- b. Loosen the tensioner screw on the bottom bracket and remove the centre cover.
- c. Remove the bottom front bracket.
- d. Remove the rear bottom bracket.
3. Remove the Levellers
4. Attach Roller Feet






**Electrolux Warranty**

FOR SALES IN AUSTRALIA AND NEW ZEALAND  
APPLIANCE: ELECTROLUX SPARE PARTS & ACCESSORY PRODUCTS

**This document sets out the terms and conditions of the product warranties for Electrolux Spare Parts and Accessory Products. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should there be a manufacturing defect in your Product. This warranty is in addition to other rights you may have under the Australian Consumer Law.**

**1. In this warranty:**

- (a) 'ACL' or 'Australian Consumer Law' means Schedule 2 to the Competition and Consumer Act 2010;
- (b) 'Product' means any Electrolux spare part and accessory product purchased by you and accompanied by this document;
- (c) 'ASPD' means Electrolux's Authorised Spare Parts Distributor;
- (d) 'Electrolux' is the brand controlled by Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot NSW 2020, ABN 51 004 762 341 in respect of Products purchased in Australia and Electrolux (NZ) Limited (collectively "Electrolux") of 3-5 Niall Burgess Road, Mount Wellington, in respect of Products purchased in New Zealand;
- (e) 'Warranty Period' means the period specified in clause 3 of this warranty;
- (f) 'you' means the purchaser of the Product not having purchased the Product for re-sale, and 'your' has a corresponding meaning.

**2. Application:** This warranty only applies to new Products, purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) other rights and remedies under a law to which the Products or services relate, including any non-excludable statutory guarantees in Australia and New Zealand.

**3. Warranty Period:** Subject to these terms and conditions, this warranty continues for a period of 12 months in Australia and New Zealand, following the date of original purchase of the Product.

**4. Repair or replace warranty:** During the Warranty Period, Electrolux or its ASPD will, at no extra charge, subject to these terms and conditions, repair or replace any Product or parts which it considers to be defective. Electrolux may, in its absolute discretion, choose whether the remedy offered for a valid warranty claim is repair or replacement. Electrolux or its ASPD may use refurbished parts to repair your Product. You agree that any replaced Products or parts become the property of Electrolux.

**5. Travel and transportation costs:** Subject to clause 7, Electrolux will bear the reasonable cost of transportation, travel and delivery of the Product to and from Electrolux or its ASPD. Travel and transportation will be arranged by Electrolux as part of any valid warranty claim.

**6. Proof of purchase** is required before you can make a claim under this warranty.

**7. Exclusions:** You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. This warranty does not cover:

- (a) light globes, batteries, filters or similar perishable parts;
- (b) parts and Products not supplied by Electrolux;
- (c) cosmetic damage which does not affect the operation of the Product;
- (d) damage to the Product caused by:
  - (i) negligence or accident;

- (ii) misuse or abuse, including failure to properly maintain or service;
- (iii) improper, negligent or faulty servicing or repair works done by anyone other than an Electrolux authorised repairer or ASPD;
- (iv) normal wear and tear;
- (v) power surges, electrical storm damage or incorrect power supply;
- (vi) incomplete or improper installation;
- (vii) incorrect, improper or inappropriate operation;
- (viii) insect or vermin infestation;
- (ix) failure to comply with any additional instructions supplied with the Product;

In addition, Electrolux is not liable under this warranty if:

- (a) the Product has been, or Electrolux reasonably believes that the Product has been, used for purposes other than those for which the Product was intended, including where the Product has been used for any non-domestic purpose;
- (b) the Product is modified without authority from Electrolux in writing;
- (c) the Product's serial number or warranty seal has been removed or defaced.

**8. How to claim under this warranty:** To enquire about claiming under this warranty, please follow these steps:

- (a) carefully check the operating instructions, user manual and the terms of this warranty;
- (b) have the model and serial number of the Product available;
- (c) have the proof of purchase (e.g. an invoice) available;
- (d) telephone the numbers shown below.

**9. Australia:** For Products and services provided by Electrolux in Australia: Electrolux goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Product repaired or replaced if the Product fails to be of acceptable quality and the failure does not amount to a major failure. 'Acceptable quality' and 'major failure' have the same meaning as referred to in the ACL.

**10. New Zealand:** For Products and services provided by Electrolux in New Zealand, the Products come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act. Where the Product was purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.

**11. Confidentiality:** You accept that if you make a warranty claim, Electrolux and its agents including ASPD may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

**Important Notice**

Before calling for service, please ensure that the steps listed in clause 8 above have been followed.

<p><b>FOR SERVICE</b> or to find the address of your nearest customer care centre in Australia <b>PLEASE CALL 1300 363 640</b> <small>For the cost of a local call (Australia only)</small></p>	<p><b>AUSTRALIA</b> ELECTROLUX HOME PRODUCTS 163 O'Riordan Street, Mascot NSW 2020 electrolux.com.au</p>	<p><b>FOR SPARE PARTS</b> or to find the address of your nearest spare parts distributor in Australia <b>PLEASE 13 13 50</b> <small>For the cost of a local call (Australia only)</small></p>
<p><b>FOR SERVICE</b> or to find the address of your nearest authorised service centre in New Zealand <b>PLEASE CALL 0800 10 66 10</b> <small>(New Zealand only)</small></p>	<p><b>NEW ZEALAND</b> ELECTROLUX (NZ) Limited 3-5 Niall Burgess Road, Mount Wellington electrolux.co.nz</p>	<p><b>FOR SPARE PARTS</b> or to find the address of your nearest spare parts centre in New Zealand <b>PLEASE 0800 10 66 20</b> <small>(New Zealand only)</small></p>

**Electrolux Home Products Australia**

telephone: 1300 363 640  
fax: 1800 350 067  
email: [customercare@electrolux.com.au](mailto:customercare@electrolux.com.au)  
web: [electrolux.com.au](http://electrolux.com.au)

**[electrolux.com.au/shop](http://electrolux.com.au/shop)**



**Electrolux Home Products New Zealand**

telephone: 0800 436 245  
fax: 0800 225 088  
email: [customercare@electrolux.co.nz](mailto:customercare@electrolux.co.nz)  
web: [electrolux.co.nz](http://electrolux.co.nz)



To add a touch of professional inspiration to your home, visit [electrolux.com.au](http://electrolux.com.au) or [electrolux.co.nz](http://electrolux.co.nz)

**P/No. A06440801**

© 2018 Electrolux Home Products Pty Ltd

EMAN\_TrimKit\_Dec18

