


Wave Racer


User's Guide for Model DRB126 v3520-01




Charging the Battery

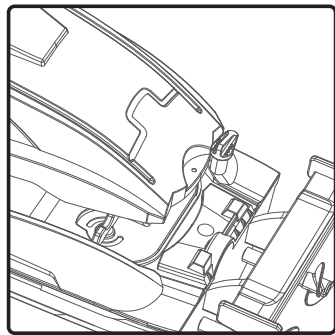

1. Turn the clasp clockwise to open it, then lift the top cover upwards.

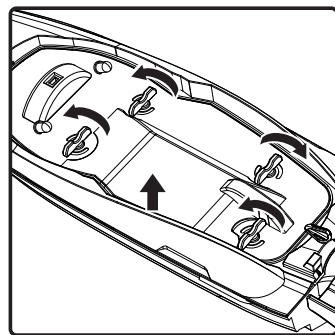


2. As shown in the illustration, rotate the four latches to release them, then lift the plate upwards.

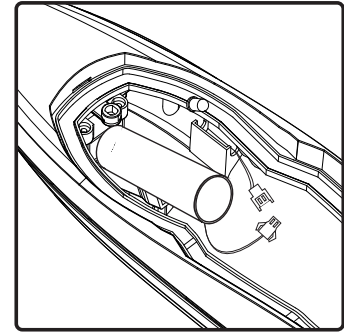

3. Disconnect the remote-controlled boat from the battery power supply.

Remote Overview

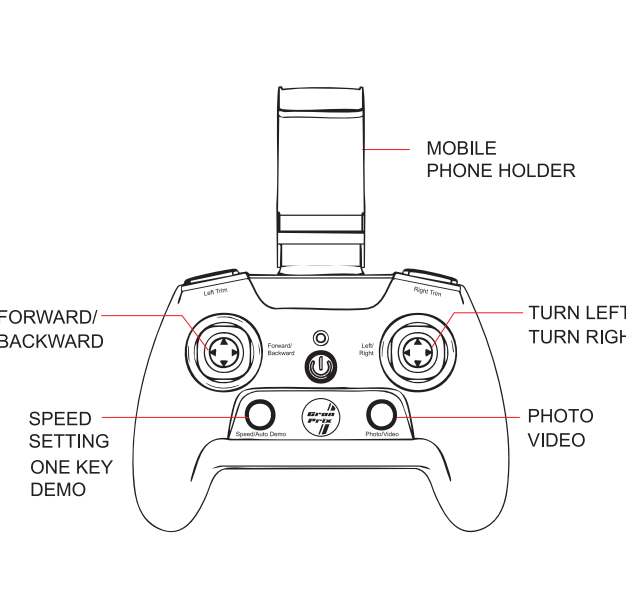


MOBILE PHONE HOLDER

FORWARD/BACKWARD

SPEED SETTING ONE KEY DEMO

TURN LEFT/TURN RIGHT



PHOTO VIDEO

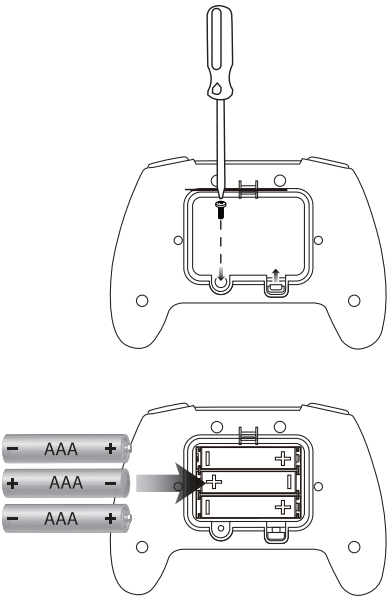



AAA

Using the Remote

1. Left joystick: Controls forward and backward movement

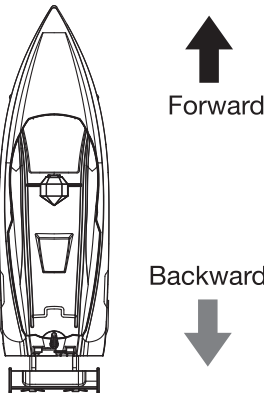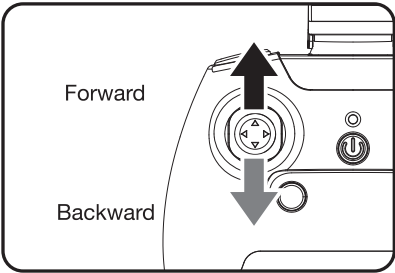

2. Right joystick: Controls left and right turns

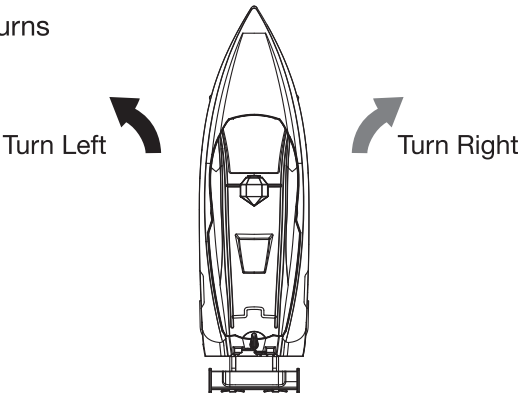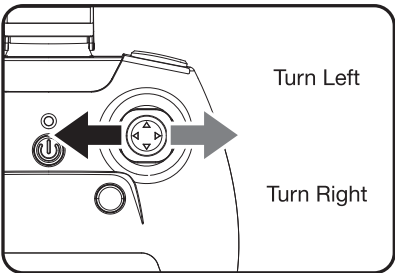

Download the App Instructions

Full Instruction Manual



WiFi Boat App



Download the WiFi Boat App

Search for “WiFi Boat” in the Apple App Store or Google Play Store or scan the QR code on the left.

Connect to Wi-Fi

NOTE: Wi-Fi control may be interrupted by interference from other nearby Wi-Fi equipment.

Make sure your phone’s Wi-Fi is enabled and the boat is powered ON.

From your smartphone, open the Wi-Fi settings menu, then search for and select DRB126 to connect.

Warnings and Safety Information

- **WARNING:** Potential hazard, keep antenna away from face and eyes.
 - **WARNING:** To prevent fire or shock hazards, do not expose this unit or the batteries to rain or moisture.
 - Batteries shall not be exposed to excessive heat such as sunshine, fire, or the like.
 - Never use batteries that are swollen, leaking, or appear damaged.
 - Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
 - If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
 - Do not mix old and new batteries. Completely replace all old batteries with new ones.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-cad, Ni-Mh, etc) batteries.
 - Batteries should always be recycled or disposed of per state and local guidelines.
 - **Li-ion** batteries should never be disposed of in normal household waste, and they should never be incinerated, as they might explode.
- Li-ion battery should be fully charged and discharged before and after every use.
 - Batteries that are stored for very long periods will gradually lose their charge. Discharge fully to maintain battery integrity.
 - Store batteries in a cool, dry place. Avoid warm and humid areas, and do not store in metal containers.
 - Do not attempt to open the battery casing, and avoid contact with metal objects like hair pins or tools.
 - **WARNING:** This product may contain chemicals known to the State of California to cause birth defects, or other reproductive harm (California Prop 65). Wash hands after handling.
 - This product meets and complies with all Federal regulations.
 - **WARNING:** Do not touch the motor or battery when hot. Do not drive towards yourself or other people. Adult supervision is required.
 - **CHOKING HAZARD:** Small parts. Not for children under 3 years.
 - **CAUTION:** Tested to comply with FCC standards. For home or office use.

FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Website: www.gpx.com
Email Support: prodinfo@dpiinc.com
Email Parts: partsinfo@dpiinc.com
Phone Support: **1-888-999-4215**

Copyright © 2024 Digital Products International (DPI, Inc.)
All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.



WARNING: Risk of cancer and reproductive harm from exposure to DEHP.
See: www.P65Warnings.ca.gov

Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.