

INSTRUCTION MANUAL

Bluetooth Set Digital Wall Clock with

Date, Timer, Nightlight

Model: SO800E

Unpacking Instructions

 
Please remove the protective film applied to the led screen prior carefully to use this product. Locate the tab to peel off the film.

Package Contents

- Digital Wall Clock x1
- Power Adapter x1
- Remote Control x1
- Hanging Nails x2
- Instruction Manual x1
- Mounting Holes Measure x1



1. Clock
2. AM/PM Indicator
3. Day of Week
4. Temperature
5. Date
6. Alarm Indicator
7. DST Indicator
8. Nightlight
9. Bluetooth Indicator



10. Integrated Hang Holes: For easy wall mounting.
11. Button battery compartment

 
1

12. Power Adapter Input
13. Up Button For setup preferences and military/normal time switch
14. To enter time set
15. Down Button For setup preferences and °C/°F switch
16. To enter alarm set
17. ✱ button for dimming the brightness and bluetooth pairing

Start the Clock

- ① Activate the battery memory function

There's already a CR2032 button battery inside, remove the plastic insulator tab to activate the battery memory function.

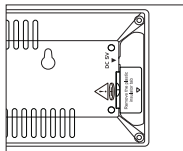

IMPORTANT : Button battery has a memory function to keep clock records in the event of a power outage. The clock needs to be plugged into the adapter to work.

- ② Connect to the electric



(Adapter Included)

Synchronize Time by Bluetooth

After the clock is connected to the power supply, the "BT" icon flashes, indicating that it is looking for a Bluetooth device. Turn

2

on your phone's Bluetooth, find "SO800E", and connect to it. Once connected, the time will automatically update and the BT icon will stay on. To avoid occupying the Bluetooth connection between the phone and other devices, the clock will automatically disconnect from the phone 10 seconds after the setting is successful.

- ① "BT" icon flashing indicates that the clock is looking for a Bluetooth signal.



- ② "BT" icon staying on indicates a successful connection, and the clock time is also synchronized successfully.



- ③ "BT" icon disappears and the clock automatically disconnects from the phone. Your phone can connect to other devices.



In future daily use, turn on Bluetooth on the last paired phone, press the "AUTO BT" button once, the clock will automatically update to the correct time again through the same processes above.

Set Clock with Remote Control

- ① Start Controller

There's already a CR2032 button battery inside the controller. Please remove the plastic insulator tab from battery compartment in the back to start the remote control.




- ② Color Setting

Press the COLOR button on the remote, the clock's color will change. There are 12 modes of display, they are listed as below. Feel free to change the color.

And in the RGB changing modes, you could freeze the color

3

changing by pressing button "COLOR FREEZE" on the remote control, which could customize your favorite clock color. If you want the RGB color to start flowing, just press "COLOR" .

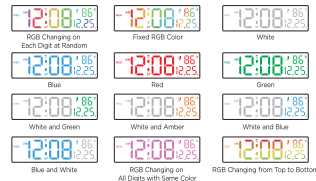

- ③ DST on Remote Control

"AUTO DST" should be set on the clock if you live in an area that observes daylight saving time. Thus, clock will spring forward and fall back automatically. Or you could press the "DST" button to disable the DST function.

- ④ Time Setting

Press and release "TIME SET" button on remote control, the screen will display the year and reset to normal time display 10s later. Press and hold the "TIME SET" button on the remote control for 2 seconds to enter time set mode. Once in set MODE the preference you are currently setting will blink on the clock. To adjust the currently selected (flashing) item, press and release the "UP" or "DOWN" buttons to adjust (press and HOLD them to fast adjust).

To save your adjustments, press and release the "TIME SET" button to adjust the next preference. The preference set order is as follows:
CLOCK HOUR
CLOCK MINUTE
CLOCK YEAR
CLOCK MONTH
CLOCK DATE

4

- ⑤ Adjust display Brightness with Remote Control

Every time you press the "DIMMER" button on the remote control the brightness will decrease one level, if you press dimmer button again when it already reached the lowest level, the brightness will turn back to the most shining level.

- ⑥ Regular Time and Military Time Switch on Remote Control

The default time display is regular time display, there will be a am/pm indicator on the clock if it is in regular time display. If you prefer military time display, please press the 12/24 button to change it.

Nightlight Function on Remote Control

There's a color-changing nightlight on this digital wall clock. The flow of color-changing starts with a warm light then other colors and can stay at a specified color via a push on the "COLOR" button. If a color-flowing nightlight is preferred, just press "COLOR" button again. Press "DIMMER" to adjust the brightness level for the nightlight. Press "ON/OFF" to turn nightlight on or off.



Set Alarm on Remote Control

- ① Alarm SET

When you press and release the "ALARM SET" button on remote, the screen will display the time alarm goes off. And if you hold the "ALARM SET" button for 2s, you will enter the alarm setting, alarm hour digit starts flashing. Release "ALARM SET", press "UP/DOWN", or hold "UP/DOWN" to fast adjust.

Press "ALARM SET" once again, alarm minute digit starts flashing. Release "ALARM SET", press "UP/DOWN", or hold "UP/DOWN" to fast adjust. Then press "ALARM SET" again to exit and save.

Note:

a. It will automatically exit ALARM SET MODE and save current setting if no buttons are pressed for 10 seconds.

5

It's our pleasure to present you the latest Soobest product — SO800E digital wall clock. To ensure the best product performance, please read this manual in details and retain it for future reference.

Questions? Contact Customer Service Center at

✉ sobest2014@outlook.com

b. Once finished the alarm setting, the alarm will be switched to "on" automatically.

② Alarm On/Off

In case of you want to disable the alarm, you could press the Alarm On/Off button to totally turn the alarm off. And the alarm icon will disappear while the alarm is disabled.

Timer Mode (Remote Control Only)

1. Count Down

① Press "TIMER SET" button to enter the timer mode.



② Once clock is in the timer mode, the minute digits will start flashing, press "UP"/ "DOWN" button to adjust minute, and press "OK" button, the seconds digits will flash, press "UP"/ "DOWN" button to adjust seconds, then press "OK" to confirm the timer.



③ Press the "START STOP" button or "OK" button and the timer will start counting down.

When the time is up, the clock will beep to remind you, please press any button on the remote control to stop the beep. Or you can mute beep via a press on "MUTE" button.

④ Pause Counting

The counting could be stopped anytime once you press the "START STOP" button on the remote control. And you could press it again to continue counting. No matter pausing or continue counting, the clock reminds you with a beep sound.

2. Count Up



① Press "TIMER SET" button to enter the timer mode.



② Press the "START STOP" button to start counting up time.

When the counting starts, the clock will beep to remind you.

③ Pause Counting

The counting could be stopped anytime once you press the "START STOP" button on the remote control. And you could press it again to continue counting.

3. Clear and Exit Timer mode

Press the "CLEAR" button to clear all the counting when timer stops or pauses. And if you want to exit the timer mode, just press the "TIMER SET" button to exit.

Notes:

a. The maximum counting time is 99:59.

b. Please remember to clear or stop or mute the counting before exit timer mode, or the counting will run in the background and start beep when time is up, which might bother you or your family members.

Set the Time & Units on Clock

① Time Set

Press and hold the "SET" button for 2S to enter time set mode. Once in set mode the preference you are currently setting will blink on the clock.

To adjust the currently selected (flashing) item, press and release the "UP/DOWN" buttons to adjust (press and hold them to fast adjust).

To save your adjustments, press and release the "SET" button to adjust the next preference. The preference set order is as follows:

AUTO DST

CLOCK HOUR

CLOCK MINUTE

CLOCK YEAR

CLOCK MONTH

CLOCK DATE

Note:

Enter SET MODE at any time by pressing and hold the "SET" button for 2S. If you press the "SET" button slightly, the clock will show you the year.

② Alarm Set

Hold the "ALARM SET" button for 2s, you will enter the alarm setting, alarm hour digit starts flashing. Release "ALARM SET", press "UP/DOWN", or hold "UP/DOWN" to fast adjust.



Press "ALARM SET" once again, alarm minute digit starts flashing. Release "ALARM SET", press "UP/DOWN", or hold "UP/DOWN" to fast adjust. Then press "ALARM SET" again to exit and save.

Note:

Once finished the alarm setting, the alarm will be switched to "on" automatically.

③ Alarm On/Off Operation on Clock

Each push on "ALARM SET" button can turn alarm on/off while the alarm icon displays/disappears on the screen.

④ Adjust brightness of the display

There is a "brightness" button on the side of this clock with a bulb icon. It has 5 brightness levels, the default brightness is the most bright level. Every time you press it, the brightness will decrease one level. If you press "brightness" button again when it already reached the lowest level, the brightness will turn back to the most shining level. Feel free to press and adjust it to your favorite level.

⑤ Military/Regular Time Display Switch on Clock

Each press on "UP/DOWN" button can switch clock in regular time or military time. In regular time(12-HR), AM/PM will display. Otherwise, clock is in military time (24-HR) display.

⑥ Temperature Display Switch

• Each push on "TEMP" button can switch temperature in "C"/"F".
• The temperature sensor will refresh every 30 seconds to ensure that you could get the latest temperature change information.

⑦ Synchronize Time by Bluetooth


In future daily use, if the remote control is lost, you can also press and hold the "brightness" button for 2 seconds to turn on the clock Bluetooth and connect your phone with "SO800E" to update time.

Replace Control Batteries

When battery memory function does not work, please replace battery in the remote control. The battery mode is CR2032. Usually, a CR2032 battery can keep the memory function working for over 1 year.



PLEASE DISPOSE OLD OR DEFECTIVE BATTERIES IN AN ENVIRONMENTALLY SAFE WAY AND IN ACCORDANCE WITH YOUR LOCAL LAWS AND REGULATIONS.

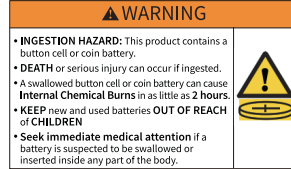

BATTERY SAFETY

Clean the battery contacts and those of the device prior to battery installation. Remove batteries from equipment no longer using for an extended period. Please ensure the batteries are installed correctly according to polarity (+ and -). Promptly remove empty batteries from the device. Dispose used batteries properly. Only batteries of the same or equivalent type as recommended are to use. Please do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.

Please remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.

Please always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate. DO NOT short-circuit the supply terminals. Cause even used batteries may cause severe injury or death.

If anyone swallowed the battery, please call a local poison control center for treatment information. The included battery is CR2032 battery and the nominal battery voltage is 3.7V.

And the CR2032 battery is non-rechargeable battery, it could not

be recharged.

Please do not force discharge, recharge, disassemble, heat above 60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

Mounting on the Wall

Please put the mounting holes measure ruler (included) on the wall to mark the place to thwack nails in, make sure the clock could hang on the nails.



Care & Maintenance

Clean with a soft, damp cloth. Do not use caustic cleaners or abrasives. Keep clock away from dust, dirt and moisture. Clean ventilation ports regularly with a gentle puff of air.

Troubleshooting

① How to shift between clock mode and timer mode?

Press "TIMER SET" button to enter timer mode, press "TIMER SET" again to show clock mode.

② How do we know if the timer is muted or will beep?

In timer mode, press "MUTE" button, if you hear a beep, the timer will end with a sound, if you hear two beeps, the timer will end with a mute.

③ Pair Bluetooth with another phone

If you want to change a cellphone to pair, please press the "BT" button, the "BT" icon on the clock will flash, turn on another phone's Bluetooth, find "SO800E", and connect to it.

Customer Support

Soobest customer support is committed to providing you with best-in-class service. For assistance, please keep the model number and order ID number of this product then contact us by sending email, email address is as below:

✉ sobest2014@outlook.com

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.