



说明书 对折 双面单黑 80G书纸

<p>⚠ warnings</p> <ol style="list-style-type: none"> 1. Not suitable for children under 3 years old, contains small parts. 2. Regularly check the charger cord, plug, shell and other parts for damage. If damage is found, stop using it until it is repaired. 3. Built-in 3.7V/500mAh lithium battery, can not be disassembled and replaced, such as damage to the. If there is any damage, you should contact the service provider for repair. 4. Charger is not a toy, the host can only use the recommended charger charging. charging. The charger should be used by adults or under adult supervision (recommended specification: 5v-500mAh). 5. Do not use this product in direct sunlight. 6. This product contains electronic components, should not be used in water or in a humid environment, use a dry rag to wipe off surface stains. Use a dry cloth to wipe the surface stains. 7. If you don't use this machine for a long time, please be sure to complete the Charge and discharge the device at least once in a month to prevent the electricity from running out. <p>⚠ caution</p> <p>Disposing of this product may have an impact on the environment. Please recycle it properly. The box and instruction manual contain important information that must be kept.</p>	<p>CHILDREN'S PHONOGRAPH</p> <p>specification</p> 
---	---

<p>Function description</p> <ol style="list-style-type: none"> 1. Insert the trumpet flower into the phonograph main unit jack and rotate it to the proper angle as shown. The trumpet flower is a decorative item and can be used or not. 2. Take out your favourite round disc, put it on the turntable and snap it in place. 3. Toggle the toggle switch to the direction of the turntable, hear the "snap" sound that is suction switch Opens, the motor drives the disc to rotate one to two times to start playing the disc content. Toggle the switch back to the original position, lever switch back to the original position is disconnected from the power supply, playback stops. 4. Pause: During the disc playback, press the pause button to stop the playback, and then press it again to continue the playback. 5. Volume: Press the volume up and down keys to adjust the volume. 6. Recording function: After the switch is turned on, press the recording key to prompt "recording start" to record. Recording, after the end of the recording, press the play button prompts "play recording" for recording playback. (Remarks) Note: the recording time is 30 seconds, every time you re-record, it will overwrite the last recording), the recording will be played back after 10 seconds. (Note: the recording time is 30 seconds, each time you re-record, it will overwrite the previous recording), the recording will automatically enter the disc playback mode after 10 seconds. If you don't operate it for a long time, it will prompt "After 3 minutes of inactivity, it will prompt "Children come to play with us." and then the disc will be turned off. 7. Shutdown sound, more than 5 minutes of non-operation will prompt "children bye bye". 8. Low voltage prompts, low battery in working condition will prompt "insufficient power, please charge". <p>① charging, stop working, the button does not work (to protect children's safety) ② charging red light on, full light off, full charge takes about 1-1.5 hours.</p>	<p>Product overview</p>  <p>Packing List</p> <ul style="list-style-type: none"> ① Main unit × 1 ② power cord × 1 ③ Round card × 96 ④ Instruction manual × 1
--	---

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.ct.

The device has been evaluated to meet general RF exposure requirement.