

# **INALSA**

## **HAND MIXER**

### **EASY MIX MIXO**

---

Instruction Manual  
Cum  
Warranty Card

---

Dear Customer,

Congratulations! On the purchase of your INALSA Hand Mixer, this is designed to include many superior features that permit you the fullest expression of your cooking skill and enthusiasm. You are now on the threshold of a whole new world of cooking pleasure.


At INALSA, we have a reputation of manufacturing innovative, high quality appliances such as Food Processors, Mixer Grinders, Juicer Mixer Grinders, Cooking Ranges, Juice Extractors, Cooktops, Oven Toaster Grillers, Hand Blenders, Electric Kettles, Rice Cookers, and Electric Chimneys. Your newly acquired INALSA Hand Mixer bears the same distinctive hallmark of excellence.

It is all the result of vigorous quality consciousness in INALSA's design and development where uncompromising standards are maintained and rigid quality control measures are exercised on raw materials, components and finally, the finished product.

Your INALSA Hand Mixer has a lot of thoughtful features built in to make your cooking convenient. Please read these instructions carefully, so that you may get the best out of the power packed features in your INALSA Hand Mixer.

Welcome to the INALSA world of cooking pleasure!!

## Parts Identification

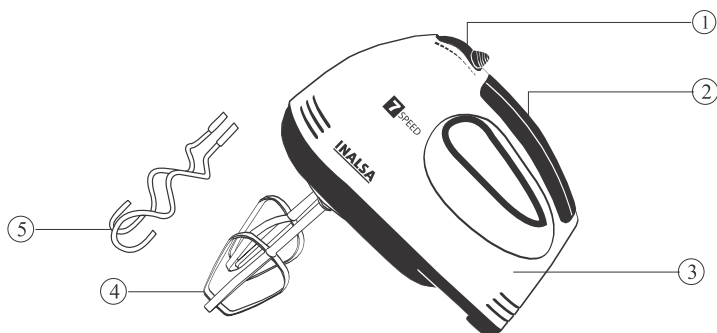

<u>Part No.</u>	<u>Parts Name</u>
1.	Speed selector / Eject knob
2.	Handle
3.	Housing
4.	Beater hooks
5.	Whisker hooks

## Technical Specifications \*

Product	Hand Mixer	
Model	Easy Mix	Mixo
Voltage	230V, 50Hz, AC	
Wattage	250W	
Attachments	Beater and Whisker	
No. of speeds	Seven	

\* Due to continuous improvements in product, specifications are subject to change without prior notice.

## Important Instructions

Please read operating instructions before using the appliance.

### Do's

1. Before plugging, ensure that the supply voltage is in accordance with the rated one.
2. While leaving, even for a short while, always unplug the hand mixer.
3. Close supervision is necessary when any hand mixer is used by or near children.
4. Handle the blades with care as these are very sharp and may cause serious injuries.
5. If the main cord of the mixer is damaged, it must only be replaced by an authorized service personnel.
6. Avoid exposure of the hand mixer to heated surface or direct heat.

## **Don'ts**

1. Never fit accessories with different functions at the same time.
2. Don't operate continuously for more than it's rated time . Allow rest of rated period before next use.
3. Never use the mixer attachments with hard food such as coffee beans, ice cubes, sugar, cereals etc.
4. Never touch the beaters, dough hooks. When the appliance is in operation, don't allow long hair, scarves etc. to hang down over the accessories when they are in operation.
5. Don't allow the power cord to hang down near flame or sharp edges.
6. Do not use for industrial purpose. Your appliance is intended solely for domestic use.
7. Never immerse the hand mixer in water.
8. Never use the appliance if it is damaged anyway. Contact your authorized service centre.

## **Important**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## **Before First Use**

Before using the hand mixer for the first time clean its accessories (attachments like beater, and whisker) with water.

## **How to Use**

### **Beaters and Whisker hooks**

1. Insert the beater and whisker hooks until they are locked in place.
2. Plug in the appliance.
3. Depending on the quantity to be prepared. Place the ingredients in an appropriate container.
4. Plunge the beaters or whisker hooks into the container and start the appliance by turning the control knob as per speed requirement. It can be set at any position from 1 to 7.
5. When you have finished the operation turn the control knob to position "OFF".
6. Unplug the appliance.
7. Eject the beater or whisker hooks by pushing the eject/speed control knob.

### **Cleaning:**

1. Unplug the appliance from wall outlet before cleaning.
2. Wipe over the outside surface with a damp cloth and polish with a soft dry cloth.
3. Wash the attachments in warm soapy water and wipe dry. The attachments may be placed in the dishwasher for easier cleaning.

**Caution:** Never immerse the hand mixer or power cord into water for cleaning.

### Correct disposal of this product



This marking indicates that this product should not be disposed with other household product. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection system or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## Warranty

The “**Inalsa Hand Mixer**” is fully warranted against any manufacturing defect for a period of **One Year** from the date of purchase. Should any defect develop in the **Hand Mixer** during the warranty period, Tuareg Marketing Pvt. Ltd. undertakes to get the **Hand Mixer** or any part thereof, repaired at any of its authorised service center.

The above warranty shall be subject to the following terms and conditions:-

1. Any defective product or part thereof will be repaired within the above stated warranty period on receipt of the same with this card duly filled in and stamped by dealer from whom the product was purchased along with the purchase bill/ invoice, provided the product is brought to our nearest service center freight paid and packed securely.
2. In the event of repairs/ replacement of any part of product, this warranty will thereafter continue and remain in force only for the unexpired period of warranty.
3. This warranty is valid only when:-
  - The product is purchased from the company's authorized dealer and accompanied by this warranty card/ cash memo.
  - The product has been serviced by the Inalsa's authorized service personnel.
  - The product has been used and maintained in accordance with the instruction manual.
4. The warranty does not apply to :-
  - Normal wear and tear of the product
  - Damage due to chipping, peeling, plating and denting.
  - Damages arising due to running of the appliances on the alternate sources of power such as Inverter, generator or any such auxiliary power supply aid resulting in variation/ fluctuating voltage
  - Breakage or damage to components made of ABS, SAN, Bakelite, Glass and such plastic/rubber parts, cord, bulbs and surface coating.
  - Damages resulting from accidents, mishandling or negligence on the part of the customer
  - Product if used for the commercial purposes.
  - Product, the serial number of which has been removed obliterated or altered on the specification plate.
5. The warranty is in lieu of all other warranty, expressed or implied and does not cover indirect or consequential damages/ loss.

# WARRANTY CARD

Product : Hand Mixer

Model : Easy Mix / Mixo

Serial No.....

Date of purchase.....

Bill/ Cash Memo no.....

Purchaser' name.....

Address.....

Dealer's stamp and Signature



Customer Care Number (Timing: 9:30 to 5:30) (Mon - Sat)

**9773982065**

**INALSA**

TUAREG MARKETING PVT. LTD.  
154, Bhalswa, Delhi- 110033