

BELL+HOWELL®

MyFOLDAWAY™

Rechargeable Fan

2in1  
FLOOR FAN  
& TABLE FAN

3 FAN SPEEDS

 
PORTABLE

STANDS  
100  
CM TALL


## CONGRATULATIONS!

Thank you for purchasing MyFoldaway Rechargeable Fan PRO! It turns from Table Fan to Floor Fan with ease. The telescopic arm extends up to 100 cm in height. So compact, just simply fold and store it away when not in use. It's a must have for your home!

## PARTS AND FEATURES

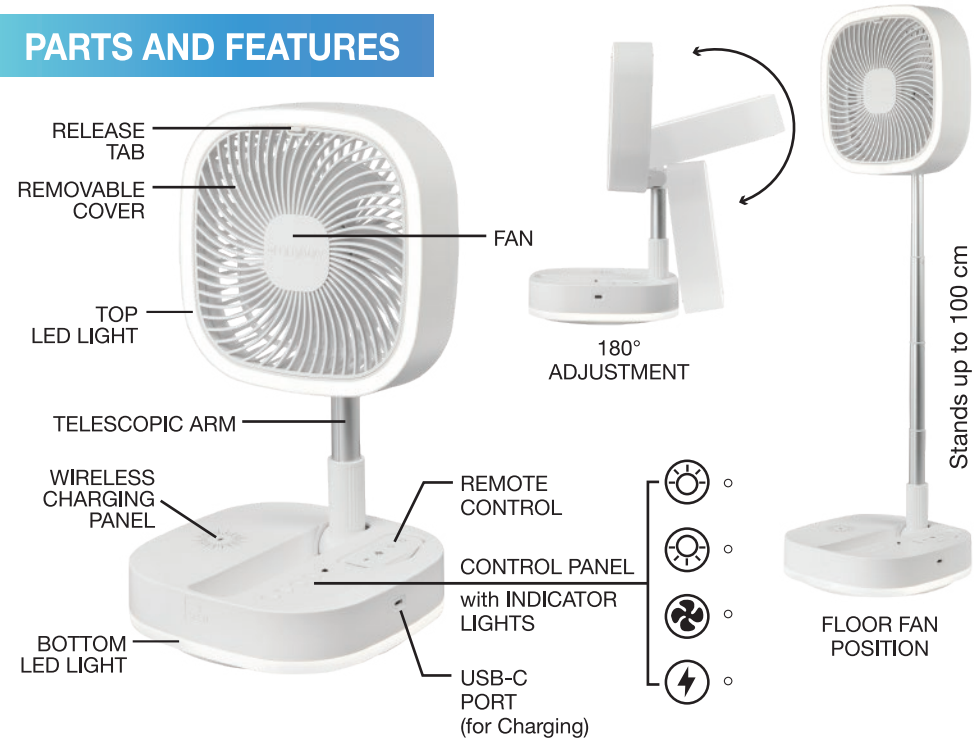

## CHARGING

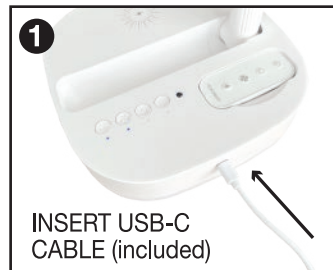 

**IMPORTANT: Do not use a fast charging adapter. Use standard DC 5V 2A adapter when charging.**

**OPTION 1:** Insert USB end into the power adapter (not included) and the other end into the charging port on the side of the fan, then plug into a power outlet.

**OPTION 2:** Insert USB-C end into the charging port on the side of the fan, then plug into any USB port.

2 Once plugged in, charging will start automatically. Indicator lights will display the charging process. If operating the fan while charging, do not leave it for a long period of time.

**less than 25% charged:** 1st Indicator light flashes.

**25% or less charged:** 1st Indicator light is solid, while 2nd light flashes.

**50% charged:** 2 Indicator lights are solid, while 3rd light flashes.

**75% charged:** 3 Indicator lights are solid, while 4th light flashes.

**Fully charged:** All 4 Indicator lights will be on.

## SET-UP TABLE FAN



Hold the base of the fan down with one hand and lift the top up with the other hand.



Bring the arm UP to a vertical position. You will hear a **click** each time you change the position of the arm.



Adjust the angle of the fan, as needed.

 
## SET-UP FLOOR FAN



Hold the base of the fan down with one hand and lift the top up with the other hand.



Bring the arm UP to a vertical position. You will hear a **click** each time you change the position of the arm.

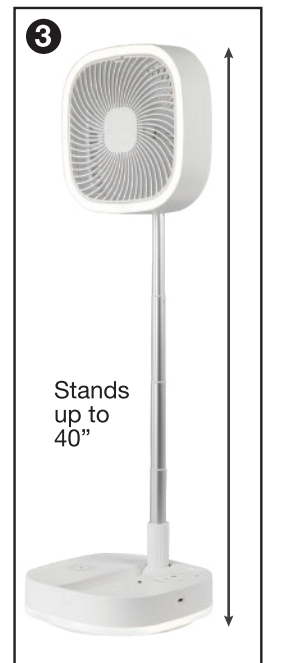

Extend the telescopic arm to the desired height.

INSTRUCTIONS



USAGE

- Press the button to turn the fan ON (LOW). Keep pressing the button to cycle the fan through Low, Medium, High and OFF. The corresponding indicator light will turn on.
- Press the button to turn the light around the fan on (Bright light). Keep pressing the button to cycle the light through Bright, Medium, Soft light and OFF. The corresponding indicator light will turn on.
- Press the button to turn the light around the base on (Bright light). Keep pressing the button to cycle the light through Bright, Medium, Soft light and OFF. The corresponding indicator light will turn on.

WIRELESS CHARGING

For best results, connect the fan to a power source via a charging cable.

1. Press the button on the control panel, the corresponding indicator light will turn on.

2. Place your phone on the wireless charging panel to charge.

3. Press the button again to turn the wireless charging turns OFF.

Note: When wireless charging is turned on but no phone is placed on the panel, it will automatically enter standby mode after 10 minutes.

 


REMOTE BATTERY PLACEMENT

1. Press and slide down the battery compartment to open it.
2. Insert 2 new AAA batteries (included), following the correct polarity.
3. Once the batteries are inserted, place the cover back on.

USING THE REMOTE

Refer to Battery Placement instructions when need to replace the battery.

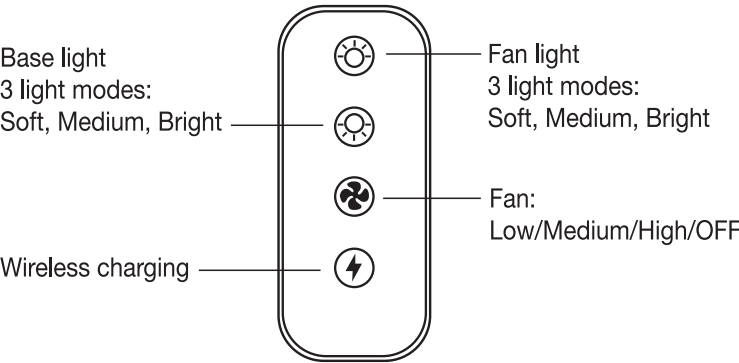

CLEANING

- IMPORTANT: Always make sure the fan is turned off before cleaning.**
1. To remove the cover, press the Release tab down and pull.
2. Clean off the dust from cover. Cover is washable. Use a soft, damp cloth to clean inside of the fan.
- Do not immerse the fan in water or any other liquid.**
3. Place the cover back on and snap it in.



STORAGE

When done using the fan, make sure to return it to its folded position.

**ALWAYS make sure to push the telescopic arm all the way DOWN to ensure proper closure. Do not use the fan to push down. Follow these steps to avoid damage to the unit.**



Push the telescopic arm **all the way down** to its original position.



Lower the arm while pressing down on top of the fan.



Fold down the top part of the fan.  
Note: If fan does not fully close, refer to Step 1.

IMPORTANT SAFEGUARDS

- Before using the electrical appliance, these basic precautions should always be followed:
1. Read all instructions.
2. Keep fan out of reach of children.
3. Do not operate any appliance after it malfunctions, or is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
4. This appliance is not intended for use by individuals (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
5. Never place the fan in an area where it is accessible to children.
6. Never place anything over the fan when it's running.

7. Never insert or drop any object into any of the openings.
8. Do not leave the fan outdoors or use it in wet conditions.
9. Always place the fan on a firm, flat, level surface.
10. Fan should be turned off when not in use or during cleaning.
11. Do not move the fan while it's running. Switch it off before moving the unit.

SPECIFICATIONS

|                         |                                           |
|-------------------------|-------------------------------------------|
| Size                    | 19,91 x 19,91 x 9,98 cm (folded)          |
| Dimensions              | 19,91 x 19,91 x 100 cm (extended)         |
| Net Weight              | 1,37 kg                                   |
| Fan Modes               | Low/Med/High                              |
| Light Modes             | Soft/Medium/Bright                        |
| Battery Capacity        | 7,4V 2x3600mAh                            |
| Battery Run Time        | Low/Med/High (15h/8h/4h)                  |
| Battery Charge Time     | 6,5 h                                     |
| Wireless charging power | 5W                                        |
| LED lights              | 147 LEDs (upper: 74 LEDs, lower: 73 LEDs) |



This product uses a Lithium battery. When it can no longer be used, it should be removed from the unit and recycled. The battery must not be incinerated or composted. The battery can be taken for disposal to any local retailer participating in the national recycling program sponsored by the RBRC (SEE RBRC seal). Call your local details, or the RBRC hotline at 1-800-820-8837 for the closest recycling center to you.

FCC STATEMENT

1. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.
2. Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Imported by:  
QVC UK | Building 8, Chiswick Park, 566 Chiswick High Road, London, W4 5XU

## **FCC Warning**

The FCC certification of this device refers to RF exposure testing performed in typical operating conditions, where a person is no closer than 20 centimeters from the device surface at all times, except for non-repetitive patterns with transient time intervals in the order of a second. Only in the stated conditions, the device is shown to fully comply with the FCC RF Exposure requirements of KDB 447498.